

TI Designs: TIDA-01582

适用于 USB 电力输送可编程电源的开关电容器快速充电参考设计



说明

此参考设计旨在展示在智能手机应用中使用开关电容器快速充电拓扑时的总体系统性能。此系统包含使用支持 USB 电力输送 (PD) 可编程电源 (PPS) 规格的智能壁式适配器，以便减少充电电缆的损失，并降低智能手机的损耗和升温。**bq25970** 是 TI 推出的首款可为电池提供高达 8A 充电电流的开关电容器充电器。此设计可使用 **bqStudio GUI** 软件评估 **bq25970** 和 **bq25890** 器件的性能。此设计还展示了智能手机上的完整系统，包括用于执行控制软件的 USB PD 控制器和 **MSP430™** 微控制器 (MCU)。此开关电容器充电器设计包括原理图、软件流程图、效率、功率损耗以及将器件用于支持 USB PD PPS 的壁式适配器时的完整充电循环数据。

资源

TIDA-01582	设计文件夹
bq25970	产品文件夹
bq25890	产品文件夹
TUSB422	产品文件夹
TS3USB221	产品文件夹

特性


- 高充电效率：6A 时为 96.6%
- USB PD PPS 电压和电流控制的完整系统示例
- 手机和壁式适配器的软件流程图
- 用于预充电、收尾充电和终止的 **bq25890**
- 用于使用 3A 电缆电流进行 6A 充电的 **bq25970**
- 用于与智能壁式适配器进行通信的 **TUSB422 USB PD** 控制器

应用

- 智能手机
- 移动电源
- 平板电脑



咨询我们的 E2E 专家

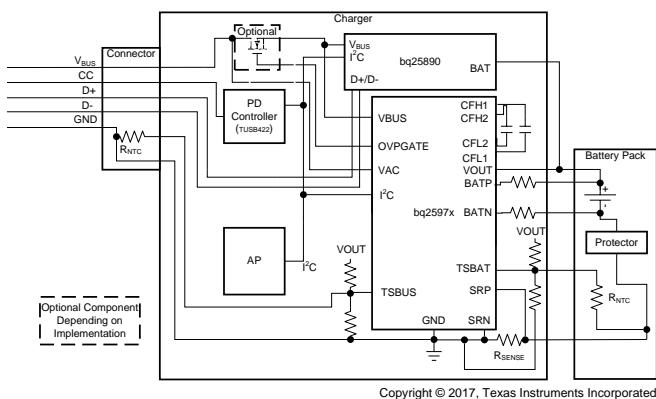

该 TI 参考设计末尾的重要声明表述了授权使用、知识产权问题和其他重要的免责声明和信息。

1 System Description

This design uses the PWR881 System Evaluation Board as part of the total phone and wall adapter solution example. The PWR881 board schematic includes the bq25890 as the primary switching charger, the bq25970 switched-capacitor charger for fast charging, the TUSB422 PD controller, and an MSP430TM MCU to execute the control algorithm. This reference design is applicable to any system that requires charging a 1S battery device up to 8 A.

1.1 Key System Specifications

表 1. Key System Specifications

PARAMETER	SPECIFICATIONS
Input power source	USB PD PPS compliant wall adapter capable of 20-mV steps and 50-mA steps
Battery specification	Type of battery can be from 3.5-V to 4.65-V charge voltage and up to 8-A charge current
Total charging power dissipation at 6 A	Less than 850 mW
Efficiency at 6-A charging	Greater than 96%

2 System Overview

2.1 Block Diagram

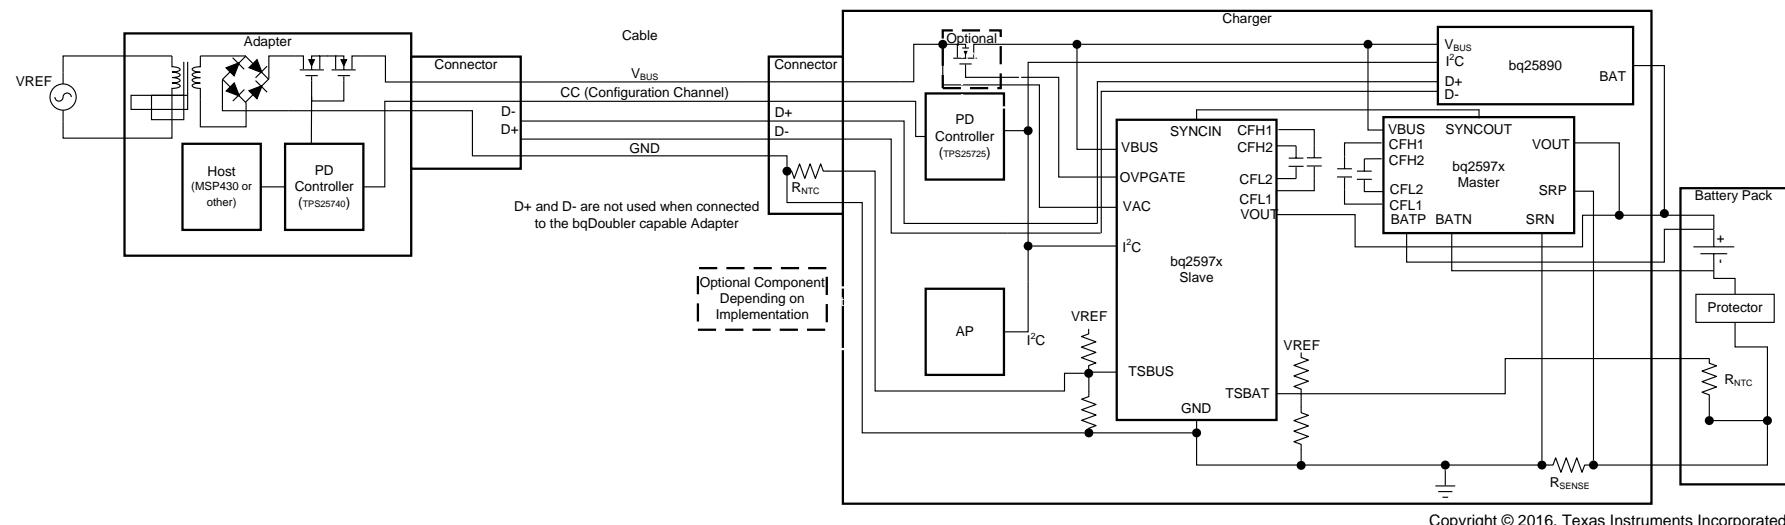


图 1. TIDA-01582 Block Diagram

2.2 Design Considerations

This reference design is useful for a wide variety of applications that require high-current battery charging but are limited in the amount of power they can dissipate. One such example is smartphones, which must be able to charge quickly and do not have active cooling. To achieve fast charging with the bq25970 device, the designer must use it along with a switching charger (or power management multichannel IC (PMIC) with charger, or even linear charger) for the trickle, precharge, taper charge, and termination portions of the charge cycle. 图 2 shows the charge cycle and which device takes control during each portion.

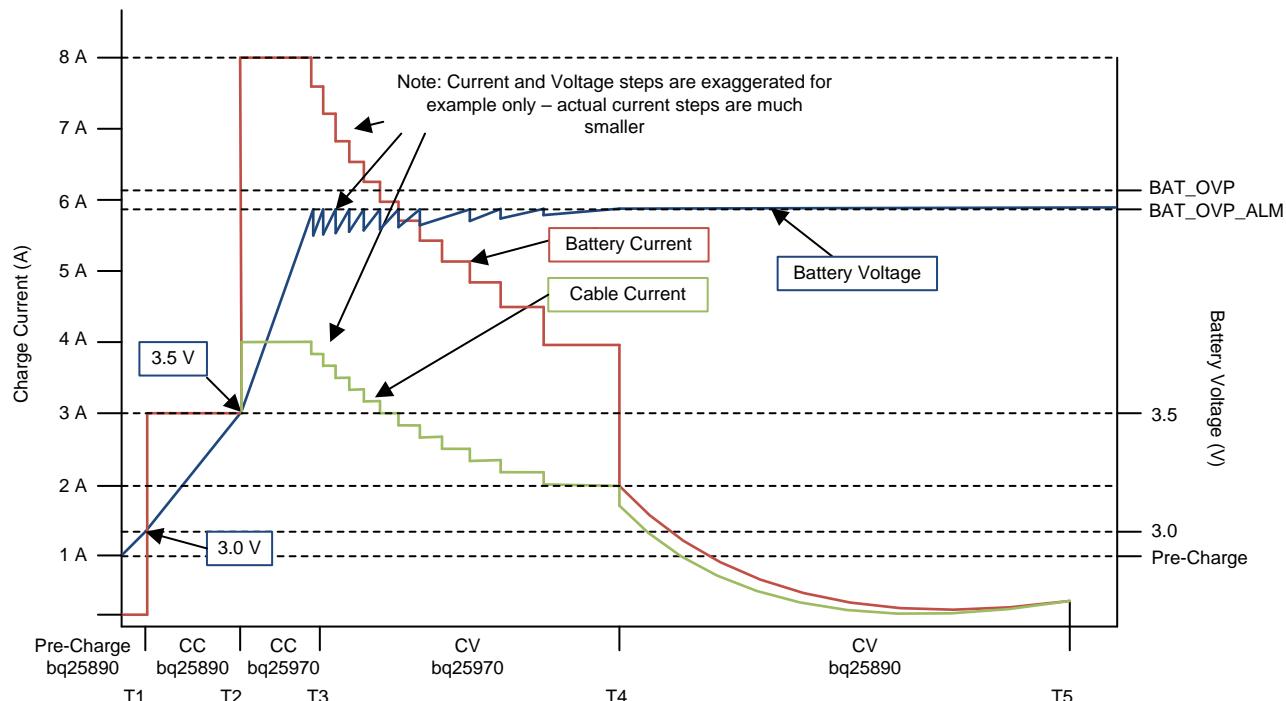


图 2. Ideal Charge Cycle Operation

The reference design board uses a USB Type-C™ 3-A cable and connector to connect to a wall supply that is USB PD PPS capable. After connecting the wall adapter to the PWR881 board with the USB cable, the software flow commences to allow the different stages of the charging cycle (see 图 6).

2.3 Highlighted Products

This reference design uses the bq25980 as the primary switching charger, the bq25970 as the fast charger, the TUSB422 as the USB PD controller, and the MSP430 MCU to run the code, control the system, and approximate the function of the application processor in a smartphone.

2.3.1 bq25970

The bq25970 is a high-efficiency switched-cap converter that can deliver up to 8 A to a battery. The switched cap architecture and the integrated field-effect transistors (FETs) are optimized to enable a 50% duty cycle, which allows the cable current to be half of the current delivered to the battery, reducing the losses over the charging cable as well as limiting the temperature rise in the application. The dual-phase architecture reduces the input cap requirements in addition to reducing the output voltage ripple. The

device integrates all the necessary protection features to ensure safe charging, including input overvoltage and overcurrent protection, output overvoltage and overcurrent protection, temperature sensing for the battery and cable, and monitoring the die temperature. The device includes a 15-bit effective analog-to-digital converter (ADC) to provide bus voltage, bus current, output voltage, battery voltage, battery current, bus temperature, battery temperature, and die temperature.

2.4 System Design Theory

2.4.1 Theory of Operation

A typical buck-converter charger can achieve greater than 90% efficiency at 6 A; however, this means over 2 W must be dissipated in the phone. A typical thermal budget for a smartphone allows less than 1 W to be dissipated in the phone to meet the temperature rise limits. The switched cap architecture can achieve up to 97% efficiency at 6 A, which is less than 800-mW dissipation in the phone and requires less than 3 A on a standard USB-C cable. The switched cap architecture relies on a smart wall adapter to regulate the voltage and current at the input to the charger. Achieve this regulation with a voltage-limited constant-current source or a current-limited voltage source. The performance of the switched cap solution depends on which type of source is used. The switched cap architecture uses four switches to alternately charge and discharge capacitors (CFLY). 图 3 shows the simplified circuit, along with the equations for voltage and current during the charging and discharging of the CFLY caps.

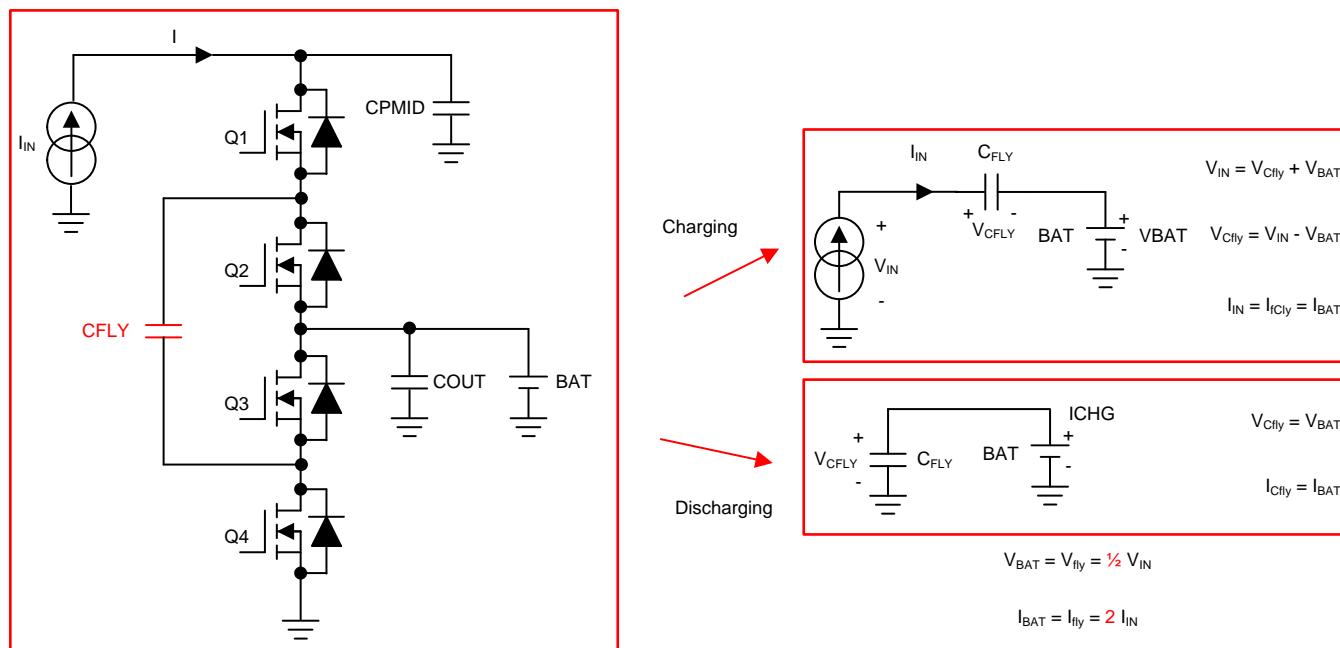


图 3. Simplified Switched Cap Circuit (Single Phase)

In the charging phase (t1), Q1 and Q3 are turned on and Q2 and Q4 are turned off. This action allows the switched-cap charger to charge CFLY while delivering current to the battery. During the discharge phase (t2), Q1 and Q3 are turned off while Q2 and Q4 are turned on. During this time the CFLY caps provide the charging current to the battery. The duty cycle is 50%, the battery current is half of the input voltage, and the current delivered to the battery is twice the input current. 图 4 shows the waveforms of the battery current and voltage. This figure shows models of the equivalent series resistance (ESR) of the fly cap as well as the resistances of the switches.

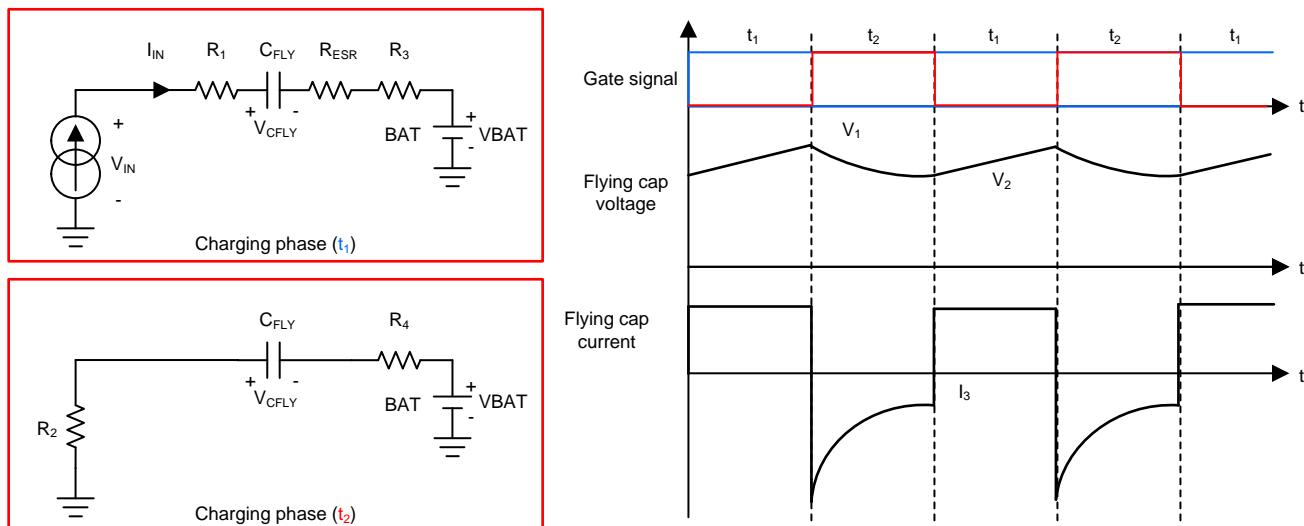


图 4. Switching Waveforms With Current Source

When using a constant current source, the CFLY current is constant. If using a constant voltage source, the CFLY current follows the RC constant curve as 图 5 shows. Although not significant, the effect of using a voltage source instead of a current source is increased ripple current, increased root mean square (RMS) current, and reduced efficiency due to higher conduction losses.


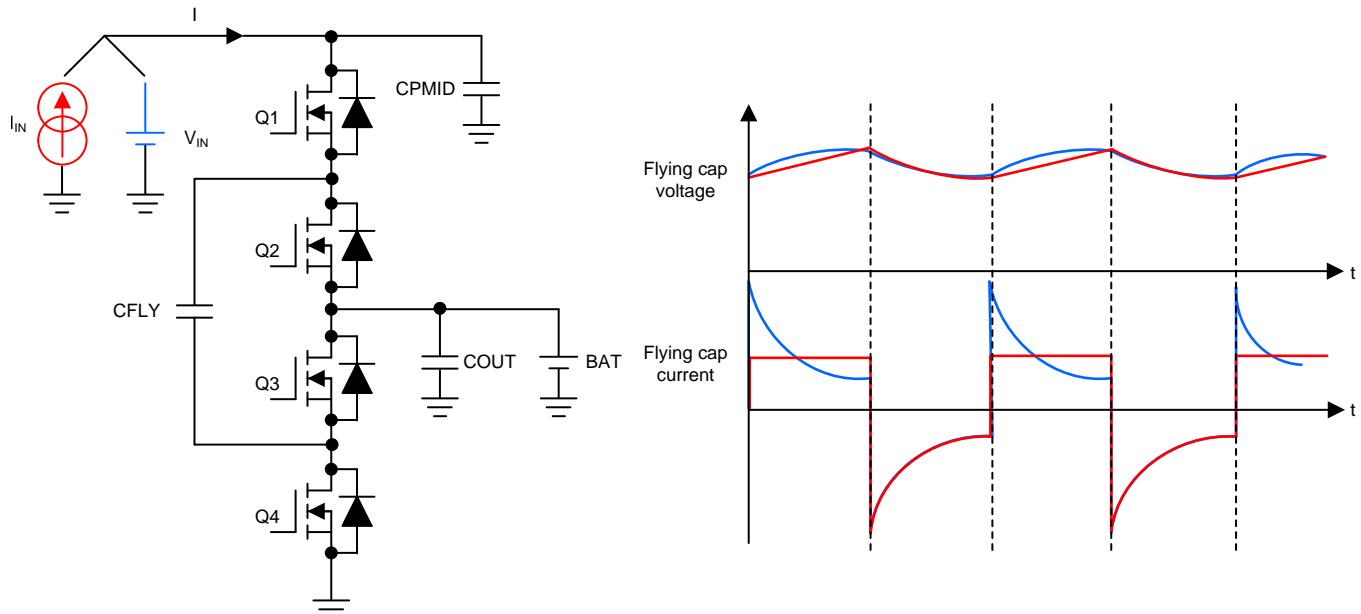


图 5. Switching Waveforms Difference With Current versus Voltage Source

2.4.2 Software Flow Chart

As described in the bq25970 data sheet, this reference design is capable of executing the software flow chart shown in [图 6](#). The designer can modify the software flow based on the desired measurements, protections, and alarm thresholds based on the system constraints and goals.

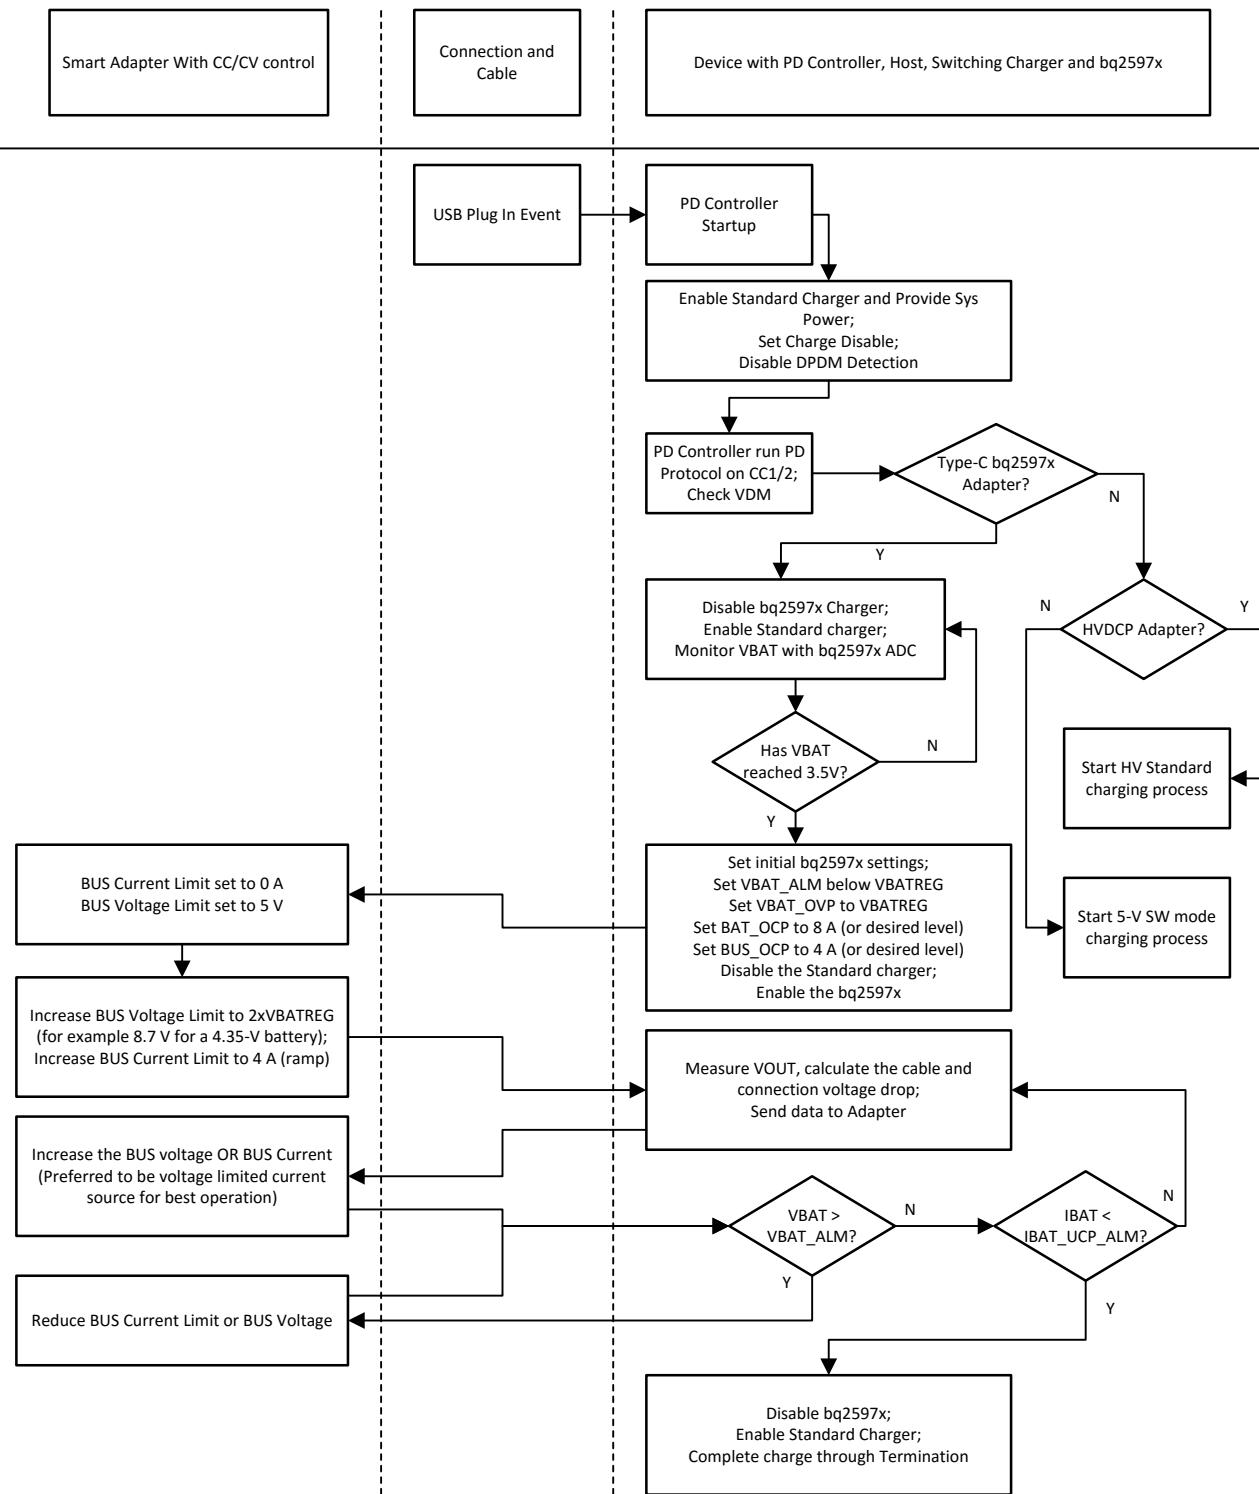

Copyright © 2017, Texas Instruments Incorporated

图 6. Total System Software Flow Chart

3 Hardware, Software, Testing Requirements, and Test Results

3.1 Required Hardware and Software

3.1.1 Hardware

The designer can use this reference design in two ways. The first way is as a development platform for code to run on the phone and wall adapter. The second way is to use the PWR881 board as a stand-alone development and evaluation platform.

3.1.1.1 Total System Hardware Configuration

When using the reference design in this manner, plug the wall adapter into the wall outlet, connect the battery to the VOUT and BATN terminal block, and then connect the wall adapter to the PWR881 board with a USB Type-C cable. After completing these steps, the USB PD controller on the PWR881 board negotiates with the USB PD controller on the wall adapter and charging commences per the software flow chart.

3.1.2 System Evaluation Board With bqStudio GUI

When using the reference design in this manner, use it with a power supply and battery emulator to evaluate the basic functions and system efficiency. This case uses the bqStudio GUI to control the devices on the board. [图 9](#) shows the setup. The designer can control the bq25890 and bq25970 devices through the bqStudio GUI.

3.1.3 Software

Two levels of software are provided for this reference design. The total system software executes on the MSP430 MCU and works with a USB PD PPS smart wall adapter. The system evaluation board software runs along with bqStudio and allows evaluation of the bq25970 device. The following subsections describe both levels of software.

3.1.3.1 Total System Software

For the total system solution, run the software on the PWR881 board and on the USB PD PPS wall adapter.

The example code for the PWR881 board installed using the MSP430 F5529 LaunchPad™ Evaluation Kit. To update the code on the PWR881 board, connect the MSP430 LaunchPad GND, RST, TEST, and 3V3 connections. After downloading and unzipping the files, download and install the Code Composer Studio™ (CCS) software. Import the files into CCS by clicking *File* → *Import*, select *CCS* → *CCS Project*, then browse to the project directory. After selecting, click the *Finish* button to import the project. After importing, the project should be in the *Project Explorer*. Right click on the project and select *Build Project*. If no issues arise, click on the green bug in the icon menu to program the MCU. After programming the PWR881 board, the designer can disconnect the connector and the MSP430 will retain the code and continue to run.

The example code for the wall adapter is installed on the wall adapter control board. To do this, connect the MPS430 LaunchPad to the header on the board as follows: PIN1: 3V3, PIN2: TEST, PIN3: RST, and PIN4: GND. Follow a similar process as before to install the code on the wall adapter control board.

3.1.3.2 System Evaluation Board Software With bqStudio GUI Software

The board contains all the necessary devices to fully test the bq2597x device. The board can be configured in several ways:

1. Single bq25970 evaluation (with external overvoltage protection (OVP)) – Variant 001
2. Single bq25971 evaluation (without external OVP) – Variant 001 with R24 populated and J38 pins 1 and 2 shorted together
3. Dual bq25970 evaluation (with external OVP) – Variant 002
4. Dual bq25971 evaluation (without external OVP) – Variant 002 with R24 populated and J38 pins 1 and 2 shorted together

The system evaluation board requires an EV2400 interface board, which the designer must order separately. The EV2400 USB-based PC interface board is required to communicate with the bq25890 device and both bq25970 devices on the board (see <http://www.ti.com/tool/EV2400>).

Ensure proper installation of the PWR881 System Evaluation Board (SEB) evaluation software. Also, check to be sure that the following three files are located in the `\BatteryManagementStudio\config` directory and choose Charger_1_05- bq25970_SEB.bqz:

- Charger_1_05-bq25970_SEB.bqz
- Charger_1_05-bq25970_S.bqz
- Charger_1_05-bq25970_M.bqz

3.2 Testing and Results

3.2.1 Test Setup

3.2.1.1 Total System Test Setup

When using the reference design in this manner, plug the wall adapter into the wall outlet, connect the battery to the VOUT and BATN terminal block, and then connect the wall adapter to the PWR881 board with a USB Type-C cable. After completing these steps, the USB PD controller on the PWR881 board negotiates with the USB PD controller on the wall adapter and charging commences per the software flow chart.

图 7 shows the charge cycle data for the total system setup.

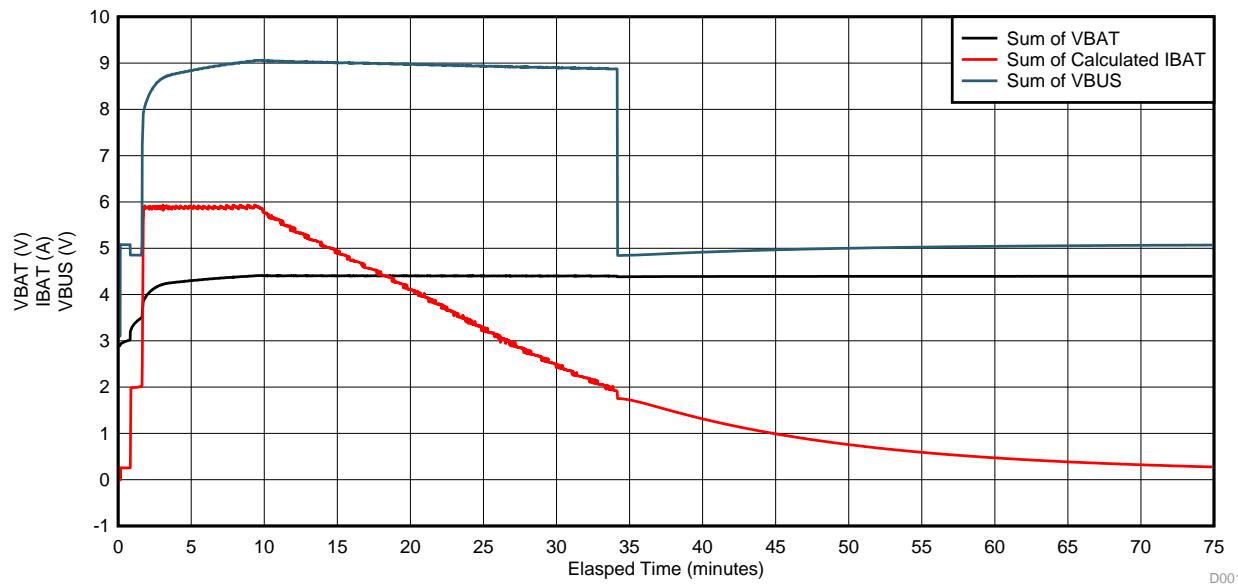


图 7. Total System Charge Cycle Data

图 8 显示了总充电时间，当为一个 4.4-V, 3200-mAh, I²C 可编程电池充电时。电池在 17 分钟后达到 50% 充电，在半个多小时后达到 80% 充电。

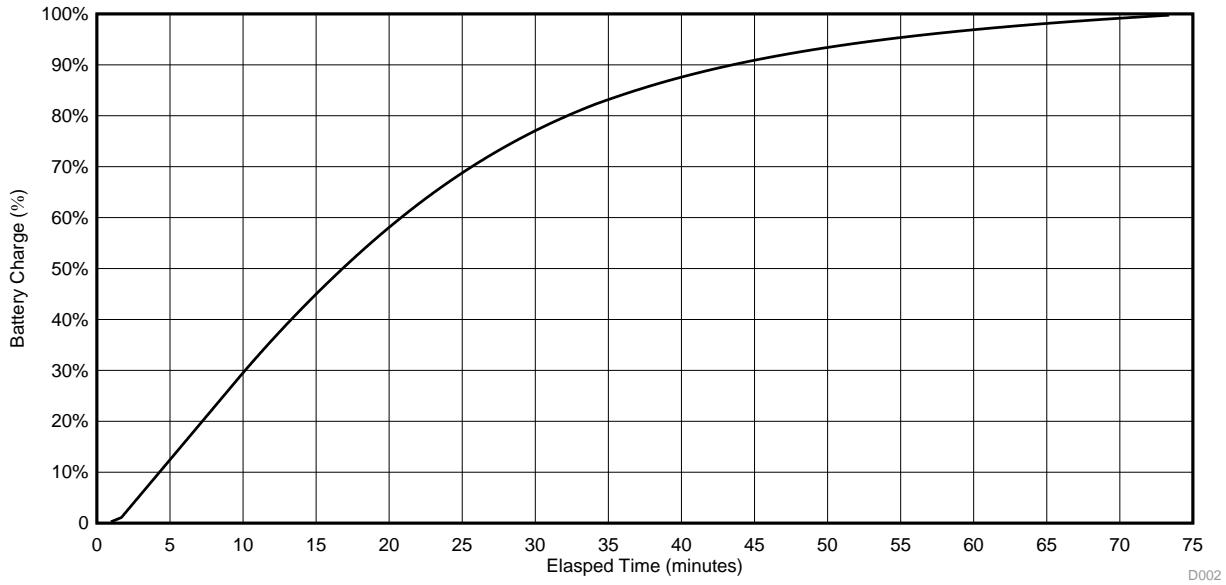


图 8. Charge Time

3.2.1.2 System Evaluation Board Test Setup


When using the reference design in this manner, use it with a power supply and battery emulator to evaluate the basic functions and system efficiency. This case uses the bqStudio GUI to control the devices on the board. 图 9 shows the setup. The designer can control the bq25890 and bq25970 devices through the bqStudio GUI.



图 9. EV2400 and Cables

Set up the equipment using the following steps:

1. Set the power supply for 7 V, DC output, 0.5-A current limit, and then turn off the supply.
2. Connect the output of the power supply to J11 (V_{BUS} and GND). Note that when Q1 has been installed and the bq25970 is used, the V_{BUS} is actually the V_{AC} input. The V_{BUS} voltage is after Q1 and can be measured at V_{BUS_CHG_SNS} (TP33).
3. Turn on the battery simulator (load), set the battery simulator to constant voltage mode, and output to 3.5 V. Turn off (disable) the load. Connect the load to J28 (V_{OUT} and BATN).
4. Connect the EV2400 USB interface board to the computer with a USB cable and from the I²C port to J36 with the four-pin cable.
5. Connect the meters to measure V_{AC}, V_{BUS}, IBUS, VBAT, V_{OUT}, and IBAT. Note that IBUS and IBAT are voltages to measure across the sense resistors. At this point, the system should appear similar to the setup in [图 10](#):

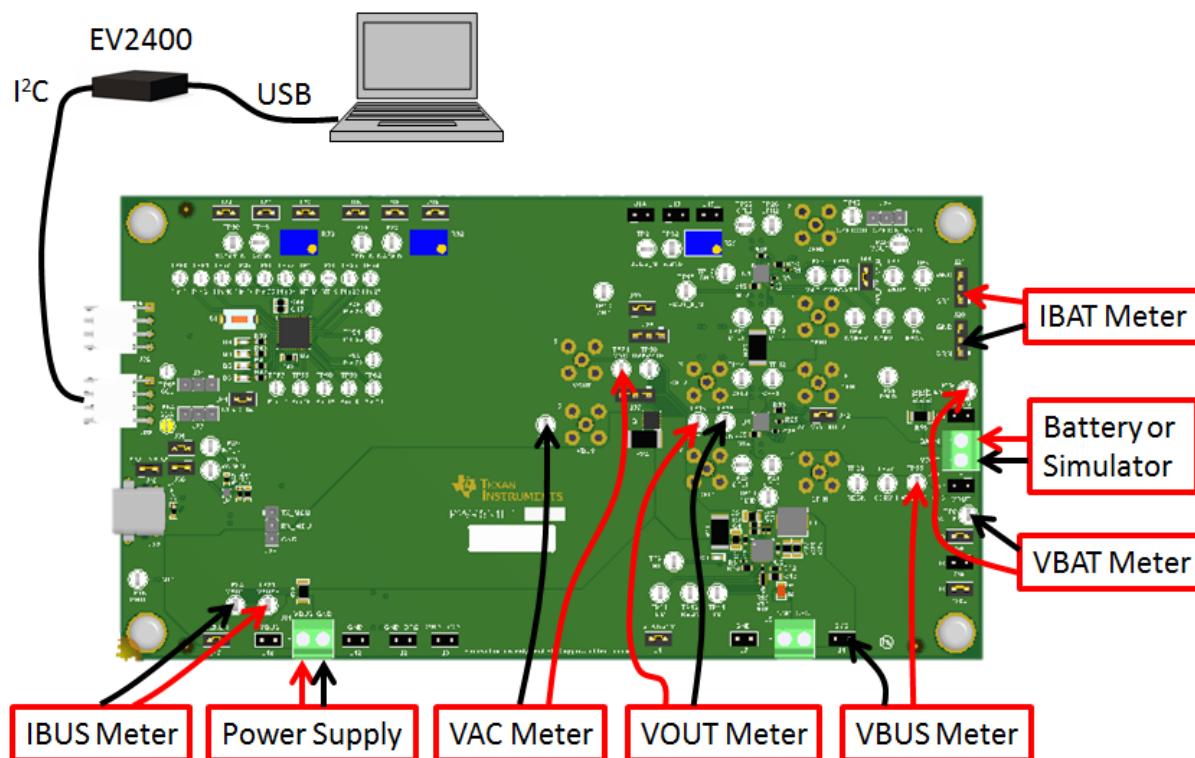

[图 10. PWR881 Test Connections](#)

6. Ensure that the jumpers and components have been installed for the version of the board for testing.
7. Turn on the computer. Launch the Battery Management Studio (bqStudio) software. Select *Charger* and *Charger_1_05-bq25970_SEB* as the following [图 11](#) shows (always choose the latest revision):

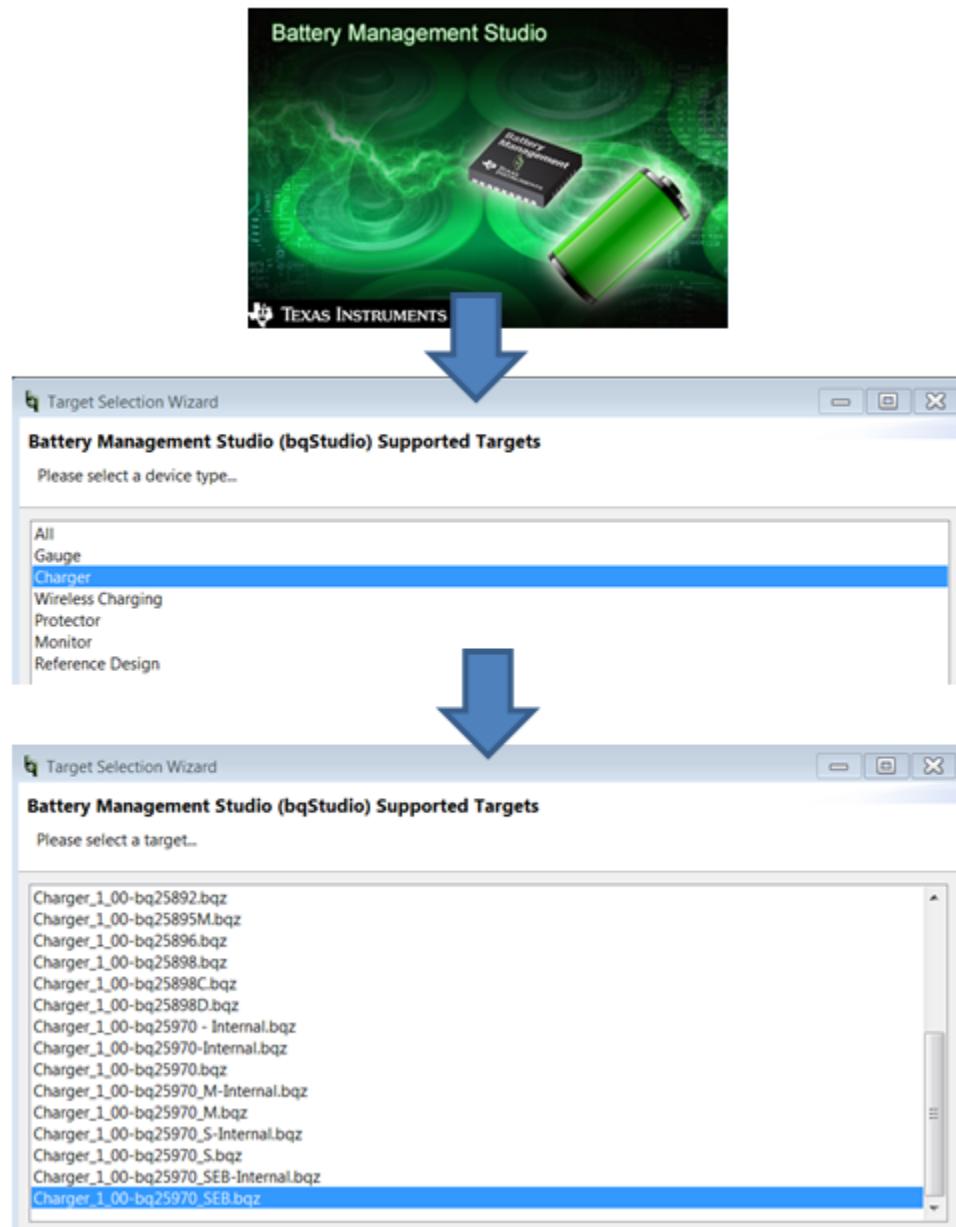


图 11. bqStudio GUI Selection

3.2.2 Test Results

3.2.2.1 Total System Test Results

The following subsection shows the test results for the total system charge cycle using a 3200-mAh, 3.82-V (4.4-V charge voltage), I²C capable battery.

3.2.2.2 System Evaluation Board Results

Use the following steps for the test procedure:

1. Check that all connections are as described in the previous 节 3.2.1.2.
2. Turn on the power supply.
3. Turn on the load (battery emulator).
4. Launch the bqStudio software (if not already done).
5. Measure the VAC, VBUS, IBUS, VBAT, VOUT, and IBAT. The device should not be switching and no charging current (only I_q) should be measured on IBUS and IBAT.

Use the following steps for communication verification:

1. In the EVM software, three devices should be available on different tabs in bqStudio. The bq25890, the bq25970_S (operates as stand-alone or slave), and the bq25970_M (operates as master when two bq25970 devices are used in parallel). Select the *Field View* for the device of interest; in most cases, this will be the bq25970_S. The default I²C address for configuration with the jumpers on is CC(66).
2. Click the *Read Register* button. The *Device ACK OK* should then appear.
3. The registers for the bq25970 device are populated as shown in the previous 图 1.
4. In the software, make the following changes:
 1. On the bq25970_S, disable the watchdog timer by enabling register 0x0Bh, bit 2.
 2. On the bq25970_M, disable the watchdog timer by enabling register 0x0Bh, bit 2.
 3. On the bq25890, disable the watchdog timer by setting bits 5 and 4 in register 0x07h to '0'.
 4. Disable charging of the bq25890 by setting bit 4 in register 0x04h to '0'.

Use the following steps for communication verification:

1. Ensure that the load is set to 3.5 V, constant voltage mode.
2. Ensure that the power supply is current limited to 0.5 A.
3. Ensure that the power is twice the desired battery voltage. For example, start with the power supply set to 8.7 V if the desired battery voltage is 4.35 V.
4. On the bq25970_S, set register 0x03h, bit 4 to '1' to enable charge.
5. Charging then commences and the power supply is current limited at 0.5 A, with the voltage held near 7 V. The battery voltage should be 3.5 V and the battery current should be 1 A. 公式 1 calculates the charging efficiency of the system. 公式 2 calculates the charging efficiency of the bq25970_S.

$$\eta_{\text{system}} = \left(\frac{(IBAT \times VBAT)}{(VAC \times IBUS)} \right) \times 100 \quad (1)$$

$$\eta_{\text{bq25970_S}} = \left(\frac{(IBAT \times VBAT)}{(VBUS \times IBUS)} \right) \times 100 \quad (2)$$

6. Measure other operating points by raising the power supply current limit for higher charging current, adjusting the VBAT voltage, and adjusting the power supply voltage (keeping it in constant current (CC) mode).
7. Deselect *Charge Enable* to stop charging.

图 12 显示了 bq25970 的效率。

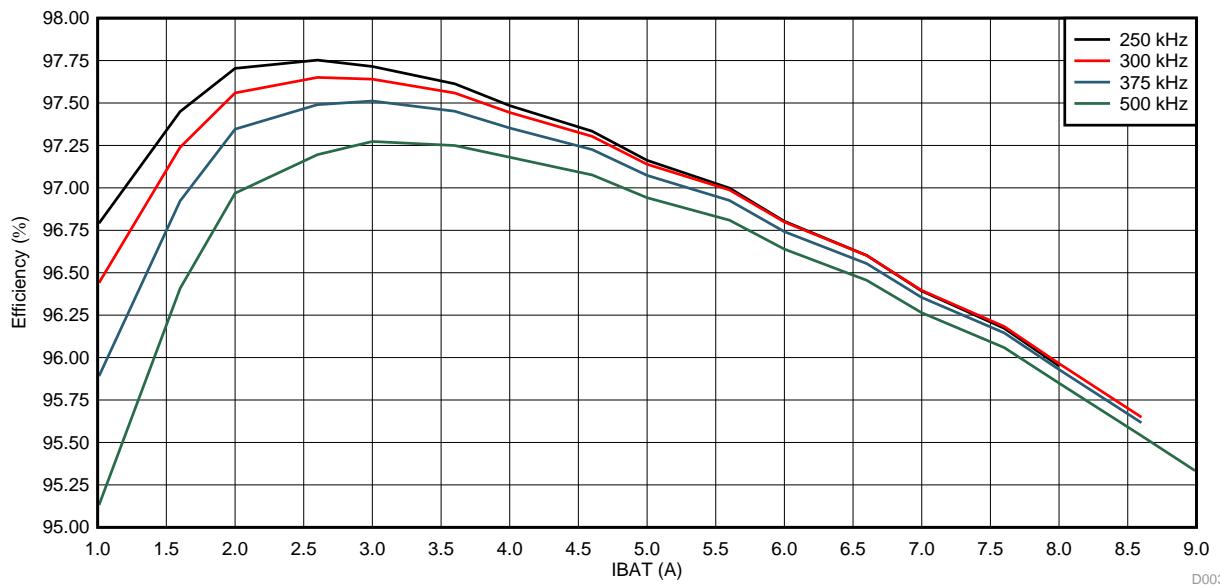


图 12. Efficiency of bq25970

图 13 显示了 bq25970 的功率损耗。

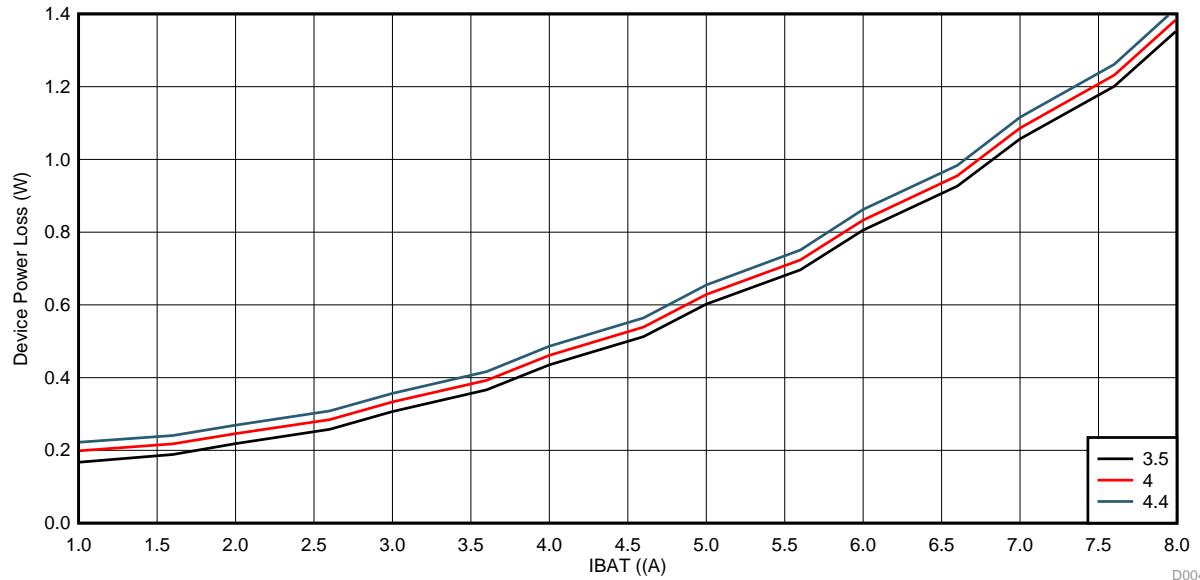


图 13. Power Loss of bq25970

4 Design Files

4.1 Schematics

To download the schematics, see the design files at [TIDA-01582](#).

4.2 Bill of Materials

To download the bill of materials (BOM), see the design files at [TIDA-01582](#).

4.3 PCB Layout Recommendations

4.3.1 Layout Prints

To download the layer plots, see the design files at [TIDA-01582](#).

4.4 Altium Project

To download the Altium project files, see the design files at [TIDA-01582](#).

4.5 Gerber Files

To download the Gerber files, see the design files at [TIDA-01582](#).

4.6 Assembly Drawings

To download the assembly drawings, see the design files at [TIDA-01582](#).

5 Software Files

To download the software files, see the design files at [TIDA-01582](#).

6 Terminology

- ADC**— Analog-to-digital converter
- CC**— Constant current (mode)
- CCS**— Code Composer Studio™
- ESR**— Equivalent series resistance
- FET**— Field-effect transistor
- GUI**— Graphical user interface
- MCU**— Microcontroller
- OVP**— Overvoltage protection
- PD**— Power delivery
- PMIC**— Power management multichannel IC
- PPS**— Programmable power supply
- RMS**— Root mean square
- SEB**— System evaluation board

7 About the Author

STEVEN SCHNIER is a systems engineer in the Battery Management Solution group at Texas Instruments.

有关 TI 设计信息和资源的重要通知

德州仪器 (TI) 公司提供的技术、应用或其他设计建议、服务或信息，包括但不限于与评估模块有关的参考设计和材料（总称“TI 资源”），旨在帮助设计人员开发整合了 TI 产品的应用；如果您（个人，或如果是代表贵公司，则为贵公司）以任何方式下载、访问或使用了任何特定的 TI 资源，即表示贵方同意仅为该等目标，按照本通知的条款进行使用。

TI 所提供的 TI 资源，并未扩大或以其他方式修改 TI 对 TI 产品的公开适用的质保及质保免责声明；也未导致 TI 承担任何额外的义务或责任。TI 有权对其 TI 资源进行纠正、增强、改进和其他修改。

您理解并同意，在设计应用时应自行实施独立的分析、评价和判断，且应全权负责并确保应用的安全性，以及您的应用（包括应用中使用的所有 TI 产品）应符合所有适用的法律法规及其他相关要求。你就您的应用声明，您具备制订和实施下列保障措施所需的一切必要专业知识，能够（1）预见故障的危险后果，（2）监视故障及其后果，以及（3）降低可能导致危险的故障几率并采取适当措施。您同意，在使用或分发包含 TI 产品的任何应用前，您将彻底测试该等应用和该等应用所用 TI 产品的功能而设计。除特定 TI 资源的公开文档中明确列出的测试外，TI 未进行任何其他测试。

您只有在为开发包含该等 TI 资源所列 TI 产品的应用时，才被授权使用、复制和修改任何相关单项 TI 资源。但并未依据禁止反言原则或其他法理授予您任何 TI 知识产权的任何其他明示或默示的许可，也未授予您 TI 或第三方的任何技术或知识产权的许可，该等产权包括但不限于任何专利权、版权、屏蔽作品权或与使用 TI 产品或服务的任何整合、机器制作、流程相关的其他知识产权。涉及或参考了第三方产品或服务的信息不构成使用此类产品或服务的许可或与其相关的保证或认可。使用 TI 资源可能需要您向第三方获得对该等第三方专利或其他知识产权的许可。

TI 资源系“按原样”提供。TI 兹免除对 TI 资源及其使用作出所有其他明确或默认的保证或陈述，包括但不限于对准确性或完整性、产权保证、无屡发故障保证，以及适销性、适合特定用途和不侵犯任何第三方知识产权的任何默认保证。

TI 不负责任何申索，包括但不限于因组合产品所致或与之有关的申索，也不为您辩护或赔偿，即使该等产品组合已列于 TI 资源或其他地方。对因 TI 资源或其使用引起或与之有关的任何实际的、直接的、特殊的、附带的、间接的、惩罚性的、偶发的、从属或惩戒性损害赔偿，不管 TI 是否获悉可能会产生上述损害赔偿，TI 概不负责。

您同意向 TI 及其代表全额赔偿因您不遵守本通知条款和条件而引起的任何损害、费用、损失和/或责任。

本通知适用于 TI 资源。另有其他条款适用于某些类型的材料、TI 产品和服务的使用和采购。这些条款包括但不限于适用于 TI 的半导体产品 (<http://www.ti.com/sc/docs/stdterms.htm>)、**评估模块** 和样品 (<http://www.ti.com/sc/docs/samptersms.htm>) 的标准条款。

邮寄地址：上海市浦东新区世纪大道 1568 号中建大厦 32 楼，邮政编码：200122
Copyright © 2018 德州仪器半导体技术（上海）有限公司