

# **Automotive Cold Crank Operation with LP8860-Q1**

Cecilia Reyes

## **ABSTRACT**

The LP8860-Q1 is an automotive high-efficiency, four-channel LED driver with a boost controller typically used in automotive backlight applications such as infotainment and instrument clusters. Today, automotive electronic components need to be extremely reliable and stable under severe weather conditions to ensure the safety of the driver and passengers. This application note will depict the impact of automotive cold and warm cranking on the LP8860-Q1 EVM under different load conditions and test parameters.

## **Contents**

1	Introduction .....	2
2	Test Procedure .....	3
3	Test Results .....	5
4	Summary .....	6
5	References .....	6

## **List of Figures**

1	Example of Warm Crank Test Profile .....	2
2	Example of Cold Crank Test Profile .....	3
3	Cold Crank Test Connection Diagram .....	3
4	Cold Crank Test Connection .....	4
5	Warm Crank Baseline Test: 8 LEDs .....	5
6	Warm Crank Variation Test: 10 LEDs.....	5
7	Warm Crank Baseline Test: $f_{sw} = 300$ kHz .....	5
8	Warm Crank Variation Test: $f_{sw} = 2.2$ MHz .....	5
9	Cold Crank Baseline Test: 8 LEDs .....	6
10	Cold Crank Variation Test: 10 LEDs .....	6
11	Cold Crank Baseline Test: $f_{sw} = 300$ kHz.....	6
12	Cold Crank Variation Test: $f_{sw} = 2.2$ MHz .....	6

## **List of Tables**

1	Testing Condition Variations .....	4
---	------------------------------------	---

## **Trademarks**

All trademarks are the property of their respective owners.

## 1 Introduction

Cold cranking occurs when the ambient temperature is too low causing a car's battery voltage to fall during the cranking of the engine. Warm cranking occurs when the ambient temperature increases and causes a car's battery to drop as well. Automotive electronics tied to the battery supply must be able to operate without interruption in the case of a drop in input voltage during cold or warm cranking. It is very important to ensure that LED drivers do not shutdown due to this voltage drop and react quickly to keep the output steady.

The profiles for cold cranking waveforms are similar among many automotive manufacturers. Usually, variations are within specific voltage levels and timing. The tests performed on the LP8860-Q1 EVM used the profiles outlined below:


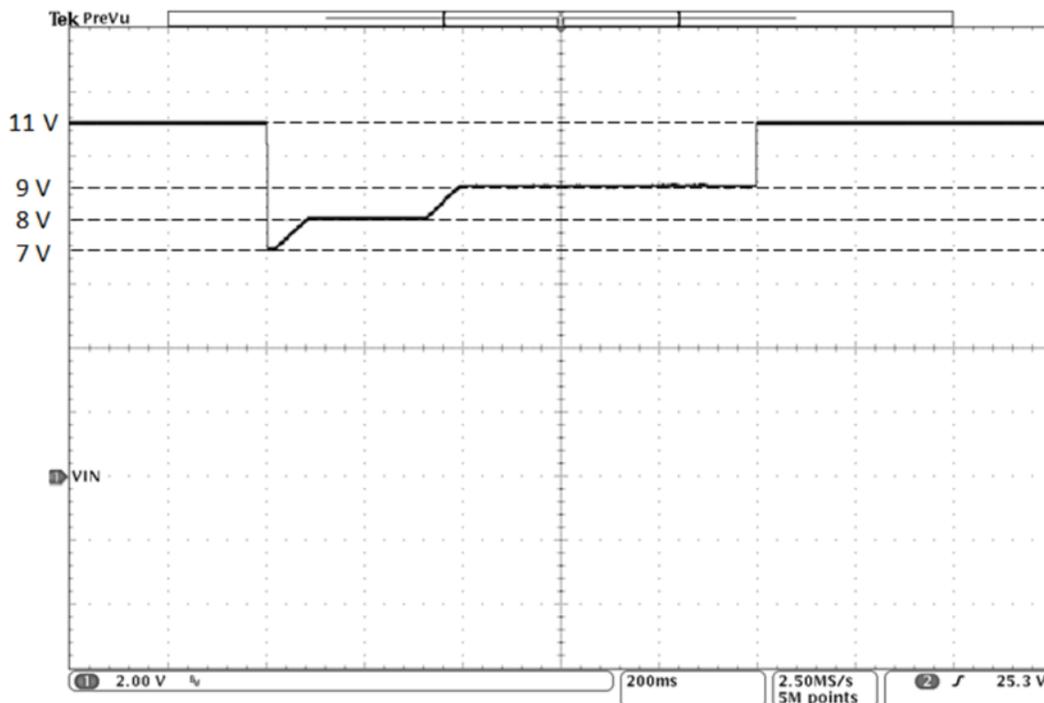



Figure 1. Example of Warm Crank Test Profile

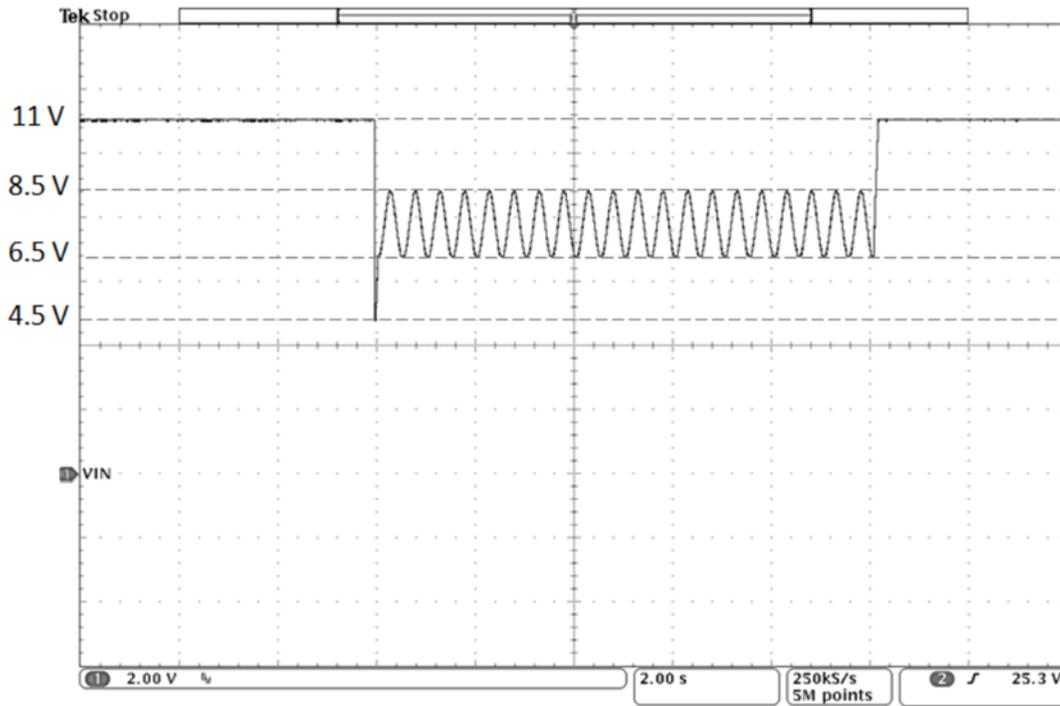


**Figure 2. Example of Cold Crank Test Profile**

**2 Test Procedure**

The Texas Instruments AutoCrankSIM EVM was used to perform the cold and warm cranking simulations. The EVM conveniently allows a user to configure three different cranking profiles that can be continuously pulsed for automotive testing. Along with the EVMs, a power supply with at least 24 V and 3 A must be used to perform these tests. The diagram and photo below show how to connect the AutoCrankSIM EVM to the LP8860-Q1 EVM and LED load board to conduct the cranking tests.

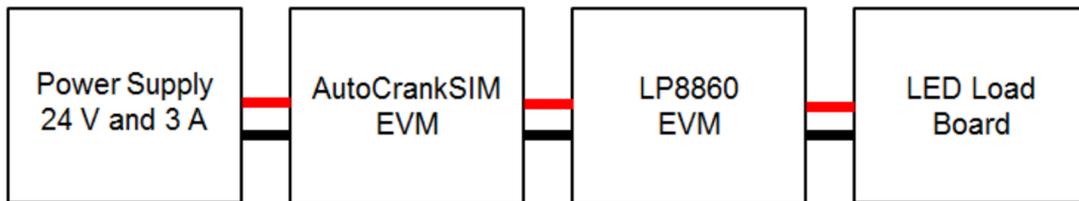

**Figure 3. Cold Crank Test Connection Diagram**

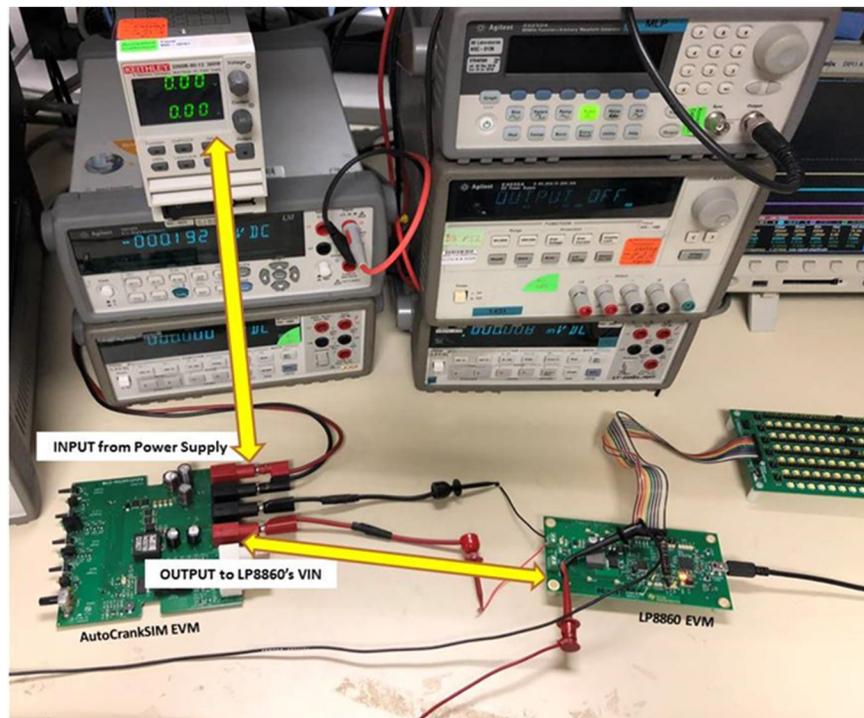

**Figure 4. Cold Crank Test Connection**

The AutoCrankSIM EVM also requires the use of the software Code Composer Studio if the user wants to create a customized cranking profile. If not, the AutoCrankSIM EVM comes equipped with 3 built in standard waveforms. For the cold and warm crank tests performed in this application note, a customized code was used for the specific voltage and time changes outlined in Section 1. For more information on how to create your own customized cold crank profile and how to use the AutoCrankSim EVM refer to the [Automotive Cranking Simulator User's Guide](#).

## 2.1 Testing Conditions and Parameters

All tests were performed on the LP8860-Q1 EVM which is available for purchase. Please follow datasheet requirements and recommended components for specific test conditions.

Cold Crank Baseline Testing Parameters

- $V_{DD} = 5V$
- $V_{OUT} = 26V$ , 8 LEDs
- Switching Frequency:  $f_{SW} = 300 \text{ kHz}$
- Number of LED Channels: 4
- Led Current per String:  $I_{LED} = 100\text{mA}$

Below is the table of varying conditions tested for cold and warm cranking. The parameters listed above were used to compare a baseline test with a test that includes one of the detailed variations in the table.

**Table 1. Testing Condition Variations**

VARIATIONS	DETAILS
Switching Frequency	300 kHz (Baseline) or 2.2 MHz
Number of LEDs per String	8 LEDs (Baseline) or 10 LEDs



### 3 Test Results

#### 3.1 Warm Crank

In the tests below, the LP8860-Q1 EVM undergoes warm cranking operations under different load conditions and settings. The baseline test parameters were tested against a variation in LEDs and then a variation in switching frequency.



##### 3.1.1 Number of LEDs Per String

The number of LEDs on the load test board was increased from 8 to 10 LEDs. The results below revealed that the LP8860-Q1 EVM was able to keep a stable output voltage at the boost.

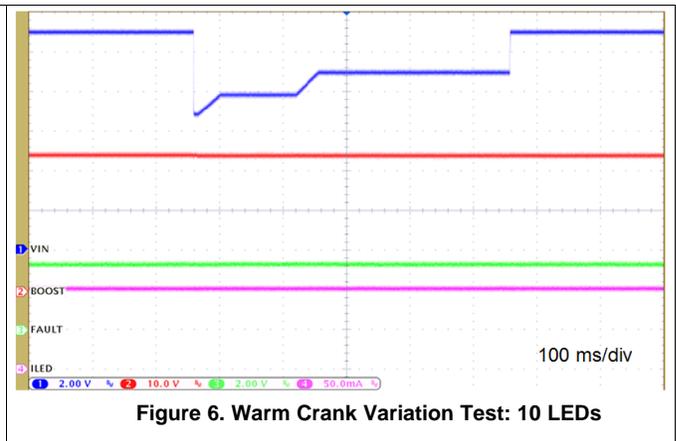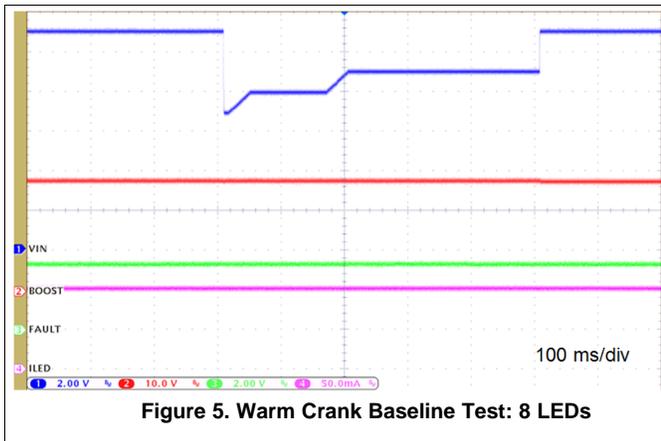

##### 3.1.2 Switching Frequency

The switching frequency was changed from 300 kHz to 2.2 MHz. The inductor, input capacitor and output capacitor selections were based on datasheet recommendations. The results showed that changing the switching frequency did not affect the output voltage of the boost on the LP8860-Q1 EVM with 8 LEDs and 100mA current per string.

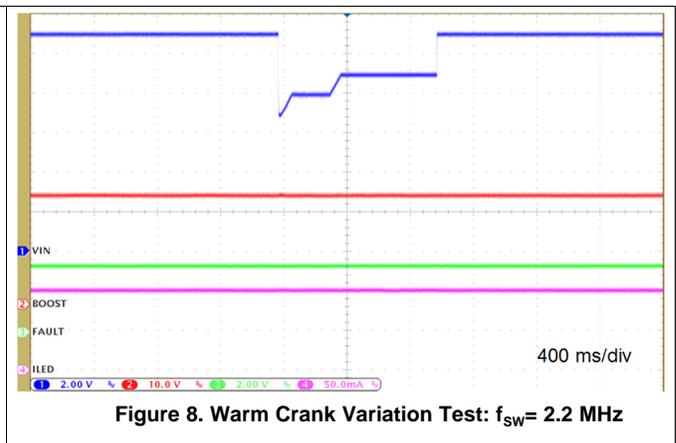
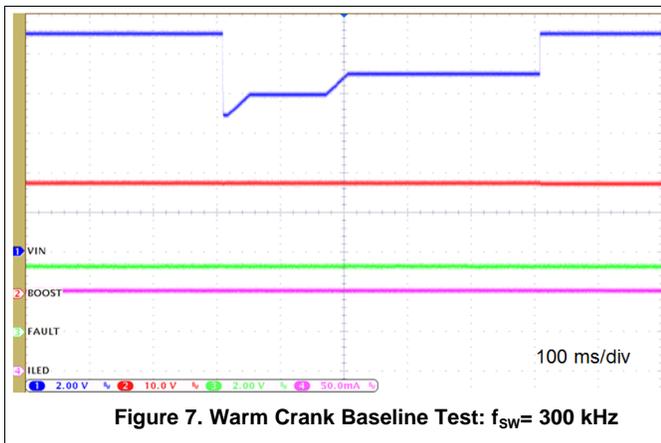


#### 3.2 Cold Crank

The following results show the LP8860-Q1 cold crank performance using the test conditions as described in Section 2.1. The baseline test parameters were tested against a variation in LEDs and then a variation in switching frequency.



### 3.2.1 Number of LEDs Per String

The number of LEDs on the load test board was increased from 8 to 10 LEDs. The results below revealed that the LP8860-Q1 EVM was able to keep a stable output voltage at the boost.

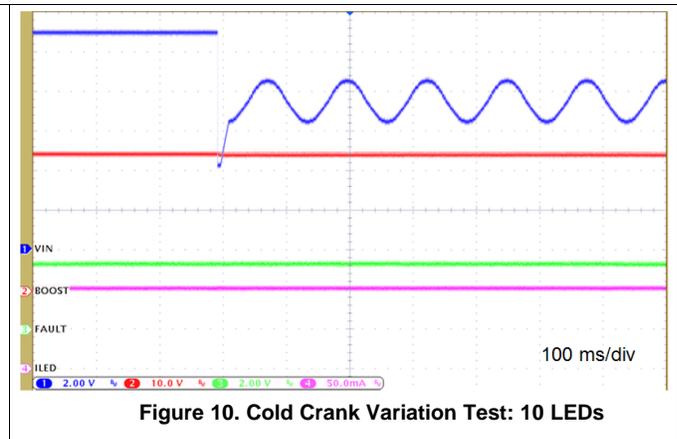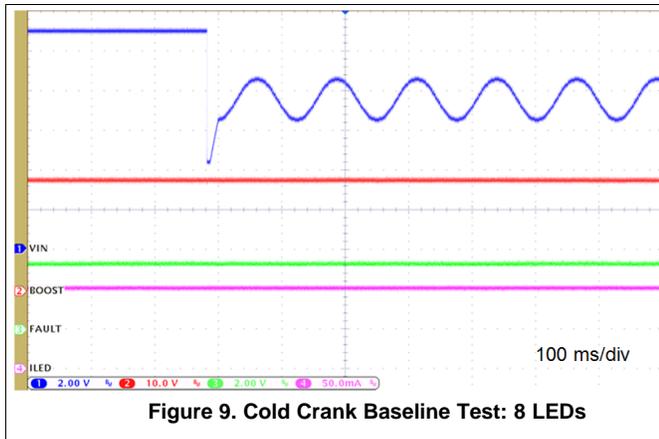

### 3.2.2 Switching Frequency

The switching frequency was changed from 300 kHz to 2.2 MHz. The inductor, input capacitor and output capacitor selections were based on datasheet recommendations. The results showed that changing the switching frequency did not affect the output voltage of the boost on the LP8860-Q1 EVM with 8 LEDs and 100 mA current per string.

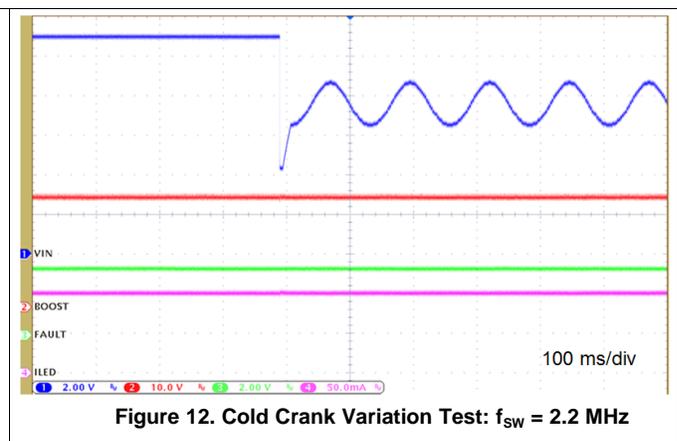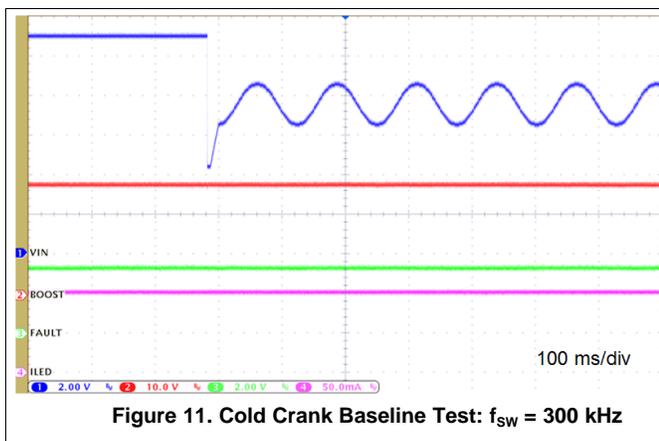

## 4 Summary

Testing cold crank operation can involve different test parameters and load variations. This application note is used to give insight on some of these changes when testing the LP8860-Q1 and to highlight its reliability in operation during cold and warm cranking. For more information please refer to [www.ti.com](http://www.ti.com)

## 5 References

- [LP8860-Q1 Automotive Low-EMI High-Performance 4-Channel LED Driver LP8860.](#)
- [LP8860-Q1EVM User's Guide SNVU382.](#)
- [AutoCrankSim-EVM: Simulator for Automotive Cranking Pulses Evaluation Module Board HVL068A.](#)

## IMPORTANT NOTICE FOR TI DESIGN INFORMATION AND RESOURCES

Texas Instruments Incorporated ("TI") technical, application or other design advice, services or information, including, but not limited to, reference designs and materials relating to evaluation modules, (collectively, "TI Resources") are intended to assist designers who are developing applications that incorporate TI products; by downloading, accessing or using any particular TI Resource in any way, you (individually or, if you are acting on behalf of a company, your company) agree to use it solely for this purpose and subject to the terms of this Notice.

TI's provision of TI Resources does not expand or otherwise alter TI's applicable published warranties or warranty disclaimers for TI products, and no additional obligations or liabilities arise from TI providing such TI Resources. TI reserves the right to make corrections, enhancements, improvements and other changes to its TI Resources.

You understand and agree that you remain responsible for using your independent analysis, evaluation and judgment in designing your applications and that you have full and exclusive responsibility to assure the safety of your applications and compliance of your applications (and of all TI products used in or for your applications) with all applicable regulations, laws and other applicable requirements. You represent that, with respect to your applications, you have all the necessary expertise to create and implement safeguards that (1) anticipate dangerous consequences of failures, (2) monitor failures and their consequences, and (3) lessen the likelihood of failures that might cause harm and take appropriate actions. You agree that prior to using or distributing any applications that include TI products, you will thoroughly test such applications and the functionality of such TI products as used in such applications. TI has not conducted any testing other than that specifically described in the published documentation for a particular TI Resource.

You are authorized to use, copy and modify any individual TI Resource only in connection with the development of applications that include the TI product(s) identified in such TI Resource. NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER TI INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT OF TI OR ANY THIRD PARTY IS GRANTED HEREIN, including but not limited to any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information regarding or referencing third-party products or services does not constitute a license to use such products or services, or a warranty or endorsement thereof. Use of TI Resources may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

TI RESOURCES ARE PROVIDED "AS IS" AND WITH ALL FAULTS. TI DISCLAIMS ALL OTHER WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, REGARDING TI RESOURCES OR USE THEREOF, INCLUDING BUT NOT LIMITED TO ACCURACY OR COMPLETENESS, TITLE, ANY EPIDEMIC FAILURE WARRANTY AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

TI SHALL NOT BE LIABLE FOR AND SHALL NOT DEFEND OR INDEMNIFY YOU AGAINST ANY CLAIM, INCLUDING BUT NOT LIMITED TO ANY INFRINGEMENT CLAIM THAT RELATES TO OR IS BASED ON ANY COMBINATION OF PRODUCTS EVEN IF DESCRIBED IN TI RESOURCES OR OTHERWISE. IN NO EVENT SHALL TI BE LIABLE FOR ANY ACTUAL, DIRECT, SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF TI RESOURCES OR USE THEREOF, AND REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

You agree to fully indemnify TI and its representatives against any damages, costs, losses, and/or liabilities arising out of your non-compliance with the terms and provisions of this Notice.

This Notice applies to TI Resources. Additional terms apply to the use and purchase of certain types of materials, TI products and services. These include; without limitation, TI's standard terms for semiconductor products (<http://www.ti.com/sc/docs/stdterms.htm>), [evaluation modules](#), and [samples](http://www.ti.com/sc/docs/sampterm.htm) (<http://www.ti.com/sc/docs/sampterm.htm>).

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265  
Copyright © 2018, Texas Instruments Incorporated