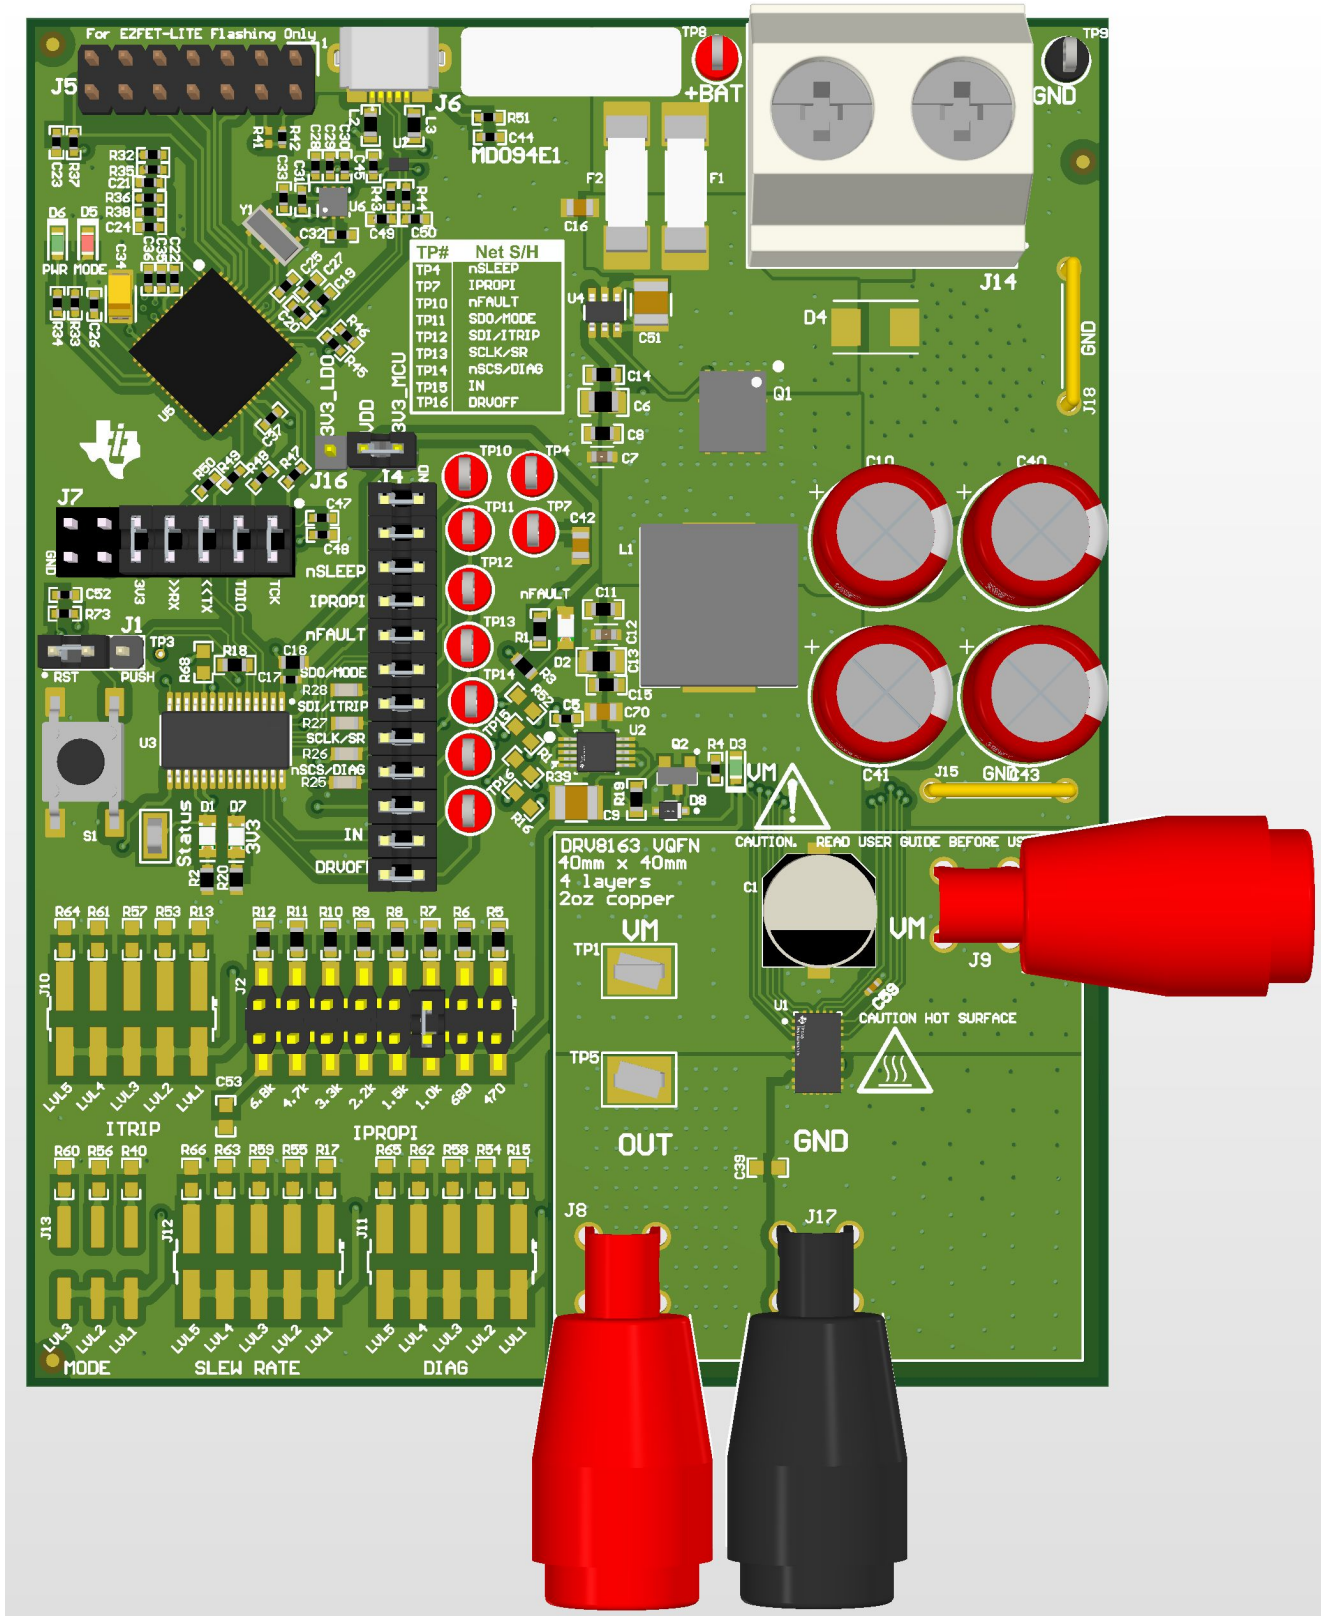
For EZFET-LITE Flashing Only
J5
J6
MD094E1
+BAT
GND
J14
TP# Net S/H
TP4 nSLEEP
TP7 IPROPI
TP10 nFAULT
TP11 SDO/MODE
TP12 SDI/ITRIP
TP13 SCLK/SR
TP14 nSCS/DIAG
TP15 IN
TP16 DRVOFF
PWR MODE
3V3_LDO
VDD
3V3_MCU
J16
J7
J1
RST
PUSH
Status
3V3
nSLEEP
IPROPI
nFAULT
SDO/MODE
SDI/ITRIP
SCLK/SR
nSCS/DIAG
IN
DRVOFF
J18
GND
J15
VM
DRV8163 VQFN
40mm x 40mm
4 layers
2oz copper
CAUTION. READ USER GUIDE BEFORE US
VM
J9
CAUTION HOT SURFACE
OUT
GND
J8
J17
ITRIP
IPROPI
MODE
SLEW RATE
DIAG

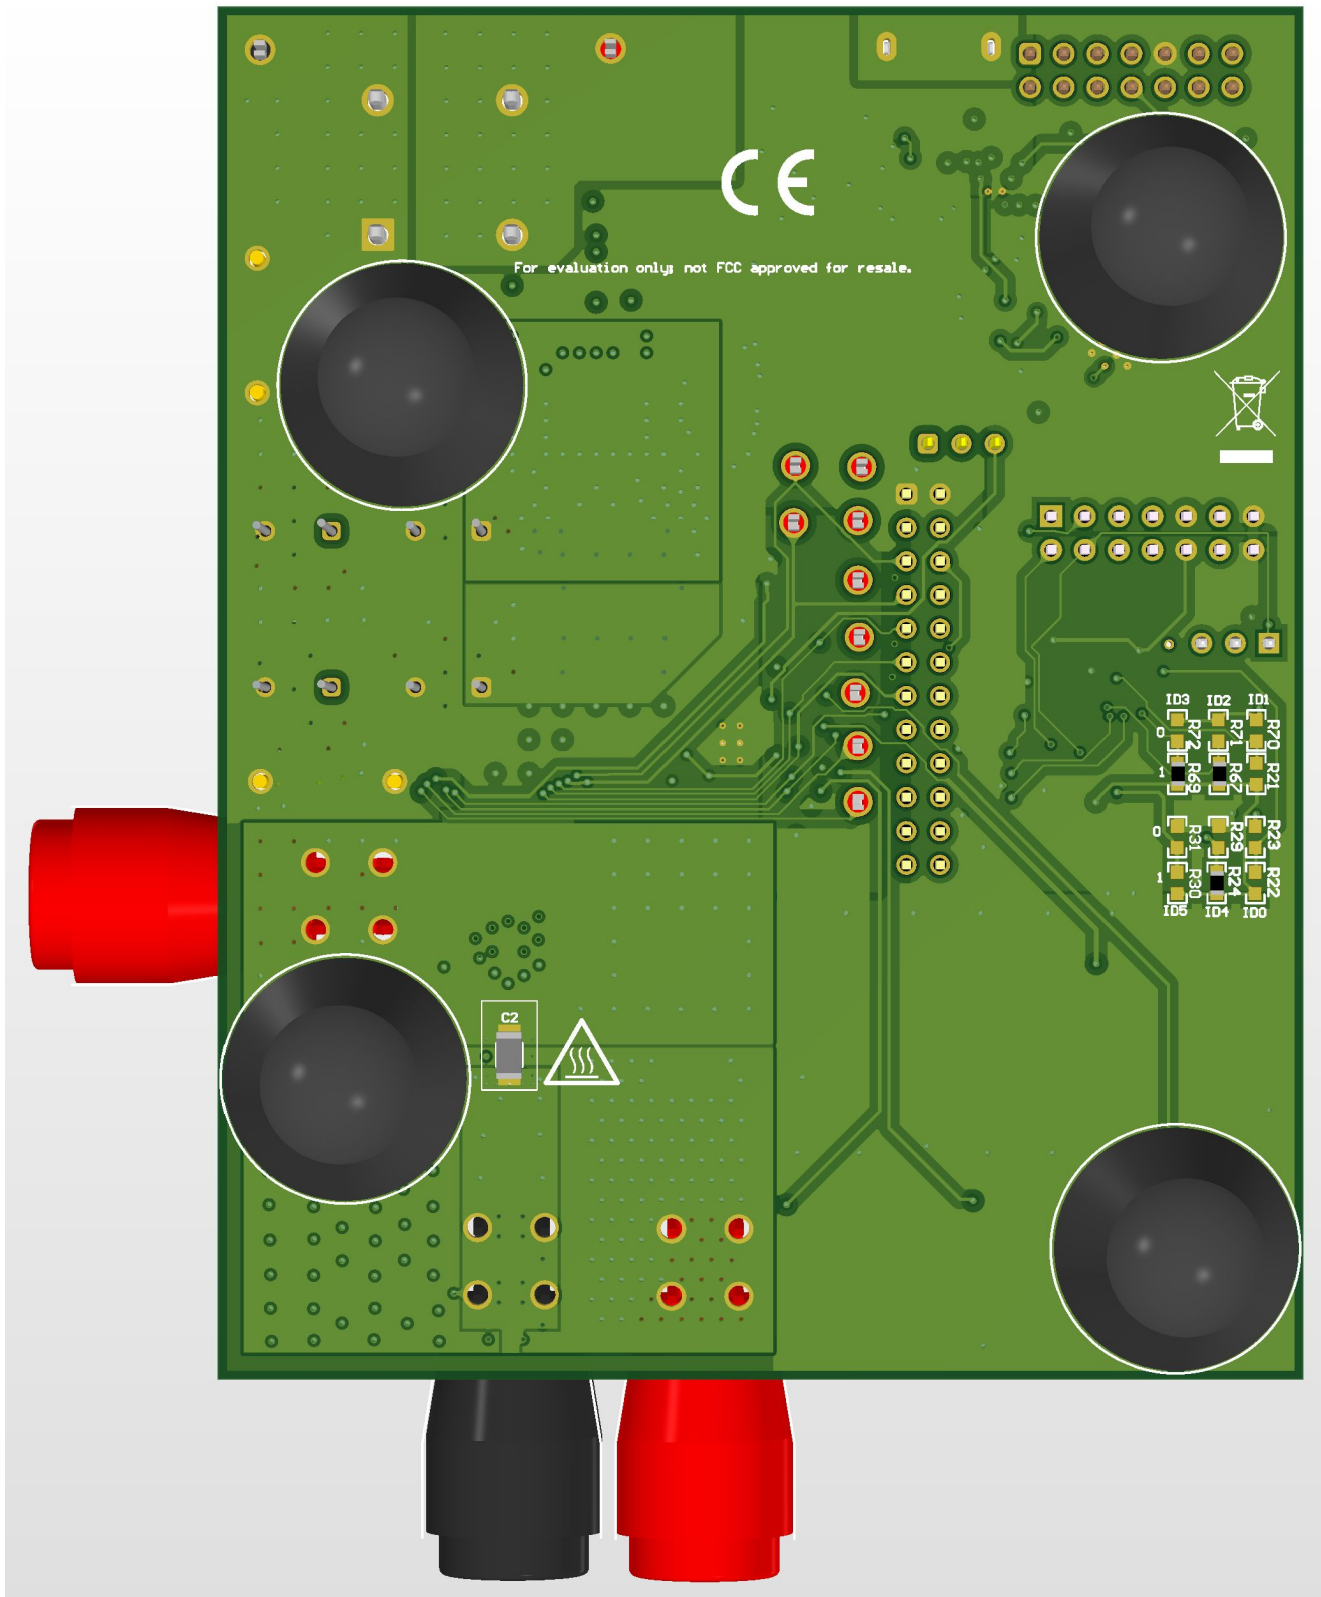
For evaluation only; not FCC approved for resale.
C2
ID3
ID2
ID1
R72
R71
R70
R69
R67
R21
R31
R29
R23
R30
R24
R22
ID5
ID4
ID0