

# Using UCD7138 and UCD3138A for Advanced Synchronous Rectification Control

### ABSTRACT

The UCD7138 low-side MOSFET driver is a high-performance driver for secondary-side synchronous rectification (SR), with body-diode conduction sensing. The device is suitable for high-power, high-efficiency, isolated-converter applications requiring dead-time optimization. The UCD7138 gate driver is a companion device to the UCD3138A, a highly-integrated digital controller for isolated power. The UCD3138A has an advanced dead time control interface which accepts UCD7138 output signals and optimizes SR gate driver signals accordingly. This application report provides the setup guide for advanced synchronous rectification control of the two devices. The hardware connection, layout example, and firmware example are provided.

### Topic

### Page

1	Introduction 2
2	Hardware Connection
3	UCD7138 Layout Example 9
4	UCD3138A Dead Time Compensation (DTC) Interface
5	Code Example
6	Register List 17

### 1 Introduction

The state-of-the-art, LLC-resonant converter SR driving strategies fall in two categories: the first is the MOSFET Rdson voltage-drop sensing-based method; the other is the SR-pulse width-clamp method, which is usually used in digitally-controlled LLC converters.

In the first method, the MOSFET is turned on after a large negative voltage on the MOSFET body diode is detected on the MOSFET drain terminal. The MOSFET is turned off when the voltage drop on the MOSFET Rdson rises above a small negative voltage. Some commercial products in this category also try to vary the gate drive voltage to enable fast turnoff. This method requires turnon and turnoff blanking times, does not require a gate driver input, and works for both analog and digital solutions. One of the drawbacks of this method is that the voltage drop on Rdson is too small to detect, and varies with layout parasitic and the type of MOSFETs used. Also, in high-current applications with several MOSFETs in parallel, the Rdson is so small that the MOSFETs are turned off when the current is still large.

In the second method, the SR gate drive signal comes from the digital controller. The turn-on edge is usually fixed. The turn-off edge changes based on operation modes. When above or equal to resonant frequency, the turn-off edge varies based on the switching frequency, and keeps a fixed dead time relative to the primary-side gate drive signal. When below resonant frequency, the SR pulse width is clamped to half of the resonant period, minus some dead time. This method is easy to implement with digital power controllers. The drawback is that this method requires resonant tank information for programming the pulse width clamp value, and thus requires calibration in production.

Method	Advantages	Disadvantages
Rdson voltage drop sensing	Does not require gate drive signal input	Not suitable for high current applications with several MOSFETs in parallel Layout parasitic concern
SR pulse width clamp	Digital controller friendly Simple system configuration	Requires calibration in production No SR turn-on edge optimization

### Table 1. State of the Art LLC SR Control Methods

To overcome the previously mentioned drawbacks of the existing solutions, a novel body-diode conduction time, sensing-based adaptive SR control method is proposed and implemented in UCD7138 and UCD3138A. The drain-to-source voltage on the MOSFET Rdson can vary with package, layout parasitic, and load current. However, when the body diode conducts, the voltage drop on the body diode is relatively constant, regardless of parasitic and load conditions. The UCD7138 gate driver senses the body diode conduction of the SR and reports to UCD3138A. UCD3138A then uses this information to adjust SR on time for the next cycle. A configurable body-diode conduction detection window is introduced in UCD3138A to determine whether the SR on time is too long or too short. The body-diode conduction time can be regulated to a desired length. A negative current prevention mechanism is also included to improve system reliability. In addition, UCD7138 can optimize the SR turn on edge timing. Compared with a conventional solution, the benefits of the proposed method are:

- Achieves high efficiency in a wider load range
- Automatically compensates for power stage component parameter variations; no calibration is required
- Large signal detection, easy layout, no parasitic concern
- No minimum on or off time, or blanking time constraints
- Better noise immunity compared with competitive solutions
- Good performance for both low-current applications and high-current applications with MOSFETs in parallel

### 1.1 Optimal SR Operation

The optimal SR operation is as follows. At below or equal to resonant frequency, the SR turn-on edge follows closely to the primary-side turn-on edge; the SR turn-off edge is determined by approximately half of the resonant period. At above resonant frequency, the SR turn-on edge is delayed, compared with the primary-side turn-off edge; the SR pulse width is always equal to approximately half of the switching period, thus the turn-off edge of the SR can pass that of the primary side.



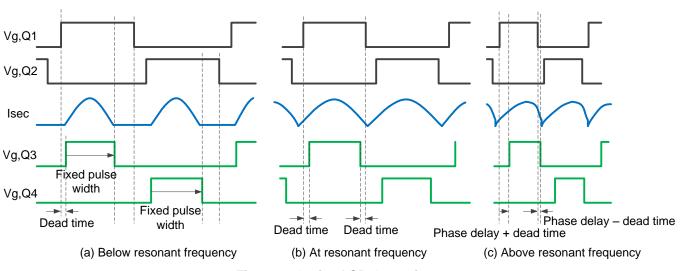


Figure 1. Optimal SR Operations

#### 1.2 **Body-Diode Conduction Detection**

The body-diode conduction detector is a comparator with a -150 mV threshold. Comparator output is blanked when SR is on. Comparator output is active low when body-diode conduction is detected. When SR gate drive is high, the comparator output is blanked and always high to improve noise immunity.

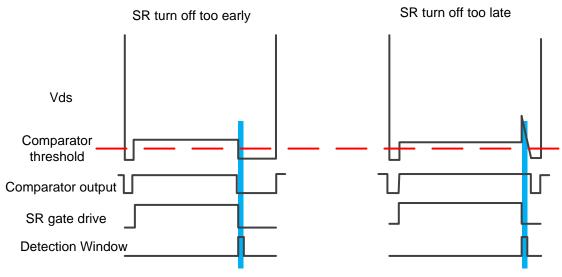


Figure 2. Body-Diode Conduction Detection

Figure 2 shows that in two cases the body diode of the SR MOSFET conducts:

- 1. MOSFET turns off too early, positive current flow, body diode conducts immediately after SR turning off
- 2. MOSFET turns off too late, negative current flow, drain to source voltage shoot-up first, then body diode conducts.

In two cases, SR on time should be adjusted in different directions, using a detection window generated for this purpose. The detection window starts right after the SR gate drive turns off; the length of the detection window is configurable, based on the delay in the circuit.

Control



### Introduction

4

If, during the detection window, there is comparator low detected, the window indicates that the SR turns off too early. If, during the detection window, there is no comparator low detected, it indicates that the SR turns off too late.

#### 1.3 Turn-On and Turn-Off Edge Optimization

In the proposed method, the SR gate drive signal is determined by both the primary-side gate-drive signal, and the body-diode conduction-detector output. The digital controller outputs a calculated SR-gate drive signal IN, based on the primary side pulse width, switching frequency, and the body-diode conduction time of the previous period.

The actual gate turning on is controlled by both the digital controller output IN and body-diode conductiondetector output DTC. OUT is the resulting digital controller SR-gate drive output. The OUT can only be turned on when IN is high. If DTC is already low at IN rising edge, turn on the gate driver output immediately; if DTC is still high at IN rising edge, turn on the gate driver output as soon as the DTC falling edge is received.

The gate turn-off edge is determined by IN only. The gate is turned off immediately at the IN falling edge.

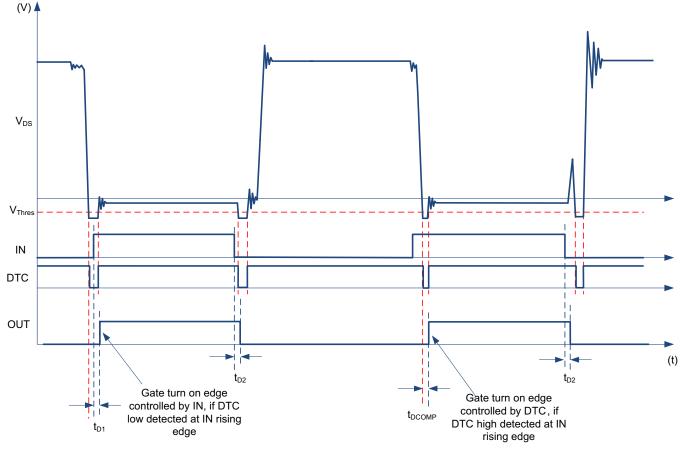



Figure 3. Turn-On Edge Optimization

The turn-on edge optimization is illustrated in Figure 3. The turn-off edge optimization is explained by Figure 2. During the detection window, the digital controller counts the DTC low time, and thus calculates the body-diode conduction time. If the time is too long, the digital controller increases the SR on time in the next cycle. If the time is too short, the digital controller reduces the SR on time in the next cycle.



## 1.4 Negative Current Prevention

As shown in Figure 4, when the SR pulse is on for too long, the drain-to-source voltage rises up.

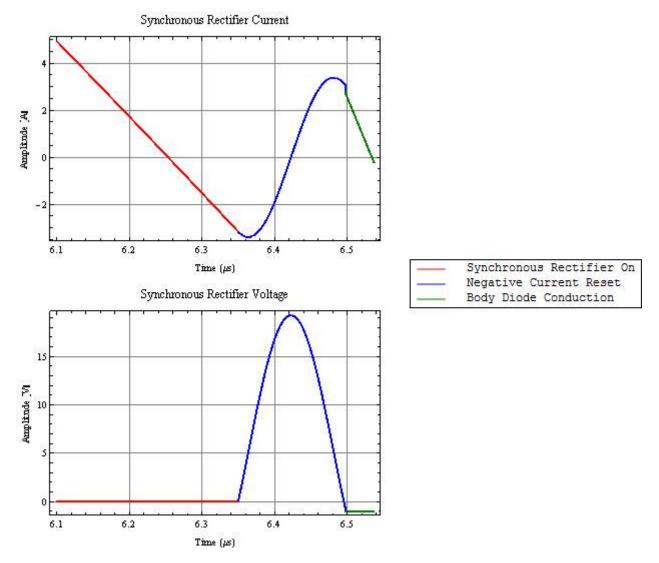

### Figure 4. LLC Converter SR Drain to Source Voltage Shoot Up when there is Negative Current Flow

There are two ways to detect this situation: to set a positive threshold to detect the Vds shoot up, or to use the same detection window and body-diode conduction detector as described in the previous section. When there is no body-diode conduction during the detection window, negative current may have occurred, and the digital controller protects the system from damage. When the body diode conduction time sensed during the detection window is less than a certain threshold, UCD3138A will treat it as a fault and reduce the SR on time by a large pre-programmed amount. An interrupt can be generated, too.




Hardware Connection

www.ti.com

## 2 Hardware Connection

Figure 5 shows a simplified hardware connection diagram.

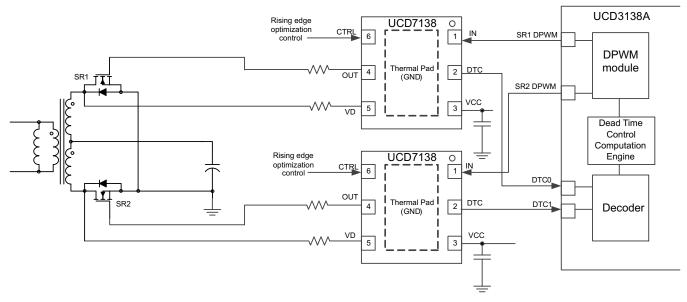


## Figure 5. UCD7138 and UCD3138A Hardware Connection


Tern	Terminal		Description			
Name	No.	Туре	Description			
IN	1	I	<b>Input</b> : Gate driver input. This pin should be connected directly to one of the UCD3138A DPWM outputs.			
DTC	2	0	<b>Body diode conduction time report</b> : Standard digital I/O. Pulled high internally. Output low when body diode conducts. This pin should be connected to the DTC0 or DTC1 pin on UCD3138A. Some noise filtering may be needed on this pin at the UCD3138A side.			
VCC	3	Р	<b>IC supply</b> : External bias supply input. Supply range 4.5 V to 18 V. A ceramic bypass capacitor of at least 1 uF should be connected between VCC pin and the GND pad as close as possible.			
OUT	4	ο	<b>Gate driver output</b> : Integrated push-pull gate driver for one or more external power MOSFETs. Typical 4-A source and 6-A sink capability. Output voltage is rail-to-rail with VCC. This pin should be connected to the gate terminal of the SR MOSFETs.			
VD	5	I	<b>Drain voltage</b> : Connect this pin as close as possible to the controlled MOSFET drain pad. This pin is connected to the diode conduction detection comparators internally. The comparator has a $-0.15$ V threshold to detect body-diode conduction. A $20-\Omega$ resistor should be connected between VD pin and MOSFET drain terminal to limit the current.			
CTRL	6	I	<b>Rising-edge optimization control</b> : Connect this pin to ground to disable rising-edge optimization; leave this pin floating or connect to logic high to enable rising-edge optimization.			
GND	7	G	<b>Power Pad/GND:</b> The exposed pad on the bottom of the package enhances the thermal performance of the device. This pad is device ground reference.			





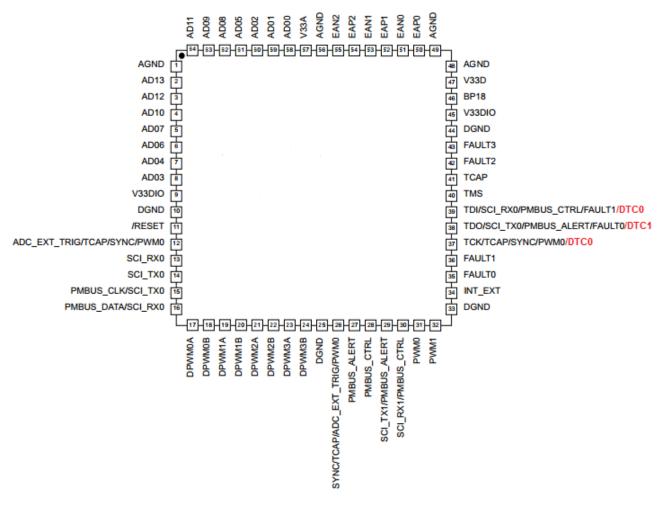



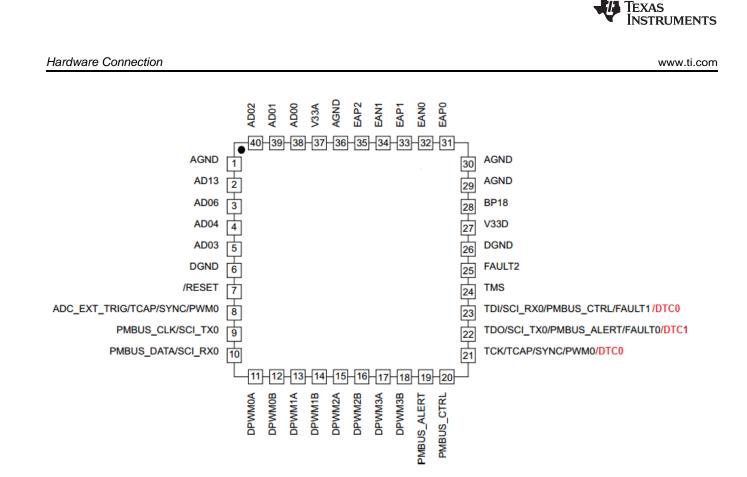





## 3 UCD7138 Layout Example

## 3.1 LLC Layout Example

Figure 8 and Figure 9 show an LLC layout example where a 40-V leaded MOSFET is used for synchronous rectification.

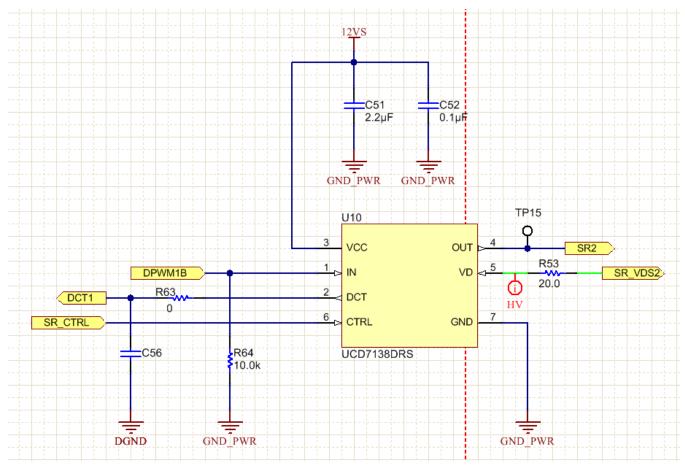


Figure 8. LLC Schematic Example



UCD7138 Layout Example

www.ti.com

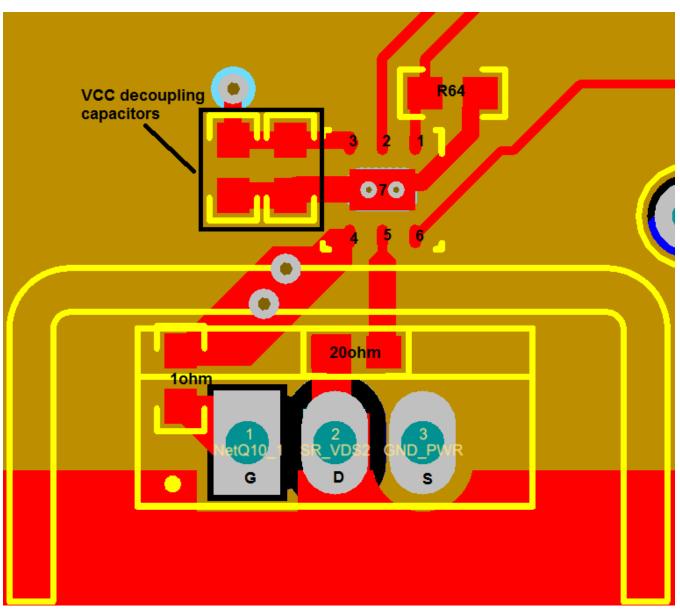


Figure 9. LLC Layout Example



## 3.2 Hard-Switched Full Bridge (HSFB) Layout Example

Figure 10 and Figure 11 show a HSFB schematic and layout example where an external high-voltage blocking MOSFET in a SOT-23 package is used to extend the VD pin voltage tolerance to 100 V.

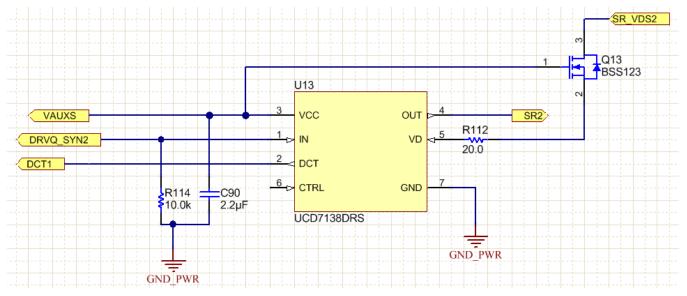


Figure 10. HSFB Schematic Example

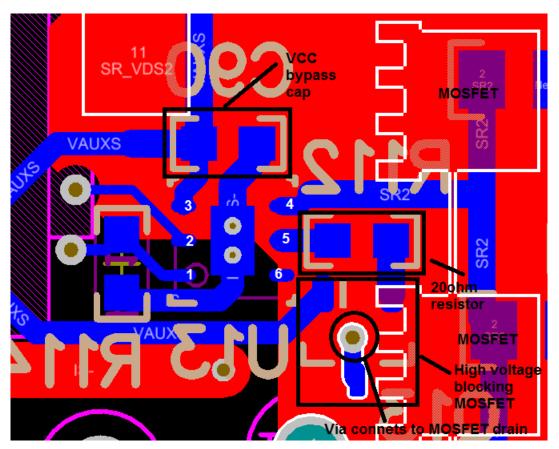



Figure 11. HSFB Layout Example

## 4 UCD3138A Dead Time Compensation (DTC) Interface

## 4.1 Overview


UCD7138 and UCD3138A can work together to optimize both the turn-on edge and turn-off edge of the synchronous rectifiers. The turn-on edge optimization is handled by the UCD7138 gate driver. For details about turn-on edge optimization, refer to UCD7138 datasheet (<u>SLVSCS1</u>). The turn-off edge optimization is handled by UCD3138A. Figure 12 is the timing diagram.

DTC0 and DTC1 are received body-diode conduction inputs from UCD7138. SR0\_DPWM and SR1\_DPWM are the DPWM waveforms for the SRs. The yellow and green edges are moving edges controlled by both the filter output and the DTC interface. In each cycle, a body-diode conduction time detection window is generated after the falling edge of the SR DPWM waveform. The detection window is defined by both DETECT\_BLANK and DETECT\_LEN registers. During this detection window, a 4-ns timer capture counts how long the body diode conducts. The SR DPWM turn-off edge of the next cycle is then adjusted accordingly.

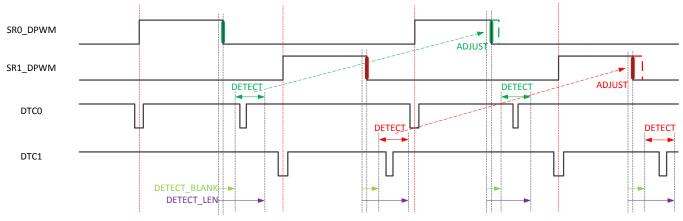

\* Note: DETECT\_BLANK and DETECT\_LEN starts 1MCLK (32ns) before the falling edge of SR0\_DPWM or SR1\_DPWM

Figure 12. Timing Diagram of the DTC Interface

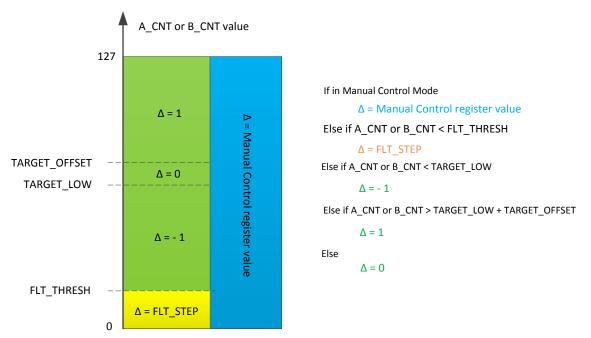

## Figure 13. DTC Interface Principle



Figure 13 shows the turn-off edge adjustment based on the DTC measurement of the previous cycle. The A\_ADJ and B\_ADJ registers in DTCMONITOR are signed accumulators; the default value is 0.

Based on the DTC measured, in the next cycle:

 $A\_ADJ = A\_ADJ + A\_\Delta$ 

 $\mathsf{B}\_\mathsf{A}\mathsf{D}\mathsf{J} = \mathsf{B}\_\mathsf{A}\mathsf{D}\mathsf{J} + \mathsf{B}\_\Delta$ 

In each cycle, the A\_ADJ and B\_ADJ accumulator values are added to the original filter-controlled turn-off edges, to dynamically adjust the dead time. The  $\Delta$  value changes when the measured body-diode conduction time value changes. A\_ADJ and B\_ADJ are updated every cycle if in automatic control mode. A\_ADJ and B\_ADJ are updated only once if in manual control mode.

## 4.2 *I/O Mux*

UCD3138A can accept body-diode conduction input (output from the UCD7138 DTC pin) on different I/O pins as shown in Figure 2. This function can be configured through the IOMUX register in Loop Mux. The bit fields are DTC\_B\_SEL and DTC\_A\_SEL.

Bit 13: DTC\_B\_SEL – DTC Phase-B Pin Mux Select

0 = DTC Phase-B input from TDO pin

1 = DTC Phase-B input from SYNC pin

Bit 12: DTC\_A\_SEL - DTC Phase-A Pin Mux Select

0 = DTC Phase-A input from TDI pin

1 = DTC Phase-A input from TCK pin

## 4.3 DTC DPWM Mux

Two different DPWM outputs can be controlled by DTC interface independently, Phase A and Phase B. Phase A and Phase B can be selected from different DPWM outputs by configuring PWM\_A\_SEL and PWM\_B\_SEL in the DTCCTRL register.

### 4.4 Single Input or Dual Input Mode

The two phases of the SRs can be controlled symmetrically or unsymmetrically. When controlled symmetrically, the DTC interface only looks at the DTC input on DTC0 pin, and both turn-off edges are adjusted by the same amount in each cycle. When controlled unsymmetrically, the DTC interface looks at both the DTC0 and DTC1 input, and adjusts the Phase A and Phase B DPWM turn-off edge independently. The input mode is configured by the INPUT\_MODE bit in the DTCCTRL register.

## 4.5 Enable DTC Control in DPWM Module

In the DPWMCTRL2 register, the DTC\_MODE bit and DTC\_EN bit should be configured. If dual input mode is used, set DTC\_MODE to 2 (both DTC phase adjust A and B are utilized in the edge adjustments).

Bit 19-18: DTC\_MODE - DTC Mode Select

- 00 = Only DTC phase adjust A is utilized in edge adjustments (default)
- 01 = Only DTC phase adjust B is utilized in edge adjustments
- 10 = Both DTC phase adjust A and B are utilized in edge adjustments
- 11 = Reserved
- Bit 17: DTC\_EN Enables dead time compensation mode
- 0 = Disabled (default)
- 1 = Enabled



#### **DTC** Polarity 4.6

The internal 4-ns DTC timer capture can be configured to be either active low or active high. The A POL and B POL in the DTCCTRL register configure the detection polarity of Phase A and Phase B.

#### 4.7 Detection Window and Blanking

The SR body-diode conduction only happens when the MOSFET is turned off, so the body-diode detection window is generated right after the following edge of the SR DPWMs. The DETECT\_BLANK and DETECT LEN registers define the blanking time and detection window length, respectively.

#### 4.8 Manual or Automatic Control

As shown in Figure 9, when the DTC interface is in automatic control mode, the SR turn-off edge is moved backward or forward by one HFO clock at a time. Meanwhile, firmware can overwrite the accumulator values by writing to the DTCMANUAL register. The manual or automatic control selection is made by the bit MODE in the DTCCTRL register.

#### 4.9 Accumulator Clamps

The A\_ADJ and B\_ADJ are turn-off edge offset accumulators. They set the offsets of the SR turn-off edges from the original calculated value. To ensure sufficient dead time or shoot-through condition, the accumulator clamps ADJ MIN and ADJ MAX can be set to limit the minimum and maximum accumulator values.

### 4.10 Consecutive Fault Counter and Interrupt

When the measured A\_CNT or B\_CNT is less than the FLT\_THRESH, it is considered as a fault. When there are a certain number of consecutive detected faults, a pre-programmed fault step is utilized. The number of consecutive faults is defined by the FLT\_MAX register; the fault step size is defined by the FLT\_STEP register.



{

#### 5 **Code Example**

#### 5.1 **DTC Module Initialization**

The following code example configures the DTC module in automatic control mode for an LLC converter.

Code Example

```
//Advandanced Dead Time Compensation (DTC) module initialization (Automatic mode)
void init_DTC(void)
    //Enable DTC interrupt
   LoopMuxRegs.DTCCTRL.bit.FLT_INT_EN = 1;
    //Set the number of consecutive detected faults before a fault step utilized
   LoopMuxRegs.DTCCTRL.bit.FLT_MAX_CNT = 3;
    //Set the fault step size to be -75*4ns
   LoopMuxRegs.DTCCTRL.bit.FLT_STEP = 5;
    //Set the fault threshold to be 3*4ns
   LoopMuxRegs.DTCCTRL.bit.FLT_THRESH = 3;
    //Select DPWM1A to be controlled by DTC Phase A
   LoopMuxRegs.DTCCTRL.bit.PWM_A_SEL = 2;
    //Select DPWM1B to be controlled by DTC Phase B
   LoopMuxRegs.DTCCTRL.bit.PWM_B_SEL = 6;
    //Set the signal polarity of DTC pin to be active low
   LoopMuxRegs.DTCCTRL.bit.A_POL = 0;
   LoopMuxRegs.DTCCTRL.bit.B_POL = 0;
    //Phase A and Phase B operates on separate inputs
   LoopMuxRegs.DTCCTRL.bit.INPUT_MODE = 0;
    //Automatic control mode
   LoopMuxReqs.DTCCTRL.bit.MODE = 0;
    //Enable DTC module
    LoopMuxRegs.DTCCTRL.bit.DTC_EN = 1;
    //Set body diode conduction time detection window blanking time
   LoopMuxRegs.DTCTARGET.bit.DETECT_BLANK = 30;
    //Set body diode conduction time detection window length
   LoopMuxRegs.DTCTARGET.bit.DETECT_LEN = 120;
    //Set DTC control target offset. Target offset + target low = target high
   LoopMuxRegs.DTCTARGET.bit.TARGET_OFFSET = 2;
    //Set DTC control target low
    LoopMuxRegs.DTCTARGET.bit.TARGET_LOW = 15;
    //Set maximum accumulator clamp
   LoopMuxRegs.DTCLIMIT.bit.ADJ_MAX = 50;
    //Set minimum accumulator clamp
   LoopMuxRegs.DTCLIMIT.bit.ADJ_MIN = -400;
    //Initialize IOMUX
    //DTC Phase A input from TDI pin
   MiscAnalogRegs.IOMUX.bit.DTC_A_SEL = 0;
```

//DTC Phase B input from TDO pin MiscAnalogRegs.IOMUX.bit.DTC\_B\_SEL = 0;

```
//Initialize DTC registers in DPWM module
//Both DTC phase adjust A and B are utilized in edge adjustments
DpwmlRegs.DPWMCTRL2.bit.DTC_MODE = 2;
//Enable DTC in DPWM module
DpwmlRegs.DPWMCTRL2.bit.DTC_EN = 1;
```

```
}
```

Code Example

16

www.ti.com

#### 5.2 DTC Interrupt

The DTC interrupt number is 19, and defined by the macro CIMINT\_ALL\_DTC.

```
disable_interrupt();
```

```
disable_fast_interrupt();
//Configure IRQ and FIQ
write_reqmask(CIMINT_ALL_DTC);
write_firqpr(CIMINT_ALL_DTC);
//Enable interrupts
enable_fast_interrupt();
enable_interrupt();
```

The DTC interrupt is only tripped if a certain number of consecutive faults are detected. The DTCSTAT register has a FLAG bit to indicate each fault condition. If the FLAG bit is 1, it indicates a fault condition.

#### 5.3 Manual Control Mode

If manual control mode is used during initialization, the MODE bit in the DTCCTRL register should be set.

```
//Manual control mode
   LoopMuxRegs.DTCCTRL.bit.MODE = 1;
```

The DTC manual adjust function reads the DTC counter value, then adjusts the accumulator value:

```
//DTC variable definitions
Uint16 DTC_A_count;
Uint16 DTC_B_count;
int32 accumulator_A;
int32 accumulator_B;
//DTC manual control
void DTC_manual_adj(void)
{
    //Read DTC counter values
   DTC_A_count = LoopMuxRegs.DTCSTAT.bit.A_CNT;
   DTC_B_count = LoopMuxRegs.DTCSTAT.bit.B_CNT;
    //Read accumulator values
   accumulator_A = LoopMuxRegs.DTCMONITOR.bit.A_ADJ;
   accumulator_B = LoopMuxRegs.DTCMONITOR.bit.B_ADJ;
    //Adjust Phase A
   if((DTC_A_count > 15)&&(accumulator_A < 511))
        LoopMuxRegs.DTCMANUAL.bit.A_ADJ = accumulator_A + 1;
    else if ((DTC_A_count < 13)&&(accumulator_A -512))
        LoopMuxRegs.DTCMANUAL.bit.A_ADJ = accumulator_A - 1;
    //Adjust Phase B
    if((DTC_B_count > 15)&&(accumulator_B < 511))
        LoopMuxReqs.DTCMANUAL.bit.B ADJ = accumulator B + 1;
    else if ((DTC_B_count < 13)&&(accumulator_B > -512))
        LoopMuxRegs.DTCMANUAL.bit.B_ADJ = accumulator_B - 1;
}
```



## 6 Register List

Table 3 shows the registers used for the DTC interface.

Address	Register Name	Description	Bits	Туре	Reset		
0x0002_0078	DTCCTRL	DTC Control Register	21	R/W	0x0		
0x0002_007C	DTCTARGET	DTC Target Register	24	R/W	0x0		
0x0002_0080	DTCLIMIT	DTC Automatic Limit Register	20	R/W	0xE001FF		
0x0002_0084	DTCMANUAL	DTC Manual Control Register	20	R/W	0x0		
0x0002_0088	DTCMONITOR	DTC Monitor Register	20	R	0x0		
0x0002_008C	DTCSTATUS	DTC Status Register	15	R	N/A		

### Table 3. Register List

## 6.1 DTC Control (DTCCTRL)

### Figure 14. DTC Control (DTCCTRL) Register

			•	, 0		
22	21	20	19	18	17	16
FLT_INT_EN	FLT_	_MAX		FLT_STEP		FLT_THRESH
R/W	R	/W		R/W		R/W
14	13	12	11	10	9	8
FLT_THRESH			PWM	_A_SEL		PWM_B_SEL
R/W			F	R/W		R/W
6	5	4	3	2	1	0
PWM_B_SEL		A_POL	B_POL	INPUT_ MODE	MODE	DTC_EN
R/W		R/W	R/W	R/W	R/W	R/W
	FLT_INT_EN         R/W         14         FLT_THRESH         R/W         6         PWM_B_SEL	22         21           FLT_INT_EN         FLT_           R/W         R           14         13           FLT_THRESH            R/W            6         5           PWM_B_SEL	22         21         20           FLT_INT_EN         FLT_MAX           R/W         R/W           14         13         12           FLT_THRESH             R/W             PWM_B_SEL         A_POL	22         21         20         19           FLT_INT_EN         FLT_MAX             R/W         R/W	22         21         20         19         18           FLT_INT_EN         FLT_MAX         FLT_STEP           R/W         R/W         R/W           14         13         12         11         10           FLT_THRESH         PWM_A_SEL         R/W         R/W	22         21         20         19         18         17           FLT_INT_EN         FLT_MAX         FLT_STEP            R/W         R/W         R/W         R/W           14         13         12         11         10         9           FLT_THRESH         PWM_A_SEL         R/W          14         13         12         11         10         9           R/W         R/W         R/W         14         13         12         11         10         9           FLT_THRESH         R/W         R/W         14         13         12         11         10         9           R/W         INPUT_A_SEL         11         10         11         10

Address 00120078

## Table 4. DTC Control (DTCCTRL) Register Field Descriptions

Bit	Field	Туре	Reset	Description
22	FLT_INT_EN	R/W	0	Enables interrupt generation when a fault flag condition has been met 0 = Interrupt disabled (default) 1 = Interrupt enabled
21-20	FLT_MAX	R/W	0	Sets the number of consecutive detected faults before a fault step is utilized 0 = 1 (default) 1 = 2 2 = 4 3 = 8

Bit	Field	Туре	Reset	Description
19-17	FLT_STEP	R/W	0	Sets the negative step size when a fault condition is detected that exceeds the fault max value. If the fault_max condition has not been met the step size is -1. Step size is HFO clock increments. 0 = -1 (default) 1 = -5 2 = -10 3 = -25 4 = -50 5 = -75 6 = -100 7 = -125
16-13	FLT_THRESH	R/W	0	Sets the measurement threshold for a fault condition to initiate a fault step.
12-9	PWM_A_SEL	R/W	0	Selects the phase A negative edge reference to begin a measurement window 0 = Disabled (Default) 1 = DPWM-0-A 2 = DPWM-0-A 3 = DPWM-1-A 3 = DPWM-2-A 4 = DPWM-3-A 5 = DPWM-0-B 6 = DPWM-0-B 6 = DPWM-1-B 7 = DPWM-2-B 8 = DPWM-3-B
8-5	PWM_B_SEL	R/W	0	Selects the phase B negative edge reference to begin a measurement window 0 = Disabled (Default) 1 = DPWM-0-A 2 = DPWM-0-A 3 = DPWM-2-A 4 = DPWM-2-A 5 = DPWM-0-B 6 = DPWM-0-B 6 = DPWM-1-B 7 = DPWM-2-B 8 = DPWM-3-B
4	A_POL	R/W	0	Sets the signal polarity of the DTC input to the device 0 = Active Low (Default) 1 = Active High
3	B_POL	R/W	0	Sets the signal polarity of the DTC input to the device 0 = Active Low (Default) 1 = Active High
2	INPUT_ MODE	R/W	0	Sets the input method for the DTC module 0 = Phase A and Phase B input signals occur on separate inputs 1 = Phase A and Phase B input signals occur on the same input
1	MODE	R/W	0	Sets mode control of the DTC phase accumulator values 0 = Automatic Mode. Accumulators A and B are changed by hardware and stay within limits programmed in the DTCLIMIT register. (Default) 1 = Manual Mode. Accumulator A and B set by programmed values in the DTCMANUAL register.
0	DTC_EN	R/W	0	DTC Enable 0 = Dead-time Compensate Module disabled (Default) 1 = Dead-time Compensate Module enabled

## Table 4. DTC Control (DTCCTRL) Register Field Descriptions (continued)



### Register List

## 6.2 DTC Target (DTCTARGET)

	Figure 15. DTC Target (DTCTARGET) Register							
23	17	16 9	8 7	6	0			
	DETECT_BLANK	DETECT_LEN	TARGET_OFFSET	TARGET_LOW				
	R/W	R/W	R/W	R/W				

## Address 0012007C

### Table 5. DTC Target (DTCTARGET) Register Field Descriptions

Bit	Field	Туре	Reset	Description
23-17	DETECT_BLANK	R/W	0	Sets the target measurement window blanking length, in HFO clock increments.
16-9	DETECT_LEN	R/W	0	Sets the target measurement window length, in HFO clock increments.
8-7	TARGET_OFFSET	R/W	0	Target Threshold Offset. Target upper threshold = target low + target offset 0 = 0 (default) 1 = 2 HFO clocks 2 = 4 HFO clocks 3 = 8 HFO clocks
6-0	TARGET_LOW	R/W	0	Target Lower Threshold, in HFO clock increments

## 6.3 DTC Auto Control Limit (DTCLIMIT)

### Figure 16. DTC Auto Control Limit (DTCLIMIT) Register

19		10	9		0
	ADJ_MAX			ADJ_MIN	
	R/W			R/W	

Address 00120080

### Table 6. DTC Auto Control Limit (DTCLIMIT) Register Field Descriptions

Bit	Field	Туре	Reset	Description
19-10	ADJ_MAX	R/W	01_1111_1111	Sets the signed integer upper clamp for the accumulators. The integer range is (-512 to 511)
9-0	ADJ_MIN	R/W	10_0000_0000	Sets the signed integer lower clamp for the accumulators. The integer range is (-512 to 511)



## 6.4 DTC Manual Control (DTCMANUAL)

19 10	9 0
A_ADJ	B_ADJ
R/W	R/W

Address 00120084

### Table 7. DTC Manual Control (DTCMANUAL) Register Field Descriptions

Bit	Field	Туре	Reset	Description
19-10	A_ADJ	R/W	00_0000_0000	Sets the signed A accumulator value when manual control is enabled.
9-0	B_ADJ	R/W	00_0000_0000	Sets the signed B accumulator value when manual control is enabled.

Register is ignored in automatic mode.

## 6.5 DTC Monitor (DTCMONITOR)

### Figure 18. DTC Monitor (DTCMONITOR) Register

19	10	9		0
A_ADJ			B_ADJ	
R		R		

Address 00120088

### Table 8. DTC Monitor (DTCMONITOR) Register Field Descriptions

Bit Field Type Reset Description		Description		
19-10	A_ADJ	R	0_000_0000	Monitored accumulator A value from the DTC module
9-0	B_ADJ	R	0_000_0000	Monitored accumulator B value from the DTC module

## 6.6 DTC Status (DTCSTAT)

### Figure 19. DTC Status (DTCSTAT) Register

14	8	7		1	0
A_CNT			B_CNT		FLAG
R			R		

Address 0012008C

### Table 9. DTC Status (DTCSTAT) Register Field Descriptions

Bit	Field	Туре	Reset	Description
14-8	A_CNT	R	000_0000	Last measurement value for phase A input signal
7-1	B_CNT	R	000_0000	Last measurement value for phase B input signal
0	FLAG	R	0	Flag is set when the fault count exceeds the FLT MAX value programmed in the DTCCTRL register.



## **Revision History**

Cł	nanges from A Revision (June 2015) to B Revision F	Page
•	Updated Timing Diagram of the DTC Interface.	12

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

### **IMPORTANT NOTICE**

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have *not* been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products		Applications	
Audio	www.ti.com/audio	Automotive and Transportation	www.ti.com/automotive
Amplifiers	amplifier.ti.com	Communications and Telecom	www.ti.com/communications
Data Converters	dataconverter.ti.com	Computers and Peripherals	www.ti.com/computers
DLP® Products	www.dlp.com	Consumer Electronics	www.ti.com/consumer-apps
DSP	dsp.ti.com	Energy and Lighting	www.ti.com/energy
Clocks and Timers	www.ti.com/clocks	Industrial	www.ti.com/industrial
Interface	interface.ti.com	Medical	www.ti.com/medical
Logic	logic.ti.com	Security	www.ti.com/security
Power Mgmt	power.ti.com	Space, Avionics and Defense	www.ti.com/space-avionics-defense
Microcontrollers	microcontroller.ti.com	Video and Imaging	www.ti.com/video
RFID	www.ti-rfid.com		
OMAP Applications Processors	www.ti.com/omap	TI E2E Community	e2e.ti.com
Wireless Connectivity	www.ti.com/wirelessconne	ctivity	

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2015, Texas Instruments Incorporated