

UCD3138064A Migration Guide

HPCS / HVPS

ABSTRACT

This application note describes differences between Texas Instruments' UCD3138064 and UCD3138064A Digital power controllers to assist customers in migrating application. While the main focus of this document is migration from UCD3138064 to UCD3138064A, this document is also useful if you are considering migrating in the reverse direction. Functions that are identical in both devices are not included in this document. All efforts have been made to provide a comprehensive list of the differences between the two devices in the UCD3138 family.

<TOCtitle> Contents

1	Introduction	8
2	Device Overview summary.....	9
2.1	New Features	9
2.1.1	Body diode conduction time sensing	9
2.1.2	UART Auto Baud Enhacement.....	11
2.2	Bug Fix/ Enhancements	12
2.3	Pinmultiplexing updates	15
2.4	Revision update.....	16
3	Application Migration care about	16
3.1	Change to Device ID	16
3.2	Possible Changes to Layout and Power Supply Filtering.....	16
3.3	LLC Topology	16
3.4	PS- LLC Topology	16
3.5	HSFB Topology	17
3.6	PSFB Topology	17
3.7	PFC Topology	18
4	Memory Map for UCD3138064A	18
4.1	Loop Mux Registers	18
4.1.1	Front End Control 0 Mux Register (FECTRL0MUX).....	18
4.1.2	Front End Control 1 Mux Register (FECTRL1MUX).....	21
4.1.3	Front End Control 2 Mux Register (FECTRL2MUX).....	23
4.1.4	Sample Trigger Control Register (SAMPTRIGCTRL).....	25
4.1.5	External DAC Control Register (EXTDACCTRL).....	26
4.1.6	Filter Mux Register (FILTERMUX).....	28
4.1.7	Filter KComp A Register (FILTERKCOMPA).....	30
4.1.8	Filter KComp B Register (FILTERKCOMPB).....	30
4.1.9	DPWM Mux Register (DPWMMUX)	31

4.1.10	Constant Power Control Register (CPCTRL)	33
4.1.11	Constant Power Nominal Threshold Register (CPNOM).....	34
4.1.12	Constant Power Max Threshold Register (CPMAX).....	35
4.1.13	Constant Power Configuration Register (CPCONFIG).....	35
4.1.14	Constant Power Max Power Register (CPMAXPWR)	37
4.1.15	Constant Power Integrator Threshold Register (CPINTTHRESH)	37
4.1.16	Constant Power Firmware Divisor Register (CPFWDIVISOR)	37
4.1.17	Constant Power Status Register (CPSTAT).....	38
4.1.18	Cycle Adjustment Control Register (CYCADJCTRL).....	39
4.1.19	Cycle Adjustment Limit Register (CYCADJLIM)	40
4.1.20	Cycle Adjustment Status Register (CYCADJSTAT).....	40
4.1.21	Global Enable Register (GLBEN)	41
4.1.22	PWM Global Period Register (PWMGLBPRD).....	42
4.1.23	Sync Control Register (SYNCCTRL)	42
4.1.24	Light Load Control Register (LLCTRL)	43
4.1.25	Light Load Enable Threshold Register (LLENTHRESH)	43
4.1.26	Light Load Disable Threshold Register (LLDISTHRESH)	44
4.1.27	Analog Peak Current Mode Ramp Register (APCMRAMP)	44
4.1.28	Analog Peak Current Mode Control Register (APCMCTRL)	44
4.1.29	DTC Control (DTCCTRL).....	45
4.1.30	DTC Target (DTCTARGET).....	47
4.1.31	DTC Auto Control Limit (DTCLIMIT).....	47
4.1.32	DTC Manual Control (DTCMANUAL)	47
4.1.33	DTC Monitor (DTCMONITOR).....	48
4.1.34	DTC Status (DTCSTAT)	48
4.2	Fault Mux Registers	49
4.2.1	Analog Comparator Control 0 Register (ACOMPCTRL0).....	49
4.2.2	Analog Comparator Control 1 Register (ACOMPCTRL1).....	50
4.2.3	Analog Comparator Control 2 Register (ACOMPCTRL2).....	53
4.2.4	Analog Comparator Control 3 Register (ACOMPCTRL3).....	54
4.2.5	External Fault Control Register (EXTFAULTCTRL)	55
4.2.6	Fault Mux Interrupt Status Register (FAULTMUXINTSTAT)	57
4.2.7	Fault Mux Raw Status Register (FAULTMUXRAWSTAT)	59
4.2.8	Comparator Ramp Control 0 Register (COMPRAMP0).....	61
4.2.9	Digital Comparator Control 0 Register (DCOMPCTRL0).....	62
4.2.10	Digital Comparator Control 1 Register (DCOMPCTRL1).....	63
4.2.11	Digital Comparator Control 2 Register (DCOMPCTRL2).....	64
4.2.12	Digital Comparator Control 3 Register (DCOMPCTRL3).....	65
4.2.13	Digital Comparator Counter Status Register (DCOMPCNTSTAT)	66
4.2.14	DPWM 0 Current Limit Control Register (DPWM0CLIM)	67
4.2.15	DPWM 0 Fault AB Detection Register (DPWM0FLTABDET)	69
4.2.16	DPWM 0 Fault Detection Register (DPWM0FAULTDET)	72
4.2.17	DPWM 0 IDE Detection Register (DPWM0IDEDET).....	77
4.2.18	DPWM 1 Current Limit Control Register (DPWM1CLIM)	79
4.2.19	DPWM 1 Fault AB Detection Register (DPWM1FLTABDET)	82
4.2.20	DPWM 1 Fault Detection Register (DPWM1FAULTDET)	84
4.2.21	DPWM 1 IDE Detection Register (DPWM1IDEDET).....	89
4.2.22	DPWM 2 Current Limit Control Register (DPWM2CLIM)	91
4.2.23	DPWM 2 Fault AB Detection Register (DPWM2FLTABDET)	94
4.2.24	DPWM 2 Fault Detection Register (DPWM2FAULTDET)	96
4.2.25	DPWM 2 IDE Detection Register (DPWM2IDEDET).....	101

4.2.26	DPWM 3 Current Limit Control Register (DPWM3CLIM)	103
4.2.27	DPWM 3 Fault AB Detection Register (DPWM3FLTABDET)	106
4.2.28	DPWM 3 Fault Detection Register (DPWM3FAULTDET)	108
4.2.29	DPWM 3 IDE Detection Register (DPWM3IDEDET)	113
4.2.30	HFO Fail Detect Register (HFOFAILDET)	114
4.2.31	LFO Fail Detect Register (LFOFAILDET)	114
4.2.32	IDE Control Register (IDECTRL)	115
4.3	I2C – Serial Bus Interface	116
4.3.1	I2C Control Register 1 (I2CCTRL1)	116
4.3.2	I2C Transmit Data Buffer (I2CTXBUF)	117
4.3.3	I2C Receive Data Register (I2CRXBUF)	117
4.3.4	I2C Acknowledge Register (I2CACK)	117
4.3.5	I2C Status Register (I2CST)	119
4.3.6	I2C Interrupt Mask Register (I2CINTM)	121
4.3.7	I2C Control Register 3 (I2CCTRL3)	123
4.4	SPI – Serial Peripheral Interface	125
4.4.1	SPI Control Register (SPICTRL)	125
4.4.2	SPI Status Register (SPISTAT)	126
4.4.3	SPI Pin Function Register (SPIFUNC)	126
4.4.4	SPI Pin Direction Register (SPIDIR)	127
4.4.5	SPI Pin GP Out Register (SPIGPOUT)	127
4.4.6	SPI Pin GP In Register (SPIGPIN)	128
4.4.7	SPI TX Buffer Register 0 (SPITX0)	128
4.4.8	SPI TX Buffer Register 1 (SPITX1)	129
4.4.9	SPI Read Buffer Register 0 (SPIRX0)	129
4.4.10	SPI Read Buffer Register 1 (SPIRX1)	129
4.4.11	SPI Read Buffer Register 2 (SPIRX2)	130
4.4.12	SPI Read Buffer Register 3 (SPIRX3)	130
4.5	UART Registers	130
4.5.1	UART Control Register 0 (UARTCTRL0)	130
4.5.2	UART Receive Status Register (UARTRXST)	131
4.5.3	UART Transmit Status Register (UARTTXST)	133
4.5.4	UART Control Register 3 (UARTCTRL3)	134
4.5.5	UART Interrupt Status Register (UARTINTST)	135
4.5.6	UART Baud Divisor High Byte Register (UARTHBAUD)	137
4.5.7	UART Baud Divisor Middle Byte Register (UARTMBAUD)	137
4.5.8	UART Baud Divisor Low Byte Register (UARTLBAUD)	137
4.5.9	UART Receive Buffer (UARTRXBUF)	137
4.5.10	UART Transmit Buffer (UARTTXBUF)	139
4.5.11	UART I/O Control Register (UARTIOCTRLSCLK, UARTIOCTRLRX, UARTIOCTRLTX)	139
4.5.12	UART Baud Divisor Sub Bits Register (UARTSBAUD)	139
4.5.13	UART RX Control Register 4 (UARTRXCTRL4)	140
4.5.14	UART RX Control Register 5 (UARTRXCTRL5)	141
4.5.15	UART RX Baud Divisor Middle Byte Register (UARTRXMBAUD)	142
4.5.16	UART RX Baud Divisor Low Byte Register (UARTRXLBAUD)	142
4.5.17	UART RX Baud Divisor Sub Bits Register (UARTRXSBAUD)	142
4.6	ADC Registers	144

4.6.1	ADC Control Register (ADCCTRL).....	144
4.6.2	ADC Status Register (ADCSTAT)	146
4.6.3	ADC Test Control Register (ADCTSTCTRL).....	147
4.6.4	ADC Sequence Select Register 0 (ADCSEQSEL0).....	147
4.6.5	ADC Sequence Select Register 1 (ADCSEQSEL1).....	148
4.6.6	ADC Sequence Select Register 2 (ADCSEQSEL2).....	149
4.6.7	ADC Sequence Select Register 3 (ADCSEQSEL3).....	151
4.6.8	ADC Result Registers 0-15 (ADCRESULT x , $x=0:15$).....	153
4.6.9	ADC Averaged Result Registers 0-5 (ADCAVGRESULT x , $x=0:15$).....	153
4.6.10	ADC Digital Compare Limits Register 0-5 (ADCCOMPLIM x , $x=0:5$).....	154
4.6.11	ADC Digital Compare Enable Register (ADCCOMPEN).....	155
4.6.12	ADC Digital Compare Results Register (ADCCOMPRESULT).....	158
4.6.13	ADC Averaging Control Register (ADCAVGCTRL).....	162
4.7	DPWM 0-3 Registers.....	164
4.7.1	DPWM Control Register 0 (DPWMCTRL0)	164
4.7.2	DPWM Control Register 1 (DPWMCTRL1)	168
4.7.3	DPWM Control Register 2 (DPWMCTRL2)	172
4.7.4	DPWM Period Register (DPWMPPRD)	174
4.7.5	DPWM Event 1 Register (DPWMEV1)	174
4.7.6	DPWM Event 2 Register (DPWMEV2)	175
4.7.7	DPWM Event 4 Register (DPWMEV4)	176
4.7.8	DPWM Sample Trigger 1 Register (DPWMSAMPTRIG1).....	176
4.7.9	DPWM Sample Trigger 2 Register (DPWMSAMPTRIG2).....	177
4.7.10	DPWM Phase Trigger Register (DPWMPHASETRIG).....	177
4.7.11	DPWM Cycle Adjust A Register (DPWMCYCADJA)	178
4.7.12	DPWM Cycle Adjust B Register (DPWMCYCADJB)	178
4.7.13	179	
4.7.14	DPWM Fault Control Register (DPWMFLTCTRL).....	179
4.7.15	DPWM Overflow Register (DPWMOVERFLOW)	180
4.7.16	DPWM Flags/Interrupt Register (DPWMINT)	182
4.7.17	DPWM Counter Preset Register (DPWMCNTPRE)	185
4.7.18	DPWM Blanking A Begin Register (DPWMBLKABEG)	185
4.7.19	DPWM Blanking A End Register (DPWMBLKAEND)	185
4.7.20	DPWM Blanking B Begin Register (DPWMBLKBEG)	187
4.7.21	DPWM Blanking B End Register (DPWMBLKBEND)	187
4.7.22	DPWM Minimum Duty Cycle High Register (DPWMMINDUTYHI).....	187
4.7.23	DPWM Minimum Duty Cycle Low Register (DPWMMINDUTYLO)	189
4.7.24	DPWM Adaptive Sample Register (DPWMADAPTIVE)	189
4.7.25	DPWM Fault Status (DPWMFLTSTAT).....	189
4.7.26	DPWM Auto Switch High Upper Thresh Register (DPWMAUTOSWHIUPTHRESH).....	190
4.7.27	DPWM Auto Switch High Lower Thresh Register (DPWMAUTOSWHILOWTHRESH).....	191
4.7.28	DPWM Auto Switch Low Upper Thresh Register (DPWMAUTOSWLOUPTHRESH).....	191
4.7.29	DPWM Auto Switch Low Lower Thresh Register (DPWMAUTOSWLOLOWTHRESH)	192
4.7.30	DPWM Auto Config Max Register (DPWMAUTOMAX)	193
4.7.31	DPWM Auto Config Mid Register (DPWMAUTOMID)	195
4.7.32	DPWM Edge PWM Generation Control Register (DPWMEDGEGEN).....	197
4.7.33	DPWM Filter Duty Read Register (DPWMFILTERDUTYREAD)	199

4.7.34 DPWM CBC Location Register (DPWMCBCLOCATION).....	199
4.8 Filter Registers	201
4.8.1 Filter Status Register (FILTERSTATUS)	201
4.8.2 Filter Control Register (FILTERCTRL).....	202
4.8.3 CPU XN Register (CPUXN).....	203
4.8.4 Filter XN Read Register (FILTERXNREAD)	205
4.8.5 Filter KI_YN Read Register (FILTERKIYNREAD)	205
4.8.6 Filter KD_YN Read Register (FILTERKDYNREAD)	205
4.8.7 Filter YN Read Register (FILTERYNREAD)	206
4.8.8 Coefficient Configuration Register (COEFCFG).....	206
4.8.9 Filter KP Coefficient 0 Register (FILTERKPCOEF0).....	209
4.8.10 Filter KP Coefficient 1 Register (FILTERKPCOEF1).....	209
4.8.11 Filter KI Coefficient 0 Register (FILTERKICOEF0).....	210
4.8.12 Filter KI Coefficient 1 Register (FILTERKICOEF1).....	211
4.8.13 Filter KD Coefficient 0 Register (FILTERKDCOEF0).....	211
4.8.14 Filter KD Coefficient 1 Register (FILTERKDCOEF1).....	211
4.8.15 Filter KD Alpha Register (FILTERKDALPHA).....	213
4.8.16 Filter Nonlinear Limit Register 0 (FILTERNL0).....	213
4.8.17 Filter Nonlinear Limit Register 1 (FILTERNL1).....	213
4.8.18 Filter Nonlinear Limit Register 2 (FILTERNL2).....	214
4.8.19 Filter KI Feedback Clamp High Register (FILTERKICLPHI).....	214
4.8.20 Filter KI Feedback Clamp Low Register (FILTERKICLPL0)	214
4.8.21 Filter YN Clamp High Register (FILTERYNCLPHI)	216
4.8.22 Filter YN Clamp Low Register (FILTERYNCLPL0)	216
4.8.23 Filter Output Clamp High Register (FILTEROCLPHI)	216
4.8.24 Filter Output Clamp Low Register (FILTEROCLPL0)	217
4.8.25 Filter Preset Register (FILTERPRESET).....	217
4.9 Front End Control Registers	218
4.9.1 Ramp Control Register (RAMPCTRL)	218
4.9.2 Ramp Status Register (RAMPSTAT).....	221
4.9.3 Ramp Cycle Register (RAMPCYCLE).....	222
4.9.4 EADC DAC Value Register (EADCDAC).....	224
4.9.5 Ramp DAC Ending Value Register (RAMPDACEEND).....	224
4.9.6 DAC Step Register (DACSTEP).....	224
4.9.7 DAC Saturation Step Register (DACSATSTEP).....	226
4.9.8 EADC Control Register (EADCCTRL)	226
4.9.9 230	
4.9.10 Pre-Bias Control Register 0 (PREBIASCTRL0).....	230
4.9.11 Pre-Bias Control Register 1 (PREBIASCTRL1).....	230
4.9.12 SAR Control Register (SARCTRL)	231
4.9.13 SAR Timing Register (SARTIMING).....	232
4.9.14 EADC Value Register (EADCVALUE)	232
4.9.15 EADC Raw Value Register (EADCRAWVALUE)	233
4.9.16 DAC Status Register (DACSTAT)	233
4.10 Miscellaneous Analog Control	234
4.10.1 Package ID Register (PKGID)	234
4.10.2 Brownout Register (BROWNOUT)	234
4.10.3 Global I/O EN Register (GLBIOEN).....	236

4.10.4	Global I/O OE Register (GLBIOOE)	238
4.10.5	Global I/O Open Drain Control Register (GLBLOOD)	240
4.10.6	Global I/O Value Register (GLBIOVAL)	241
4.10.7	Global I/O Read Register (GLBIOREAD)	242
4.10.8	243	
4.10.9	I/O Mux Control Register (IOMUX)	243
4.10.10	Current Sharing Control Register (CSCTRL)	244
4.10.11	Temperature Reference Register (TEMPREF)	245
4.10.12	Power Disable Control Register (PWRDISCTRL)	246
4.10.13	DTC UART Pin Mux Select Register (DTCUARTSEL)	248
4.11	PMBus Interface	250
4.11.1	PMBUS Control Register 1 (PMBCTRL1)	250
4.11.2	PMBus Transmit Data Buffer (PMBTXBUF)	251
4.11.3	PMBus Receive Data Register (PMBRXBUF)	251
4.11.4	PMBus Acknowledge Register (PMBACK)	251
4.11.5	PMBus Status Register (PMBST)	253
4.11.6	PMBus Interrupt Mask Register (PMBINTM)	255
4.11.7	PMBus Control Register 2 (PMBCTRL2)	256
4.11.8	PMBus Hold Slave Address Register (PMBHSA)	258
4.11.9	PMBus Control Register 3 (PMBCTRL3)	259
4.12	GIO – General Purpose Input/Output Module	263
4.12.1	Fault IO Direction Register (FAULTDIR)	263
4.12.2	Fault Input Register (FAULTIN)	264
4.12.3	Fault Output Register (FAULTOUT)	264
4.12.4	Fault Interrupt Enable Register (FAULTINTENA)	265
4.12.5	Fault Interrupt Polarity Register (FAULTINTPOL)	266
4.12.6	Fault Interrupt Pending Register (FAULTINTPEND)	268
4.12.7	External Interrupt Direction Register (EXTINTDIR)	270
4.12.8	External Interrupt Input Register (EXTINTIN)	270
4.12.9	External Interrupt Output Register (EXTINTOUT)	270
4.12.10	External Interrupt Enable Register (EXTINTENA)	270
4.12.11	External Interrupt Polarity Register (EXTINTPOL)	271
4.12.12	External Interrupt Pending Register (EXTINTPEND)	271
4.13	Timer Module	272
4.13.1	24-bit Counter Data Register (T24CNTDAT)	272
4.13.2	24-bit Counter Control Register (T24CNTCTRL)	272
4.13.3	24-bit Capture Channel Data Register (T24CAPDAT)	274
4.13.4	24-bit Capture Channel Control Register (T24CAPCTRL)	274
4.13.5	24-bit Capture I/O Control and Data Register (T24CAPIO)	274
4.13.6	24-bit Output Compare Channel 0 Data Register (T24CMPDAT0)	275
4.13.7	24-bit Output Compare Channel 1 Data Register (T24CMPDAT1)	275
4.13.8	24-bit Output Compare Channel 0 Control Register (T24CMPCTRL0)	275
4.13.9	24-bit Output Compare Channel 1 Control Register (T24CMPCTRL1)	276
4.13.10	PWMx Counter Data Register (T16PWMxCNTDAT)	276
4.13.11	PWMx Counter Control Register (T16PWMxCNTCTRL)	278
4.13.12	PWMx 16-bit Compare Channel 0-1 Data Register (T16PWMxCMPPyDAT)	279
4.13.13	PWM Compare Control Register (T16PWMxCMPCTRL)	280
4.13.14	PWMx Compare Control Register (T16PWMxCMPCTRL)	281
4.13.15	Watchdog Status (WDST)	283
4.13.16	Watchdog Control (WDCTRL)	283

4.14 Memory Controller - MMC	284
4.14.1 Static Memory Control Register (SMCTRL).....	285
4.14.2 Write Control Register (WCTRL)	286
4.14.3 Peripheral Location Register (PLOC)	287
4.14.4 Peripheral Protection Register (PPROT).....	287
4.15 DEC – Address Manager	288
4.15.1 Memory Fine Base Address High Register 0 (MFBAHR0).....	288
4.15.2 Memory Fine Base Address Low Register 0 (MFBALR0)	289
4.15.3 Memory Fine Base Address High Register 1-3,17 (MFBAHRx).....	290
4.15.4 Memory Fine Base Address Low Register 1-3,17(MFBALRx)	290
4.15.5 Memory Fine Base Address High Register 4 (MFBAHR4)	291
4.15.6 Memory Fine Base Address Low Register 4-16 (MFBAHRx)	291
4.15.7 Memory Fine Base Address High Register 5 (MFBAHR5)	292
4.15.8 Memory Fine Base Address High Register 6 (MFBAHR6)	293
4.15.9 Memory Fine Base Address High Register 7 (MFBAHR7)	293
4.15.10 Memory Fine Base Address High Register 8 (MFBAHR8)	293
4.15.11 Memory Fine Base Address High Register 9 (MFBAHR9)	293
4.15.12 Memory Fine Base Address High Register 10 (MFBAHR10)	294
4.15.13 Memory Fine Base Address High Register 11 (MFBAHR11)	294
4.15.14 Memory Fine Base Address High Register 12 (MFBAHR12)	294
4.15.15 Memory Fine Base Address High Register 13 (MFBAHR13)	295
4.15.16 Memory Fine Base Address High Register 14 (MFBAHR14)	295
4.15.17 Memory Fine Base Address High Register 15 (MFBAHR15)	295
4.15.18 Memory Fine Base Address High Register 16 (MFBAHR16)	296
4.15.19 Program Flash Block 1 Control Register (PFLASHCTRL1).....	296
4.15.20 Data Flash Control Register (DFLASHCTRL).....	297
4.15.21 Flash Interlock Register (FLASHILOCK)	297
4.15.22 Program Flash Block 2 Control Register (PFLASHCTRL2).....	298
4.16 CIM – Central Interrupt Module	298
4.16.1 IRQ Index Offset Vector Register (IRQIVEC).....	299
4.16.2 FIQ Index Offset Vector Register (FIQIVEC).....	299
4.16.3 FIQ/IRQ Program Control Register (FIRQPR).....	300
4.16.4 Pending Interrupt Read Location Register (INTREQ).....	304
4.16.5 Interrupt Mask Register (REQMASK).....	308
4.17 SYS – System Module	312
4.17.1 Clock Control Register (CLKCNTL)	312
4.17.2 System Exception Control Register (SYSECR).....	313
4.17.3 System Exception Status Register (SYSESR)	313
4.17.4 Abort Exception Status Register (ABRTESR)	316
4.17.5 Global Status Register (GLBSTAT)	317
4.17.6 Device Identification Register (DEV)	318
4.17.7 System Software Interrupt Flag Register (SSIF)	318
4.17.8 System Software Interrupt Request Register (SSIR).....	319

Figures

Figure 1. UCD3138064 Block diagram.....	9
Figure 2. UCD3138064A Block diagram	9
Figure 1. DTC Waveforms.....	10

Figure 2.	Low Side Gate Driver with Body Diode Conduction Sensing	11
Figure 3.	UART Enhancements.....	12

Tables

Table 1.	New Features in UCD3138064A	9
Table 2.	Enhancements in UCD3138064A	12
Table 3.	UCD3138064ARGC Package	15
Table 4.	UCD3138064ARMH Package	15
Table 5.	Chip Revision ID field updated	16

1 Introduction

The UCD3138064A device is newest member of UCD3138 integrated digital power controller platform family. In addition, to existing features form UCD3138064, this device also includes following enhancements

Features:

- The General Purpose ADC has been improved for better accuracy and performance at extreme cold temperatures (-40C)
- The UART peripheral has been modified to include a hardware based auto-baud rate adjustment feature
- A new, Synchronous Rectifier Dead Time Optimization hardware peripheral has been added
- A Duty Cycle Read Function has been added to improve use in peak current mode
- PMBus/I2C peripherals can now operate up to 1MHz

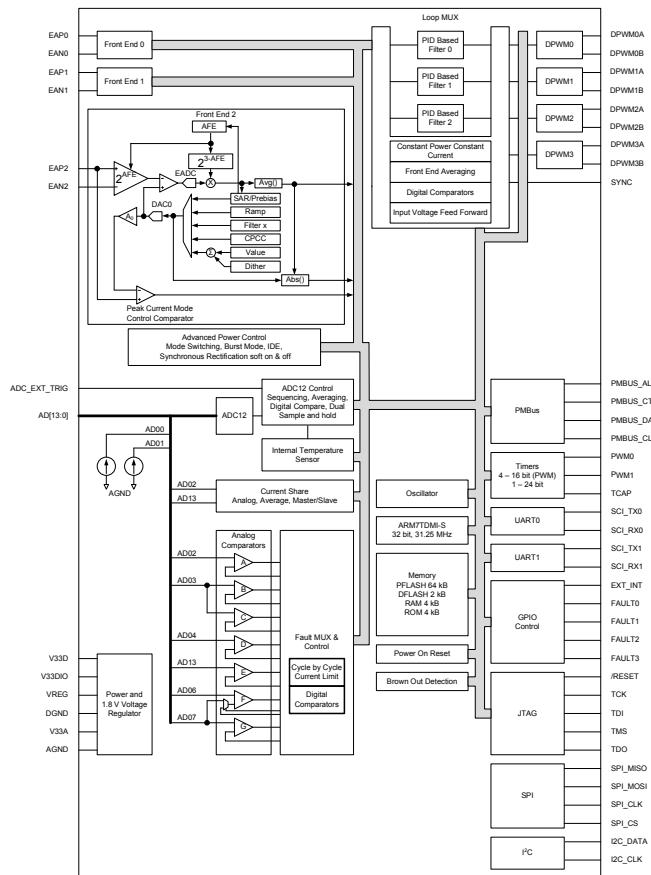


Figure 1. UCD3138064 Block diagram

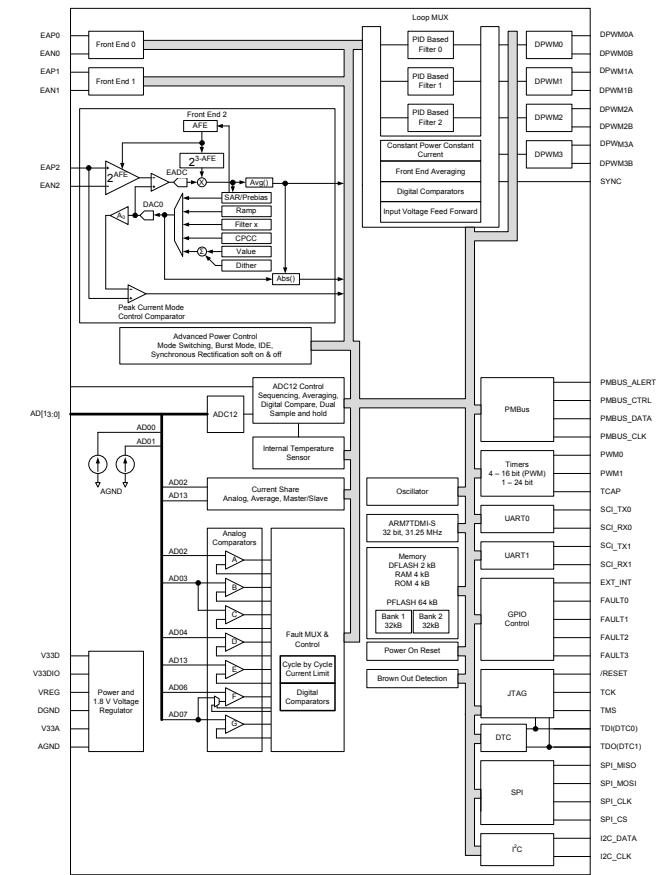


Figure 2. UCD3138064A Block diagram

2 Device Overview summary

2.1 New Features

Table 1. New Features in UCD3138064A

Peripheral	Features/ Changes	Detail Description
DTC (new)	Synchronous Rectifier Optimization Algorithm with body diode conduction time sensing	Addition of DTC pins for UCD7138 Synchronous Rectifier Driver with Body Diode Conduction Time Reporting
UART	UART enhancements	UCD3138064: no auto baud rate adjustment UCD3138064A: UART auto calibration to correct BAUD Rate


2.1.1 Body diode conduction time sensing

Benefits:

- Maximize system efficiency by minimizing MOSFET body diode conduction time
- Robust fast negative current protection.
- Simple interface
 - Minimum component count
 - No external sense element
 - Easy layout
- Superior to R_{DSon} sensing techniques
 - Better accuracy across entire load range
 - No minimum on time requirement
 - No parasitic L & R concerns

UCD3138064A has an advanced dead time control interface where it can accept UCD7138 output signals and optimize SR gate driver signals accordingly. The UCD7138 low-side MOSFET driver is a high performance driver for secondary-side synchronous rectification (SR) with body diode conduction sensing. The device is suitable for high power high efficiency isolated converter applications where dead-time optimization is desired.

The UCD7138 gate driver is a companion device to UCD3138064A highly integrated digital controller for isolated power. DTC0 and DTC1 are received body diode conduction inputs from UCD7138. SR0_DPWM and SR1_DPWM are the DPWM waveforms for the SRs. The yellow and green edges are moving edges controlled by both the filter output and the DTC interface. In each cycle, right after the falling edge of the SR DPWM waveform, a body diode conduction time detection window is generated. The detection window is defined by both DETECT_BLANK and DETECT_LEN registers. During this detection window, a 4-ns timer capture counts how long the body diode conducts. Then the SR DPWM turn off edge of the next cycle is adjusted accordingly.

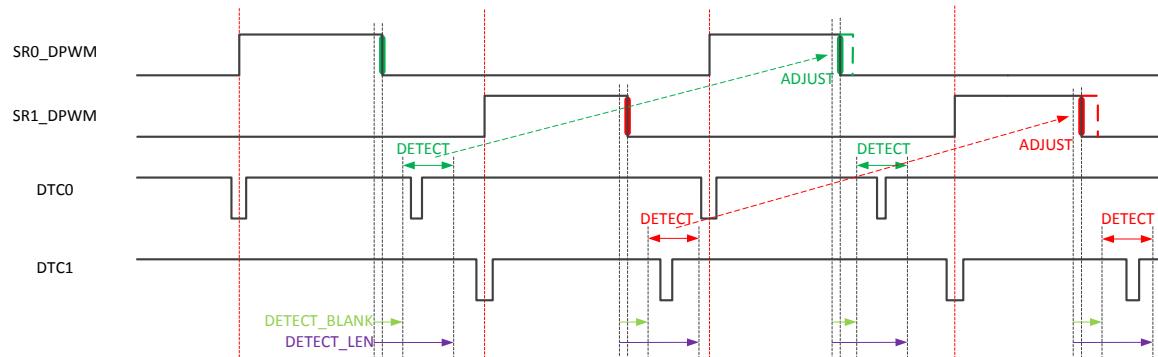

* Note: DETECT_BLANK and DETECT_LEN starts 1MCLK (32ns) before the falling edge of SR0_DPWM or SR1_DPWM

Figure 1. DTC Waveforms

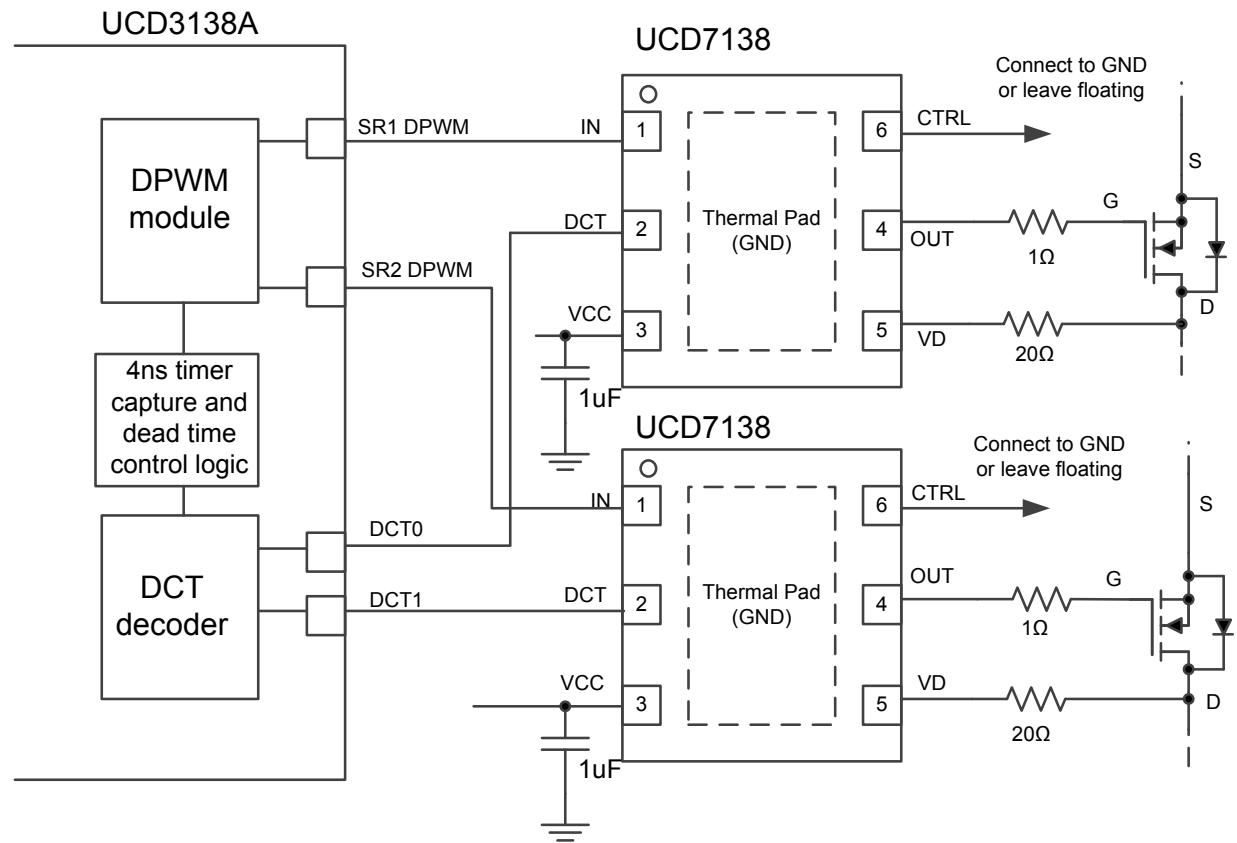


Figure 2. Low Side Gate Driver with Body Diode Conduction Sensing

2.1.2 *UART Auto Baud Enhancement*

Benefits: The UCD3138064A has many UART enhancements. One of them is that it has an in built hardware dedicated just to capture the receiving pulses on the Rx pin of the UART. This along with some minimal firmware can be used to calculate the exact BAUD rate of the other device.

Some of the other UART enhancements are:

- 1) It has a finer resolution. The BAUD rate granularity is about 64 nS. Hence a new register is introduced “UARTSBAUD”.

- 2) It has an auto sync on start bit . The free running counter of the UART gets reset when it detects a start bit. This makes the sampling time well aligned with the center of the pulses.
- 3) It allows independent Rx and Tx BAUD rate capability. The UART Rx has some new registers: UARTRXMBAUD, UARTRXLBAUD and UARTRXSBAUD. They have the same meaning as the general UART registers: UARTMBAUD, UARTLBAUD and UARTSBAUD.

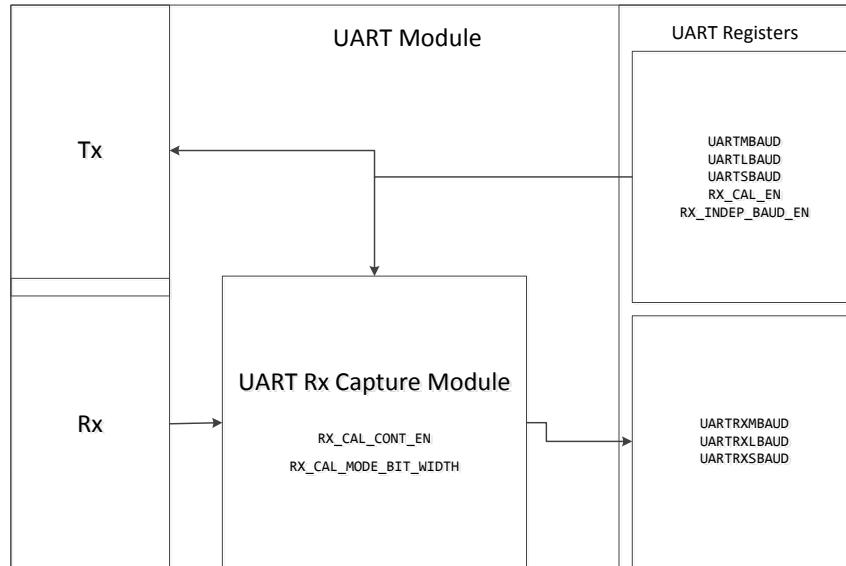


Figure 3. UART Enhancements

For more details please refer to App Note - Hardware based UART Auto BAUD correction [[SPRxxxx](#)]

2.2 Bug Fix/ Enhancements

Table 2. Enhancements in UCD3138064A

Peripheral	Features/ Changes	Detail Description
ADC	Improved ADC INL accuracy at cold temp -40C	UCD3138064: INL +/-2.5 LSBs typical from 25°C to 125°C UCD3138064A: INL +/- 4.5 LSBs max across temperature -40°C to 125°C
DPWM	DPWMxB can be restarted on the fly without resetting the DPWM module.	UCD3138064: If DPWMxB is latched off by fault, the whole DPWM module has to be re-enabled. UCD3138064A: Adds a control so the DPWMxB can be reset without turning off the entire module
IO	GPIO status during power up and power down	UCD3138064: DPWM outputs are low after reset. Other GPIO pins are configured as inputs after reset. During power up or power down, GPIO pins are in high impedance state; DPWM pins output low. UCD3138064A: DPWM outputs are low after reset. Other GPIO pins are configured as inputs after reset. During power

		up or power down, all GPIO and DPWM pins output low.
DPWM	Larger Fault Counters	UCD3138064: 5 bits – counts up to 32 consecutive faults before triggering shutdown UCD3138064A: 7 bits –up to 128 consecutive faults before triggering shutdown
Front End	PCMC -Configurable APCM Blanking in all FE's enables flexibility to use any FE for PCM.	UCD3138064: Only Front End2 can be used for PCM as this supports configurable blanking. UCD3138064A: Any Front end can be used for PCM as Configurable blanking is supported on all Front End.
DPWM	CBC–Blanking time for CBC fault and counter will not change due to voltage spikes	UCD3138064: CBC counter is active during blanking time UCD3138064A: CBC Counter will not increment due to voltage spikes
PMBus	High Clock Timeout Capability	UCD3138064: The UCD3138064 PMBus interface did not properly report the “Clock High Detected” event. UCD3138064A: In UCD3138064A , if the clock is high for more than 50 msec in the middle of a message, the PMBus interface will be reset and the CLOCK_HIGH_DETECTED bit will be set.
PMBus	PMBus–Interface status after Interrupted/Corrupted Messages	UCD3138064: No proper response after interrupted messages or certain corrupted messages. UCD3138064A: The PMBus interface will respond properly after interrupted messages or certain corrupted messages.
ADC	ADC Sample & Hold buffer Enable	UCD3138064: has to enable dual sample and hold function to use the buffer. UCD3138064A: Ability to buffer certain ADC inputs without enabling dual sample and hold function
ADC	ADC Stop mid-sequence capability for quick changes to sequence	UCD3138064: ADC stops at end of conversion sequence. UCD3138064A: ADC can stop after any conversion, even in the middle of a sequence.
Oscillator	HFO Low Noise Filter disabled	UCD3138064: HFO filter is enabled by default, needs to be disabled in program UCD3138064A: HFO filter disabled by default in the ROM
PMBus	1 MHz support	UCD3138064: 400kHz support UCD3138064A: 1 MHz support
Front end	PCMC Correct A0 offset	UCD3138064: 100mV offset in PCMC front end. UCD3138064A: A0 offset is changed from 100mV to 30mVmax; Less offset applied EAP;PCM response time is reduced;

DAC	Enhanced DAC Dither on each sample	UCD3138064: dithers once per period UCD3138064A: adds option of dither once on each EADC sample
DPWM	DPWM Interrupt	UCD3138064: DPWM period interrupt is generated every switching period at previous chip if DPWM is disabled. UCD3138064A: it is disabled when DPWM disabled.
DPWM	LLC Fixed rate sampling enabled, update window size increases. Improved transient response and regulation over line and load variations for LLC converter.	UCD3138064: DPWM has pulse extension if fixed rate sampling is used. Filter sample rate must follow LLC frequency. UCD3138064A: Fixed rate sampling is safe, update window increased from 72ns to 132 ns
DPWM	DPWM–Fault Turn Off & Burst mode	UCD3138064: When Edgegen module is used, fault may not be able to turn off all DPWMs. UCD3138064A: In Edgegen applications, all faults will result in DPWMs going low
ROM	Add 0xEA check of PFLASH #2	The EA Check means we check the first byte of the flash for a 0xEA, a jump. This shows that it is programmed, probably with a reset vector. If there's no EA, we don't even check for a checksum, just go to ROM mode. UCD3138064: Default this check was not enabled. Effect was that we jumped to program mode if the flash was programmed to all zeroes, since the checksum of zero at the end would be correct. UCD3138064A: Default this check is enabled thus avoiding above scenario.
ROM	Disallow flash execution if trim data is invalid.	UCD3138064: we set a bit to flag that the trim data is incorrect, but went to execution anyway without doing trim. UCD3138064A: this prevents code execution from program flash & goes back to ROM mode if trim is incorrect thus providing additional robustness
Front End	PCMC–Duty cycle read	Ability to read duty cycle during PCMC or CBC.
Reset Disable	Disabling the RESET Pin	Added capability to disable the RESET pin. This may be useful in very noisy systems. Here is the code to disable the reset: MiscAnalogRegs.CLKTRIM.bit.RESET_DISABLE = 1. Note that the Reset Pin should no longer be tied to 3.3 Volts directly. A 220 ohm resistor should now be used.
Filter	Yn Consistent Read	UCD3138064: although YN value is always correct, YN_READ register may read back wrong values occasionally. UCD3138064A: YN_READ register always have consistent read value.
Chip Level	Current consumption	Please refer to electrical specification of UCD3138064A datasheet. [SLUSCA5]
Event	Resonant mode dead times are determined only by Event 1	UCD3138064: Dead time is programmed by all 4 Event registers. Dead Time 1 = Event 3 – Event 2 Dead Time 2 = Event 1 + Period Register – Event 4 Average Dead Time = (Dead Time 1 + Dead Time 2)/2 DPWM A Rising Edge = Event 1 DPWM A Falling Edge = Event 1 + Filter Duty – Average Dead Time

		Adaptive Sample Trigger A = Event 1 + Filter Duty + Adaptive Sample Register Adaptive Sample Trigger B = Event 1 + Filter Duty/2 + Adaptive Sample Register DPWM B Rising Edge = Event 1 + Filter Duty – Average Dead Time + (Event 3 – Event 2) DPWM B Falling Edge = Filter Period – (Period Register – Event 4) Phase Trigger = Phase Trigger Register value or Filter Duty UCD3138064A: Dead times are determined only by Event 1 register value. DPWM A Rising Edge = Event 1 DPWM A Falling Edge = Filter Duty – Event 1 + DTC Adjustment Adaptive Sample Trigger A = Event 1 + Filter Duty + Adaptive Sample Register or Adaptive Sample Trigger B = Event 1 + Filter Duty/2 + Adaptive Sample Register DPWM B Rising Edge = Filter Duty + Event 1 DPWM B Falling Edge = Filter Period – Event 1 + DTC Adjustment Phase Trigger = Phase Trigger Register value or Filter Duty
	SyncFET behavior	UCD3138064: SYNCFET soft on starts with the rising edge in its final position, and the falling edge moves out in time until it reaches its calculated position; Soft off moves the falling edge towards the rising edge UCD3138064A: SYNCFET soft on starts with the falling edge in its calculated position, and the rising edge moves forward in time until it reaches its final position. Soft off moves the rising edge back towards the falling edge.

2.3 Pinmultiplexing updates

This device is 100 % pin to pin backward compatible to UCD3138064. New DTC pins are available and multiplexed behind JTAG pins.

Table 3. UCD3138064ARGC Package

Pin #	Name	Primary assignment	No 1	No 2	No 3	No 4
15	PMBUS_CLK	PMBUS_CLK	SCI_TX0	DTC0	-	-
16	PMBUS_DATA	PMBUS_DATA	SCI_RX0	DTC1	-	-
26	SYNC	SYNC	TCAP	ADC_EXT_TRIG	PWM0	DTC1
37	TCK	TCK	TCAP	SYNC	PWM0	DTC0
38	TDO	TDO	SCI_TX0	PMBUS_ALERT	FAULT0	DTC1
39	TDI	TDI	SCI_RX0	PMBUS_CTRL	FAULT1	DTC0

Table 4. UCD3138064ARMH Package

Pin #	Name	Primary assignment	No 1	No 2	No 3	No 4
21	TCK	TCK	TCAP	SYNC	PWM0	DTC0
22	TDO	TDO	SCI_TX0	PMBUS_ALERT	FAULT0	DTC1

23	TDI	TDI	SCI_RX0	PMBUS_CTRL	FAULT1	DTC0
----	-----	-----	---------	------------	--------	------

2.4 Revision update

Table 5. Chip Revision ID field updated

Module	Features/ Changes	Detail Description
Chip Level	Device ID/Revision Update	UCD3138064: Device ID is 0x447F & Rev: 0x____ & Firmware: “UCD3138064V1” UCD3138064A: Device ID is 0x947F & Rev: 0x447F & Firmware: “UCD3138064A”

3 Application Migration care about

3.1 Change to Device ID

The TI GUIs designed for use with the UCD parts use a PMBus command called DEVICE_ID to determine which device is being used. On the UCD3138064A, the initial part of the DEVICE_ID string should change to “UCD3138064A”.

The string for the UCD3138064 is “UCD310064V1”

3.2 Possible Changes to Layout and Power Supply Filtering

The UCD3138064A has different sensitivity to EMI and power supply noise than the UCD3138064. Designs that are marginal with the non-A may require changes to board layout and filtering to work with the A version. See the datasheet and the UCD3138 - Practical Design Guideline Application Note for more information.

The added features of the UCD3138A will require a bit more power consumption for the chip, see the datasheet for details.

3.3 LLC Topology

1) Remove the following code:

```
MiscAnalogRegs.CLKTRIM.bit.HFO_LN_FILTER_EN = 0;
```

2) The event update window is increased to 132 ns. Make sure that the moving edges are outside of the event update window.

UCD3138064A has DTC interface that works in conjunction with UCD7138, helps improve reliability and efficiency and reduce development cycle. This peripheral is disabled by default. Please refer to Application note [xxx] for more details on how to program DTC.

3.4 PS- LLC Topology

Remove the following code:

```
MiscAnalogRegs.CLKTRIM.bit.HFO_LN_FILTER_EN = 0;
```

- 2) The event update window is increased to 132 ns. Make sure that the moving edges are outside of the event update window.

UCD3138064A has DTC interface that works in conjunction with UCD7138, helps improve reliability and efficiency and reduce development cycle. This peripheral is disabled by default. Please refer to Application note [SPRxxx] for more details on how to program DTC.

3.5 HSFB Topology

For voltage mode control, only events update window are necessary to be adjusted. At normal mode, change DpwmxRegs.DPWMEV1.all = 480 or greater. At multiple mode, EVT3 should be greater than 480ns.

For peak current mode control, the EVTs update windows follow the same criteria as voltage mode control. Besides those changes, PCM blanking time should be programmed by PCM_BLANK_EN bit. For example, to select DPWM0 blanking time and DPWM1 blanking time, the below code should be used.

```
Dpwm0Regs.DPWMCTRL2.bit.BLANK_PCM_EN = 1;
```

```
Dpwm1Regs.DPWMCTRL2.bit.BLANK_PCM_EN = 1;
```

Delete the code MiscAnalogRegs.CLKTRIM.bit.HFO_LN_FILTER_EN = 0 to improve high frequency clock accuracy.

UCD3138064A has DTC interface that works in conjunction with UCD7138, helps improve reliability and efficiency and reduce development cycle. This peripheral is disabled by default. Please refer to Application note [xxx] for more details on how to program DTC.

The dead time initialization may need to be changed because the algorithm for dead time calculation has changed. See Table 2 - Enhancements in UCD3138064A

3.6 PSFB Topology

The required changes of events update window in the PSFB topology are the same as the HSFB topology. In addition, few other changes are highlighted.

First, EDGEGEN modules are used in PSFB topology, at burst mode or fault condition, one of DPWMs aren't turned off in UCD3138064 while all DPWMs are turned off in UCD3138064A. This can affect power stage design. With UCD3138064A, gate transformers can be used for driving primary side MOSFETs.

Second, the blanking time windows are programmed by the below codes for each half period.

```
Dpwm2Regs.DPWMCTRL2.bit.BLANK_PCM_EN = 1;
```

```
Dpwm3Regs.DPWMCTRL2.bit.BLANK_PCM_EN = 1;
```

Third, at Peak Current mode control, the offset applied on EAP pin (EAP2 for PWR027) is significantly reduced to less than 30mV. The offset voltage can be removed if a small voltage step is acceptable.

Fourth, delete the code MiscAnalogRegs.CLKTRIM.bit.HFO_LN_FILTER_EN = 0, which is needed any more;

The dead time initialization may need to be changed because the algorithm for dead time calculation has changed. See Table 2 - Enhancements in UCD3138064A

Some other enhancements are listed in the Table 2, such as DAC dithering, reading duty cycle when CBC happens or PCM control, and so on.

3.7 PFC Topology

Please note following modifications are required to support UCD3138064A

- Delete this code:

```
MiscAnalogRegs.CLKTRIM.bit.HFO_LN_FILTER_EN = 0;
```

- The event update window is increased to 132 ns, so set:

```
DpwmxRegs.DPWMEV1.all = 480; //normal mode
```

And also set EVENT3 if in multi mode:

```
DpwmxRegs.DPWMEV3.all = 480;//multi mode
```

In addition to above changes please make sure if any of changes listed in Table 1 and/or Table 2 are applicable to you.

4 Memory Map for UCD3138064A

This section describes all the peripheral registers of the UCD3138064A. Registers and bitfields highlighted in green have been changed from the UDC3138064.

4.1 Loop Mux Registers

4.1.1 Front End Control 0 Mux Register (*FECTRL0MUX*)

Address 00120000

Bit Number	13:12	11
Bit Name	NL_SEL	DPWM3_FRAME_SYNC_EN
Access	R/W	R/W
Default	00	0

Bit Number	10	9
Bit Name	DPWM2_FRAME_SYNC_EN	DPWM1_FRAME_SYNC_EN
Access	R/W	R/W
Default	0	0

Bit Number	8	7	6
Bit Name	DPWM0_FRAME_SYNC_EN	DPWM3_B_TRIG_EN	DPWM2_B_TRIG_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	5	4	3
Bit Name	DPWM1_B_TRIG_EN	DPWM0_B_TRIG_EN	DPWM3_A_TRIG_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	2	1	0
Bit Name	DPWM2_A_TRIG_EN	DPWM1_A_TRIG_EN	DPWM0_A_TRIG_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bits 13-12: NL_SEL – Configures source of Non-Linear (NL) comparison results used in Automatic Gain Shifting

0 = Filter 0 NL Results used

1 = Filter 1 NL Results used

2 = Filter 2 NL Results used (Default)

Bit 11: DPWM3_FRAME_SYNC_EN – Enables DPWM Trigger from DPWM 3 Frame Sync to Front End Control

0 = DPWM 3 Frame Sync not routed to Front End Control (Default)

1 = DPWM 3 Frame Sync routed to Front End Control

Bit 10: DPWM2_FRAME_SYNC_EN – Enables DPWM Trigger from DPWM 2 Frame Sync to Front End Control

0 = DPWM 2 Frame Sync not routed to Front End Control (Default)

1 = DPWM 2 Frame Sync routed to Front End Control

Bit 9: DPWM1_FRAME_SYNC_EN – Enables DPWM Trigger from DPWM 1 Frame Sync to Front End Control

0 = DPWM 1 Frame Sync not routed to Front End Control (Default)

1 = DPWM 1 Frame Sync routed to Front End Control

Bit 8: DPWM0_FRAME_SYNC_EN – Enables DPWM Trigger from DPWM 0 Frame Sync to Front End Control

0 = DPWM 0 Frame Sync not routed to Front End Control (Default)

1 = DPWM 0 Frame Sync routed to Front End Control

Bit 7: DPWM3_B_TRIG_EN – Enables DPWM Trigger from DPWM 3 PWM-B to Front End Control

- 0 = DPWM 3 PWM-B trigger not routed to Front End Control (Default)
- 1 = DPWM 3 PWM-B trigger routed to Front End Control

Bit 6: DPWM2_B_TRIG_EN – Enables DPWM Trigger from DPWM 2 PWM-B to Front End Control

- 0 = DPWM 2 PWM-B trigger not routed to Front End Control (Default)
- 1 = DPWM 2 PWM-B trigger routed to Front End Control

Bit 5: DPWM1_B_TRIG_EN – Enables DPWM Trigger from DPWM 1 PWM-B to Front End Control

- 0 = DPWM 1 PWM-B trigger not routed to Front End Control (Default)
- 1 = DPWM 1 PWM-B trigger routed to Front End Control

Bit 4: DPWM0_B_TRIG_EN – Enables DPWM Trigger from DPWM 0 PWM-B to Front End Control

- 0 = DPWM 0 PWM-B trigger not routed to Front End Control (Default)
- 1 = DPWM 0 PWM-B trigger routed to Front End Control

Bit 3: DPWM3_A_TRIG_EN – Enables DPWM Trigger from DPWM 3 PWM-A to Front End Control

- 0 = DPWM 3 PWM-A trigger not routed to Front End Control (Default)
- 1 = DPWM 3 PWM-A trigger routed to Front End Control

Bit 2: DPWM2_A_TRIG_EN – Enables DPWM Trigger from DPWM 2 PWM-B to Front End Control

- 0 = DPWM 2 PWM-A trigger not routed to Front End Control (Default)
- 1 = DPWM 2 PWM-A trigger routed to Front End Control

Bit 1: DPWM1_A_TRIG_EN – Enables DPWM Trigger from DPWM 1 PWM-B to Front End Control

- 0 = DPWM 1 PWM-A trigger not routed to Front End Control (Default)
- 1 = DPWM 1 PWM-A trigger routed to Front End Control

Bit 0: DPWM0_A_TRIG_EN – Enables DPWM Trigger from DPWM 0 PWM-B to Front End Control

- 0 = DPWM 0 PWM-A trigger not routed to Front End Control (Default)
- 1 = DPWM 0 PWM-A trigger routed to Front End Control

4.1.2 Front End Control 1 Mux Register (**FECTRL1MUX**)

Address 00120004

Bit Number	13:12	11
Bit Name	NL_SEL	DPWM3_FRAME_SYNC_EN
Access	R/W	R/W
Default	01	0

Bit Number	10	9
Bit Name	DPWM2_FRAME_SYNC_EN	DPWM1_FRAME_SYNC_EN
Access	R/W	R/W
Default	0	0

Bit Number	8	7	6
Bit Name	DPWM0_FRAME_SYNC_EN	DPWM3_B_TRIG_EN	DPWM2_B_TRIG_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	5	4	3
Bit Name	DPWM1_B_TRIG_EN	DPWM0_B_TRIG_EN	DPWM3_A_TRIG_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	2	1	0
Bit Name	DPWM2_A_TRIG_EN	DPWM1_A_TRIG_EN	DPWM0_A_TRIG_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bits 13-12: NL_SEL – Configures source of Non-Linear (NL) comparison results used in Automatic Gain Shifting

0 = Filter 0 NL Results used

1 = Filter 1 NL Results used

2 = Filter 2 NL Results used (Default)

Bit 11: DPWM3_FRAME_SYNC_EN – Enables DPWM Trigger from DPWM 3 Frame Sync to Front End Control

0 = DPWM 3 Frame Sync not routed to Front End Control (Default)

1 = DPWM 3 Frame Sync routed to Front End Control

Bit 10: DPWM2_FRAME_SYNC_EN – Enables DPWM Trigger from DPWM 2 Frame Sync to Front End Control

0 = DPWM 2 Frame Sync not routed to Front End Control (Default)

1 = DPWM 2 Frame Sync routed to Front End Control

Bit 9: DPWM1_FRAME_SYNC_EN – Enables DPWM Trigger from DPWM 1 Frame Sync to Front End Control

0 = DPWM 1 Frame Sync not routed to Front End Control (Default)

1 = DPWM 1 Frame Sync routed to Front End Control

Bit 8: DPWM0_FRAME_SYNC_EN – Enables DPWM Trigger from DPWM 0 Frame Sync to Front End Control

0 = DPWM 0 Frame Sync not routed to Front End Control (Default)

1 = DPWM 0 Frame Sync routed to Front End Control

Bit 7: DPWM3_B_TRIG_EN – Enables DPWM Trigger from DPWM 3 PWM-B to Front End Control

0 = DPWM 3 PWM-B trigger not routed to Front End Control (Default)

1 = DPWM 3 PWM-B trigger routed to Front End Control

Bit 6: DPWM2_B_TRIG_EN – Enables DPWM Trigger from DPWM 2 PWM-B to Front End Control

0 = DPWM 2 PWM-B trigger not routed to Front End Control (Default)

1 = DPWM 2 PWM-B trigger routed to Front End Control

Bit 5: DPWM1_B_TRIG_EN – Enables DPWM Trigger from DPWM 1 PWM-B to Front End Control

0 = DPWM 1 PWM-B trigger not routed to Front End Control (Default)

1 = DPWM 1 PWM-B trigger routed to Front End Control

Bit 4: DPWM0_B_TRIG_EN – Enables DPWM Trigger from DPWM 0 PWM-B to Front End Control

0 = DPWM 0 PWM-B trigger not routed to Front End Control (Default)

1 = DPWM 0 PWM-B trigger routed to Front End Control

Bit 3: DPWM3_A_TRIG_EN – Enables DPWM Trigger from DPWM 3 PWM-A to Front End Control

0 = DPWM 3 PWM-A trigger not routed to Front End Control (Default)

1 = DPWM 3 PWM-A trigger routed to Front End Control

Bit 2: DPWM2_A_TRIG_EN – Enables DPWM Trigger from DPWM 2 PWM-B to Front End Control

0 = DPWM 2 PWM-A trigger not routed to Front End Control (Default)

1 = DPWM 2 PWM-A trigger routed to Front End Control

Bit 1: DPWM1_A_TRIG_EN – Enables DPWM Trigger from DPWM 1 PWM-B to Front End Control

0 = DPWM 1 PWM-A trigger not routed to Front End Control (Default)

1 = DPWM 1 PWM-A trigger routed to Front End Control

Bit 0: DPWM0_A_TRIG_EN – Enables DPWM Trigger from DPWM 0 PWM-B to Front End Control

0 = DPWM 0 PWM-A trigger not routed to Front End Control (Default)

1 = DPWM 0 PWM-A trigger routed to Front End Control

4.1.3 Front End Control 2 Mux Register (**FECTRL2MUX**)

Address 00120008

Bit Number	13:12	11
Bit Name	NL_SEL	DPWM3_FRAME_SYNC_EN
Access	R/W	R/W
Default	10	0

Bit Number	10	9
Bit Name	DPWM2_FRAME_SYNC_EN	DPWM1_FRAME_SYNC_EN
Access	R/W	R/W
Default	0	0

Bit Number	8	7	6
Bit Name	DPWM0_FRAME_SYNC_EN	DPWM3_B_TRIG_EN	DPWM2_B_TRIG_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	5	4	3
Bit Name	DPWM1_B_TRIG_EN	DPWM0_B_TRIG_EN	DPWM3_A_TRIG_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	2	1	0
Bit Name	DPWM2_A_TRIG_EN	DPWM1_A_TRIG_EN	DPWM0_A_TRIG_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bits 13-12: NL_SEL – Configures source of Non-Linear (NL) comparison results used in Automatic Gain Shifting

0 = Filter 0 NL Results used

1 = Filter 1 NL Results used

2 = Filter 2 NL Results used (Default)

Bit 11: DPWM3_FRAME_SYNC_EN – Enables DPWM Trigger from DPWM 3 Frame Sync to Front End Control

0 = DPWM 3 Frame Sync not routed to Front End Control (Default)

1 = DPWM 3 Frame Sync routed to Front End Control

Bit 10: DPWM2_FRAME_SYNC_EN – Enables DPWM Trigger from DPWM 2 Frame Sync to Front End Control

0 = DPWM 2 Frame Sync not routed to Front End Control (Default)

1 = DPWM 2 Frame Sync routed to Front End Control

Bit 9: DPWM1_FRAME_SYNC_EN – Enables DPWM Trigger from DPWM 1 Frame Sync to Front End Control

0 = DPWM 1 Frame Sync not routed to Front End Control (Default)

1 = DPWM 1 Frame Sync routed to Front End Control

Bit 8: DPWM0_FRAME_SYNC_EN – Enables DPWM Trigger from DPWM 0 Frame Sync to Front End Control

0 = DPWM 0 Frame Sync not routed to Front End Control (Default)

1 = DPWM 0 Frame Sync routed to Front End Control

Bit 7: DPWM3_B_TRIG_EN – Enables DPWM Trigger from DPWM 3 PWM-B to Front End Control

0 = DPWM 3 PWM-B trigger not routed to Front End Control (Default)

1 = DPWM 3 PWM-B trigger routed to Front End Control

Bit 6: DPWM2_B_TRIG_EN – Enables DPWM Trigger from DPWM 2 PWM-B to Front End Control

0 = DPWM 2 PWM-B trigger not routed to Front End Control (Default)

1 = DPWM 2 PWM-B trigger routed to Front End Control

Bit 5: DPWM1_B_TRIG_EN – Enables DPWM Trigger from DPWM 1 PWM-B to Front End Control

0 = DPWM 1 PWM-B trigger not routed to Front End Control (Default)

1 = DPWM 1 PWM-B trigger routed to Front End Control

Bit 4: DPWM0_B_TRIG_EN – Enables DPWM Trigger from DPWM 0 PWM-B to Front End Control

0 = DPWM 0 PWM-B trigger not routed to Front End Control (Default)

1 = DPWM 0 PWM-B trigger routed to Front End Control

Bit 3: DPWM3_A_TRIG_EN – Enables DPWM Trigger from DPWM 3 PWM-A to Front End Control

0 = DPWM 3 PWM-A trigger not routed to Front End Control (Default)

1 = DPWM 3 PWM-A trigger routed to Front End Control

Bit 2: DPWM2_A_TRIG_EN – Enables DPWM Trigger from DPWM 2 PWM-B to Front End Control

0 = DPWM 2 PWM-A trigger not routed to Front End Control (Default)

1 = DPWM 2 PWM-A trigger routed to Front End Control

Bit 1: DPWM1_A_TRIG_EN – Enables DPWM Trigger from DPWM 1 PWM-B to Front End Control

0 = DPWM 1 PWM-A trigger not routed to Front End Control (Default)

1 = DPWM 1 PWM-A trigger routed to Front End Control

Bit 0: DPWM0_A_TRIG_EN – Enables DPWM Trigger from DPWM 0 PWM-B to Front End Control

0 = DPWM 0 PWM-A trigger not routed to Front End Control (Default)

1 = DPWM 0 PWM-A trigger routed to Front End Control

4.1.4 Sample Trigger Control Register (SAMPTRGCTRL)

Address 0012000C

Bit Number	11	10	9
Bit Name	FE2_TRIG_DPWM3_EN	FE2_TRIG_DPWM2_EN	FE2_TRIG_DPWM1_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	8	7	6
Bit Name	FE2_TRIG_DPWM0_EN	FE1_TRIG_DPWM3_EN	FE1_TRIG_DPWM2_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	5	4	3
Bit Name	FE1_TRIG_DPWM1_EN	FE1_TRIG_DPWM0_EN	FE0_TRIG_DPWM3_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	2	1	0
Bit Name	FE0_TRIG_DPWM2_EN	FE0_TRIG_DPWM1_EN	FE0_TRIG_DPWM0_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit 11: FE2_TRIG_DPWM3_EN – Enables Sample Trigger from DPWM 3 to Front End Control 2

- 0 = DPWM 3 Sample Trigger not routed to Front End Control 2 (Default)
- 1 = DPWM 3 Sample Trigger routed to Front End Control 2

Bit 10: FE2_TRIG_DPWM2_EN – Enables Sample Trigger from DPWM 2 to Front End Control 2

- 0 = DPWM 2 Sample Trigger not routed to Front End Control 2 (Default)
- 1 = DPWM 2 Sample Trigger routed to Front End Control 2

Bit 9: FE2_TRIG_DPWM1_EN – Enables Sample Trigger from DPWM 1 to Front End Control 2

- 0 = DPWM 1 Sample Trigger not routed to Front End Control 2 (Default)
- 1 = DPWM 1 Sample Trigger routed to Front End Control 2

Bit 8: FE2_TRIG_DPWM0_EN – Enables Sample Trigger from DPWM 0 to Front End Control 2

- 0 = DPWM 0 Sample Trigger not routed to Front End Control 2 (Default)
- 1 = DPWM 0 Sample Trigger routed to Front End Control 2

Bit 7: FE1_TRIG_DPWM3_EN – Enables Sample Trigger from DPWM 3 to Front End Control 1

- 0 = DPWM 3 Sample Trigger not routed to Front End Control 1 (Default)
- 1 = DPWM 3 Sample Trigger routed to Front End Control 1

Bit 6: FE1_TRIG_DPWM2_EN – Enables Sample Trigger from DPWM 2 to Front End Control 1

- 0 = DPWM 2 Sample Trigger not routed to Front End Control 1 (Default)
- 1 = DPWM 2 Sample Trigger routed to Front End Control 1

Bit 5: FE1_TRIG_DPWM1_EN – Enables Sample Trigger from DPWM 1 to Front End Control 1

- 0 = DPWM 1 Sample Trigger not routed to Front End Control 1 (Default)
- 1 = DPWM 1 Sample Trigger routed to Front End Control 1

Bit 4: FE1_TRIG_DPWM0_EN – Enables Sample Trigger from DPWM 0 to Front End Control 1

- 0 = DPWM 0 Sample Trigger not routed to Front End Control 1 (Default)
- 1 = DPWM 0 Sample Trigger routed to Front End Control 1

Bit 3: FE0_TRIG_DPWM3_EN – Enables Sample Trigger from DPWM 3 to Front End Control 0

- 0 = DPWM 3 Sample Trigger not routed to Front End Control 0 (Default)
- 1 = DPWM 3 Sample Trigger routed to Front End Control 0

Bit 2: FE0_TRIG_DPWM2_EN – Enables Sample Trigger from DPWM 2 to Front End Control 0

- 0 = DPWM 2 Sample Trigger not routed to Front End Control 0 (Default)
- 1 = DPWM 2 Sample Trigger routed to Front End Control 0

Bit 1: FE0_TRIG_DPWM1_EN – Enables Sample Trigger from DPWM 1 to Front End Control 0

- 0 = DPWM 1 Sample Trigger not routed to Front End Control 0 (Default)
- 1 = DPWM 1 Sample Trigger routed to Front End Control 0

Bit 0: FE0_TRIG_DPWM0_EN – Enables Sample Trigger from DPWM 0 to Front End Control 0

- 0 = DPWM 0 Sample Trigger not routed to Front End Control 0 (Default)
- 1 = DPWM 0 Sample Trigger routed to Front End Control 0

4.1.5 External DAC Control Register (EXTDACCTRL)

Address 00120010

Bit Number	26:24	23:19	18:16	15:11	10:8
Bit Name	DAC2_SEL	RESERVED	DAC1_SEL	RESERVED	DAC0_SEL
Access	R/W	-	R/W	-	R/W
Default	000	0_0000	000	0_0000	000

Bit Number	7:3	2	1	0
Bit Name	RESERVED	EXT_DAC2_EN	EXT_DAC1_EN	EXT_DAC0_EN
Access	-	R/W	R/W	R/W
Default	0_0000	0	0	0

Bits 26-24: DAC2_SEL – Configures DAC 2 setpoint in External DAC Mode

- 0 = DAC 0 Setpoint Selected (Default)
- 1 = DAC 1 Setpoint Selected
- 3 = Output of Constant Power Module Selected
- 4 = Filter 0 Output Selected

- 5 = Filter 1 Output Selected
- 6 = Filter 2 Output Selected

Bits 23-19: RESERVED – Unused bits

Bits 18-16: DAC1_SEL – Configures DAC 1 setpoint in External DAC Mode

- 0 = DAC 0 Setpoint Selected (Default)
- 2 = DAC 2 Setpoint Selected
- 3 = Output of Constant Power Module Selected
- 4 = Filter 0 Output Selected
- 5 = Filter 1 Output Selected
- 6 = Filter 2 Output Selected

Bits 15-11: RESERVED – Unused bits

Bits 10-8: DAC0_SEL – Configures DAC 0 setpoint in External DAC Mode

- 1 = DAC 1 Setpoint Selected
- 2 = DAC 2 Setpoint Selected
- 3 = Output of Constant Power Module Selected
- 4 = Filter 0 Output Selected
- 5 = Filter 1 Output Selected
- 6 = Filter 2 Output Selected

Bits 7-3: RESERVED – Unused bits

Bit 2: EXT_DAC2_EN – External DAC 2 Mode Enable

- 0 = External DAC Mode disabled. DAC 2 setpoint driven from Front End Control Module (Default)
- 1 = External DAC Mode enabled, DAC 2 setpoint driven by DAC2_SEL configuration

Bit 1: EXT_DAC1_EN – External DAC 1 Mode Enable

- 0 = External DAC Mode disabled. DAC 1 setpoint driven from Front End Control Module (Default)
- 1 = External DAC Mode enabled, DAC 1 setpoint driven by DAC1_SEL configuration

Bit 0: EXT_DAC0_EN – External DAC 0 Mode Enable

- 0 = External DAC Mode disabled. DAC 0 setpoint driven from Front End Control Module (Default)
- 1 = External DAC Mode enabled, DAC 0 setpoint driven by DAC0_SEL configuration

4.1.6 Filter Mux Register (*FILTERMUX*)**Address 00120014**

Bit Number	29:28	27:26	25:24
Bit Name	FILTER2_KCOMP_SEL	FILTER1_KCOMP_SEL	FILTER0_KCOMP_SEL
Access	R/W	R/W	R/W
Default	00	00	00

Bit Number	23:19	18	17	16
Bit Name	RESERVED	FILTER2_FFWD_SEL	FILTER1_FFWD_SEL	FILTER0_FFWD_SEL
Access	R/W	R/W	R/W	R/W
Default	0_0000	0	0	0

Bit Number	15:14	13:12	11:10	9:8
Bit Name	RESERVED	FILTER2_PER_SEL	FILTER1_PER_SEL	FILTER0_PER_SEL
Access	R/W	R/W	R/W	R/W
Default	00	00	00	00

Bit Number	7:6	5:4	3:2	1:0
Bit Name	RESERVED	FILTER2_FE_SEL	FILTER1_FE_SEL	FILTER0_FE_SEL
Access	-	R/W	R/W	R/W
Default	00	10	01	00

Bits 29-28: FILTER2_KCOMP_SEL – Selects KComp value routed to Filter 2 Module

- 0 = KComp 0 Value Selected (Default)
- 1 = KComp 1 Value Selected
- 2 = KComp 2 Value Selected

Bits 27-26: FILTER1_KCOMP_SEL – Selects KComp value routed to Filter 1 Module

- 0 = KComp 0 Value Selected (Default)
- 1 = KComp 1 Value Selected
- 2 = KComp 2 Value Selected

Bits 25-24: FILTER0_KCOMP_SEL – Selects KComp value routed to Filter 0 Module

- 0 = KComp 0 Value Selected (Default)
- 1 = KComp 1 Value Selected
- 2 = KComp 2 Value Selected

Bits 23-19: RESERVED – Unused bits

Bit 18: FILTER2_FFWD_SEL – Configures Feedforward value routed to Filter 2 Module

- 0 = Filter 0 Output Selected (Default)
- 1 = Filter 1 Output Selected

Bit 17: FILTER1_FFWD_SEL – Configures Feedforward value routed to Filter 1 Module

- 0 = Filter 0 Output Selected (Default)

1 = Filter 2 Output Selected

Bit 16: FILTER0_FFWD_SEL – Configures Feedforward value routed to Filter 0 Module

0 = Filter 1 Output Selected (Default)

1 = Filter 2 Output Selected

Bits 15-14: RESERVED – Unused bits

Bits 13-12: FILTER2_PER_SEL – Selects source of switching cycle period for Filter 2 Module

0 = DPWM 0 Switching Period (Default)

1 = DPWM 1 Switching Period

2 = DPWM 2 Switching Period

3 = DPWM 3 Switching Period

Bits 11-10: FILTER1_PER_SEL – Selects source of switching cycle period for Filter 1 Module

0 = DPWM 0 Switching Period (Default)

1 = DPWM 1 Switching Period

2 = DPWM 2 Switching Period

3 = DPWM 3 Switching Period

Bits 9-8: FILTER0_PER_SEL – Selects source of switching cycle period for Filter 0 Module

0 = DPWM 0 Switching Period (Default)

1 = DPWM 1 Switching Period

2 = DPWM 2 Switching Period

3 = DPWM 3 Switching Period

Bits 7-6: RESERVED – Unused bits

Bits 5-4: FILTER2_FE_SEL – Selects which Front End Module provides data for Filter 2 Module

0 = Front End Module 0 provides data to Filter

1 = Front End Module 1 provides data to Filter

2 = Front End Module 2 provides data to Filter (Default)

Bits 3-2: FILTER1_FE_SEL – Selects which Front End Module provides data for Filter 1 Module

0 = Front End Module 0 provides data to Filter

1 = Front End Module 1 provides data to Filter (Default)

2 = Front End Module 2 provides data to Filter

Bits 1-0: FILTER0_FE_SEL – Selects which Front End Module provides data for Filter 0 Module

0 = Front End Module 0 provides data to Filter (Default)

1 = Front End Module 1 provides data to Filter

2 = Front End Module 2 provides data to Filter

4.1.7 Filter KComp A Register (*FILTERKCOMPA*)**Address 00120018**

Bit Number	29:16	15:14	13:0
Bit Name	KCOMP1	RESERVED	KCOMP0
Access	R/W	-	R/W
Default	00_0000_0000_0000	00	00_0000_0111_1101

Bits 29-16: KCOMP1 – 14-bit value used in filter output calculations replacing the DPWM switching period value

Bits 15-14: RESERVED – Unused bits

Bits 13-0: KCOMP0 – 14-bit value used in filter output calculations replacing the DPWM switching period value

4.1.8 Filter KComp B Register (*FILTERKCOMPB*)**Address 0012001C**

Bit Number	13:0
Bit Name	KCOMP2
Access	R/W
Default	00_0000_0000_0000

Bits 13-0: KCOMP2 – 14-bit value used in filter output calculations replacing the DPWM switching period value

4.1.9 DPWM Mux Register (DPWMMUX)

Address 00120020

Bit Number	31:30	29:28
Bit Name	DPWM3_SYNC_FET_SEL	DPWM2_SYNC_FET_SEL
Access	R/W	R/W
Default	00	00

Bit Number	27:26	25:24
Bit Name	DPWM1_SYNC_FET_SEL	DPWM0_SYNC_FET_SEL
Access	R/W	R/W
Default	00	00

Bit Number	23:20	19:18	17:16
Bit Name	RESERVED	DPWM3_SYNC_SEL	DPWM2_SYNC_SEL
Access	-	R/W	R/W
Default	0000	00	00

Bit Number	15:14	13:12	11:9
Bit Name	DPWM1_SYNC_SEL	DPWM0_SYNC_SEL	DPWM3_FILTER_SEL
Access	R/W	R/W	R/W
Default	00	00	010

Bit Number	8:6	5:3	2:0
Bit Name	DPWM2_FILTER_SEL	DPWM1_FILTER_SEL	DPWM0_FILTER_SEL
Access	R/W	R/W	R/W
Default	010	001	000

Bits 31-30: DPWM3_SYNC_FET_SEL – Selects Ramp source for DPWM3 PWM-B SyncFET soft on/off

- 0 = Front End 0 Ramp output selected (Default)
- 1 = Front End 1 Ramp output selected
- 2 = Front End 2 Ramp output selected

Bits 29-28: DPWM2_SYNC_FET_SEL – Selects Ramp source for DPWM2 PWM-B SyncFET soft on/off

- 0 = Front End 0 Ramp output selected (Default)
- 1 = Front End 1 Ramp output selected
- 2 = Front End 2 Ramp output selected

Bits 27-26: DPWM1_SYNC_FET_SEL – Selects Ramp source for DPWM1 PWM-B SyncFET soft on/off

- 0 = Front End 0 Ramp output selected (Default)
- 1 = Front End 1 Ramp output selected
- 2 = Front End 2 Ramp output selected

Bits 25-24: DPWM0_SYNC_FET_SEL – Selects Ramp source for DPWM0 PWM-B SyncFET soft on/off

- 0 = Front End 0 Ramp output selected (Default)
- 1 = Front End 1 Ramp output selected
- 2 = Front End 2 Ramp output selected

Bits 23-20: RESERVED – Unused bits

Bits 19-18: DPWM3_SYNC_SEL – Selects Master Sync for DPWM 3 when DPWM 3 configured in slave mode

- 0 = DPWM 0 Sync (Default)
- 1 = DPWM 1 Sync
- 2 = DPWM 2 Sync
- 3 = DPWM 3 Sync

Bits 17-16: DPWM2_SYNC_SEL – Selects Master Sync for DPWM 2 when DPWM 2 configured in slave mode

- 0 = DPWM 0 Sync (Default)
- 1 = DPWM 1 Sync
- 2 = DPWM 2 Sync
- 3 = DPWM 3 Sync

Bits 15-14: DPWM1_SYNC_SEL – Selects Master Sync for DPWM 1 when DPWM 1 configured in slave mode

- 0 = DPWM 0 Sync (Default)
- 1 = DPWM 1 Sync
- 2 = DPWM 2 Sync
- 3 = DPWM 3 Sync

Bits 13-12: DPWM0_SYNC_SEL – Selects Master Sync for DPWM 0 when DPWM 0 configured in slave mode

- 0 = DPWM 0 Sync (Default)
- 1 = DPWM 1 Sync
- 2 = DPWM 2 Sync
- 3 = DPWM 3 Sync

Bits 11-9: DPWM3_FILTER_SEL – Selects source of duty cycle/resonant period for DPWM Module 3

- 0 = Filter 0 Output Selected (Default)
- 1 = Filter 1 Output Selected
- 2 = Filter 2 Output Selected
- 3 = Constant Power Module Selected
- 4 = DPWM_ON_TIME value from Light Load Control Register

Bits 8-6: DPWM2_FILTER_SEL – Selects source of duty cycle/resonant period for DPWM Module 2

- 0 = Filter 0 Output Selected (Default)
- 1 = Filter 1 Output Selected
- 2 = Filter 2 Output Selected
- 3 = Constant Power Module Selected
- 4 = DPWM_ON_TIME value from Light Load Control Register

Bits 5-3: DPWM1_FILTER_SEL – Selects source of duty cycle/resonant period for DPWM Module 1

0 = Filter 0 Output Selected (Default)

1 = Filter 1 Output Selected

2 = Filter 2 Output Selected

3 = Constant Power Module Selected

4 = DPWM_ON_TIME value from Light Load Control Register

Bits 2-0: DPWM0_FILTER_SEL – Selects source of duty cycle/resonant period for DPWM Module 0

0 = Filter 0 Output Selected (Default)

1 = Filter 1 Output Selected

2 = Filter 2 Output Selected

3 = Constant Power Module Selected

4 = DPWM_ON_TIME value from Light Load Control Register

4.1.10 Constant Power Control Register (CPCTRL)

Address 00120024

Bit Number	16	15	14	13
Bit Name	CPCC_INT_EN	DAC_COMP_EN	FW_DIVISOR_EN	LOWER_COMP_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit Number	11:10	9:8	7:5	4:3
Bit Name	VLOOP_SEL	CLOOP_SEL	THRESH_SEL	DIVISOR_SEL
Access	R/W	R/W	R/W	R/W
Default	00	00	000	00

Bit Number	2:1	0
Bit Name	CPCC_CONFIG	CPCC_EN
Access	R/W	R/W
Default	00	0

Bit 16: CPCC_INT_EN – Constant Power/Constant Current Interrupt Enable

0 = Interrupt disabled on mode switches (Default)

1 = Interrupt enabled on mode switches

Bit 15: DAC_COMP_EN – Enables comparison of DAC Setpoint and quotient of Max Power/Sense Current in Loop Switching Mode. Minimum of DAC setpoint and calculated quotient sets voltage loop setpoint in Constant Voltage and Constant Power modes

0 = Operating Mode controls Voltage Loop DAC Setpoint (Default)

1 = Minimum of DAC setpoint and calculated quotient used as Voltage Loop DAC Setpoint

Bit 14: FW_DIVISOR_EN – Enables Firmware value for divisor in Constant Power calculations

0 = Divisor selected by **DIVISOR_SEL** (Bits 7:6) (Default)

1 = Divisor driven by Firmware Current Register

Bit 13: LOWER_COMP_EN – Enables output of lowest duty from current or voltage loop when Constant Power/Constant Current module controls loop output

0 = Loop output controlled by mode selection, voltage loop selected in constant voltage and constant power mode, current loop selected in constant current mode (Default)

1 = Loop output controlled by lowest duty from voltage or current loops

Bit 12: VLOOP_FREEZE_EN – Enables freezing of Voltage Loop Integrator when current loop selected in Loop Switching configuration

0 = Freezing of Voltage Loop Integrator disabled (Default)

1 = Freezing of Voltage Loop Integrator enabled

Bits 11-10: VLOOP_SEL – Configures voltage loop for loop switching mode

0 = Filter 0 Output Selected (Default)

1 = Filter 1 Output Selected

2 = Filter 2 Output Selected

Bits 9-8: CLOOP_SEL – Configures current loop for loop switching mode

0 = Filter 0 Output Selected (Default)

1 = Filter 1 Output Selected

2 = Filter 2 Output Selected

Bits 7-5: THRESH_SEL – Configures input threshold selected for use in Constant Power comparison

0 = Filter 0 Output Selected (Default)

1 = Filter 1 Output Selected

2 = Filter 2 Output Selected

3 = Front End 0 Absolute Value Data Selected

4 = Front End 1 Absolute Value Data Selected

5 = Front End 2 Absolute Value Data Selected

Bits 4-3: DIVISOR_SEL – Configures value used for divisor in Constant Power calculations

0 = Front End 0 Absolute Value Data Selected (Default)

1 = Front End 1 Absolute Value Data Selected

2 = Front End 2 Absolute Value Data Selected

Bit 2-1: CPCC_CONFIG – Controls Constant Power/Constant Current module configuration

00 = Average Current Mode (Default)

01 = Constant Power Module controls selection of voltage/current loop

10 = Front End Switching Mode

11 = Reserved

Bit 0: CPCC_EN – Constant Power Constant/Current Module Enable

0 = Constant Power/Constant Current Module disabled (Default)

1 = Constant Power/Constant Current Module enabled

4.1.11 Constant Power Nominal Threshold Register (CPNOM)

Address 00120028

Bit Number	25:16	15:10	9:0
------------	-------	-------	-----

Bit Name	NOM_CURRENT_UPPER	RESERVED	NOM_CURRENT_LOWER
Access	R/W	-	R/W
Default	00_0000_0000	00_0000	00_0000_0000

Bits 25-16: NOM_CURRENT_UPPER – Configures I_{NOM} value used in Constant Power/Constant Current Calculations, when sensed value exceeds NOM_CURRENT_UPPER in Constant Voltage mode, setpoint will switch to Constant Power mode

Bits 15-10: RESERVED – Unused Bits

Bits 9-0: NOM_CURRENT_LOWER – Configures I_{NOM} value used in Constant Power/Constant Current Calculations, when sensed value falls below NOM_CURRENT_LOWER in Constant Power mode, setpoint will switch to Constant Voltage mode

4.1.12 Constant Power Max Threshold Register (CPMAX)

Address 0012002C

Bit Number	25:16	15:10	9:0
Bit Name	MAX_CURRENT_UPPER	RESERVED	MAX_CURRENT_LOWER
Access	R/W	-	R/W
Default	00_0000_0000	00_0000	00_0000_0000

Bits 25-16: MAX_CURRENT_UPPER – Configures I_{MAX} value used in Constant Power/Constant Current Calculations, when sensed value exceeds MAX_CURRENT_UPPER in Constant Power mode, setpoint will switch to Max Current mode

Bits 15-10: RESERVED – Unused Bits

Bits 9-0: MAX_CURRENT_LOWER – Configures I_{MAX} value used in Constant Power/Constant Current Calculations, when sensed value falls below MAX_CURRENT_LOWER in Max Current mode, setpoint will switch to Constant Power mode

4.1.13 Constant Power Configuration Register (CPCONFIG)

Address 00120030

Bit Number	25:16	15:10	9:0
Bit Name	MAX_CURRENT	RESERVED	NOM_VOLTAGE
Access	R/W	-	R/W
Default	00_0000_0000	00_0000	00_0000_0000

Bits 25-16: MAX_CURRENT – Configures I_{MAX} setpoint used in Constant Power/Constant Current Calculations in Max Current mode

Bits 15-10: RESERVED – Unused Bits

Bits 9-0: NOM_VOLTAGE – Configures V_{NOM} setpoint used in Constant Power/Constant Current Calculations in Constant Voltage mode (Loop Oring configuration selected)

4.1.14 Constant Power Max Power Register (CPMAXPWR)

Address 00120034

Bit Number	19:0
Bit Name	MAX_POWER
Access	R/W
Default	0000_0000_0000_0000_0000

Bits 19-0: MAX_POWER – Configures P_{MAX} value used in Constant Power/Constant Current calculations in Constant Power mode

4.1.15 Constant Power Integrator Threshold Register (CPINTTHRESH)

Address 00120038

Bit Number	23:0
Bit Name	INT_THRESH
Access	R/W
Default	0000_0000_0000_0000_0000

Bits 23-0: INT_THRESH – 24-bit signed value added to Current Loop Duty value to determine when to freeze Current Loop Integrator

4.1.16 Constant Power Firmware Divisor Register (CPFWDIVISOR)

Address 0012003C

Bit Number	9:0
Bit Name	FW_DIVISOR
Access	R/W
Default	00_0000_0000

Bits 9-0: FW_DIVISOR – 10-bit value used in Constant Power calculation when firmware value is selected in Bit 17 of Constant Power Control Register

4.1.17 Constant Power Status Register (CPSTAT)**Address 00120040**

Bit Number	8	7	6
Bit Name	CONSTANT_CUR	CONSTANT_PWR	CONSTANT_VOLT
Access	R	R	R
Default	-	-	-

Bit Number	5	4	3
Bit Name	CC_TO_CV_INT	CV_TO_CC_INT	CC_TO_CP_INT
Access	R	R	R
Default	-	-	-

Bit Number	2	1	0
Bit Name	CP_TO_CC_INT	CP_TO_CV_INT	CV_TO_CP_INT
Access	R	R	R
Default	-	-	-

Bit 8: CONSTANT_CUR – Constant Current Mode Indication

- 0 = Constant Current Mode not enabled
1 = Constant Current Mode enabled

Bit 7: CONSTANT_PWR – Constant Power Mode Indication

- 0 = Constant Power Mode not enabled
1 = Constant Power Mode enabled

Bit 6: CONSTANT_VOLT – Constant Voltage Mode Indication

- 0 = Constant Voltage Mode not enabled
1 = Constant Voltage Mode enabled

Bit 5: CC_TO_CV_INT – Constant Current Mode to Constant Voltage Mode latched status, cleared on read

- 0 = No transition from Constant Current to Constant Voltage detected
1 = Transition from Constant Current to Constant Voltage detected

Bit 4: CV_TO_CC_INT – Constant Voltage Mode to Constant Current Mode latched status, cleared on read

- 0 = No transition from Constant Voltage to Constant Current detected
1 = Transition from Constant Voltage to Constant Current detected

Bit 3: CC_TO_CP_INT – Constant Current Mode to Constant Power Mode latched status, cleared on read

- 0 = No transition from Constant Current to Constant Power detected
1 = Transition from Constant Current to Constant Power detected

Bit 2: CP_TO_CC_INT – Constant Power Mode to Constant Current Mode latched status, cleared on read

- 0 = No transition from Constant Power to Constant Current detected
1 = Transition from Constant Power to Constant Current detected

Bit 1: CP_TO_CV_INT – Constant Power Mode to Constant Voltage Mode latched status, cleared on read

- 0 = No transition from Constant Power to Constant Voltage detected

1 = Transition from Constant Power to Constant Voltage detected

Bit 0: CV_TO_CP_INT – Constant Voltage Mode to Constant Power Mode latched status, cleared on read

0 = No transition from Constant Voltage to Constant Power detected

1 = Transition from Constant Voltage to Constant Power detected

4.1.18 Cycle Adjustment Control Register (CYCADJCTRL)

Address 00120044

Bit Number	9:7	6:5
Bit Name	CYC_ADJ_GAIN	CYC_ADJ_SYNC
Access	R/W	R/W
Default	000	00

Bit Number	4:3	2:1	0
Bit Name	SECOND_SAMPLE_SEL	FIRST_SAMPLE_SEL	CYC_ADJ_EN
Access	R/W	R/W	R/W
Default	00	00	0

Bits 9-7: CYC_ADJ_GAIN – Configures gain of Cycle Adjustment calculation

0 = 1x gain (Default)

1 = 2x gain

2 = 4x gain

3 = 8x gain

4 = 16x gain

5 = 32x gain

6 = 64x gain

7 = 128x gain

Bits 6-5: CYC_ADJ_SYNC – Selects which DPWM trigger synchronizes cycle adjustment calculation, first 2 samples after receipt of DPWM trigger will be used for Cycle Adjustment Calculation.

0 = DPWM-0 frame sync trigger selected (Default)

1 = DPWM-1 frame sync trigger selected

2 = DPWM-2 frame sync trigger selected

3 = DPWM-3 frame sync trigger selected

Bits 4-3: SECOND_SAMPLE_SEL – Configures Front End Module Data used for Second Sample of Cycle Adjustment Calculation

0 = Front End Module 0 Error Data selected (Default)

1 = Front End Module 1 Error Data selected

2 = Front End Module 2 Error Data selected

Bits 2-1: FIRST_SAMPLE_SEL – Configures Front End Module Data used for First Sample of Cycle Adjustment Calculation

0 = Front End Module 0 Error Data selected (Default)

1 = Front End Module 1 Error Data selected

2 = Front End Module 2 Error Data selected

Bit 0: CYC_ADJ_EN – Cycle Adjustment Calculation Enable
 0 = Cycle Adjustment Calculation disabled (Default)
 1 = Cycle Adjustment Calculation enabled

4.1.19 Cycle Adjustment Limit Register (CYCADJLIM)

Address 00120048

Bit Number	28:16	15:13	12:0
Bit Name	CYC_ADJ_UPPER_LIMIT	RESERVED	CYC_ADJ_LOWER_LIM
Access	R/W	-	R/W
Default	0_0000_0000_0000	000	0_0000_0000_0000

Bits 28-16: CYC_ADJ_UPPER_LIMIT – Cycle Adjustment Calculation signed upper limit value, output of Cycle Adjustment Calculation is clamped at the upper limit, if calculated result exceeds the upper limit. LSB resolution equals High Frequency Oscillator period/16.

Bits 15-13: RESERVED – Unused Bits

Bits 12-0: CYC_ADJ_LOWER_LIMIT – Cycle Adjustment Calculation signed lower limit value, output of Cycle Adjustment Calculation is clamped at the lower limit, if calculated result falls below the lower limit. LSB resolution equals High Frequency Oscillator period/16.

4.1.20 Cycle Adjustment Status Register (CYCADJSTAT)

Address 0012004C

Bit Number	28:16	15:10	9:0
Bit Name	CYC_ADJ_CALC	RESERVED	CYC_ADJ_ERROR
Access	R	-	R
Default	-	00_0000	-

Bits 28-16: CYC_ADJ_CALC – 13-bit signed value representing calculated Cycle Adjustment provided to DPWM module based on first 2 error samples

Bits 15-10: RESERVED – Unused Bits

Bits 9-0: CYC_ADJ_ERROR – 10-bit signed value representing calculated error of the first 2 error samples received

4.1.21 Global Enable Register (GLBEN)

Address 00120050

Bit Number	10	9	8	7:4
Bit Name	FE_CTRL2_EN	FE_CTRL1_EN	FE_CTRL0_EN	RESERVED
Access	R/W	R/W	R/W	-
Default	0	0	0	0000

Bit Number	3	2	1	0
Bit Name	DPWM3_EN	DPWM2_EN	DPWM1_EN	DPWM0_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit 10: FE_CTRL2_EN – Global Firmware Enable for Front End Control 2 Module

- 0 = Front End Control 2 Module Disabled (Default)
- 1 = Front End Control 2 Module Enabled

Bit 9: FE_CTRL1_EN – Global Firmware Enable for Front End Control 1 Module

- 0 = Front End Control 1 Module Disabled (Default)
- 1 = Front End Control 1 Module Enabled

Bit 8: FE_CTRL0_EN – Global Firmware Enable for Front End Control 0 Module

- 0 = Front End Control 0 Module Disabled (Default)
- 1 = Front End Control 0 Module Enabled

Bits 7-4: RESERVED – Unused Bits

Bit 3: DPWM3_EN – Global Firmware Enable for DPWM 3 Module

- 0 = DPWM 3 Module Disabled (Default)
- 1 = DPWM 3 Module Enabled

Bit 2: DPWM2_EN – Global Firmware Enable for DPWM 2 Module

- 0 = DPWM 2 Module Disabled (Default)
- 1 = DPWM 2 Module Enabled

Bit 1: DPWM1_EN – Global Firmware Enable for DPWM 1 Module

- 0 = DPWM 1 Module Disabled (Default)
- 1 = DPWM 1 Module Enabled

Bit 0: DPWM0_EN – Global Firmware Enable for DPWM 0 Module

- 0 = DPWM 0 Module Disabled (Default)
- 1 = DPWM 0 Module Enabled

4.1.22 PWM Global Period Register (PWMGLBPRD)**Address 00120054**

Bit Number	17:4	3:0
Bit Name	PRD	RESERVED
Access	R/W	-
Default	00_0000_0000_0000	0000

Bits 17-4: PRD – Global PWM Period value, overriding DPWM Period settings when global PWM period is selected within each DPWM module

Bits 3-0: RESERVED – Unused Bits

4.1.23 Sync Control Register (SYNCCTRL)**Address 00120058**

Bit Number	5	4:2	1	0
Bit Name	SYNC_IN	SYNC_MUX_SEL	SYNC_OUT	SYNC_DIR
Access	R	R/W	R/W	R/W
Default	-	000	1	1

Bit 5: SYNC_IN – Value of Sync pin

0 = Logic level low present on Sync pin

1 = Logic level high present on Sync pin

Bits 4-2: SYNC_MUX_SEL – Selects which module controls Sync pin output

000 = DPWM 0 Sync Output (Default)

001 = DPWM 1 Sync Output

010 = DPWM 2 Sync Output

011 = DPWM 3 Sync Output

100 = Value from SYNC_OUT (Bit 1)

101 = Value from CLKOUT signal (See Section 4.17.1)

110 = Low-Frequency Oscillator Clock Output

111 = Driven low

Bit 1: SYNC_OUT – Configure output value for Sync pin, if used as an output

0 = Sync pin driven low in output mode

1 = Sync pin driven high in output mode (Default)

Bit 0: SYNC_DIR – Configure direction of Sync pin

0 = Sync pin configured as an output pin

1 = Sync pin configured as an input pin (Default)

4.1.24 Light Load Control Register (LLCTRL)

Address 0012005C

Bit Number	25:8	7:4	3	2:1	0
Bit Name	DPWM_ON_TIME	RESERVED	CYCLE_CNT_EN	LL_FILTER_SEL	LL_EN
Access	R/W	-	R/W	R/W	R/W
Default	00_0000_0000_0000_0000	0000	0	00	0

Bits 25-8: DPWM_ON_TIME – DPWM pulse width used for EADC-based light load mode operation, when selected Filter data exceeds TURN_ON_THRESH value

Bits 7-3: RESERVED – Unused Bits

Bit 3: CYCLE_CNT_EN – Enables Switching Cycle Counter for enabling constant pulse widths when configured in Light Load operation

0 = Switching Cycle Counter disabled (Default)

1 = Switching Cycle Counter enabled

Bits 2-1: LL_FILTER_SEL – Configures source of filter data for Light Load comparisons

0 = Filter 0 data selected (Default)

1 = Filter 1 data selected

2 = Filter 2 data selected

Bit 0: LL_EN – Light Load Mode Enable

0 = Mode disabled (Default)

1 = Mode enabled

4.1.25 Light Load Enable Threshold Register (LLENTHRESH)

Address 00120060

Bit Number	31:24	23:18	17:0
Bit Name	CYCLE_CNT_THRESH	RESERVED	TURN_ON_THRESH
Access	R/W	-	R/W
Default	0000_0000	0000_00	00_0000_0000_0000_0000

Bits 31-24: CYCLE_CNT_THRESH – Switching Cycle threshold where constant width DPWM pulses are enabled when number of switching cycles without pulses exceeds threshold

Bits 23-18: RESERVED – Unused Bits

Bits 17-0: TURN_ON_THRESH – Filter data threshold where constant width DPWM pulses are enabled when filter data exceeds threshold

4.1.26 Light Load Disable Threshold Register (LLDISTHRESH)

Address 00120064

Bit Number	17:0
Bit Name	TURN_OFF_THRESH
Access	R/W
Default	00_0000_0000_0000_0000

Bits 17-0: TURN_OFF_THRESH – Filter data threshold where constant width DPWM pulses are disabled when filter data falls below threshold

4.1.27 Analog Peak Current Mode Ramp Register (APCMRAMP)

Address 00120068

Bit Number	5:4	3:0
Bit Name	PCM_FILTER_SEL	RESERVED
Access	R/W	R
Default	00	00

Bits 5-4: PCM_FILTER_SEL – Selects source of Peak Current Slope Compensation Ramp Start

0 = Filter 0 data selected (Default)

1 = Filter 1 data selected

2 = Filter 2 data selected

3 = Constant Power/Constant Current data selected

Bits 3-0: Reserved

4.1.28 Analog Peak Current Mode Control Register (APCMCTRL)

Address 00120070

Bit Number	3	2:1	0
Bit Name	PCM_LATCH_EN	PCM_FE_SEL	PCM_EN
Access	R/W	R/W	R/W
Default	0	00	0

Bit 3: PCM_LATCH_EN – Enables latching of Peak Current Flag to end of frame

0 = PCM Flag is not latched to end of PCM Frame (Default)

1 = PCM Flag is latched to end of PCM Frame

Bits 2-1: PCM_FE_SEL – Selects source of Front End Comparator output for Analog Peak Current Mode Control

0 = Front End Control 0 Comparator output selected (Default)

1 = Front End Control 1 Comparator output selected

2 = Front End Control 2 Comparator output selected

Bit 0: PCM_EN – Analog Peak Current Mode Control Module Enable

0 = Analog Peak Current Mode Control Module disabled (Default)

1 = Analog Peak Current Mode Control Module enabled

4.1.29 DTC Control (DTCCTRL)

Address 00120078

Bit Number	22	21:20	19:17
Bit Name	FLT_INT_EN	FLT_MAX	FLT_STEP
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	16:13	12:9	8:5	4
Bit Name	FLT_THRESH	PWM_A_SEL	PWM_B_SEL	A_POL
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit Number	3	2	1	0
Bit Name	B_POL	INPUT_MODE	MODE	DTC_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit 22: FLT_INT_EN– Enables interrupt generation when a fault flag condition has been met

0 = Interrupt disabled (default)

1 = Interrupt enabled

Bit 21:20: FLT_MAX– Sets the number of consecutive detected faults before a fault step is utilized

0 = 1 (default)

1 = 2

2 = 4

3 = 8

Bit 19-17: FLT_STEP– Sets the negative step size when a fault condition is detected that exceeds the fault max value. If the fault_max condition has not been met the step size is -1. Step size is in HFO clock increments.

0 = -1 (default)

1 = -5

2 = -10

3 = -25

4 = -50

5 = -75

6 = -100

7 = -125

Bit 16-13: FLT_THRESH– Sets the measurement threshold for a fault condition to initiate a fault step. Threshold is in HFO clock increments.

Bit 12-9 PWM_A_SEL – Selects the phase A negative edge reference to begin a measurement window

- 0 = Disabled (Default)
- 1 = DPWM-0-A
- 2 = DPWM-1-A
- 3 = DPWM-2-A
- 4 = DPWM-3-A
- 5 = DPWM-0-B
- 6 = DPWM-1-B
- 7 = DPWM-2-B
- 8 = DPWM-3-B

Bit 8-5: PWM_B_SEL – Selects the phase B negative edge reference to begin a measurement window

- 0 = Disabled (Default)
- 1 = DPWM-0-A
- 2 = DPWM-1-A
- 3 = DPWM-2-A
- 4 = DPWM-3-A
- 5 = DPWM-0-B
- 6 = DPWM-1-B
- 7 = DPWM-2-B
- 8 = DPWM-3-B

Bit 4: A_POL – Sets the signal polarity of the DTC input to the device

- 0 = Active Low (Default)
- 1 = Active High

Bit 3: B_POL – Sets the signal polarity of the DTC input to the device

- 0 = Active Low (Default)
- 1 = Active High

Bit 2: INPUT_MODE – Sets the input method for the DTC module

- 0 = Phase A and Phase B input signals occur on separate inputs (Default)
- 1 = Phase A and Phase B input signals occur on the same input

Bit 1: MODE – Sets mode control of the DTC phase accumulator values

- 0 = Automatic Mode. Accumulators A and B are changed by hardware and stay within limits programmed in the DTCLIMIT register. (Default)
- 1 = Manual Mode. Accumulator A and B set by programmed values in the DTCMANUAL register.

Bit 0: DTC_EN – DTC Enable

- 0 = Dead-time Compensate Module disabled (Default)
- 1 = Dead-time Compensate Module enabled

4.1.30 DTC Target (DTCTARGET)

Address 0012007C

Bit Number	23:17	16:9	8:7	6:0
Bit Name	DETECT_BLANK	DETECT_LEN	TARGET_OFFSET	TARGET_LOW
Access	R/W	R/W	R/W	R/W
Default	000_0000	0000_0000	00	000_0000

Bit 23-17: DETECT_BLANK– Sets the target measurement window blanking length, in HFO clock increments.

Bit 16-9: DETECT_LEN– Sets the target measurement window length, in HFO clock increments.

Bit 8-7: TARGET_OFFSET– Target Threshold Offset. Target upper threshold = target low + target offset

0 = 0 (Default)

1 = 2 HFO clocks

2 = 4 HFO clocks

3 = 8 HFO clocks

Bit 6-0: TARGET_LOW – Target Lower Threshold, in HFO clock increments

4.1.31 DTC Auto Control Limit (DTCLIMIT)

Address 00120080

Bit Number	19:10	9:0
Bit Name	ADJ_MAX	ADJ_MIN
Access	R/W	R/W
Default	01_1111_1111	10_0000_0000

Bit 19-10: ADJ_MAX – Sets the signed integer upper clamp for the accumulators. The integer range is (-512 to 511)

Bit 9-0: ADJ_MIN – Sets the signed integer lower clamp for the accumulators. The integer range is (-512 to 511)

4.1.32 DTC Manual Control (DTCMANUAL)

Address 00120084

Bit Number	19:10	9:0
Bit Name	A_ADJ	B_ADJ
Access	R/W	R/W
Default	00_0000_0000	00_0000_0000

Register is ignored in automatic mode.

Bit 19-10: A_ADJ – Sets the signed A accumulator value when manual control is enabled.

Bit 9-0: B_ADJ Sets the signed B accumulator value when manual control is enabled.

4.1.33 DTC Monitor (DTCMONITOR)

Address 00120088

Bit Number	19:10	9:0
Bit Name	A_ADJ	B_ADJ
Access	R	R
Default	0_0000_0000	0_0000_0000

Bit 19-10: A_ADJ – Monitored accumulator A value from the DTC module

Bit 9-0: B_ADJ - Monitored accumulator B value from the DTC module

4.1.34 DTC Status (DTCSTAT)

Address 0012008C

Bit Number	14:8	7:1	0
Bit Name	A_CNT	B_CNT	FLAG
Access	R	R	R
Default	000_0000	000_0000	0

Bit 14-8: A_CNT – Last measurement value for phase A input signal

Bit 7-1: B_CNT – Last measurement value for phase B input signal

Bit 0: FLAG – Flag is set when the fault count exceeds the FLT MAX value programmed in the DTCCTRL register.

4.2 Fault Mux Registers

4.2.1 Analog Comparator Control 0 Register (ACOMPCTRL0) Address 00130000

Bit Number	30:24	23:22	21:19	18
Bit Name	ACOMP_B_THRESH	RESERVED	ACOMP_B_SEL	ACOMP_B_POL
Access	R/W	-	R/W	R/W
Default	000_0000	00	000	1

Bit Number	17	16:15	14:8	7:6
Bit Name	ACOMP_B_INT_EN	RESERVED	ACOMP_A_THRESH	RESERVED
Access	R/W	-	R/W	-
Default	0	00	000_0000	00

Bit Number	5:3	2	1	0
Bit Name	ACOMP_A_SEL	ACOMP_A_POL	ACOMP_A_INT_EN	ACOMP_EN
Access	R/W	R/W	R/W	R/W
Default	000	1	0	0

Bits 30-24: ACOMP_B_THRESH – Configures Analog Comparator B Threshold value

0 = Comparator Reference of 19.53125 mV (Default)

1 = Comparator Reference of 39.0625 mV

.....

127 = Comparator Reference of 2.5 V

Bits 23-22: RESERVED – Unused bits

Bits 21-19: ACOMP_B_SEL – Configures Analog Comparator B Threshold

0 = Analog Comparator B Threshold set by ACOMP_B_THRESH (Default)

1 = Analog Comparator B Threshold set by Comparator Ramp 0

2 = Analog Comparator B Threshold set by Filter 0 Output

3 = Analog Comparator B Threshold set by Filter 1 Output

4 = Analog Comparator B Threshold set by Filter 2 Output

Bit 18: ACOMP_B_POL – Analog Comparator B Polarity

0 = Comparator result enabled when input falls below threshold

1 = Comparator result enabled when input exceeds threshold (Default)

Bit 17: ACOMP_B_INT_EN – Analog Comparator B Interrupt Enable

0 = Disables Analog Comparator B Interrupt generation (Default)

1 = Enables Analog Comparator B Interrupt generation

Bits 16-15: RESERVED – Unused bits

Bits 14-8: ACOMP_A_THRESH – Configures Analog Comparator A Threshold

0 = Comparator Reference of 19.53125 mV (Default)

1 = Comparator Reference of 39.0625 mV

.....

127 = Comparator Reference of 2.5 V

Bits 7-6: RESERVED – Unused bits

Bits 5-3: ACOMP_A_SEL – Configures Analog Comparator A Threshold

0 = Analog Comparator A Threshold set by ACOMP_A_THRESH
(Default)

1 = Analog Comparator A Threshold set by Comparator Ramp 0

2 = Analog Comparator A Threshold set by Filter 0 Output

3 = Analog Comparator A Threshold set by Filter 1 Output

4 = Analog Comparator A Threshold set by Filter 2 Output

Bit 2: ACOMP_A_POL – Analog Comparator A Polarity

0 = Comparator result enabled when input falls below threshold

1 = Comparator result enabled when input exceeds threshold (Default)

Bit 1: ACOMP_A_INT_EN – Analog Comparator A Interrupt Enable

0 = Disables Analog Comparator A Interrupt generation (Default)

1 = Enables Analog Comparator A Interrupt generation

Bit 0: ACOMP_EN – Analog Comparators Enable

0 = Analog Comparators Disabled (Default)

1 = Analog Comparators Enabled

4.2.2 Analog Comparator Control 1 Register (ACOMPCTRL1)

Address 00130004

Bit Number	30:24	23:22	21:19	18
Bit Name	ACOMP_D_THRESH	RESERVED	ACOMP_D_SEL	ACOMP_D_POL
Access	R/W	-	R/W	R/W
Default	000_0000	00	000	1

Bit Number	17	16	15	14:8
Bit Name	ACOMP_D_INT_EN	ACOMP_D_OUT_EN	RESERVED	ACOMP_C_THRESH
Access	R/W	R/W	-	R/W
Default	0	0	0	000_0000

Bit Number	7:6	5:3	2	1	0
Bit Name	RESERVED	ACOMP_C_SEL	ACOMP_C_POL	ACOMP_C_INT_EN	RESERVED
Access	-	R/W	R/W	R/W	-

Default	00	000	1	0	0
----------------	----	-----	---	---	---

Bits 30-24: ACOMP_D_THRESH – Configures Analog Comparator D Threshold

0 = Comparator Reference of 19.53125 mV (Default)

1 = Comparator Reference of 39.0625 mV

.....

127 = Comparator Reference of 2.5 V

Bits 23-22: RESERVED – Unused bits

Bits 21-19: ACOMP_D_SEL – Configures Analog Comparator D Threshold

0 = Analog Comparator D Threshold set by ACOMP_D_THRESH (Default)

1 = Analog Comparator D Threshold set by Comparator Ramp 0

2 = Analog Comparator D Threshold set by Filter 0 Output

3 = Analog Comparator D Threshold set by Filter 1 Output

4 = Analog Comparator D Threshold set by Filter 2 Output

Bit 18: ACOMP_D_POL – Analog Comparator D Polarity

0 = Comparator result enabled when input falls below threshold

1 = Comparator result enabled when input exceeds threshold (Default)

Bit 17: ACOMP_D_INT_EN – Analog Comparator D Interrupt Enable

0 = Disables Analog Comparator D Interrupt generation (Default)

1 = Enables Analog Comparator D Interrupt generation

Bit 16: ACOMP_D_OUT_EN – Analog Comparator D DAC Output Enable

0 = Disables output of Comparator DAC D onto AD pin (Default)

1 = Enables output of Comparator DAC D onto AD pin

Bit 15: RESERVED – Unused bit

Bits 14-8: ACOMP_C_THRESH – Configures Analog Comparator C Threshold

0 = Comparator Reference of 19.53125 mV (Default)

1 = Comparator Reference of 39.0625 mV

.....

127 = Comparator Reference of 2.5 V

Bits 7-6: RESERVED – Unused bits

Bits 5-3: ACOMP_C_SEL – Configures Analog Comparator C Threshold

0 = Analog Comparator C Threshold set by ACOMP_C_THRESH (Default)

1 = Analog Comparator C Threshold set by Comparator Ramp 0

2 = Analog Comparator C Threshold set by Filter 0 Output

3 = Analog Comparator C Threshold set by Filter 1 Output

4 = Analog Comparator C Threshold set by Filter 2 Output

Bit 2: ACOMP_C_POL – Analog Comparator C Polarity

0 = Comparator result enabled when input falls below threshold
1 = Comparator result enabled when input exceeds threshold (Default)

Bit 1: ACOMP_C_INT_EN – Analog Comparator C Interrupt Enable

0 = Disables Analog Comparator C Interrupt generation (Default)
1 = Enables Analog Comparator C Interrupt generation

Bit 0: RESERVED – Unused bit

Preliminary

4.2.3 Analog Comparator Control 2 Register (ACOMPCTRL2)

Address 00130008

Bit Number	30:24	23	22	21:19
Bit Name	ACOMP_F_THRESH	RESERVED	ACOMP_F_REF_SEL	ACOMP_F_SEL
Access	R/W	-	R/W	R/W
Default	000_0000	0	0	000

Bit Number	18	17	16	15
Bit Name	ACOMP_F_POL	ACOMP_F_INT_EN	ACOMP_F_OUT_EN	RESERVED
Access	R/W	R/W	R/W	-
Default	1	0	0	0

Bit Number	14:8	7:6	5:3
Bit Name	ACOMP_E_THRESH	RESERVED	ACOMP_E_SEL
Access	R/W	-	R/W
Default	000_0000	00	000

Bit Number	2	1	0
Bit Name	ACOMP_E_POL	ACOMP_E_INT_EN	ACOMP_E_OUT_EN
Access	R/W	R/W	R/W
Default	1	0	0

Bits 30-24: ACOMP_F_THRESH – Configures Analog Comparator F Threshold

0 = Comparator Reference of 19.53125 mV (Default)

1 = Comparator Reference of 39.0625 mV

.....

127 = Comparator Reference of 2.5 V

Bit 23: RESERVED – Unused bit

Bit 22: ACOMP_F_REF_SEL – Analog Comparator F Reference Select

0 = Selects internal DAC reference (Default)

1 = Selects reference driven from AD-07 pin

Bits 21-19: ACOMP_F_SEL – Configures Analog Comparator F Threshold

0 = Analog Comparator F Threshold set by ACOMP_F_THRESH (Default)

1 = Analog Comparator F Threshold set by Comparator Ramp 0

2 = Analog Comparator F Threshold set by Filter 0 Output

3 = Analog Comparator F Threshold set by Filter 1 Output

4 = Analog Comparator F Threshold set by Filter 2 Output

Bit 18: ACOMP_F_POL – Analog Comparator F Polarity

0 = Comparator result enabled when input falls below threshold

1 = Comparator result enabled when input exceeds threshold (Default)

Bit 17: ACOMP_F_INT_EN – Analog Comparator F Interrupt Enable

0 = Disables Analog Comparator F Interrupt generation (Default)

1 = Enables Analog Comparator F Interrupt generation

Bit 16: ACOMP_F_OUT_EN – Analog Comparator F DAC Output Enable

0 = Disables output of Comparator DAC F onto AD pin (Default)

1 = Enables output of Comparator DAC F onto AD pin

Bit 15: RESERVED – Unused bit

Bits 14-8: ACOMP_E_THRESH – Configures Analog Comparator E Threshold

0 = Comparator Reference of 19.53125 mV (Default)

1 = Comparator Reference of 39.0625 mV

.....

127 = Comparator Reference of 2.5 V

Bits 7-6: RESERVED – Unused bits

Bits 5-3: ACOMP_E_SEL – Configures Analog Comparator E Threshold

0 = Analog Comparator E Threshold set by ACOMP_E_THRESH (Default)

1 = Analog Comparator E Threshold set by Comparator Ramp 0

2 = Analog Comparator E Threshold set by Filter 0 Output

3 = Analog Comparator E Threshold set by Filter 1 Output

4 = Analog Comparator E Threshold set by Filter 2 Output

Bit 2: ACOMP_E_POL – Analog Comparator E Polarity

0 = Comparator result enabled when input falls below threshold

1 = Comparator result enabled when input exceeds threshold (Default)

Bit 1: ACOMP_E_INT_EN – Analog Comparator E Interrupt Enable

0 = Disables Analog Comparator E Interrupt generation (Default)

1 = Enables Analog Comparator E Interrupt generation

Bit 0: ACOMP_E_OUT_EN – Analog Comparator E DAC Output Enable

0 = Disables output of Comparator DAC E onto AD pin (Default)

1 = Enables output of Comparator DAC E onto AD pin

4.2.4 Analog Comparator Control 3 Register (ACOMPCTRL3)

Address 0013000C

Bit Number	14:8	7:6	5:3
Bit Name	ACOMP_G_THRESH	RESERVED	ACOMP_G_SEL
Access	R/W	-	R/W
Default	000_0000	00	000

Bit Number	2	1	0
Bit Name	ACOMP_G_POL	ACOMP_G_INT_EN	ACOMP_G_OUT_EN
Access	R/W	R/W	R/W
Default	1	0	0

Bits 14-8: ACOMP_G_THRESH – Configures Analog Comparator G Threshold

0 = Comparator Reference of 19.53125 mV (Default)

1 = Comparator Reference of 39.0625 mV

.....

127 = Comparator Reference of 2.5 V

Bits 7-6: RESERVED – Unused bits

Bits 5-3: ACOMP_G_SEL – Configures Analog Comparator G Threshold

0 = Analog Comparator G Threshold set by ACOMP_G_THRESH
(Default)

1 = Analog Comparator G Threshold set by Comparator Ramp 0

2 = Analog Comparator G Threshold set by Filter 0 Output

3 = Analog Comparator G Threshold set by Filter 1 Output

4 = Analog Comparator G Threshold set by Filter 2 Output

Bit 2: ACOMP_G_POL – Analog Comparator G Polarity

0 = Comparator result enabled when input falls below threshold

1 = Comparator result enabled when input exceeds threshold (Default)

Bit 1: ACOMP_G_INT_EN – Analog Comparator G Interrupt Enable

0 = Disables Analog Comparator G Interrupt generation (Default)

1 = Enables Analog Comparator G Interrupt generation

Bit 0: ACOMP_G_OUT_EN – Analog Comparator G DAC Output Enable

0 = Disables output of Comparator DAC G onto AD pin (Default)

1 = Enables output of Comparator DAC G onto AD pin

4.2.5 External Fault Control Register (EXTFAULTCTRL)

Address 00130010

Bit Number	11	10	9	8
Bit Name	FAULT3_POL	FAULT2_POL	FAULT1_POL	FAULT0_POL
Access	R/W	R/W	R/W	R/W
Default	1	1	1	1

Bit Number	7	6	5	4
Bit Name	FAULT3_INT_EN	FAULT2_INT_EN	FAULT1_INT_EN	FAULT0_INT_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit Number	3	2	1	0
Bit Name	FAULT3_DET_EN	FAULT2_DET_EN	FAULT1_DET_EN	FAULT0_DET_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit 11: FAULT3_POL – Polarity configuration for FAULT[3] pin

0 = Fault detection enabled on falling edge

1 = Fault detection enabled on rising edge (Default)

Bit 10: FAULT2_POL – Polarity configuration for FAULT[2] pin

0 = Fault detection enabled on falling edge

1 = Fault detection enabled on rising edge (Default)

Bit 9: FAULT1_POL – Polarity configuration for FAULT[1] pin

0 = Fault detection enabled on falling edge

1 = Fault detection enabled on rising edge (Default)

Bit 8: FAULT0_POL – Polarity configuration for FAULT[0] pin

0 = Fault detection enabled on falling edge

1 = Fault detection enabled on rising edge (Default)

Bit 7: FAULT3_INT_EN – FAULT[3] Pin Interrupt Enable

0 = Disables Fault Detection Interrupt generation (Default)

1 = Enables Fault Detection Interrupt generation

Bit 6: FAULT2_INT_EN – FAULT[2] Pin Interrupt Enable

0 = Disables Fault Detection Interrupt generation (Default)

1 = Enables Fault Detection Interrupt generation

Bit 5: FAULT1_INT_EN – FAULT[1] Pin Interrupt Enable

0 = Disables Fault Detection Interrupt generation (Default)

1 = Enables Fault Detection Interrupt generation

Bit 4: FAULT0_INT_EN – FAULT[0] Pin Interrupt Enable

0 = Disables Fault Detection Interrupt generation (Default)

1 = Enables Fault Detection Interrupt generation

Bit 3: FAULT3_DET_EN – FAULT[3] Pin Detection Enable

0 = Fault Detection Disabled (Default)

1 = Fault Detection Enabled

Bit 2: FAULT2_DET_EN – FAULT[2] Pin Detection Enable

0 = Fault Detection Disabled (Default)

1 = Fault Detection Enabled

Bit 1: FAULT1_DET_EN – FAULT[1] Pin Detection Enable

0 = Fault Detection Disabled (Default)

1 = Fault Detection Enabled

Bit 0: FAULT0_DET_EN – FAULT[0] Pin Detection Enable

0 = Fault Detection Disabled (Default)
 1 = Fault Detection Enabled

4.2.6 Fault Mux Interrupt Status Register (*FAULTMUXINTSTAT*)

Address 00130014

Bit Number	16	15	14	13	12
Bit Name	DCOMP3	DCOMP2	DCOMP1	DCOMP0	LFO_FAIL
Access	R	R	R	R	R
Default	-	-	-	-	-

Bit Number	11	10	9	8	7	6
Bit Name	FAULT3	FAULT2	FAULT1	FAULT0	DCM_DETECT	ACOMP_G
Access	R	R	R	R	R	R
Default	-	-	-	-	-	-

Bit Number	5	4	3	2	1	0
Bit Name	ACOMP_F	ACOMP_E	ACOMP_D	ACOMP_C	ACOMP_B	ACOMP_A
Access	R	R	R	R	R	R
Default	-	-	-	-	-	-

Bit 16: DCOMP3 – Digital Comparator 3 Interrupt Status, cleared by read of status register

- 0 = Comparator threshold interrupt disabled
- 1 = Comparator threshold interrupt enabled

Bit 15: DCOMP2 – Digital Comparator 2 Interrupt Status, cleared by read of status register

- 0 = Comparator threshold interrupt disabled
- 1 = Comparator threshold interrupt enabled

Bit 14: DCOMP1 – Digital Comparator 1 Interrupt Status, cleared by read of status register

- 0 = Comparator threshold interrupt disabled
- 1 = Comparator threshold interrupt enabled

Bit 13: DCOMP0 – Digital Comparator 0 Interrupt Status, cleared by read of status register

- 0 = Comparator threshold interrupt disabled
- 1 = Comparator threshold interrupt enabled

Bit 12: LFO_FAIL – Low Frequency Oscillator Failure Interrupt Status, cleared by read of status register

- 0 = Low Frequency Oscillator operational
- 1 = Low Frequency Oscillator failure detected

Bit 11: FAULT3 – External FAULT[2] Interrupt Detection

0 = No External GPIO detection found
1 = External GPIO detection found

Bit 10: FAULT2 – External FAULT[2] Interrupt Detection

0 = No External GPIO detection found
1 = External GPIO detection found

Bit 9: FAULT1 – External FAULT[1] Interrupt Detection

0 = No External GPIO detection found
1 = External GPIO detection found

Bit 8: FAULT0 – External FAULT[0] Interrupt Detection

0 = No External GPIO detection found
1 = External GPIO detection found

Bit 7: DCM_DETECT – Discontinuous Conduction Mode Interrupt Status, cleared by read of status register

0 = Discontinuous Conduction Mode detected
1 = Discontinuous Conduction Mode not detected

Bit 6: ACOMP_G – Analog Comparator G Interrupt Status, cleared by read of status register

0 = Comparator threshold interrupt disabled
1 = Comparator threshold interrupt enabled

Bit 5: ACOMP_F – Analog Comparator F Interrupt Status, cleared by read of status register

0 = Comparator threshold interrupt disabled
1 = Comparator threshold interrupt enabled

Bit 4: ACOMP_E – Analog Comparator E Interrupt Status, cleared by read of status register

0 = Comparator threshold interrupt disabled
1 = Comparator threshold interrupt enabled

Bit 3: ACOMP_D – Analog Comparator D Interrupt Status, cleared by read of status register

0 = Comparator threshold interrupt disabled
1 = Comparator threshold interrupt enabled

Bit 2: ACOMP_C – Analog Comparator C Interrupt Status, cleared by read of status register

0 = Comparator threshold interrupt disabled
1 = Comparator threshold interrupt enabled

Bit 1: ACOMP_B – Analog Comparator B Interrupt Status, cleared by read of status register

0 = Comparator threshold interrupt disabled
1 = Comparator threshold interrupt enabled

Bit 0: ACOMP_A – Analog Comparator A Interrupt Status, cleared by read of status register

- 0 = Comparator threshold interrupt disabled
- 1 = Comparator threshold interrupt enabled

4.2.7 Fault Mux Raw Status Register (FAULTMUXRAWSTAT)

Address 00130018

Bit Number	16	15	14	13	12
Bit Name	DCOMP3	DCOMP2	DCOMP1	DCOMP0	LFO_FAIL
Access	R	R	R	R	R
Default	-	-	-	-	-

Bit Number	11	10	9	8	7	6
Bit Name	FAULT3	FAULT2	FAULT1	FAULT0	DCM_DETECT	ACOMP_G
Access	R	R	R	R	R	R
Default	-	-	-	-	-	-

Bit Number	5	4	3	2	1	0
Bit Name	ACOMP_F	ACOMP_E	ACOMP_D	ACOMP_C	ACOMP_B	ACOMP_A
Access	R	R	R	R	R	R
Default	-	-	-	-	-	-

Bit 16: DCOMP3 – Digital Comparator 3 Raw Status

- 0 = Comparator threshold not exceeded
- 1 = Comparator threshold exceeded

Bit 15: DCOMP2 – Digital Comparator 2 Raw Status

- 0 = Comparator threshold not exceeded
- 1 = Comparator threshold exceeded

Bit 14: DCOMP1 – Digital Comparator 1 Raw Status

- 0 = Comparator threshold not exceeded
- 1 = Comparator threshold exceeded

Bit 13: DCOMP0 – Digital Comparator 0 Raw Status

- 0 = Comparator threshold not exceeded
- 1 = Comparator threshold exceeded

Bit 12: LFO_FAIL – Low Frequency Oscillator Failure Raw Status

- 0 = Low Frequency Oscillator operational
- 1 = Low Frequency Oscillator failure detected

Bit 11: FAULT3 – External Fault Detection on FAULT[3] pin

- 0 = No External FAULT[2] detection found
- 1 = External GPIO detection found

- Bit 10: FAULT2** – External Fault Detection on FAULT[2] pin
0 = No External FAULT[2] detection found
1 = External GPIO detection found
- Bit 9: FAULT1** – External Fault Detection on FAULT[1] pin
0 = No External FAULT[1] detection found
1 = External GPIO detection found
- Bit 8: FAULT0** – External Fault Detection on FAULT[0] pin
0 = No External FAULT[0] detection found
1 = External GPIO detection found
- Bit 7: DCM_DETECT** – Discontinuous Conduction Mode Raw Status
0 = Discontinuous Conduction Mode detected
1 = Discontinuous Conduction Mode not detected
- Bit 6: ACOMP_G** – Analog Comparator G Raw Result
0 = Comparator threshold not exceeded
1 = Comparator threshold exceeded
- Bit 5: ACOMP_F** – Analog Comparator F Raw Result
0 = Comparator threshold not exceeded
1 = Comparator threshold exceeded
- Bit 4: ACOMP_E** – Analog Comparator E Raw Result
0 = Comparator threshold not exceeded
1 = Comparator threshold exceeded
- Bit 3: ACOMP_D** – Analog Comparator D Raw Result
0 = Comparator threshold not exceeded
1 = Comparator threshold exceeded
- Bit 2: ACOMP_C** – Analog Comparator C Raw Result
0 = Comparator threshold not exceeded
1 = Comparator threshold exceeded
- Bit 1: ACOMP_B** – Analog Comparator B Raw Result
0 = Comparator threshold not exceeded
1 = Comparator threshold exceeded
- Bit 0: ACOMP_A** – Analog Comparator A Raw Result
0 = Comparator threshold not exceeded
1 = Comparator threshold exceeded

4.2.8 Comparator Ramp Control 0 Register (COMPRAMPO)

Address 0013001C

Bit Number	31:28	27:10
Bit Name	START_VALUE_SEL	STEP_SIZE
Access	R/W	R/W
Default	0000	00_0000_0000_0000_0000

Bit Number	9:5	4	3
Bit Name	CLKS_PER_STEP	DPWM3_TRIG_EN	DPWM2_TRIG_EN
Access	R/W	R/W	R/W
Default	0_0000	0	00

Bit Number	2	1	0
Bit Name	DPWM1_TRIG_EN	DPWM0_TRIG_EN	RAMP_EN
Access	R/W	R/W	R/W
Default	00	00	0

Bits 31-28: START_VALUE_SEL – Configures comparator ramp starting value

- 0 = Filter 0 Output (Bits 17-11) (Default)
- 1 = Filter 1 Output (Bits 17-11)
- 2 = Filter 2 Output (Bits 17-11)
- 3 = Analog Comparator Threshold A Value
- 4 = Analog Comparator Threshold B Value
- 5 = Analog Comparator Threshold C Value
- 6 = Analog Comparator Threshold D Value
- 7 = Analog Comparator Threshold E Value
- 8 = Analog Comparator Threshold F Value
- 9 = Analog Comparator Threshold G Value

Bits 27-10: STEP_SIZE - Programmable 18-bit unsigned comparator step with Bits 27:24 representing the integer portion of the comparator step (0-15 Comparator steps of 19.5mV each) and Bits 23:10 representing the fractional portion of the comparator step

Bits 9-5: CLKS_PER_STEP – Selects number of MCLK (HFO_OSC/8) clock cycles per comparator step where number of subcycles can vary from 1 to 32

- 0 = 1 MCLK clock cycles per step (Default)
- 1 = 2 MCLK clock cycles per step
- 2 = 3 MCLK clock cycles per step
-
- 31 = 32 MCLK clock cycles per step

Bit 4: DPWM3_TRIG_EN – Enables DPWM Trigger from DPWM 3 to Analog Comparator Ramp 0

0 = DPWM 3 trigger not routed to Analog Comparator Ramp 0 (Default)

1 = DPWM 3 trigger routed to Analog Comparator Ramp 0

Bit 3: DPWM2_TRIG_EN – Enables DPWM Trigger from DPWM 2 to Analog Comparator Ramp 0

0 = DPWM 2 trigger not routed to Analog Comparator Ramp 0 (Default)

1 = DPWM 2 trigger routed to Analog Comparator Ramp 0

Bit 2: DPWM1_TRIG_EN – Enables DPWM Trigger from DPWM 1 to Analog Comparator Ramp 0

0 = DPWM 1 trigger not routed to Analog Comparator Ramp 0 (Default)

1 = DPWM 1 trigger routed to Analog Comparator Ramp 0

Bit 1: DPWM0_TRIG_EN – Enables DPWM Trigger from DPWM 0 to Analog Comparator Ramp 0

0 = DPWM 0 trigger not routed to Analog Comparator Ramp 0 (Default)

1 = DPWM 0 trigger routed to Analog Comparator Ramp 0

Bit 0: RAMP_EN – Enable for Analog Comparator Ramp 0

0 = Analog Comparator Ramp disabled (Default)

1 = Analog Comparator Ramp enabled

4.2.9 Digital Comparator Control 0 Register (DCOMPCTRL0)

Address 0x00130020

Bit Number	31:24	23:19	18	17:15	14
Bit Name	CNT_THRESH	RESERVED	COMP_POL	FE_SEL	CNT_CLR
Access	R/W	-	R/W	R/W	R/W
Default	0000_0000	0000_0	0	000	0

Bit Number	13	12	11	10:0
Bit Name	CNT_CONFIG	INT_EN	COMP_EN	THRESH
Access	R/W	R/W	R/W	R/W
Default	0	0	0	000_0000_0000

Bits 31-24: CNT_THRESH – Sets the number of received comparator events before declaring a fault

Bits 23-19: RESERVED – Unused bits

Bit 18: COMP_POL – Digital Comparator 0 Polarity

0 = Digital Comparator result asserted if value below threshold (Default)

1 = Digital Comparator result asserted if value above threshold

Bits 17-15: FE_SEL – Selects which Front End absolute data is used for Digital Comparison with threshold

- 0 = Front End 0 absolute data selected (Default)
- 1 = Front End 1 absolute data selected
- 2 = Front End 2 absolute data selected
- 3 = Front End 0 error data selected
- 4 = Front End 1 error data selected
- 5 = Front End 2 error data selected

Bit 14: CNT_CLR – Comparator Detection Counter clear

- 0 = No clear of Comparator Detection Counter (Default)
- 1 = Clear Comparator Detection counter and associated fault

Bit 13: CNT_CONFIG – Comparator Detection Counter configuration

- 0 = Counter clears upon receipt of sample which does not exceed comparator threshold (Default)
- 1 = Counter decrements by 1 upon receipt of sample which does not exceed comparator threshold

Bit 12: INT_EN – Comparator Interrupt Enable

- 0 = Disables Comparator Interrupt generation (Default)
- 1 = Enables Comparator Interrupt generation

Bit 11: COMP_EN – Digital Comparator 0 Enable

- 0 = Disables Digital Comparator 0 (Default)
- 1 = Enables Digital Comparator 0

Bits 10-0: THRESH – Sets the digital comparator threshold, 11-bit signed value with resolution of 1.5625mV/bit

4.2.10 Digital Comparator Control 1 Register (DCOMPCTRL1)

Address 0x00130024

Bit Number	31:24	23:19	18	17:15	14
Bit Name	CNT_THRESH	RESERVED	COMP_POL	FE_SEL	CNT_CLR
Access	R/W	-	R/W	R/W	R/W
Default	0000_0000	0000_0	0	000	0

Bit Number	13	12	11	10:0
Bit Name	CNT_CONFIG	INT_EN	COMP_EN	THRESH
Access	R/W	R/W	R/W	R/W
Default	0	0	0	000_0000_0000

Bits 31-24: CNT_THRESH – Sets the number of received comparator events before declaring a fault

Bits 23-19: RESERVED – Unused bits

Bit 18: COMP_POL – Digital Comparator 1 Polarity

- 0 = Digital Comparator result asserted if value below threshold (Default)

1 = Digital Comparator result asserted if value above threshold

Bits 17-15: FE_SEL – Selects which Front End absolute data is used for Digital Comparison with threshold

- 0 = Front End 0 absolute data selected (Default)
- 1 = Front End 1 absolute data selected
- 2 = Front End 2 absolute data selected
- 3 = Front End 0 error data selected
- 4 = Front End 1 error data selected
- 5 = Front End 2 error data selected

Bit 14: CNT_CLR – Comparator Detection Counter clear

- 0 = No clear of Comparator Detection Counter (Default)
- 1 = Clear Comparator Detection counter and associated fault

Bit 13: CNT_CONFIG – Comparator Detection Counter configuration

- 0 = Counter clears upon receipt of sample which does not exceed comparator threshold (Default)
- 1 = Counter decrements by 1 upon receipt of sample which does not exceed comparator threshold

Bit 12: INT_EN – Comparator Interrupt Enable

- 0 = Disables Comparator Interrupt generation (Default)
- 1 = Enables Comparator Interrupt generation

Bit 11: COMP_EN – Digital Comparator 1 Enable

- 0 = Disables Digital Comparator 1 (Default)
- 1 = Enables Digital Comparator 1

Bits 10-0: THRESH – Sets the digital comparator threshold, 11-bit signed value with resolution of 1.5625mV/bit

4.2.11 Digital Comparator Control 2 Register (DCOMPCTRL2)

Address 0x00130028

Bit Number	31:24	23:19	18	17:15	14
Bit Name	CNT_THRESH	RESERVED	COMP_POL	FE_SEL	CNT_CLR
Access	R/W	-	R/W	R/W	R/W
Default	0000_0000	0000_0	0	000	0

Bit Number	13	12	11	10:0
Bit Name	CNT_CONFIG	INT_EN	COMP_EN	THRESH
Access	R/W	R/W	R/W	R/W
Default	0	0	0	000_0000_0000

Bits 31-24: CNT_THRESH – Sets the number of received comparator events before declaring a fault

Bits 23-19: RESERVED – Unused bits

Bit 18: COMP_POL – Digital Comparator 1 Polarity

0 = Digital Comparator result asserted if value below threshold (Default)

1 = Digital Comparator result asserted if value above threshold

Bits 17-15: FE_SEL – Selects which Front End absolute data is used for Digital Comparison with threshold

0 = Front End 0 absolute data selected (Default)

1 = Front End 1 absolute data selected

2 = Front End 2 absolute data selected

3 = Front End 0 error data selected

4 = Front End 1 error data selected

5 = Front End 2 error data selected

Bit 14: CNT_CLR – Comparator Detection Counter clear

0 = No clear of Comparator Detection Counter (Default)

1 = Clear Comparator Detection counter and associated fault

Bit 13: CNT_CONFIG – Comparator Detection Counter configuration

0 = Counter clears upon receipt of sample which does not exceed comparator threshold (Default)

1 = Counter decrements by 1 upon receipt of sample which does not exceed comparator threshold

Bit 12: INT_EN – Comparator Interrupt Enable

0 = Disables Comparator Interrupt generation (Default)

1 = Enables Comparator Interrupt generation

Bit 11: COMP_EN – Digital Comparator 2 Enable

0 = Disables Digital Comparator 2 (Default)

1 = Enables Digital Comparator 2

Bits 10-0: THRESH – Sets the digital comparator threshold, 11-bit signed value with resolution of 1.5625mV/bit

4.2.12 Digital Comparator Control 3 Register (DCOMPCTRL3)

Address 0x0013002C

Bit Number	31:24	23:19	18	17:15	14
Bit Name	CNT_THRESH	RESERVED	COMP_POL	FE_SEL	CNT_CLR
Access	R/W	-	R/W	R/W	R/W
Default	0000_0000	0000_0	0	000	0

Bit Number	13	12	11	10:0
Bit Name	CNT_CONFIG	INT_EN	COMP_EN	THRESH
Access	R/W	R/W	R/W	R/W
Default	0	0	0	000_0000_0000

Bits 31-24: CNT_THRESH – Sets the number of received comparator events before declaring a fault

Bits 23-19: RESERVED – Unused bits

Bit 18: COMP_POL – Digital Comparator 1 Polarity

0 = Digital Comparator result asserted if value below threshold (Default)

1 = Digital Comparator result asserted if value above threshold

Bits 17-15: FE_SEL – Selects which Front End absolute data is used for Digital Comparison with threshold

0 = Front End 0 absolute data selected (Default)

1 = Front End 1 absolute data selected

2 = Front End 2 absolute data selected

3 = Front End 0 error data selected

4 = Front End 1 error data selected

5 = Front End 2 error data selected

Bit 14: CNT_CLR – Comparator Detection Counter clear

0 = No clear of Comparator Detection Counter (Default)

1 = Clear Comparator Detection counter and associated fault

Bit 13: CNT_CONFIG – Comparator Detection Counter configuration

0 = Counter clears upon receipt of sample which does not exceed comparator threshold (Default)

1 = Counter decrements by 1 upon receipt of sample which does not exceed comparator threshold

Bit 12: INT_EN – Comparator Interrupt Enable

0 = Disables Comparator Interrupt generation (Default)

1 = Enables Comparator Interrupt generation

Bit 11: COMP_EN – Digital Comparator 3 Enable

0 = Disables Digital Comparator 3 (Default)

1 = Enables Digital Comparator 3

Bits 10-0: THRESH – Sets the digital comparator threshold, 11-bit signed value with resolution of 1.5625mV/bit

4.2.13 Digital Comparator Counter Status Register (DCOMPCNTSTAT) Address 0x00130030

Bit Number	31:24	31:24	31:24	31:24
Bit Name	DCOMP3_CNT	DCOMP2_CNT	DCOMP1_CNT	DCOMP0_CNT
Access	R	R	R	R
Default	-	-	-	-

Bits 31-24: DCOMP3_CNT – Current value of Digital Comparator 3 detection

counter

Bits 23-16: DCOMP2_CNT – Current value of Digital Comparator 2 detection counter

Bits 15-8: DCOMP1_CNT – Current value of Digital Comparator 1 detection counter

Bits 7-0: DCOMP0_CNT – Current value of Digital Comparator 0 detection counter

4.2.14 DPWM 0 Current Limit Control Register (DPWM0CLIM)

Address 0x00130034

Bit Number	16	15	14
Bit Name	ANALOG_PCM_EN	DCOMP3_EN	DCOMP2_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	13	12	11	10	9
Bit Name	DCOMP1_EN	DCOMP0_EN	RESERVED	FAULT3_EN	FAULT2_EN
Access	R/W	R/W	R	R/W	R/W
Default	0	0	0	0	0

Bit Number	8	7	6	5	4
Bit Name	FAULT1_EN	FAULT0_EN	ACOMP_G_EN	ACOMP_F_EN	ACOMP_E_EN
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	3	2	1	0
Bit Name	ACOMP_D_EN	ACOMP_C_EN	ACOMP_B_EN	ACOMP_A_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit 16: ANALOG_PCM_EN – Enables Analog Peak Current detection result for DPWM 0 Current Limit

0 = Analog Peak Current detection disabled for current limit (Default)

1 = Analog Peak Current detection enabled for current limit

Bit 15: DCOMP3_EN – Enables Digital Comparator 3 result for DPWM 0 Current Limit

0 = Digital Comparator 3 result disabled for current limit (Default)

1 = Digital Comparator 3 result enabled for current limit

Bit 14: DCOMP2_EN – Enables Digital Comparator 2 result for DPWM 0

Current Limit

0 = Digital Comparator 2 result disabled for current limit (Default)

1 = Digital Comparator 2 result enabled for current limit

Bit 13: DCOMP1_EN – Enables Digital Comparator 1 result for DPWM 0

Current Limit

0 = Digital Comparator 1 result disabled for current limit (Default)

1 = Digital Comparator 1 result enabled for current limit

Bit 12: DCOMP0_EN – Enables Digital Comparator 0 result for DPWM 0

Current Limit

0 = Digital Comparator 0 result disabled for current limit (Default)

1 = Digital Comparator 0 result enabled for current limit

Bit 11: RESERVED – Unused Bit**Bit 10: FAULT3_EN** – Enables FAULT[3] pin for DPWM 0 Current Limit

0 = External Fault pin disabled for current limit (Default)

1 = External Fault pin enabled for current limit

Bit 9: FAULT2_EN – Enables FAULT[2] pin for DPWM 0 Current Limit

0 = External Fault pin disabled for current limit (Default)

1 = External Fault pin enabled for current limit

Bit 8: FAULT1_EN – Enables FAULT[1] pin for DPWM 0 Current Limit

0 = External Fault pin disabled for current limit (Default)

1 = External Fault pin enabled for current limit

Bit 7: FAULT0_EN – Enables FAULT[0] pin for DPWM 0 Current Limit

0 = External Fault pin disabled for current limit (Default)

1 = External Fault pin enabled for current limit

Bit 6: ACOMP_G_EN – Enables Analog Comparator G result for DPWM 0

Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 5: ACOMP_F_EN – Enables Analog Comparator F result for DPWM 0

Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 4: ACOMP_E_EN – Enables Analog Comparator E result for DPWM 0

Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 3: ACOMP_D_EN – Enables Analog Comparator D result for DPWM 0

Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 2: ACOMP_C_EN – Enables Analog Comparator C result for DPWM 0 Current Limit

- 0 = Analog Comparator result disabled for current limit (Default)
- 1 = Analog Comparator result enabled for current limit

Bit 1: ACOMP_B_EN – Enables Analog Comparator B result for DPWM 0 Current Limit

- 0 = Analog Comparator result disabled for current limit (Default)
- 1 = Analog Comparator result enabled for current limit

Bit 0: ACOMP_A_EN – Enables Analog Comparator A result for DPWM 0 Current Limit

- 0 = Analog Comparator result disabled for current limit (Default)
- 1 = Analog Comparator result enabled for current limit

4.2.15 DPWM 0 Fault AB Detection Register (DPWM0FLTABDET)

Address 0x00130038

Bit Number	14	13	12	11	10
Bit Name	DCOMP3_EN	DCOMP2_EN	DCOMP1_EN	DCOMP0_EN	FAULT3_EN
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	9	8	7	6	5
Bit Name	FAULT2_EN	FAULT1_EN	FAULT0_EN	ACOMP_G_EN	ACOMP_F_EN
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	4	3	2	1	0
Bit Name	ACOMP_E_EN	ACOMP_D_EN	ACOMP_C_EN	ACOMP_B_EN	ACOMP_A_EN
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit 14: DCOMP3_EN – Enables Digital Comparator 3 result for DPWM 0 Fault AB Detection

- 0 = Digital Comparator 3 disabled for Fault AB detection (Default)
- 1 = Digital Comparator 3 enabled for Fault AB detection

Bit 13: DCOMP2_EN – Enables Digital Comparator 2 result for DPWM 0 Fault AB Detection

- 0 = Digital Comparator 2 disabled for Fault AB detection (Default)
- 1 = Digital Comparator 2 enabled for Fault AB detection

Bit 12: DCOMP1_EN – Enables Digital Comparator 1 result for DPWM 0 Fault

AB Detection

0 = Digital Comparator 1 disabled for Fault AB detection (Default)

1 = Digital Comparator 1 enabled for Fault AB detection

Bit 11: DCOMP0_EN – Enables Digital Comparator 0 result for DPWM 0 Fault AB Detection

0 = Digital Comparator 0 disabled for Fault AB detection (Default)

1 = Digital Comparator 0 enabled for Fault AB detection

Bit 10: FAULT3_EN – Enables FAULT[3] pin for DPWM 0 Fault AB detection

0 = External Fault pin disabled for Fault AB detection (Default)

1 = External Fault pin enabled for Fault AB detection

Bit 9: FAULT2_EN – Enables FAULT[2] pin for DPWM 0 Fault AB detection

0 = External Fault pin disabled for Fault AB detection (Default)

1 = External Fault pin enabled for Fault AB detection

Bit 8: FAULT1_EN – Enables FAULT[1] pin for DPWM 0 Fault AB detection

0 = External Fault pin disabled for Fault AB detection (Default)

1 = External Fault pin enabled for Fault AB detection

Bit 7: FAULT0_EN – Enables FAULT[0] pin for DPWM 0 Fault AB detection

0 = External Fault pin disabled for Fault AB detection (Default)

1 = External Fault pin enabled for Fault AB detection

Bit 6: ACOMP_A_EN – Enables Analog Comparator G result for DPWM 0 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 5: ACOMP_F_EN – Enables Analog Comparator F result for DPWM 0 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 4: ACOMP_E_EN – Enables Analog Comparator E result for DPWM 0 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 3: ACOMP_D_EN – Enables Analog Comparator D result for DPWM 0 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 2: ACOMP_C_EN – Enables Analog Comparator C result for DPWM 0 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 1: ACOMP_B_EN – Enables Analog Comparator B result for DPWM 0

Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 0: ACOMP_A_EN – Enables Analog Comparator A result for DPWM 0

Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

4.2.16 DPWM 0 Fault Detection Register (DPWM0FAULTDET)

Address 0x0013003C

Bit Number	30	29	28
Bit Name	PWMB_DCOMP3_EN	PWMB_DCOMP2_EN	PWMB_DCOMP1_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	27	26	25
Bit Name	PWMB_DCOMP0_EN	PWMB_FAULT3_EN	PWMB_FAULT2_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	24	23	22
Bit Name	PWMB_FAULT1_EN	PWMB_FAULT0_EN	PWMB_ACOMP_G_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	21	20	19
Bit Name	PWMB_ACOMP_F_EN	PWMB_ACOMP_E_EN	PWMB_ACOMP_D_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	18	17	16
Bit Name	PWMB_ACOMP_C_EN	PWMB_ACOMP_B_EN	PWMB_ACOMP_A_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	15	14
Bit Name	RESERVED	PWMA_DCOMP3_EN
Access	-	R/W
Default	0	0

Bit Number	13	12	11
Bit Name	PWMA_DCOMP2_EN	PWMA_DCOMP1_EN	PWMA_DCOMP0_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	10	9
Bit Name	PWMA_FAULT3_EN	PWMA_FAULT2_EN
Access	R/W	R/W
Default	0	0

Bit Number	8	7	6
Bit Name	PWMA_FAULT1_EN	PWMA_FAULT0_EN	PWMA_ACOMP_G_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	5	4	3
Bit Name	PWMA_ACOMP_F_EN	PWMA_ACOMP_E_EN	PWMA_ACOMP_D_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	2	1	0
Bit Name	PWMA_ACOMP_C_EN	PWMA_ACOMP_B_EN	PWMA_ACOMP_A_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit 30: PWMB_DCOMP3_EN – Enables Digital Comparator 3 result for DPWM 0 PWM-B Fault Detection

0 = Digital Comparator 3 disabled for fault detection (Default)

1 = Digital Comparator 3 enabled for fault detection

Bit 29: PWMB_DCOMP2_EN – Enables Digital Comparator 2 result for DPWM 0 PWM-B Fault Detection

0 = Digital Comparator 2 disabled for fault detection (Default)

1 = Digital Comparator 2 enabled for fault detection

Bit 28: PWMB_DCOMP1_EN – Enables Digital Comparator 1 result for DPWM 0 PWM-B Fault Detection

0 = Digital Comparator 1 disabled for fault detection (Default)

1 = Digital Comparator 1 enabled for fault detection

Bit 27: PWMB_DCOMP0_EN – Enables Digital Comparator 0 result for DPWM 0 PWM-B Fault Detection

0 = Digital Comparator 0 disabled for fault detection (Default)

1 = Digital Comparator 0 enabled for fault detection

Bit 26: PWMB_FAULT3_EN – Enables FAULT[3] pin for DPWM 0 PWM-B Fault Detection

0 = External Fault pin disabled for fault detection (Default)

1 = External Fault pin enabled for fault detection

Bit 25: PWMB_FAULT2_EN – Enables FAULT[2] pin for DPWM 0 PWM-B Fault Detection

0 = External Fault pin disabled for fault detection (Default)

1 = External Fault pin enabled for fault detection

Bit 24: PWMB_FAULT1_EN – Enables FAULT[1] pin for DPWM 0 PWM-B Fault Detection

0 = External Fault pin disabled for fault detection (Default)

1 = External Fault pin enabled for fault detection

Bit 23: PWMB_FAULT0_EN – Enables FAULT[0] pin for DPWM 0 PWM-B Fault Detection

0 = External Fault pin disabled for fault detection (Default)

1 = External Fault pin enabled for fault detection

Bit 22: PWMB_ACOMP_G_EN – Enables Analog Comparator G result for DPWM 0 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 21: PWMB_ACOMP_F_EN – Enables Analog Comparator F result for DPWM 0 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 20: PWMB_ACOMP_E_EN – Enables Analog Comparator E result for DPWM 0 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 19: PWMB_ACOMP_D_EN – Enables Analog Comparator D result for DPWM 0 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 18: PWMB_ACOMP_C_EN – Enables Analog Comparator C result for DPWM 0 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 17: PWMB_ACOMP_B_EN – Enables Analog Comparator B result for DPWM 0 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 16: PWMB_ACOMP_A_EN – Enables Analog Comparator A result for DPWM 0 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)
1 = Analog Comparator result enabled for fault detection

Bit 15: RESERVED – Unused bit

Bit 14: PWMA_DCOMP3_EN – Enables Digital Comparator 3 result for DPWM 0 PWM-A Fault Detection

0 = Digital Comparator 3 disabled for fault detection (Default)
1 = Digital Comparator 3 enabled for fault detection

Bit 13: PWMA_DCOMP2_EN – Enables Digital Comparator 2 result for DPWM 0 PWM-A Fault Detection

0 = Digital Comparator 2 disabled for fault detection (Default)
1 = Digital Comparator 2 enabled for fault detection

Bit 12: PWMA_DCOMP1_EN – Enables Digital Comparator 1 result for DPWM 0 PWM-A Fault Detection

0 = Digital Comparator 1 disabled for fault detection (Default)
1 = Digital Comparator 1 enabled for fault detection

Bit 11: PWMA_DCOMP0_EN – Enables Digital Comparator 0 result for DPWM 0 PWM-A Fault Detection

0 = Digital Comparator 0 disabled for fault detection (Default)
1 = Digital Comparator 0 enabled for fault detection

Bit 10: PWMA_FAULT3_EN – Enables FAULT[3] pin for DPWM 0 PWM-A Fault Detection

0 = External Fault pin disabled for fault detection (Default)
1 = External Fault pin enabled for fault detection

Bit 9: PWMA_FAULT2_EN – Enables FAULT[2] pin for DPWM 0 PWM-A Fault Detection

0 = External Fault pin disabled for fault detection (Default)
1 = External Fault pin enabled for fault detection

Bit 8: PWMA_FAULT1_EN – Enables FAULT[1] pin for DPWM 0 PWM-A Fault Detection

0 = External Fault pin disabled for fault detection (Default)
1 = External Fault pin enabled for fault detection

Bit 7: PWMA_FAULT0_EN – Enables FAULT[0] pin for DPWM 0 PWM-A Fault Detection

0 = External Fault pin disabled for fault detection (Default)
1 = External Fault pin enabled for fault detection

Bit 6: PWMA_ACOMP_G_EN – Enables Analog Comparator G result for DPWM 0 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)
1 = Analog Comparator result enabled for fault detection

Bit 5: PWMA_ACOMP_F_EN – Enables Analog Comparator F result for

DPWM 0 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 4: PWMA_ACOMP_E_EN – Enables Analog Comparator E result for DPWM 0 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 3: PWMA_ACOMP_D_EN – Enables Analog Comparator D result for DPWM 0 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 2: PWMA_ACOMP_C_EN – Enables Analog Comparator C result for DPWM 0 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 1: PWMA_ACOMP_B_EN – Enables Analog Comparator B result for DPWM 0 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 0: PWMA_ACOMP_A_EN – Enables Analog Comparator A result for DPWM 0 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

4.2.17 DPWM 0 IDE Detection Register (DPWM0IDEDET)

Address 0x00130040

Bit Number	6	5	4	3
Bit Name	ACOMP_G_EN	ACOMP_F_EN	ACOMP_E_EN	ACOMP_D_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit Number	2	1	0
Bit Name	ACOMP_C_EN	ACOMP_B_EN	ACOMP_A_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit 6: ACOMP_6_EN – Enables Analog Comparator G result for DPWM 0 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 5: ACOMP_5_EN – Enables Analog Comparator F result for DPWM 0 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 4: ACOMP_4_EN – Enables Analog Comparator E result for DPWM 0 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 3: ACOMP_3_EN – Enables Analog Comparator D result for DPWM 0 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 2: ACOMP_2_EN – Enables Analog Comparator C result for DPWM 0 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 1: ACOMP_1_EN – Enables Analog Comparator B result for DPWM 0 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 0: ACOMP_0_EN – Enables Analog Comparator A result for DPWM 0 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Preliminary

4.2.18 DPWM 1 Current Limit Control Register (DPWM1CLIM)

Address 0x00130044

Bit Number	16	15	14
Bit Name	ANALOG_PCM_EN	DCOMP3_EN	DCOMP2_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	13	12	11	10	9
Bit Name	DCOMP1_EN	DCOMP0_EN	RESERVED	FAULT3_EN	FAULT2_EN
Access	R/W	R/W	R	R/W	R/W
Default	0	0	0	0	0

Bit Number	8	7	6	5	4
Bit Name	FAULT1_EN	FAULT0_EN	ACOMP_G_EN	ACOMP_F_EN	ACOMP_E_EN
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	3	2	1	0
Bit Name	ACOMP_D_EN	ACOMP_C_EN	ACOMP_B_EN	ACOMP_A_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit 16: ANALOG_PCM_EN – Enables Analog Peak Current detection result for DPWM 1 Current Limit

0 = Analog Peak Current detection disabled for current limit (Default)

1 = Analog Peak Current detection enabled for current limit

Bit 15: DCOMP3_EN – Enables Digital Comparator 3 result for DPWM 1 Current Limit

0 = Digital Comparator 3 result disabled for current limit (Default)

1 = Digital Comparator 3 result enabled for current limit

Bit 14: DCOMP2_EN – Enables Digital Comparator 2 result for DPWM 1 Current Limit

0 = Digital Comparator 2 result disabled for current limit (Default)

1 = Digital Comparator 2 result enabled for current limit

Bit 13: DCOMP1_EN – Enables Digital Comparator 1 result for DPWM 1 Current Limit

0 = Digital Comparator 1 result disabled for current limit (Default)

1 = Digital Comparator 1 result enabled for current limit

Bit 12: DCOMP0_EN – Enables Digital Comparator 0 result for DPWM 1 Current Limit

0 = Digital Comparator 0 result disabled for current limit (Default)

1 = Digital Comparator 0 result enabled for current limit

Bit 11: Reserved – Unused Bit

Bit 10: FAULT3_EN – Enables FAULT[3] pin for DPWM 1 Current Limit

0 = External Fault pin disabled for current limit (Default)

1 = External Fault pin enabled for current limit

Bit 9: FAULT2_EN – Enables FAULT[2] pin for DPWM 1 Current Limit

0 = External Fault pin disabled for current limit (Default)

1 = External Fault pin enabled for current limit

Bit 8: FAULT1_EN – Enables FAULT[1] pin for DPWM 1 Current Limit

0 = External Fault pin disabled for current limit (Default)

1 = External Fault pin enabled for current limit

Bit 7: FAULT0_EN – Enables FAULT[0] pin for DPWM 1 Current Limit

0 = External Fault pin disabled for current limit (Default)

1 = External Fault pin enabled for current limit

Bit 6: ACOMP_G_EN – Enables Analog Comparator G result for DPWM 1 Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 5: ACOMP_F_EN – Enables Analog Comparator F result for DPWM 1 Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 4: ACOMP_E_EN – Enables Analog Comparator E result for DPWM 1 Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 3: ACOMP_D_EN – Enables Analog Comparator D result for DPWM 1 Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 2: ACOMP_C_EN – Enables Analog Comparator C result for DPWM 1 Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 1: ACOMP_B_EN – Enables Analog Comparator B result for DPWM 1 Current Limit

0 = Analog Comparator result disabled for current limit (Default)
1 = Analog Comparator result enabled for current limit

Bit 0: ACOMP_A_EN – Enables Analog Comparator A result for DPWM 1 Current Limit

0 = Analog Comparator result disabled for current limit (Default)
1 = Analog Comparator result enabled for current limit

4.2.19 DPWM 1 Fault AB Detection Register (DPWM1FLTABDET)

Address 0x00130048

Bit Number	14	13	12	11	10
Bit Name	DCOMP3_EN	DCOMP2_EN	DCOMP1_EN	DCOMP0_EN	FAULT3_EN
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	9	8	7	6	5
Bit Name	FAULT2_EN	FAULT1_EN	FAULT0_EN	ACOMP_G_EN	ACOMP_F_EN
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	4	3	2	1	0
Bit Name	ACOMP_E_EN	ACOMP_D_EN	ACOMP_C_EN	ACOMP_B_EN	ACOMP_A_EN
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit 14: DCOMP3_EN – Enables Digital Comparator 3 result for DPWM 1 Fault AB Detection

0 = Digital Comparator 3 disabled for Fault AB detection (Default)

1 = Digital Comparator 3 enabled for Fault AB detection

Bit 13: DCOMP2_EN – Enables Digital Comparator 2 result for DPWM 1 Fault AB Detection

0 = Digital Comparator 2 disabled for Fault AB detection (Default)

1 = Digital Comparator 2 enabled for Fault AB detection

Bit 12: DCOMP1_EN – Enables Digital Comparator 1 result for DPWM 1 Fault AB Detection

0 = Digital Comparator 1 disabled for Fault AB detection (Default)

1 = Digital Comparator 1 enabled for Fault AB detection

Bit 11: DCOMP0_EN – Enables Digital Comparator 0 result for DPWM 1 Fault AB Detection

0 = Digital Comparator 0 disabled for Fault AB detection (Default)

1 = Digital Comparator 0 enabled for Fault AB detection

Bit 10: FAULT3_EN – Enables FAULT[3] pin for DPWM 1 Fault AB detection

0 = External Fault pin disabled for Fault AB detection (Default)

1 = External Fault pin enabled for Fault AB detection

Bit 9: FAULT2_EN – Enables FAULT[2] pin for DPWM 1 Fault AB detection

0 = External Fault pin disabled for Fault AB detection (Default)

1 = External Fault pin enabled for Fault AB detection

Bit 8: FAULT1_EN – Enables FAULT[1] pin for DPWM 1 Fault AB detection

0 = External Fault pin disabled for Fault AB detection (Default)

1 = External Fault pin enabled for Fault AB detection

Bit 7: FAULT0_EN – Enables FAULT[0] pin for DPWM 1 Fault AB detection

0 = External Fault pin disabled for Fault AB detection (Default)

1 = External Fault pin enabled for Fault AB detection

Bit 6: ACOMP_G_EN – Enables Analog Comparator G result for DPWM 1

Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 5: ACOMP_F_EN – Enables Analog Comparator F result for DPWM 1 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 4: ACOMP_E_EN – Enables Analog Comparator E result for DPWM 1 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 3: ACOMP_D_EN – Enables Analog Comparator D result for DPWM 1 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 2: ACOMP_C_EN – Enables Analog Comparator C result for DPWM 1 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 1: ACOMP_B_EN – Enables Analog Comparator B result for DPWM 1 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 0: ACOMP_A_EN – Enables Analog Comparator A result for DPWM 1 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

4.2.20 DPWM 1 Fault Detection Register (DPWM1FAULTDET)

Address 0x0013004C

Bit Number	30	29	28
Bit Name	PWMB_DCOMP3_EN	PWMB_DCOMP2_EN	PWMB_DCOMP1_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	27	26	25
Bit Name	PWMB_DCOMP0_EN	PWMB_FAULT3_EN	PWMB_FAULT2_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	24	23	22
Bit Name	PWMB_FAULT1_EN	PWMB_FAULT0_EN	PWMB_ACOMP_G_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	21	20	19
Bit Name	PWMB_ACOMP_F_EN	PWMB_ACOMP_E_EN	PWMB_ACOMP_D_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	18	17	16
Bit Name	PWMB_ACOMP_C_EN	PWMB_ACOMP_B_E_N	PWMB_ACOMP_A_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	15	14
Bit Name	RESERVED	PWMA_DCOMP3_EN
Access	-	R/W
Default	0	0

Bit Number	13	12	11
Bit Name	PWMA_DCOMP2_EN	PWMA_DCOMP1_EN	PWMA_DCOMP0_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	10	9
Bit Name	PWMA_FAULT3_EN	PWMA_FAULT2_EN
Access	R/W	R/W
Default	0	0

Bit Number	8	7	6
Bit Name	PWMA_FAULT1_EN	PWMA_FAULT0_EN	PWMA_ACOMP_G_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	5	4	3
Bit Name	PWMA_ACOMP_F_EN	PWMA_ACOMP_E_EN	PWMA_ACOMP_D_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	2	1	0
Bit Name	PWMA_ACOMP_C_EN	PWMA_ACOMP_B_EN	PWMA_ACOMP_A_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit 30: PWMB_DCOMP3_EN – Enables Digital Comparator 3 result for DPWM 1 PWM-B Fault Detection

0 = Digital Comparator 3 disabled for fault detection (Default)

1 = Digital Comparator 3 enabled for fault detection

Bit 29: PWMB_DCOMP2_EN – Enables Digital Comparator 2 result for DPWM 1 PWM-B Fault Detection

0 = Digital Comparator 2 disabled for fault detection (Default)

1 = Digital Comparator 2 enabled for fault detection

Bit 28: PWMB_DCOMP1_EN – Enables Digital Comparator 1 result for DPWM 1 PWM-B Fault Detection

0 = Digital Comparator 1 disabled for fault detection (Default)

1 = Digital Comparator 1 enabled for fault detection

Bit 27: PWMB_DCOMP0_EN – Enables Digital Comparator 0 result for DPWM 1 PWM-B Fault Detection

0 = Digital Comparator 0 disabled for fault detection (Default)

1 = Digital Comparator 0 enabled for fault detection

Bit 26: PWMB_FAULT3_EN – Enables FAULT[3] pin for DPWM 1 PWM-B Fault Detection

0 = External Fault pin disabled for fault detection (Default)

1 = External Fault pin enabled for fault detection

Bit 25: PWMB_FAULT2_EN – Enables FAULT[2] pin for DPWM 1 PWM-B Fault Detection

0 = External Fault pin disabled for fault detection (Default)

1 = External Fault pin enabled for fault detection

Bit 24: PWMB_FAULT1_EN – Enables FAULT[1] pin for DPWM 1 PWM-B Fault Detection

0 = External Fault pin disabled for fault detection (Default)

1 = External Fault pin enabled for fault detection

Bit 23: PWMB_FAULT0_EN – Enables FAULT[0] pin for DPWM 1 PWM-B Fault Detection

0 = External Fault pin disabled for fault detection (Default)

1 = External Fault pin enabled for fault detection

Bit 22: PWMB_ACOMP_G_EN – Enables Analog Comparator G result for DPWM 1 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 21: PWMB_ACOMP_F_EN – Enables Analog Comparator F result for DPWM 1 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 20: PWMB_ACOMP_E_EN – Enables Analog Comparator E result for DPWM 1 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 19: PWMB_ACOMP_D_EN – Enables Analog Comparator D result for DPWM 1 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 18: PWMB_ACOMP_C_EN – Enables Analog Comparator C result for DPWM 1 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 17: PWMB_ACOMP_B_EN – Enables Analog Comparator B result for DPWM 1 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 16: PWMB_ACOMP_A_EN – Enables Analog Comparator A result for DPWM 1 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)
 1 = Analog Comparator result enabled for fault detection

Bit 15: RESERVED – Unused bit

Bit 14: PWMA_DCOMP3_EN – Enables Digital Comparator 3 result for DPWM 1 PWM-A Fault Detection

0 = Digital Comparator 3 disabled for fault detection (Default)
 1 = Digital Comparator 3 enabled for fault detection

Bit 13: PWMA_DCOMP2_EN – Enables Digital Comparator 2 result for DPWM 1 PWM-A Fault Detection

0 = Digital Comparator 2 disabled for fault detection (Default)
 1 = Digital Comparator 2 enabled for fault detection

Bit 12: PWMA_DCOMP1_EN – Enables Digital Comparator 1 result for DPWM 1 PWM-A Fault Detection

0 = Digital Comparator 1 disabled for fault detection (Default)
 1 = Digital Comparator 1 enabled for fault detection

Bit 11: PWMA_DCOMP0_EN – Enables Digital Comparator 0 result for DPWM 1 PWM-A Fault Detection

0 = Digital Comparator 0 disabled for fault detection (Default)
 1 = Digital Comparator 0 enabled for fault detection

Bit 10: PWMA_FAULT2_EN – Enables FAULT[2] pin for DPWM 1 PWM-A Fault Detection

0 = External Fault pin disabled for fault detection (Default)
 1 = External Fault pin enabled for fault detection

Bit 9: PWMA_FAULT2_EN – Enables FAULT[2] pin for DPWM 1 PWM-A Fault Detection

0 = External Fault pin disabled for fault detection (Default)
 1 = External Fault pin enabled for fault detection

Bit 8: PWMA_FAULT1_EN – Enables FAULT[1] pin for DPWM 1 PWM-A Fault Detection

0 = External Fault pin disabled for fault detection (Default)
 1 = External Fault pin enabled for fault detection

Bit 7: PWMA_FAULT0_EN – Enables FAULT[0] pin for DPWM 1 PWM-A Fault Detection

0 = External Fault pin disabled for fault detection (Default)
 1 = External Fault pin enabled for fault detection

Bit 6: PWMA_ACOMP_G_EN – Enables Analog Comparator G result for DPWM 1 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)
 1 = Analog Comparator result enabled for fault detection

Bit 5: PWMA_ACOMP_F_EN – Enables Analog Comparator F result for

DPWM 1 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 4: PWMA_ACOMP_E_EN – Enables Analog Comparator E result for DPWM 1 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 3: PWMA_ACOMP_D_EN – Enables Analog Comparator D result for DPWM 1 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 2: PWMA_ACOMP_C_EN – Enables Analog Comparator C result for DPWM 1 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 1: PWMA_ACOMP_B_EN – Enables Analog Comparator B result for DPWM 1 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 0: PWMA_ACOMP_A_EN – Enables Analog Comparator A result for DPWM 1 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

4.2.21 DPWM 1 IDE Detection Register (DPWM1IDEDET)

Address 0x00130050

Bit Number	6	5	4	3
Bit Name	ACOMP_G_EN	ACOMP_F_EN	ACOMP_E_EN	ACOMP_D_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit Number	2	1	0
Bit Name	ACOMP_C_EN	ACOMP_B_EN	ACOMP_A_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit 6: ACOMP_6_EN – Enables Analog Comparator G result for DPWM 1 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 5: ACOMP_5_EN – Enables Analog Comparator F result for DPWM 1 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 4: ACOMP_4_EN – Enables Analog Comparator E result for DPWM 1 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 3: ACOMP_3_EN – Enables Analog Comparator D result for DPWM 1 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 2: ACOMP_2_EN – Enables Analog Comparator C result for DPWM 1 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 1: ACOMP_1_EN – Enables Analog Comparator B result for DPWM 1 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 0: ACOMP_0_EN – Enables Analog Comparator A result for DPWM 1 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Preliminary

4.2.22 DPWM 2 Current Limit Control Register (DPWM2CLIM)

Address 0x00130054

Bit Number	16	15	14
Bit Name	ANALOG_PCM_EN	DCOMP3_EN	DCOMP2_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	13	12	11	10	9
Bit Name	DCOMP1_EN	DCOMP0_EN	RESERVED	FAULT3_EN	FAULT2_EN
Access	R/W	R/W	R	R/W	R/W
Default	0	0	0	0	0

Bit Number	8	7	6	5	4
Bit Name	FAULT1_EN	FAULT0_EN	ACOMP_G_EN	ACOMP_F_EN	ACOMP_E_EN
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	3	2	1	0
Bit Name	ACOMP_D_EN	ACOMP_C_EN	ACOMP_B_EN	ACOMP_A_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit 16: ANALOG_PCM_EN – Enables Analog Peak Current detection result for DPWM 2 Current Limit

0 = Analog Peak Current detection disabled for current limit (Default)

1 = Analog Peak Current detection enabled for current limit

Bit 15: DCOMP3_EN – Enables Digital Comparator 3 result for DPWM 2 Current Limit

0 = Digital Comparator 3 result disabled for current limit (Default)

1 = Digital Comparator 3 result enabled for current limit

Bit 14: DCOMP2_EN – Enables Digital Comparator 2 result for DPWM 2 Current Limit

0 = Digital Comparator 2 result disabled for current limit (Default)

1 = Digital Comparator 2 result enabled for current limit

Bit 13: DCOMP1_EN – Enables Digital Comparator 1 result for DPWM 2 Current Limit

0 = Digital Comparator 1 result disabled for current limit (Default)

1 = Digital Comparator 1 result enabled for current limit

Bit 11: RESERVED – Unused Bit**Bit 12: DCOMP0_EN** – Enables Digital Comparator 0 result for DPWM 2

Current Limit

0 = Digital Comparator 0 result disabled for current limit (Default)

1 = Digital Comparator 0 result enabled for current limit

Bit 10: FAULT3_EN – Enables FAULT[3] pin for DPWM 2 Current Limit

0 = External Fault pin disabled for current limit (Default)

1 = External Fault pin enabled for current limit

Bit 9: FAULT2_EN – Enables FAULT[2] pin for DPWM 2 Current Limit

0 = External Fault pin disabled for current limit (Default)

1 = External Fault pin enabled for current limit

Bit 8: FAULT1_EN – Enables FAULT[1] pin for DPWM 2 Current Limit

0 = External Fault pin disabled for current limit (Default)

1 = External Fault pin enabled for current limit

Bit 7: FAULT0_EN – Enables FAULT[0] pin for DPWM 2 Current Limit

0 = External Fault pin disabled for current limit (Default)

1 = External Fault pin enabled for current limit

Bit 6: ACOMP_G_EN – Enables Analog Comparator G result for DPWM 2

Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 5: ACOMP_F_EN – Enables Analog Comparator F result for DPWM 2

Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 4: ACOMP_E_EN – Enables Analog Comparator E result for DPWM 2

Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 3: ACOMP_D_EN – Enables Analog Comparator D result for DPWM 2

Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 2: ACOMP_C_EN – Enables Analog Comparator C result for DPWM 2

Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 1: ACOMP_B_EN – Enables Analog Comparator B result for DPWM 2

Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 0: ACOMP_A_EN – Enables Analog Comparator A result for DPWM 2 Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

4.2.23 DPWM 2 Fault AB Detection Register (DPWM2FLTABDET)

Address 0x00130058

Bit Number	14	13	12	11	10
Bit Name	DCOMP3_EN	DCOMP2_EN	DCOMP1_EN	DCOMP0_EN	FAULT3_EN
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	9	8	7	6	5
Bit Name	FAULT2_EN	FAULT1_EN	FAULT0_EN	ACOMP_G_EN	ACOMP_F_EN
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	4	3	2	1	0
Bit Name	ACOMP_E_EN	ACOMP_D_EN	ACOMP_C_EN	ACOMP_B_EN	ACOMP_A_EN
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit 14: DCOMP3_EN – Enables Digital Comparator 3 result for DPWM 2 Fault AB Detection

0 = Digital Comparator 3 disabled for Fault AB detection (Default)

1 = Digital Comparator 3 enabled for Fault AB detection

Bit 13: DCOMP2_EN – Enables Digital Comparator 2 result for DPWM 2 Fault AB Detection

0 = Digital Comparator 2 disabled for Fault AB detection (Default)

1 = Digital Comparator 2 enabled for Fault AB detection

Bit 12: DCOMP1_EN – Enables Digital Comparator 1 result for DPWM 2 Fault AB Detection

0 = Digital Comparator 1 disabled for Fault AB detection (Default)

1 = Digital Comparator 1 enabled for Fault AB detection

Bit 11: DCOMP0_EN – Enables Digital Comparator 0 result for DPWM 2 Fault AB Detection

0 = Digital Comparator 0 disabled for Fault AB detection (Default)

1 = Digital Comparator 0 enabled for Fault AB detection

Bit 10: FAULT3_EN – Enables FAULT[3] pin for DPWM 2 Fault AB detection

0 = External Fault pin disabled for Fault AB detection (Default)

1 = External Fault pin enabled for Fault AB detection

Bit 9: FAULT2_EN – Enables FAULT[2] pin for DPWM 2 Fault AB detection

0 = External Fault pin disabled for Fault AB detection (Default)

1 = External Fault pin enabled for Fault AB detection

Bit 8: FAULT1_EN – Enables FAULT[1] pin for DPWM 2 Fault AB detection

0 = External Fault pin disabled for Fault AB detection (Default)

1 = External Fault pin enabled for Fault AB detection

Bit 7: FAULT0_EN – Enables FAULT[0] pin for DPWM 2 Fault AB detection

0 = External Fault pin disabled for Fault AB detection (Default)

1 = External Fault pin enabled for Fault AB detection

Bit 6: ACOMP_G_EN – Enables Analog Comparator G result for DPWM 2

Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 5: ACOMP_F_EN – Enables Analog Comparator F result for DPWM 2 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 4: ACOMP_E_EN – Enables Analog Comparator E result for DPWM 2 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 3: ACOMP_D_EN – Enables Analog Comparator D result for DPWM 2 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 2: ACOMP_C_EN – Enables Analog Comparator C result for DPWM 2 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 1: ACOMP_B_EN – Enables Analog Comparator B result for DPWM 2 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 0: ACOMP_A_EN – Enables Analog Comparator A result for DPWM 2 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

4.2.24 DPWM 2 Fault Detection Register (DPWM2FAULTDET)

Address 0x0013005C

Bit Number	30	29	28
Bit Name	PWMB_DCOMP3_EN	PWMB_DCOMP2_EN	PWMB_DCOMP1_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	27	26	25
Bit Name	PWMB_DCOMP0_EN	PWMB_FAULT3_EN	PWMB_FAULT2_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	24	23	22
Bit Name	PWMB_FAULT1_EN	PWMB_FAULT0_EN	PWMB_ACOMP_G_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	21	20	19
Bit Name	PWMB_ACOMP_F_EN	PWMB_ACOMP_E_EN	PWMB_ACOMP_D_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	18	17	16
Bit Name	PWMB_ACOMP_C_EN	PWMB_ACOMP_B_EN	PWMB_ACOMP_A_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	15	14
Bit Name	RESERVED	PWMA_DCOMP3_EN
Access	-	R/W
Default	0	0

Bit Number	13	12	11
Bit Name	PWMA_DCOMP2_EN	PWMA_DCOMP1_EN	PWMA_DCOMP0_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	10	9
Bit Name	PWMA_FAULT3_EN	PWMA_FAULT2_EN
Access	R/W	R/W
Default	0	0

Bit Number	8	7	6
Bit Name	PWMA_FAULT1_EN	PWMA_FAULT0_EN	PWMA_ACOMP_G_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	5	4	3
Bit Name	PWMA_ACOMP_F_EN	PWMA_ACOMP_E_EN	PWMA_ACOMP_D_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	2	1	0
Bit Name	PWMA_ACOMP_C_EN	PWMA_ACOMP_B_EN	PWMA_ACOMP_A_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit 30: PWMB_DCOMP3_EN – Enables Digital Comparator 3 result for DPWM 2 PWM-B Fault Detection

0 = Digital Comparator 3 disabled for fault detection (Default)

1 = Digital Comparator 3 enabled for fault detection

Bit 29: PWMB_DCOMP2_EN – Enables Digital Comparator 2 result for DPWM 2 PWM-B Fault Detection

0 = Digital Comparator 2 disabled for fault detection (Default)

1 = Digital Comparator 2 enabled for fault detection

Bit 28: PWMB_DCOMP1_EN – Enables Digital Comparator 1 result for DPWM 2 PWM-B Fault Detection

0 = Digital Comparator 1 disabled for fault detection (Default)

1 = Digital Comparator 1 enabled for fault detection

Bit 27: PWMB_DCOMP0_EN – Enables Digital Comparator 0 result for DPWM 2 PWM-B Fault Detection

0 = Digital Comparator 0 disabled for fault detection (Default)

1 = Digital Comparator 0 enabled for fault detection

Bit 26: PWMB_FAULT3_EN – Enables FAULT[3] pin for DPWM 2 PWM-B Fault Detection

0 = External Fault pin disabled for fault detection (Default)

1 = External Fault pin enabled for fault detection

Bit 25: PWMB_FAULT2_EN – Enables FAULT[2] pin for DPWM 2 PWM-B Fault Detection

0 = External Fault pin disabled for fault detection (Default)

1 = External Fault pin enabled for fault detection

Bit 24: PWMB_FAULT1_EN – Enables FAULT[1] pin for DPWM 2 PWM-B Fault Detection

0 = External Fault pin disabled for fault detection (Default)

1 = External Fault pin enabled for fault detection

Bit 23: PWMB_FAULT0_EN – Enables FAULT[0] pin for DPWM 2 PWM-B Fault Detection

0 = External Fault pin disabled for fault detection (Default)

1 = External Fault pin enabled for fault detection

Bit 22: PWMB_ACOMP_G_EN – Enables Analog Comparator G result for DPWM 2 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 21: PWMB_ACOMP_F_EN – Enables Analog Comparator F result for DPWM 2 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 20: PWMB_ACOMP_E_EN – Enables Analog Comparator E result for DPWM 2 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 19: PWMB_ACOMP_D_EN – Enables Analog Comparator D result for DPWM 2 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 18: PWMB_ACOMP_C_EN – Enables Analog Comparator C result for DPWM 2 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 17: PWMB_ACOMP_B_EN – Enables Analog Comparator B result for DPWM 2 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 16: PWMB_ACOMP_A_EN – Enables Analog Comparator A result for DPWM 2 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)
1 = Analog Comparator result enabled for fault detection

Bit 15: RESERVED – Unused bit

Bit 14: PWMA_DCOMP3_EN – Enables Digital Comparator 3 result for DPWM 2 PWM-A Fault Detection

0 = Digital Comparator 3 disabled for fault detection (Default)
1 = Digital Comparator 3 enabled for fault detection

Bit 13: PWMA_DCOMP2_EN – Enables Digital Comparator 2 result for DPWM 2 PWM-A Fault Detection

0 = Digital Comparator 2 disabled for fault detection (Default)
1 = Digital Comparator 2 enabled for fault detection

Bit 12: PWMA_DCOMP1_EN – Enables Digital Comparator 1 result for DPWM 2 PWM-A Fault Detection

0 = Digital Comparator 1 disabled for fault detection (Default)
1 = Digital Comparator 1 enabled for fault detection

Bit 11: PWMA_DCOMP0_EN – Enables Digital Comparator 0 result for DPWM 2 PWM-A Fault Detection

0 = Digital Comparator 0 disabled for fault detection (Default)
1 = Digital Comparator 0 enabled for fault detection

Bit 10: PWMA_FAULT3_EN – Enables FAULT[3] pin for DPWM 2 PWM-A Fault Detection

0 = External Fault pin disabled for fault detection (Default)
1 = External Fault pin enabled for fault detection

Bit 9: PWMA_FAULT2_EN – Enables FAULT[2] pin for DPWM 2 PWM-A Fault Detection

0 = External Fault pin disabled for fault detection (Default)
1 = External Fault pin enabled for fault detection

Bit 8: PWMA_FAULT1_EN – Enables FAULT[1] pin for DPWM 2 PWM-A Fault Detection

0 = External Fault pin disabled for fault detection (Default)
1 = External Fault pin enabled for fault detection

Bit 7: PWMA_FAULT0_EN – Enables FAULT[0] pin for DPWM 2 PWM-A Fault Detection

0 = External Fault pin disabled for fault detection (Default)
1 = External Fault pin enabled for fault detection

Bit 6: PWMA_ACOMP_G_EN – Enables Analog Comparator G result for DPWM 2 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)
1 = Analog Comparator result enabled for fault detection

Bit 5: PWMA_ACOMP_F_EN – Enables Analog Comparator F result for

DPWM 2 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 4: PWMA_ACOMP_E_EN – Enables Analog Comparator E result for DPWM 2 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 3: PWMA_ACOMP_D_EN – Enables Analog Comparator D result for DPWM 2 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 2: PWMA_ACOMP_C_EN – Enables Analog Comparator C result for DPWM 2 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 1: PWMA_ACOMP_B_EN – Enables Analog Comparator B result for DPWM 2 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 0: PWMA_ACOMP_A_EN – Enables Analog Comparator A result for DPWM 2 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

4.2.25 DPWM 2 IDE Detection Register (DPWM2IDEDET)

Address 0x00130060

Bit Number	6	5	4	3
Bit Name	ACOMP_G_EN	ACOMP_F_EN	ACOMP_E_EN	ACOMP_D_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit Number	2	1	0
Bit Name	ACOMP_C_EN	ACOMP_B_EN	ACOMP_A_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit 6: ACOMP_6_EN – Enables Analog Comparator G result for DPWM 2 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 5: ACOMP_5_EN – Enables Analog Comparator F result for DPWM 2 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 4: ACOMP_4_EN – Enables Analog Comparator E result for DPWM 2 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 3: ACOMP_3_EN – Enables Analog Comparator D result for DPWM 2 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 2: ACOMP_2_EN – Enables Analog Comparator C result for DPWM 2 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 1: ACOMP_1_EN – Enables Analog Comparator B result for DPWM 2 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 0: ACOMP_0_EN – Enables Analog Comparator A result for DPWM 2 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Preliminary

4.2.26 DPWM 3 Current Limit Control Register (DPWM3CLIM)

Address 0x00130064

Bit Number	16	15	14
Bit Name	ANALOG_PCM_EN	DCOMP3_EN	DCOMP2_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	13	12	11	10	9
Bit Name	DCOMP1_EN	DCOMP0_EN	RESERVED	FAULT3_EN	FAULT2_EN
Access	R/W	R/W	R	R/W	R/W
Default	0	0	0	0	0

Bit Number	8	7	6	5	4
Bit Name	FAULT1_EN	FAULT0_EN	ACOMP_G_EN	ACOMP_F_EN	ACOMP_E_EN
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	3	2	1	0
Bit Name	ACOMP_D_EN	ACOMP_C_EN	ACOMP_B_EN	ACOMP_A_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit 16: ANALOG_PCM_EN – Enables Analog Peak Current detection result for DPWM 2 Current Limit

0 = Analog Peak Current detection disabled for current limit (Default)

1 = Analog Peak Current detection enabled for current limit

Bit 15: DCOMP3_EN – Enables Digital Comparator 3 result for DPWM 3 Current Limit

0 = Digital Comparator 3 result disabled for current limit (Default)

1 = Digital Comparator 3 result enabled for current limit

Bit 14: DCOMP2_EN – Enables Digital Comparator 2 result for DPWM 3 Current Limit

0 = Digital Comparator 2 result disabled for current limit (Default)

1 = Digital Comparator 2 result enabled for current limit

Bit 13: DCOMP1_EN – Enables Digital Comparator 1 result for DPWM 3 Current Limit

0 = Digital Comparator 1 result disabled for current limit (Default)

1 = Digital Comparator 1 result enabled for current limit

Bit 12: DCOMP0_EN – Enables Digital Comparator 0 result for DPWM 3 Current Limit

0 = Digital Comparator 0 result disabled for current limit (Default)

1 = Digital Comparator 0 result enabled for current limit

Bit 11: RESERVED – Unused Bit

Bit 10: FAULT3_EN – Enables FAULT[3] pin for DPWM 3 Current Limit

0 = External Fault pin disabled for current limit (Default)

1 = External Fault pin enabled for current limit

Bit 9: FAULT2_EN – Enables FAULT[2] pin for DPWM 3 Current Limit

0 = External Fault pin disabled for current limit (Default)

1 = External Fault pin enabled for current limit

Bit 8: FAULT1_EN – Enables FAULT[1] pin for DPWM 3 Current Limit

0 = External Fault pin disabled for current limit (Default)

1 = External Fault pin enabled for current limit

Bit 7: FAULT0_EN – Enables FAULT[0] pin for DPWM 3 Current Limit

0 = External Fault pin disabled for current limit (Default)

1 = External Fault pin enabled for current limit

Bit 6: ACOMP_G_EN – Enables Analog Comparator G result for DPWM 3 Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 5: ACOMP_F_EN – Enables Analog Comparator F result for DPWM 3 Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 4: ACOMP_E_EN – Enables Analog Comparator E result for DPWM 3 Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 3: ACOMP_D_EN – Enables Analog Comparator D result for DPWM 3 Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 2: ACOMP_C_EN – Enables Analog Comparator C result for DPWM 3 Current Limit

0 = Analog Comparator result disabled for current limit (Default)

1 = Analog Comparator result enabled for current limit

Bit 1: ACOMP_B_EN – Enables Analog Comparator B result for DPWM 3 Current Limit

0 = Analog Comparator result disabled for current limit (Default)
1 = Analog Comparator result enabled for current limit

Bit 0: ACOMP_A_EN – Enables Analog Comparator A result for DPWM 3 Current Limit

0 = Analog Comparator result disabled for current limit (Default)
1 = Analog Comparator result enabled for current limit

4.2.27 DPWM 3 Fault AB Detection Register (DPWM3FLTABDET)

Address 0x00130068

Bit Number	14	13	12	11	10
Bit Name	DCOMP3_EN	DCOMP2_EN	DCOMP1_EN	DCOMP0_EN	FAULT3_EN
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	9	8	7	6	5
Bit Name	FAULT2_EN	FAULT1_EN	FAULT0_EN	ACOMP_G_EN	ACOMP_F_EN
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	4	3	2	1	0
Bit Name	ACOMP_E_EN	ACOMP_D_EN	ACOMP_C_EN	ACOMP_B_EN	ACOMP_A_EN
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit 14: DCOMP3_EN – Enables Digital Comparator 3 result for DPWM 3 Fault AB Detection

0 = Digital Comparator 3 disabled for Fault AB detection (Default)

1 = Digital Comparator 3 enabled for Fault AB detection

Bit 13: DCOMP2_EN – Enables Digital Comparator 2 result for DPWM 3 Fault AB Detection

0 = Digital Comparator 2 disabled for Fault AB detection (Default)

1 = Digital Comparator 2 enabled for Fault AB detection

Bit 12: DCOMP1_EN – Enables Digital Comparator 1 result for DPWM 3 Fault AB Detection

0 = Digital Comparator 1 disabled for Fault AB detection (Default)

1 = Digital Comparator 1 enabled for Fault AB detection

Bit 11: DCOMP0_EN – Enables Digital Comparator 0 result for DPWM 3 Fault AB Detection

0 = Digital Comparator 0 disabled for Fault AB detection (Default)

1 = Digital Comparator 0 enabled for Fault AB detection

Bit 10: FAULT3_EN – Enables FAULT[3] pin for DPWM 3 Fault AB detection

0 = External Fault pin disabled for Fault AB detection (Default)

1 = External Fault pin enabled for Fault AB detection

Bit 9: FAULT2_EN – Enables FAULT[2] pin for DPWM 3 Fault AB detection

0 = External Fault pin disabled for Fault AB detection (Default)

1 = External Fault pin enabled for Fault AB detection

Bit 8: FAULT1_EN – Enables FAULT[1] pin for DPWM 3 Fault AB detection

0 = External Fault pin disabled for Fault AB detection (Default)

1 = External Fault pin enabled for Fault AB detection

Bit 7: FAULT0_EN – Enables FAULT[0] pin for DPWM 3 Fault AB detection

0 = External Fault pin disabled for Fault AB detection (Default)

1 = External Fault pin enabled for Fault AB detection

Bit 6: ACOMP_G_EN – Enables Analog Comparator G result for DPWM 3

Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 5: ACOMP_F_EN – Enables Analog Comparator F result for DPWM 3 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 4: ACOMP_E_EN – Enables Analog Comparator E result for DPWM 3 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 3: ACOMP_D_EN – Enables Analog Comparator D result for DPWM 3 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 2: ACOMP_C_EN – Enables Analog Comparator C result for DPWM 3 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 1: ACOMP_B_EN – Enables Analog Comparator B result for DPWM 3 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

Bit 0: ACOMP_A_EN – Enables Analog Comparator A result for DPWM 3 Fault AB detection

0 = Analog Comparator result disabled for Fault AB detection (Default)

1 = Analog Comparator result enabled for Fault AB detection

4.2.28 DPWM 3 Fault Detection Register (DPWM3FAULTDET)

Address 0x0013006C

Bit Number	30	29	28
Bit Name	PWMB_DCOMP3_EN	PWMB_DCOMP2_EN	PWMB_DCOMP1_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	27	26	25
Bit Name	PWMB_DCOMP0_EN	PWMB_FAULT3_EN	PWMB_FAULT2_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	24	23	22
Bit Name	PWMB_FAULT1_EN	PWMB_FAULT0_EN	PWMB_ACOMP_G_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	21	20	19
Bit Name	PWMB_ACOMP_F_EN	PWMB_ACOMP_E_EN	PWMB_ACOMP_D_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	18	17	16
Bit Name	PWMB_ACOMP_C_EN	PWMB_ACOMP_B_EN	PWMB_ACOMP_A_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	15	14
Bit Name	RESERVED	PWMA_DCOMP3_EN
Access	-	R/W
Default	0	0

Bit Number	13	12	11
Bit Name	PWMA_DCOMP2_EN	PWMA_DCOMP1_EN	PWMA_DCOMP0_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	10	9
Bit Name	PWMA_FAULT3_EN	PWMA_FAULT2_EN
Access	R/W	R/W
Default	0	0

Bit Number	8	7	6
Bit Name	PWMA_FAULT1_EN	PWMA_FAULT0_EN	PWMA_ACOMP_G_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	5	4	3
Bit Name	PWMA_ACOMP_F_EN	PWMA_ACOMP_E_EN	PWMA_ACOMP_D_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	2	1	0
Bit Name	PWMA_ACOMP_C_EN	PWMA_ACOMP_B_EN	PWMA_ACOMP_A_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit 30: PWMB_DCOMP3_EN – Enables Digital Comparator 3 result for DPWM 3 PWM-B Fault Detection

0 = Digital Comparator 3 disabled for fault detection (Default)

1 = Digital Comparator 3 enabled for fault detection

Bit 29: PWMB_DCOMP2_EN – Enables Digital Comparator 2 result for DPWM 3 PWM-B Fault Detection

0 = Digital Comparator 2 disabled for fault detection (Default)

1 = Digital Comparator 2 enabled for fault detection

Bit 28: PWMB_DCOMP1_EN – Enables Digital Comparator 1 result for DPWM 3 PWM-B Fault Detection

0 = Digital Comparator 1 disabled for fault detection (Default)

1 = Digital Comparator 1 enabled for fault detection

Bit 27: PWMB_DCOMP0_EN – Enables Digital Comparator 0 result for DPWM 3 PWM-B Fault Detection

0 = Digital Comparator 0 disabled for fault detection (Default)

1 = Digital Comparator 0 enabled for fault detection

Bit 26: PWMB_FAULT3_EN – Enables FAULT[3] pin for DPWM 3 PWM-B Fault Detection

0 = External Fault pin disabled for fault detection (Default)

1 = External Fault pin enabled for fault detection

Bit 25: PWMB_FAULT2_EN – Enables FAULT[2] pin for DPWM 3 PWM-B Fault Detection

0 = External Fault pin disabled for fault detection (Default)

1 = External Fault pin enabled for fault detection

Bit 24: PWMB_FAULT1_EN – Enables FAULT[1] pin for DPWM 3 PWM-B Fault Detection

0 = External Fault pin disabled for fault detection (Default)

1 = External Fault pin enabled for fault detection

Bit 23: PWMB_FAULT0_EN – Enables FAULT[0] pin for DPWM 3 PWM-B Fault Detection

0 = External Fault pin disabled for fault detection (Default)

1 = External Fault pin enabled for fault detection

Bit 22: PWMB_ACOMP_G_EN – Enables Analog Comparator G result for DPWM 3 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 21: PWMB_ACOMP_F_EN – Enables Analog Comparator F result for DPWM 3 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 20: PWMB_ACOMP_E_EN – Enables Analog Comparator E result for DPWM 3 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 19: PWMB_ACOMP_D_EN – Enables Analog Comparator D result for DPWM 3 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 18: PWMB_ACOMP_C_EN – Enables Analog Comparator C result for DPWM 3 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 17: PWMB_ACOMP_B_EN – Enables Analog Comparator B result for DPWM 3 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 16: PWMB_ACOMP_A_EN – Enables Analog Comparator A result for DPWM 3 PWM-B Fault detection

0 = Analog Comparator result disabled for fault detection (Default)
1 = Analog Comparator result enabled for fault detection

Bit 15: RESERVED – Unused bit

Bit 14: PWMA_DCOMP3_EN – Enables Digital Comparator 3 result for DPWM 3 PWM-A Fault Detection

0 = Digital Comparator 3 disabled for fault detection (Default)
1 = Digital Comparator 3 enabled for fault detection

Bit 13: PWMA_DCOMP2_EN – Enables Digital Comparator 2 result for DPWM 3 PWM-A Fault Detection

0 = Digital Comparator 2 disabled for fault detection (Default)
1 = Digital Comparator 2 enabled for fault detection

Bit 12: PWMA_DCOMP1_EN – Enables Digital Comparator 1 result for DPWM 3 PWM-A Fault Detection

0 = Digital Comparator 1 disabled for fault detection (Default)
1 = Digital Comparator 1 enabled for fault detection

Bit 11: PWMA_DCOMP0_EN – Enables Digital Comparator 0 result for DPWM 3 PWM-A Fault Detection

0 = Digital Comparator 0 disabled for fault detection (Default)
1 = Digital Comparator 0 enabled for fault detection

Bit 10: PWMA_FAULT3_EN – Enables FAULT[3] pin for DPWM 3 PWM-A Fault Detection

0 = External Fault pin disabled for fault detection (Default)
1 = External Fault pin enabled for fault detection

Bit 9: PWMA_FAULT2_EN – Enables FAULT[2] pin for DPWM 3 PWM-A Fault Detection

0 = External Fault pin disabled for fault detection (Default)
1 = External Fault pin enabled for fault detection

Bit 8: PWMA_FAULT1_EN – Enables FAULT[1] pin for DPWM 3 PWM-A Fault Detection

0 = External Fault pin disabled for fault detection (Default)
1 = External Fault pin enabled for fault detection

Bit 7: PWMA_FAULT0_EN – Enables FAULT[0] pin for DPWM 3 PWM-A Fault Detection

0 = External Fault pin disabled for fault detection (Default)
1 = External Fault pin enabled for fault detection

Bit 6: PWMA_ACOMP_G_EN – Enables Analog Comparator G result for DPWM 3 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)
1 = Analog Comparator result enabled for fault detection

Bit 5: PWMA_ACOMP_F_EN – Enables Analog Comparator F result for

DPWM 3 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 4: PWMA_ACOMP_E_EN – Enables Analog Comparator E result for DPWM 3 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 3: PWMA_ACOMP_D_EN – Enables Analog Comparator D result for DPWM 3 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 2: PWMA_ACOMP_C_EN – Enables Analog Comparator C result for DPWM 3 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 1: PWMA_ACOMP_B_EN – Enables Analog Comparator B result for DPWM 3 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

Bit 0: PWMA_ACOMP_A_EN – Enables Analog Comparator A result for DPWM 3 PWM-A Fault detection

0 = Analog Comparator result disabled for fault detection (Default)

1 = Analog Comparator result enabled for fault detection

4.2.29 DPWM 3 IDE Detection Register (DPWM3IDEDET)

Address 0x00130070

Bit Number	6	5	4	3
Bit Name	ACOMP_G_EN	ACOMP_F_EN	ACOMP_E_EN	ACOMP_D_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit Number	2	1	0
Bit Name	ACOMP_C_EN	ACOMP_B_EN	ACOMP_A_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit 6: ACOMP_6_EN – Enables Analog Comparator G result for DPWM 3 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 5: ACOMP_5_EN – Enables Analog Comparator F result for DPWM 3 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 4: ACOMP_4_EN – Enables Analog Comparator E result for DPWM 3 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 3: ACOMP_3_EN – Enables Analog Comparator D result for DPWM 3 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 2: ACOMP_2_EN – Enables Analog Comparator C result for DPWM 3 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 1: ACOMP_1_EN – Enables Analog Comparator B result for DPWM 3 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

Bit 0: ACOMP_0_EN – Enables Analog Comparator A result for DPWM 3 IDE detection

0 = Analog Comparator result disabled for IDE detection (Default)

1 = Analog Comparator result enabled for IDE detection

4.2.30 HFO Fail Detect Register (HFOFAILDET)

Address 0x00130074

Bit Number	17:1	0
Bit Name	HFO_FAIL_THRESH	HFO_DETECT_EN
Access	R/W	R/W
Default	0_0000_0000_1111_1111	0

Bits 17-1: HFO_FAIL_THRESH – Configures threshold where a clear flag is used to clear a counter in the Low Frequency Oscillator domain (if LFO counter overflows, a reset will be generated), resolution of threshold equals High Frequency Oscillator period

Bit 0: HFO_DETECT_EN – Enables High Frequency Oscillator Failure Detection logic, device will be reset upon detection of an oscillator failure

0 = Disables High Frequency Oscillator Failure Detection (Default)

1 = Enables High Frequency Oscillator Failure Detection

4.2.31 LFO Fail Detect Register (LFOFAILDET)

Address 0x00130078

Bit Number	6:2	1	0
Bit Name	LFO_FAIL_THRESH	LFO_FAIL_INT_EN	LFO_DETECT_EN
Access	R/W	R/W	R/W
Default	0_0011	0	0

Bits 6-2: LFO_FAIL_THRESH – Configures threshold where a clear flag is used to clear a counter in the High Frequency Oscillator domain (if HFO counter overflows, a reset will be generated), resolution of threshold equals Low Frequency Oscillator period

Bit 1: LFO_FAIL_INT_EN – Low Frequency Oscillator Fail Interrupt Enable

0 = Disables Interrupt Generation upon LFO Failure Detection (Default)

1 = Enables Interrupt Generation upon LFO Failure Detection

Bit 0: LFO_DETECT_EN – Enables Low Frequency Oscillator Failure Detection logic, interrupt will be generated upon detection of an oscillator failure

0 = Disables Low Frequency Oscillator Failure Detection (Default)

1 = Enables Low Frequency Oscillator Failure Detection

4.2.32 IDE Control Register (IDECTRL)

Address 0013007C

Bit Number	31:24	23:16
Bit Name	DCM_LIMIT_H	DCM_LIMIT_L
Access	R/W	R/W
Default	0000_0000	0000_0000

Bit Number	15:14	13	12:0
Bit Name	RESERVED	DCM_INT_EN	IDE_KD
Access	-	R/W	R/W
Default	00	0	0_0000_0000_0000

Bits 31-24: DCM_LIMIT_H – Value added to 1-Da value to provide hysteresis for exiting DCM mode

Bits 23-16: DCM_LIMIT_L – Value subtracted from 1-Da value to provide hysteresis for entering DCM mode

Bit 15-14: RESERVED – Unused Bits

Bit 13: DCM_INT_EN – Enables Discontinuous Conduction Mode (DCM) interrupt generation based on selected Filter outputs

0 = Disables DCM Detection Interrupt (Default)

1 = Enables DCM Detection Interrupt

Bits 12-0: IDE_KD – 13-bit unsigned value used to calculate the DPWM B Pulse width when configured in IDE Mode. IDE_KD is configured in 4.9 format, with the integer portion of the KD value ranging from 0 to 15 and 9 fractional bits available for the pulse width calculation.

4.3 I2C – Serial Bus Interface

4.3.1 I2C Control Register 1 (I2CCTRL1)

Address **FFF7E400**

Bit Number	20	19	18	17
Bit Name	PRC_CALL	GRP_CMD	PEC_ENA	EXT_CMD
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit Number	16	15:8	7:1	0
Bit Name	CMD_ENA	BYTE_COUNT	SLAVE_ADDR	RW
Access	R/W	R/W	R/W	R/W
Default	0	0000_0000	000_0000	0

Bit 20: PRC_CALL – Master Process Call Message Enable

0 = Default state for all messages besides Process Call message (Default)

1 = Enables transmission of Process Call message

Bit 19: GRP_CMD – Master Group Command Message Enable

0 = Default state for all messages besides Group Command message (Default)

1 = Enables transmission of Group Command message

Bit 18: PEC_ENA – Master PEC Processing Enable

0 = Disables PEC processing (Default)

1 = Enables PEC byte transmission/reception

Bit 17: EXT_CMD – Master Extended Command Code Enable

0 = Use 1 byte for Command Code (Default)

1 = Use 2 bytes for Command Code

Bit 16: CMD_ENA – Master Command Code Enable

0 = Disables use of command code on Master initiated messages (Default)

1 = Enables use of command code on Master initiated messages

Bits 15-8: BYTE_COUNT – Indicates number of data bytes transmitted in current message. Byte count does not include any device addresses, command words or block lengths in block messages. In block messages, the I2C Interface automatically inserts the block length into the message based on the byte count setting. The firmware only needs to load the address, command words and data to be transmitted. I2C Interface supports byte writes up to 255 bytes.

Bits 7-1: SLAVE_ADDR – Specifies the address of the slave to which the current message is directed towards.

Bit 0: RW – Indicates if current Master initiated message is read operation or write operation.

- 0 = Message is a write transaction (data from Master to Slave) (Default)
- 1 = Message is a read transaction (data from Slave to Master)

4.3.2 I2C Transmit Data Buffer (I2CTXBUF)

Address FFF7E404

Bit Number	31:24	23:16	15:8	7:0
Bit Name	BYTE3	BYTE2	BYTE1	BYTE0
Access	R/W	R/W	R/W	R/W
Default	0000_0000	0000_0000	0000_0000	0000_0000

Bits 31-24: BYTE3 – Last data byte transmitted from Transmit Data Buffer

Bits 23-16: BYTE2 – Third data byte transmitted from Transmit Data Buffer

Bits 15-8: BYTE1 – Second data byte transmitted from Transmit Data Buffer

Bits 7-0: BYTE0 – First data byte transmitted from Transmit Data Buffer

4.3.3 I2C Receive Data Register (I2CRXBUF)

Address FFF7E408

Bit Number	31:24	23:16	15:8	7:0
Bit Name	BYTE3	BYTE2	BYTE1	BYTE0
Access	R	R	R	R
Default	-	-	-	-

Bits 31-24: BYTE3 – Last data byte received in Receive Data Buffer

Bits 23-16: BYTE2 – Third data byte received in Receive Data Buffer

Bits 15-8: BYTE1 – Second data byte received in Receive Data Buffer

Bits 7-0: BYTE0 – First data byte received in Receive Data Buffer

4.3.4 I2C Acknowledge Register (I2CACK)

Address FFF7E40C

Bit Number	0
Bit Name	ACK
Access	R/W
Default	0

Bit 0: ACK – Allows firmware to acknowledge or not acknowledge received data

0 = NACK received data (Default)

1 = Acknowledge received data, bit clears upon issue of ACK on I2C

Preliminary

4.3.5 I²C Status Register (I2CST)

Address FFF7E410

Bit Number	21	20	19:16	15
Bit Name	SCL_RAW	SDA_RAW	RESERVED	MASTER
Access	R	R	R	R
Default	-	-	-	-

Bit Number	14	13	12	11	10
Bit Name	LOST_ARB	BUS_FREE	UNIT_BUSY	RESERVED	SLAVE_ADDR_READY
Access	R	R	R	R	R
Default	-	-	-	-	-

Bit Number	9	8	7	6
Bit Name	CLK_HIGH_DETECTED	CLK_LOW_TIMEOUT	PEC_VALID	NACK
Access	R	R	R	R
Default	-	-	-	-

Bit Number	5	4	3	2:0
Bit Name	EOM	DATA_REQUEST	DATA_READY	RD_BYTE_COUNT
Access	R	R	R	R
Default	-	-	-	-

Bit 21: SCL_RAW – I²C Clock Pin Real Time Status

0 = I²C clock pin observed at logic level low

1 = I²C clock pin observed at logic level high

Bit 20: SDA_RAW – I²C Data Pin Real Time Status

0 = I²C data pin observed at logic level low

1 = I²C data pin observed at logic level high

Bit 19:16 Reserved – Reserved Bits

Bit 15: MASTER – Master Indicator

0 = I²C Interface in Slave Mode or Idle Mode

1 = I²C Interface in Master Mode

Bit 14: LOST_ARB – Lost Arbitration Flag

0 = Master has attained control of I²C

1 = Master has lost arbitration and control of I²C

Bit 13: BUS_FREE – I²C Free Indicator

0 = I²C processing current message

1 = I²C available for new message

Bit 12: UNIT_BUSY – I2C Busy Indicator

0 = I2C Interface is idle, ready to transmit/receive message

1 = I2C Interface is busy, processing current message

Bit 11: RESERVED – Reserved Bit**Bit 10: SLAVE_ADDR_READY** – Slave Address Ready

0 = Indicates no slave address is available for reading

1 = Slave address ready to be read from Receive Data Register (Bits 6:0)

Bit 9: CLK_HIGH_DETECTED – Clock High Detection Status

0 = No Clock High condition detected

1 = Clock High exceeded 50us during message

Bit 8: CLK_LOW_TIMEOUT – Clock Low Timeout Status

0 = No clock low timeout detected

1 = Clock low timeout detected, clock held low for greater than 35ms

Bit 7: PEC_VALID – PEC Valid Indicator

0 = Received PEC not valid (if EOM is asserted)

1 = Received PEC is valid

Bit 6: NACK – Not Acknowledge Flag Status

0 = Data transmitted has been accepted by receiver

1 = Receiver has not accepted transmitted data

Bit 5: EOM – End of Message Indicator

0 = Message still in progress or I2C in idle state.

1 = End of current message detected

Bit 4: DATA_REQUEST – Data Request Flag

0 = No data needed by I2C Interface

1 = I2C Interface request additional data. I2C clock stretching enabled to stall bus until firmware provides transmit data.

Bit 3: DATA_READY – Data Ready Flag

0 = No data available for reading by processor

1 = I2C Interface read buffer full, firmware required to read data prior to further bus activity. I2C clock stretching enabled to stall bus until data is read by firmware.

Bits 2-0: RD_BYTE_COUNT – Number of Data Bytes available in Receive Data Register

0 = No received data

1 = 1 byte received. Data located in Receive Data Register, Bits 7-0

2 = 2 bytes received. Data located in Receive Data Register, Bits 15-0

3 = 3 bytes received. Data located in Receive Data Register, Bits 23-0

4 = 4 bytes received. Data located in Receive Data Register, Bits 31-0

4.3.6 I2C Interrupt Mask Register (I2CINTM)

Address FFF7E414

Bit Number	9	8	7:6
Bit Name	CLK_HIGH_DETECT	LOST_ARB	RESERVED
Access	R/W	R/W	R
Default	1	1	-

Bit Number	5	4	3
Bit Name	EOM	SLAVE_ADDR_READY	DATA_REQUEST
Access	R/W	R/W	R/W
Default	1	1	1

Bit Number	2	1	0
Bit Name	DATA_READY	BUS_LOW_TIMEOUT	BUS_FREE
Access	R/W	R/W	R/W
Default	1	1	1

Bit 9: CLK_HIGH_DETECT – Clock High Detection Interrupt Mask

0 = Generates interrupt if clock high exceeds 50us during message

1 = Disables interrupt generation for Clock High detection (Default)

Bit 8: LOST_ARB – Lost Arbitration Interrupt Mask

0 = Generates interrupt upon assertion of Lost Arbitration flag

1 = Disables interrupt generation upon assertion of Lost Arbitration flag (Default)

Bit 7:6 Reserved – Reserved Bits

Bit 5: EOM – End of Message Interrupt Mask

0 = Generates interrupt upon assertion of End of Message flag

1 = Disables interrupt generation upon assertion of End of Message flag (Default)

Bit 4: SLAVE_ADDR_READY – Slave Address Ready Interrupt Mask

0 = Generates interrupt upon assertion of Slave Address Ready flag

1 = Disables interrupt generation upon assertion of Slave Address Ready flag (Default)

Bit 3: DATA_REQUEST – Data Request Interrupt Mask

0 = Generates interrupt upon assertion of Data Request flag

1 = Disables interrupt generation upon assertion of Data Request flag (Default)

Bit 2: DATA_READY – Data Ready Interrupt Mask

0 = Generates interrupt upon assertion of Data Ready flag

1 = Disables interrupt generation upon assertion of Data Ready flag
(Default)

Bit 1: BUS_LOW_TIMEOUT – Clock Low Timeout Interrupt Mask

0 = Generates interrupt upon assertion of Clock Low Timeout flag
1 = Disables interrupt generation upon assertion of Clock Low Timeout
flag (Default)

Bit 0: BUS_FREE – Bus Free Interrupt Mask

0 = Generates interrupt upon assertion of Bus Free flag
1 = Disables interrupt generation upon assertion of Bus Free flag (Default)

Preliminary

4.3.7 I²C Control Register 3 (I²CCTRL3)

Address FFF7E420

Bit Number	23	22	21
Bit Name	I ² C_MODE_EN	MASTER_EN	RESERVED
Access	R/W	R/W	R
Default	0	0	-

Bit Number	20	19	18	17	16
Bit Name	CLK_LO_DIS	IBIAS_B_EN	IBIAS_A_EN	SCL_DIR	SCL_VALUE
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	15	14	13	12	11:5
Bit Name	SCL_MODE	SDA_DIR	SDA_VALUE	SDA_MODE	Reserved
Access	R/W	R/W	R/W	R/W	R
Default	0	0	0	0	-

Bit Number	4	3	2	1	0
Bit Name	FAST_MODE_PLUS	FAST_MODE	BUS_LO_INT_EDGE	RESERVED	RESET
Access	R/W	R/W	R/W	R	R/W
Default	0	0	0	-	0

Bit 23: I²C_MODE_EN – I²C Mode Enable

0 = Enables I²C interface capability (Default)

1 = Enables I²C interface capability

Bit 22: MASTER_EN – I²C Master Enable

0 = Disables I²C Master capability (Default)

1 = Enables I²C Master capability

Bit 21: Reserved – Reserved Bit

Bit 20: CLK_LO_DIS – Clock Low Timeout Disable

0 = Clock Low Timeout Enabled (Default)

1 = Clock Low Timeout Disabled

Bit 19: IBIAS_B_EN – I²C Current Source B Control

0 = Disables Current Source for I²C address detection thru ADC (Default)

1 = Enables Current Source for I²C address detection thru ADC

Bit 18: IBIAS_A_EN – I²C Current Source A Control

0 = Disables Current Source for I2C address detection thru ADC (Default)
1 = Enables Current Source for I2C address detection thru ADC

Bit 17: SCL_DIR – Configures direction of I2C clock pin in GPIO mode

0 = I2C clock pin configured as output (Default)
1 = I2C clock pin configured as input

Bit 16: SCL_VALUE – Configures output value of I2C clock pin in GPIO Mode

0 = I2C clock pin driven low in GPIO Mode (Default)
1 = I2C clock pin driven high in GPIO Mode

Bit 15: SCL_MODE – Configures mode of I2C Clock pin

0 = I2C clock pin configured in functional mode (Default)
1 = I2C clock pin configured as GPIO

Bit 14: SDA_DIR – Configures direction of I2C data pin in GPIO mode

0 = I2C data pin configured as output (Default)
1 = I2C data pin configured as input

Bit 13: SDA_VALUE – Configures output value of I2C data pin in GPIO Mode

0 = I2C data pin driven low in GPIO Mode (Default)
1 = I2C data pin driven high in GPIO Mode

Bit 12: SDA_MODE – Configures mode of I2C Data pin

0 = I2C data pin configured in functional mode (Default)
1 = I2C data pin configured as GPIO

Bit 11:5: Reserved – Reserved Bits

Bit 4: FAST_MODE_PLUS – Fast Mode Plus Enable

0 = Standard 100 KHz mode enabled (Default)
1 = Fast Mode Plus enabled (1MHz operation on I2C)

Bit 3: FAST_MODE – Fast Mode Enable

0 = Standard 100 KHz mode enabled (Default)
1 = Fast Mode enabled (400KHz operation on I2C)

Bit 2: BUS_LO_INT_EDGE – Clock Low Timeout Interrupt Edge Select

0 = Interrupt generated on rising edge of clock low timeout (Default)
1 = Interrupt generated on falling edge of clock low timeout

Bit 1: Reserved – Reserved Bit

Bit 0: RESET – I2C Interface Synchronous Reset

0 = No reset of internal state machines (Default)
1 = Control state machines are reset to initial states

4.4 SPI – Serial Peripheral Interface

4.4.1 SPI Control Register (*SPICTRL*) Address FFF7E800

Bit Number	23:21
Bit Name	CLKRATE
Access	R/W
Default	000

Bit Number	20:16	15:11	10:7	6	5
Bit Name	FRMLEN	RXCNT	TXCNT	WRSTORE	WRSTART
Access	R/W	R/W	R/W	R/W	R/W
Default	00000	00000	0000	0	0

Bit Number	4	3	2	1	0
Bit Name	POL	PHA	INTEN	MODE	SPIEN
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit 23:21: CLKRATE – Master clock rate relative to ICLK

0 = SCK is ICLK/2 (Default)

1 = SCK is ICLK/4

2 = SCK is ICLK/8

3 = SCK is ICLK/16

Bit 20:16: FRMLEN – Sets the number of messages (TXCNT + RXCNT) to hold CS low.

Bit 15:11: RXCNT – Sets the number bytes to receive after TXCNT bytes have been transmitted

Bit 10:7: TXCNT – Sets the bytes to transmit from the SPITX registers

Bit 6: WRSTORE – Places or discards data received during TXCNT

0 = Data received during TXCNT discarded (Default)

1 = Data received during TXCNT placed in RXBUF

Bit 5: WRSTART - Sets which WRREG initiates transfer

0 = Write to SPITX-0 starts message transfer (Default)

1 = Write to SPITX-1 starts message transfer

Bit 4: POL – The polarity bit, together with the phase bit, determines the transfer-mode.

Bit 3: PHA – The phase bit, together with the polarity bit, determines the transfer-mode.

Bit 2: INTEN – Enable interrupt generation to the CPU

0 = Disabled (Default)

1 = Enabled

Bit 1: MODE – Configures SPI mode

0 = Master Mode (Default)

1 = Slave mode

Bit 0: SPIEN – Enable for SPI Module

0 = Disabled (Default)

1 = Enabled

4.4.2 SPI Status Register (SPISTAT)

Address FFF7E804

Bit Number	7:3	2	1	0
Bit Name	FRMCNT	WRCOL	BUSY	SPIF
Access	R	R	R	R
Default	-	-	-	-

Bit 12:4: FRMCNT – Indicates the number of messages remaining in the FRMLEN before SCS will go inactive.

Bit 2: WCOL – SPI interface is busy

Bit 1: BUSY – SPI interface is busy

Bit 0: SPIF – SPI Flag, set when current message is complete. Write a ‘1’ to clear

4.4.3 SPI Pin Function Register (SPIFUNC)

Address FFF7E808

Bit Number	3	2	1	0
Bit Name	MISO	MOSI	SCS	SCK
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit 3: MISO

0=Functional Mode (default)

1=GPIO Mode

Bit 2: MOSI

0=Functional Mode (default)

1=GPIO Mode

Bit 1: SCS

0=Functional Mode (default)
 1=GPIO Mode

Bit 0: SCK

0=Functional Mode (default)
 1=GPIO Mode

4.4.4 SPI Pin Direction Register (*SPIDIR*)

Address FFF7E80C

Bit Number	3	2	1	0
Bit Name	MISO	MOSI	SCS	SCK
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit 3: MISO

0=Output in GPIO Mode (default)
 1=Input in GPIO Mode

Bit 2: MOSI

0=Output in GPIO Mode (default)
 1=Input in GPIO Mode

Bit 1: SCS

0=Output in GPIO Mode (default)
 1=Input in GPIO Mode

Bit 0: SCK

0=Output in GPIO Mode (default)
 1=Input in GPIO Mode

4.4.5 SPI Pin GP Out Register (*SPIGPOUT*)

Address FFF7E810

Bit Number	3	2	1	0
Bit Name	MISO	MOSI	SCS	SCK
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit 3: MISO

0= Pin driven to 0 when configured as an output in GPIO Mode (default)
 1= Pin driven to 1 when configured as an output in GPIO Mode

Bit 2: MOSI

0= Pin driven to 0 when configured as an output in GPIO Mode (default)
 1= Pin driven to 1 when configured as an output in GPIO Mode

Bit 1: SCS

0= Pin driven to 0 when configured as an output in GPIO Mode (default)
 1= Pin driven to 1 when configured as an output in GPIO Mode

Bit 0: SCK

0= Pin driven to 0 when configured as an output in GPIO Mode (default)
 1= Pin driven to 1 when configured as an output in GPIO Mode

4.4.6 SPI Pin GP In Register (SPIGPIN)**Address FFF7E814**

Bit Number	3	2	1	0
Bit Name	MISO	MOSI	SCS	SCK
Access	R	R	R	R
Default	-	-	-	-

Bit 3: MISO

0= Pin Value is 0
 1= Pin Value is 1

Bit 2: MOSI

0= Pin Value is 0
 1= Pin Value is 1

Bit 1: SCS

0= Pin Value is 0
 1= Pin Value is 1

Bit 0: SCK

0= Pin Value is 0
 1= Pin Value is 1

4.4.7 SPI TX Buffer Register 0 (SPITX0)**Address FFF7E818**

Bit Number	31:0
Bit Name	DATA
Access	R/W

Default	0
----------------	---

Bit 31-0: DATA – First 32-bit word to be transmitted in SPI-Master mode. Only 32-bit word to be transmitted in SPI-Slave mode.

4.4.8 SPI TX Buffer Register 1 (SPITX1)

Address FFF7E81C

Bit Number	31:0
Bit Name	DATA
Access	R/W
Default	0

Bits 31-0: DATA – Second 32-bit word to be transmitted in SPI-Master mode. Not used in SPI-Slave Mode.

4.4.9 SPI Read Buffer Register 0 (SPIRX0)

Address FFF7E820

Bit Number	31:0
Bit Name	DATA
Access	R
Default	-

Bits 31-0: DATA – First 32-bit word received in SPI-Master/Slave mode.

4.4.10 SPI Read Buffer Register 1 (SPIRX1)

Address FFF7E824

Bit Number	31:0
Bit Name	DATA
Access	R
Default	-

Bits 31-0: DATA – Second 32-bit word received in SPI-Master mode. Not used in SPI-Slave Mode.

4.4.11 SPI Read Buffer Register 2 (SPIRX2)

Address FFF7E828

Bit Number	31:0
Bit Name	DATA
Access	R
Default	-

Bits 31-0: DATA – Third 32-bit word received in SPI-Master mode. Not used in SPI-Slave Mode.

4.4.12 SPI Read Buffer Register 3 (SPIRX3)

Address FFF7E82C

Bit Number	31:0
Bit Name	DATA
Access	R
Default	-

Bits 31-0: DATA – Fourth 32-bit word received in SPI-Master mode. Not used in SPI-Slave Mode.

4.5 UART Registers

4.5.1 UART Control Register 0 (UARTCTRL0)

Address FFF7EC00 – UART 0 Control Register 0

Address FFF7ED00 – UART 1 Control Register 0

Bit Number	7	6	5
Bit Name	STOP	PARITY	PARITY_ENA
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	4	3	2:0
Bit Name	SYNC_MODE	ADDR_MODE	DATA_SIZE
Access	R/W	R/W	R/W
Default	0	0	000

Bit 7: STOP – Configures stop bits for each frame
 0 = One STOP bit included in each frame (Default)
 1 = Two STOP bits included in each frame

Bit 6: PARITY – Sets odd or even parity
 0 = Odd parity (Default)
 1 = Even parity

Bit 5: PARITY_ENA - Enables parity transmission
 0 = No parity bit included in each frame (Default)
 1 = One parity bit included in each frame

Bit 4: SYNC_MODE – Selects between Synchronous mode and Asynchronous mode
 0 = Synchronous (Default)
 1 = Asynchronous

Bit 3: ADDR_MODE – Selects between Idle and Address Bit Mode
 0 = IDLE Line mode with no Address bit (Default)
 1 = Address Bit mode with one Address bit

Bits 2-0: DATA_SIZE – Determines the TX and RX byte size
 000 = 1 bit of data (Default)
 001 = 2 bit of data
 010 = 3 bits of data
 011 = 4 bits of data
 100 = 5 bits of data
 101 = 6 bits of data
 110 = 7 bits of data
 111 = 8 bits of data

4.5.2 UART Receive Status Register (UARTRXST)

Address FFF7EC04 – UART 0 Receive Status Register

Address FFF7ED04 – UART 1 Receive Status Register

Bit Number	4	3	2	1	0
Bit Name	RX_IDLE	SLEEP	RX_RDY	RX_WAKE	RX_ENA
Access	R	R/W	R	R	R/W
Default	-	0	-	-	0

Bit 4: RX_IDLE –RX Idle status bit

0 = Not in Rx Idle State

1 = Rx Idle detected

Bit 3: SLEEP – Sleep Mode Configuration

0 = Sleep Mode disabled (Default)

1 = Sleep Mode enabled

Bit 2: RX_RDY – UART Receiver ready status bit

0 = UART Receiver not ready

1 = UART Receiver ready

Bit 1: RX_WAKE – UART Receiver wake status bit

0 = UART Receiver has not entered wakeup state

1 = UART Receiver has entered wakeup state

Bit 0: RX_ENA – Turns on UART Receiver

0 = UART Receiver disabled (Default)

1 = UART Receiver enabled

4.5.3 UART Transmit Status Register (UARTTXST)

Address FFF7EC08 – UART 0 Transmit Status Register

Address FFF7ED08 – UART 1 Transmit Status Register

Bit Number	7	6	5:4
Bit Name	CONTINUE	LOOPBACK	RESERVED
Access	R/W	R/W	-
Default	0	0	00

Bit Number	3	2	1	0
Bit Name	TX_EMPTY	TX_RDY	TX_WAKE	TX_ENA
Access	R	R	R/W	R/W
Default	-	-	0	0

Bit 7: CONTINUE – Configure operation in suspend mode

0 = Stop transmitting on suspend (Default)

1 = Continue transmitting after initiation of suspend

Bit 6: LOOPBACK – Loopback Mode Configuration

0 = Normal mode (Default)

1 = Loopback Mode

Bit 5-4: RESERVED – Unused bits – Default to 00

Bit 3: TX_EMPTY – Transmit buffer status

0 = Transmit buffer is not empty

1 = Transmit buffer is empty

Bit 2: TX_RDY – Transmitter Ready

0 = UART Transmitter is not ready

1 = UART Transmitter is ready to transmit data

Bit 1: TX_WAKE – TX wake control bit

0 = UART Transmitter Wakeup disabled (Default)

1 = UART Transmitter Wakeup enabled

Bit 0: TX_ENA – Turns on TX module

0 = UART Transmitter Disabled (Default)

1 = UART Transmitter Enabled

4.5.4 UART Control Register 3 (UARTCTRL3)

Address FFF7EC0C – UART 0 Control Register 3

Address FFF7ED0C – UART 1 Control Register 3

Bit Number	7	6	5	4
Bit Name	SW_RESET	POWERDOWN	CLOCK	RX_INT_ENA
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit Number	3	2	1	0
Bit Name	TX_INT_ENA	WAKEUP_INT_ENA	BRKDT_INT_ENA	ERR_INT_ENA
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit 7: SW_RESET – Software reset for UART Transmitter/Receiver

0 = Enables Software Reset (Default)

1 = Disables Software Reset

Bit 6: POWERDOWN – Power-down Transmitter/Receiver Control

0 = Disables Power-down mode (Default)

1 = Enables Power-down mode

Bit 5: CLOCK_ENA – UART Clock Select

0 = Selects external clock (Default)

1 = Selects internal clock

Bit 4: RX_INT_ENA – Enables the interrupts from UART Receiver

0 = Disables interrupts from UART Receiver (Default)

1 = Enables interrupts from UART Receiver

Bit 3: TX_INT_ENA – Enables the interrupts from UART Transmitter

0 = Disables interrupts from UART Transmitter (Default)

1 = Enables interrupts from UART Transmitter

Bit 2: WAKEUP_INT_ENA – Enables the wakeup interrupt from UART

0 = Disables Wakeup Interrupt (Default)

1 = Enables Wakeup Interrupt

Bit 1: BRKDT_INT_ENA – Enables the Broken Circuit interrupt from UART Receiver

0 = Disables Broken Circuit Interrupt (Default)

1 = Enables Broken Circuit Interrupt

Bit 0: ERR_INT_ENA – Enables UART Receiver Error Interrupt

0 = Disables UART Receiver Error Interrupt (Default)
 1 = Enables UART Receiver Error Interrupt

Bit Number	3	2	1	0
Bit Name	PARITY_ERR	WAKEUP_INT	BRKDT_INT	RX_ERR
Access	R	R	R	R
Default	-	-	-	-

Bit Number	7	6	5	4
Bit Name	BUS_BUSY	RESERVED	FRAME_ERR	OVERRUN_ERR
Access	R	-	R	R
Default	-	0	-	-

4.5.5 *UART Interrupt Status Register (UARTINTST)*

Address FFF7EC10 – UART 0 Interrupt Status Register
Address FFF7ED10 – UART 1 Interrupt Status Register

Bit 7: BUS_BUSY – UART Receiver Busy Indicator

- 0 = UART Receiver ready to accept new frame
- 1 = UART Receiver currently processing message

Bit 6: RESERVED – Unused bit – Default to 0**Bit 5: FRAME_ERR** – UART Receiver Framing Error

- 0 = No framing error found within incoming data message
- 1 = Indicates the incoming data message had a framing error

Bit 4: OVERRUN_ERR – UART Receiver Buffer Overflow

- 0 = No overflow condition found in receive buffer
- 1 = Indicates the receive buffer has overflowed

Bit 3: PARITY_ERR – UART Receiver Parity Error

- 0 = No parity error found on the incoming data message
- 1 = Indicates a parity error found on the incoming data message

Bit 2: WAKEUP_INT – UART Receiver Wakeup Interrupt

- 0 = No Wakeup Interrupt received from UART Receiver
- 1 = Wakeup Interrupt received from UART Receiver

Bit 1: BRKDT_INT – UART Receiver Broken Circuit Interrupt

- 0 = No Broken Circuit interrupt received from UART Receiver
- 1 = Indicates a Broken Circuit interrupt received from UART Receiver

Bit 0: RX_ERR – UART Receiver Error

- 0 = No UART Receiver Errors detected
- 1 = Frame Error or Overrun error or Parity Error or Broken Circuit error received from UART Receiver

4.5.6 UART Baud Divisor High Byte Register (UARTHBAUD)

Address FFF7EC14 – UART 0 Baud Divisor High Byte Register

Address FFF7ED14 – UART 1 Baud Divisor High Byte Register

Bit Number	7:0
Bit Name	BAUD_DIV_H
Access	R/W
Default	0000_0000

Bits 7-0: BAUD_DIV_H - Sets the high byte of the 24 bit baud rate selector

4.5.7 UART Baud Divisor Middle Byte Register (UARTMBAUD)

Address FFF7EC18 – UART 0 Baud Divisor Middle Byte Register

Address FFF7ED18 – UART 1 Baud Divisor Middle Byte Register

Bit Number	7:0
Bit Name	BAUD_DIV_M
Access	R/W
Default	0000_0000

Bits 7-0: BAUD_DIV_M - Sets the middle byte of the 24 bit baud rate selector

4.5.8 UART Baud Divisor Low Byte Register (UARTLBAUD)

Address FFF7EC1C – UART 0 Baud Divisor Low Byte Register

Address FFF7ED1C – UART 1 Baud Divisor Low Byte Register

Bit Number	7:0
Bit Name	BAUD_DIV_L
Access	R/W
Default	0000_0000

Bits 7-0: BAUD_DIV_L - Sets the low byte of the 24 bit baud rate selector

4.5.9 UART Receive Buffer (UARTRXBUF)

Address FFF7EC24 – UART 0 Receive Buffer

Address FFF7ED24 – UART 1 Receive Buffer

Bit Number	7:0
Bit Name	RXDAT
Access	R
Default	-

Bits 7-0: RXDAT – Contains the last data byte received from the UART Receiver

Preliminary

4.5.10 UART Transmit Buffer (UARTTXBUF)

Address FFF7EC28 – UART 0 Transmit Buffer

Address FFF7ED28 – UART 1 Transmit Buffer

Bit Number	7:0
Bit Name	TXDAT
Access	R/W
Default	0000_0000

Bits 7-0: TXDAT – Contains the data byte to be transmitted by the UART Transmitter

4.5.11 UART I/O Control Register (UARTIOCTRLSCLK, UARTIOCTRLRX, UARTIOCTRLTX)

Address FFF7EC2C – UART 0 I/O (SCLK) Control Register

Address FFF7ED2C – UART 1 I/O (SCLK) Control Register

Address FFF7EC30 – UART 0 I/O (RX) Control Register

Address FFF7ED30 – UART 1 I/O (RX) Control Register

Address FFF7EC34 – UART 0 I/O (TX) Control Register

Address FFF7ED34 – UART 1 I/O (TX) Control Register

Bit Number	3	2	1	0
Bit Name	DATA_IN	DATA_OUT	IO_FUNC	IO_DIR
Access	R	R/W	R/W	R/W
Default	-	0	0	0

Bit 3: DATA_IN – Data received from pin when configured as GPIO

Bit 2: DATA_OUT – Data transmitted to pin when configured as GPIO

Bit 1: IO_FUNC – Selects the function for UART pins

0 = GPIO mode (Default)

1 = Baud Clock for SCLK, Normal operation for SCI_RX/SCI_TX

Bit 0: IO_DIR – Pin direction when configured as GPIO

0 = Input (Default)

1 = Output

4.5.12 UART Baud Divisor Sub Bits Register (UARTSBAUD)

Address FFF7EC38 – UART 0 Baud Divisor Sub Bits Register

Address FFF7ED38 – UART 1 Baud Divisor Sub Bits Register

Bit Number	2:0
Bit Name	BAUD_SUB

Access	R/W
Default	000

Bit 2-0: BAUD_SUB – Each LSB adds one ICLK period to the baud period calculated via the values programmed in the UARTHBAUD, UARTRMBAUD, and UARTRLBAUD registers.

4.5.13 UART RX Control Register 4 (UARTRXCTRL4)

Address FFF7EC3C – UART 0 RX Control Register 4

Address FFF7ED3C – UART 1 RX Control Register 4

Bit Number	7:6	5	4:3
Bit Name	RX_CENTER_SAMPLE_EN	RX_CAL_CONTINUOUS_EN	RX_CAL_MODE_BIT_WIDTH
Access	R/W	R/W	R/W
Default	00	0	00

Bit Number	2	1	0
Bit Name	RX_CAL_MODE_EN	RESERVED	RX_SYNC_ON_START_EN
Access	R/W	R	R/W
Default	0	-	0

Bit 7-6: RX_CENTER_SAMPLE_EN – Sample position for the UART RX

00 = Takes 3 samples to the right of the data eye (Default)

01 = Takes 3 samples in the center of the data eye

10 = Takes 3 samples to the left of the data eye

11 = Reserved

Bit 5: RX_CAL_CONTINUOUS_EN – Continuously captures baud pulses

0 = Baud pulses will not be captured without a low to high toggle of the RX_CAL_MODE_EN bit. (Default)

1 = Baud pulses will continue to be captured and the updated values will be written to the UARTRXMBAUD, UARTRXLBAUD, and UARTRXSBAUD registers.

Bit 4-3: RX_CAL_MODE_BIT_WIDTH – Sets the maximum number of baud periods a pulse (transition on the RX line of 1->0->1 or 0->1->0) can span and still be recorded in the UARTRXMBAUD, UARTRXLBAUD, and UARTRXSBAUD registers. The CAL mode feature helps refine the baud period programmed in the UARTHBAUD, UARTRMBAUD, UARTRLBAUD, and UARTRXSBAUD registers.

00 = Captures a low pulse (1->0->1) that spans 1 baud period (Default)

01 = Captures a low pulse (1->0->1) that spans 1-4 baud periods

10 = Captures a low pulse (1->0->1) that spans 1-12 baud periods

11 = Captures a low/high pulse that spans 1 baud period

Bit 2: RX_CAL_MODE_EN – Enables the capture feature of the UART.

Recorded pulses are stored in the UARTRXMBAUD, UARTRXLBAUD, and UARTRXSBAUD registers.

0 = Disables the capture features of the UART (Default)

1 = Enables the capture feature of the UART

Bit 1: RESERVED – Unused Bit

Bit 0: RX_SYNC_ON_START_EN – Enables the sync on start feature of the UART RX. Set RX_INDEP_BAUD_EN to ‘1’ and the program the UARTRXMBAUD, UARTRXLBAUD, and UARTRXSBAUD registers with the desired communication speed to utilize this feature.

0 = Start bit is detected based on the free running TX baud rate counter.
(Default)

1 = Start bit immediately detected.

4.5.14 UART RX Control Register 5 (UARTRXCTRL5)

Address FFF7EC40 – UART 0 RX Control Register 5

Address FFF7ED40 – UART 1 RX Control Register 5

Bit Number	1	0
Bit Name	RX_OVERSAMPLE_ERR	RX_INDEP_BAUD_EN
Access	R	R/W
Default	0	0

Bit 1: RX_OVERSAMPLE_ERR – Indicates when the 3 data samples taken in the eye of the transmission are not identical.

0 = All sampled bits are identical

1 = Sampled bits are not identical

Bit 0: RX_INDEP_BAUD_EN – UART RX independent baud rate enabled

0 = Universal baud rate registers are used (UARTHBAUD, UARTRXMBAUD, and UARTRXLBAUD) to program both the TX and RX baud rates. One counter is used for both the TX and RX; therefore, sync on start mode must be disabled. (Default)

1 = UART RX baud rate is programmed by the UARTRXMBAUD, UARTRXLBAUD, and UARTRXSBAUD registers. UART TX baud rate is programmed by the UARTHBAUD, UARTRXMBAUD, UARTRXLBAUD, and UARTSBAUD registers. Two independent counters are used for the TX and RX; therefore, sync on start mode can be enabled.

4.5.15 UART RX Baud Divisor Middle Byte Register (UARTRXMBAUD)

Address FFF7EC44 – UART 0 RX Baud Divisor Middle Byte Register

Address FFF7ED44 – UART 1 RX Baud Divisor Middle Byte Register

Bit Number	7:0
Bit Name	RX_M_BAUD
Access	R/W
Default	0000_0000

Bits 7-0: RX_M_BAUD – Middle byte of the 16-bit RX baud rate selector.

This is a dual purpose register.

When RX_INDEP_BAUD_EN = 0 and RX_CAL_MODE_EN = 1 this register is used to read the middle byte of the measured input baud pulse width.

When RX_INDEP_BAUD_EN = 1 this register is used to program the middle byte of the 16-bit RX baud rate selector.

4.5.16 UART RX Baud Divisor Low Byte Register (UARTRXLBAUD)

Address FFF7EC48 – UART 0 RX Baud Divisor Low Byte Register

Address FFF7ED48 – UART 1 RX Baud Divisor Low Byte Register

Bit Number	7:0
Bit Name	RX_L_BAUD
Access	R/W
Default	0000_0000

Bits 7-0: RX_L_BAUD – Low byte of the 16-bit RX baud rate selector.

This is a dual purpose register.

When RX_INDEP_BAUD_EN = 0 and RX_CAL_MODE_EN = 1 this register is used to read the low byte of the measured input baud pulse width.

When RX_INDEP_BAUD_EN = 1 this register is used to program the low byte of the 16-bit RX baud rate selector.

4.5.17 UART RX Baud Divisor Sub Bits Register (UARTRXSBAUD)

Address FFF7EC4C – UART 0 RX Baud Divisor Sub Bits Register

Address FFF7ED4C – UART 1 RX Baud Divisor Sub Bits Register

Bit Number	2:0
Bit Name	RX_S_BAUD
Access	R/W
Default	000

Bit 2-0: RX_S_BAUD – Each LSB adds one ICLK period to the baud period calculated via the values programmed in the UARTRXMBAUD and UARTRXLBAUD registers.

This is a dual purpose register.

When RX_INDEP_BAUD_EN = 0 and RX_CAL_MODE_EN = 1 this register is used to read the sub bits of the measured input baud pulse width.

When RX_INDEP_BAUD_EN = 1 this register is used to program the sub bits of the RX baud rate selector.

4.6 ADC Registers

4.6.1 ADC Control Register (ADCCTRL)

Address 00140000

Bit Number	31:24	23	22
Bit Name	EXT_TRIG_DLY	EXT_TRIG_GPIO_VAL	EXT_TRIG_GPIO_DIR
Access	R/W	R/W	R/W
Default	0000_0000	0	0

Bit Number	21	20	19:16	15:13
Bit Name	EXT_TRIG_GPIO_EN	EXT_TRIG_EN	EXT_TRIG_SEL	SAMPLING_SEL
Access	R/W	R/W	R/W	R/W
Default	0	0	0000	000

Bit Number	12	11	10:8	7:4
Bit Name	ADC_SEL_REF	ADC_ROUND	BYPASS_EN	MAX_CONV
Access	R/W	R/W	R/W	R/W
Default	0	0	111	0000

Bit Number	3	2	1	0
Bit Name	SINGLE_SWEEP	SW_START	ADC_INT_EN	ADC_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bits 31-24: EXT_TRIG_DLY – 8-bit External ADC Trigger Delay configuration, LSB bit resolution equals period of ADC Clock (High Frequency Oscillator Frequency divided by 4)

Bit 23: EXT_TRIG_GPIO_VAL – Output value of ADC_EXT_TRIG pin when configured in GPIO mode

0 = ADC_EXT_TRIG pin driven low (Default)

1 = ADC_EXT_TRIG pin driven high

Bit 22: EXT_TRIG_GPIO_DIR – Direction of ADC_EXT_TRIG pin when configured in GPIO mode

0 = ADC_EXT_TRIG pin configured as input (Default)

1 = ADC_EXT_TRIG pin configured as output

Bit 21: EXT_TRIG_GPIO_EN – Configuration of ADC_EXT_TRIG pin

0 = ADC_EXT_TRIG pin configured in functional mode (Default)

1 = ADC_EXT_TRIG pin configured in GPIO mode

Bit 20: EXT_TRIG_EN – External Trigger Enable, conversions are started using the external trigger as selectable by the **EXT_TRIG_SEL** bits.

- 0 = Disable External Trigger capability (Default)
- 1 = Enable External Trigger capability

Bits 19-16: EXT_TRIG_SEL – Selects which external trigger can start a conversion loop.

- 0 = HS Loop1 Event 1 (DPWMA Low Resolution Edge) (Default)
- 1 = HS Loop1 Event 3 (DPWMB Low Resolution Edge)
- 2 = HS Loop2 Event 1 (DPWMA Low Resolution Edge)
- 3 = HS Loop2 Event 3 (DPWMB Low Resolution Edge)
- 4 = HS Loop3 Event 1 (DPWMA Low Resolution Edge)
- 5 = HS Loop3 Event 3 (DPWMB Low Resolution Edge)
- 6 = HS Loop4 Event 1 (DPWMA Low Resolution Edge)
- 7 = HS Loop4 Event 3 (DPWMB Low Resolution Edge)
- 8 = ADC_EXT_TRIG pin
- 9 = Analog Comparator A Output
- A = Analog Comparator B Output
- B = Analog Comparator C Output
- C = Analog Comparator D Output
- D = Analog Comparator E Output
- E = Analog Comparator F Output
- F = Analog Comparator G Output

Bits 15-13: ADC_SAMPLINGSEL - Defines ADC sampling and hold timing setup, refer to ADC Specification for details on timing options

- 111 = 539KS/s
- 110 = 267KS/s
- 101 = 530KS/s
- 100 = 267KS/s
- 011 = 504KS/s
- 010 = 453KS/s
- 001 = 422KS/s
- 000 = 267KS/s (Default) (Setting at Production Test)

Bit 12: ADC_SEL_REF – ADC Voltage Reference Select

- 0 = Selects Internal ADC voltage reference (Default)
- 1 = Selects AVDD as ADC voltage reference

Bit 11: ADC_ROUND – Enables rounding of ADC Result to 10 bits

- 0 = ADC Results are not rounded (Default)
- 1 = ADC Results are rounded to 10 most significant bits

Bits 10-8: BYPASS_EN – Enables dual sample/hold for specific channels. There are only four valid settings:

- 011 = Dual Sample/Hold enabling on Channel 2
- 101 = Dual Sample/Hold enabling on Channel 1
- 110 = Dual Sample/Hold enabling on Channel 0
- 111 = Dual Sample/Hold Disabled (Default)

Bits 7-4: MAX_CONV – Maximum number of conversion done in one conversion loop

- 0x0 = 1 conversion selection converted in the loop (Default)
- 0xF = All 16 conversion selections converted in the loop

Bit 3: SINGLE_SWEEP – ADC Conversion Mode

- 0 = Continuous conversion loop runs (Default)
- 1 = Single conversion loop run

Bit 2: SW_START - Firmware ADC Conversion Start, bit will be cleared automatically by hardware at end of ADC conversion

- 0 = Conversions not initiated by firmware (Default)
- 1 = Initiate an ADC conversion loop

Bit 1: ADC_INT_EN – End-of-conversion Interrupt Enable

- 0 = Disable End-of-Conversion Interrupt (Default)
- 1 = Enable End-of-Conversion Interrupt

Bit 0: ADC_EN – ADC12 Enable Control

- 0 = Disables ADC (Default)
- 1 = Enables ADC

4.6.2 ADC Status Register (ADCSTAT)

Address 00140004

Bit Number	6:3	2	1	0
Bit Name	CURRENT_CH	ADC_EXT_TRIG_VAL	ADC_INT_RAW	ADC_INT
Access	R	R	R	R
Default	-	-	-	-

Bits 6-3: CURRENT_CH – Register shows the currently converting channel

Bit 2: ADC_EXT_TRIG_VAL – ADC_EXT_TRIG pin value

- 0 = ADC_EXT_TRIG pin driven low
- 1 = ADC_EXT_TRIG pin driven high

Bit 1: ADC_INT_RAW – End-of-conversion interrupt flag, raw version

- 0 = No End-of-conversion interrupt detected
- 1 = End-of-conversion interrupt found

Bit 0: ADC_INT – End-of-conversion interrupt flag, latched version

- 0 = No End-of-conversion interrupt detected

1 = End-of-conversion interrupt found

4.6.3 ADC Test Control Register (ADCTSTCTRL)

Address 00140008

Bit Number	1	0
Bit Name	ADC_SH_BUFFER_EN	RESERVED
Access	R/W	
Default	0	0

Bit 1: ADC_SH_BUFFER_EN - ADC Sample and Hold Buffer Enable

0 = Disables ADC SH Buffer (Default)

1 = Enables ADC SH Buffer

Bit 0: RESERVED – Unused bit

Note: Only zeroes should be written to other bits in this register besides ADC_SH_BUFFER_EN

4.6.4 ADC Sequence Select Register 0 (ADCSEQSEL0)

Address 0014000C

Bit Number	28	27:24	23:21	20	19:16
Bit Name	SEQ3_SH	SEQ3	RESERVED	SEQ2_SH	SEQ2
Access	R/W	R/W	-	R/W	R/W
Default	0	0000	000	0	0000

Bit Number	15:13	12	11:8	7:5	4	3:0
Bit Name	RESERVED	SEQ1_SH	SEQ1	RESERVED	SEQ0_SH	SEQ0
Access	-	R/W	R/W	-	R/W	R/W
Default	000	0	0000	000	0	0000

Bit 28: SEQ3_SH – Dual channel sequence select

0 = Not selected for Dual Sampling (Default)

1 = Selected for Dual Sampling

Bits 27-24: SEQ3 - Channel to be converted fourth

0000 = Channel 0 selected (Default)

0001 = Channel 1 selected

.....

1111 = Channel 15 selected

Bits 23-21: RESERVED – Unused bits

Bit 20: SEQ2_SH – Dual channel sequence select

0 = Not selected for Dual Sampling (Default)

1 = Selected for Dual Sampling

Bits 19-16: SEQ2 - Channel to be converted third

0000 = Channel 0 selected (Default)

0001 = Channel 1 selected

.....

1111 = Channel 15 selected

Bits 15-13: RESERVED – Unused bits

Bit 12: SEQ1_SH – Dual channel sequence select

0 = Not selected for Dual Sampling (Default)

1 = Selected for Dual Sampling

Bits 11-8: SEQ1 - Channel to be converted second

0000 = Channel 0 selected (Default)

0001 = Channel 1 selected

.....

1111 = Channel 15 selected

Bits 7-5: RESERVED – Unused bits

Bit 4: SEQ0_SH – Dual channel sequence select

0 = Not selected for Dual Sampling (Default)

1 = Selected for Dual Sampling

Bits 3-0: SEQ0 - Channel to be converted first

0000 = Channel 0 selected (Default)

0001 = Channel 1 selected

.....

1111 = Channel 15 selected

4.6.5 ADC Sequence Select Register 1 (ADCSEQSEL1)

Address 00140010

Bit Number	28	27:24	23:21	20	19:16
Bit Name	SEQ7_SH	SEQ7	RESERVED	SEQ6_SH	SEQ6
Access	R/W	R/W	-	R/W	R/W
Default	0	0000	000	0	0000

Bit Number	15:13	12	11:8	7:5	4	3:0
Bit Name	RESERVED	SEQ5_SH	SEQ5	RESERVED	SEQ4_SH	SEQ4
Access	-	R/W	R/W	-	R/W	R/W
Default	000	0	0000	000	0	0000

Bit 28 SEQ7_SH – Dual channel sequence select

0 = Not selected for Dual Sampling (Default)

1 = Selected for Dual Sampling

Bits 27-24: SEQ7- Channel to be converted eighth

0000 = Channel 0 selected (Default)

0001 = Channel 1 selected

.....

1111 = Channel 15 selected

Bits 23-21: RESERVED – Unused bits

Bit 20: SEQ6_SH – Dual channel sequence select

0 = Not selected for Dual Sampling (Default)

1 = Selected for Dual Sampling

Bits 19-16: SEQ6 - Channel to be converted seventh

0000 = Channel 0 selected (Default)

0001 = Channel 1 selected

.....

1111 = Channel 15 selected

Bits 15-13: RESERVED – Unused bits

Bit 12: SEQ5_SH – Dual channel sequence select

0 = Not selected for Dual Sampling (Default)

1 = Selected for Dual Sampling

Bits 11-8: SEQ5 - Channel to be converted sixth

0000 = Channel 0 selected (Default)

0001 = Channel 1 selected

.....

1111 = Channel 15 selected

Bits 7-5: RESERVED – Unused bits

Bit 4: SEQ4_SH – Dual channel sequence select

0 = Not selected for Dual Sampling (Default)

1 = Selected for Dual Sampling

Bits 3-0: SEQ4 - Channel to be converted fifth

0000 = Channel 0 selected (Default)

0001 = Channel 1 selected

.....

1111 = Channel 15 selected

4.6.6 ADC Sequence Select Register 2 (ADCSEQSEL2)

Address 00140014

Bit Number	28	27:24	23:21	20	19:16
Bit Name	SEQ11_SH	SEQ11	RESERVED	SEQ10_SH	SEQ10
Access	R/W	R/W	-	R/W	R/W
Default	0	0000	000	0	0000

Bit Number	15:13	12	11:8	7:5	4	3:0
Bit Name	RESERVED	SEQ9_SH	SEQ9	RESERVED	SEQ8_SH	SEQ8
Access	-	R/W	R/W	-	R/W	R/W
Default	000	0	0000	000	0	00000

Bit 28: SEQ11_SH – Dual channel sequence select

0 = Not selected for Dual Sampling (Default)

1 = Selected for Dual Sampling

Bits 27-24: SEQ11 - Channel to be converted twelfth

0000 = Channel 0 selected (Default)

0001 = Channel 1 selected

.....

1111 = Channel 15 selected

Bits 23-21: RESERVED – Unused bits

Bit 20: SEQ10_SH – Dual channel sequence select

0 = Not selected for Dual Sampling (Default)

1 = Selected for Dual Sampling

Bits 19-16: SEQ10 - Channel to be converted eleventh

0000 = Channel 0 selected (Default)

0001 = Channel 1 selected

.....

1111 = Channel 15 selected

Bits 15-13: RESERVED – Unused bits

Bit 12: SEQ9_SH – Dual channel sequence select

0 = Not selected for Dual Sampling (Default)

1 = Selected for Dual Sampling

Bits 11-8: SEQ9 - Channel to be converted tenth

0000 = Channel 0 selected (Default)

0001 = Channel 1 selected

.....

1111 = Channel 15 selected

Bits 7-5: RESERVED – Unused bits

Bit 4: SEQ8_SH – Dual channel sequence select

0 = Not selected for Dual Sampling (Default)

1 = Selected for Dual Sampling

Bits 3-0: SEQ8 - Channel to be converted ninth

0000 = Channel 0 selected (Default)

0001 = Channel 1 selected

.....

1111 = Channel 15 selected

4.6.7 ADC Sequence Select Register 3 (ADCSEQSEL3)**Address 00140018**

Bit Number	28	27:24	23:21	20	19:16
Bit Name	SEQ15_SH	SEQ15	RESERVED	SEQ14_SH	SEQ14
Access	R/W	R/W	-	R/W	R/W
Default	0	0000	000	0	0000

Bit Number	15:13	12	11:8	7:5	4	3:0
Bit Name	RESERVED	SEQ13_SH	SEQ13	RESERVED	SEQ12_SH	SEQ12
Access	-	R/W	R/W	-	R/W	R/W
Default	000	0	0000	000	0	0000

Bit 28: SEQ15_SH – Dual channel sequence select

0 = Not selected for Dual Sampling (Default)

1 = Selected for Dual Sampling

Bits 27-24: SEQ15 - Channel to be converted sixteenth

0000 = Channel 0 selected (Default)

0001 = Channel 1 selected

.....

1111 = Channel 15 selected

Bits 23-21: RESERVED – Unused bits**Bit 20: SEQ14_SH – Dual channel sequence select**

0 = Not selected for Dual Sampling (Default)

1 = Selected for Dual Sampling

Bits 19-16: SEQ14 - Channel to be converted fifteenth

0000 = Channel 0 selected (Default)

0001 = Channel 1 selected

.....

1111 = Channel 15 selected

Bits 15-13: RESERVED – Unused bits**Bit 12: SEQ13_SH – Dual channel sequence select**

0 = Not selected for Dual Sampling (Default)

1 = Selected for Dual Sampling

Bits 11-8: SEQ13 - Channel to be converted fourteenth

0000 = Channel 0 selected (Default)

0001 = Channel 1 selected

.....

1111 = Channel 15 selected

Bits 7-5: RESERVED – Unused bits

Bit 4: SEQ12_SH – Dual channel sequence select

0 = Not selected for Dual Sampling (Default)

1 = Selected for Dual Sampling

Bits 3-0: SEQ12 - Channel to be converted thirteenth

0000 = Channel 0 selected (Default)

0001 = Channel 1 selected

.....

1111 = Channel 15 selected

Preliminary

4.6.8 ADC Result Registers 0-15 (ADCRESULT x , $x=0:15$)

Address 0014001C – ADC Result Register 0
Address 00140020 – ADC Result Register 1
Address 00140024 – ADC Result Register 2
Address 00140028 – ADC Result Register 3
Address 0014002C – ADC Result Register 4
Address 00140030 – ADC Result Register 5
Address 00140034 – ADC Result Register 6
Address 00140038 – ADC Result Register 7
Address 0014003C – ADC Result Register 8
Address 00140040 – ADC Result Register 9
Address 00140044 – ADC Result Register 10
Address 00140048 – ADC Result Register 11
Address 0014004C – ADC Result Register 12
Address 00140050 – ADC Result Register 13
Address 00140054 – ADC Result Register 14
Address 00140058 – ADC Result Register 15

Bit Number	11:0
Bit Name	RESULT
Access	R
Default	-

Bits 11-0: RESULT – Each sequence has a dedicated result register.

4.6.9 ADC Averaged Result Registers 0-5 (ADCAVGRESULT x , $x=0:15$)

Address 0014005C – ADC Averaged Result Register 0
Address 00140060 – ADC Averaged Result Register 1
Address 00140064 – ADC Averaged Result Register 2
Address 00140068 – ADC Averaged Result Register 3
Address 0014006C – ADC Averaged Result Register 4
Address 00140070 – ADC Averaged Result Register 5

Bit Number	11:0
Bit Name	RESULT
Access	R
Default	-

Bits 11-0: RESULT – First 6 ADC Results have an averaged result

4.6.10 ADC Digital Compare Limits Register 0-5 (ADCCOMPLIM x , $x=0:5$)

Address 00140074 – ADC Digital Compare Limits Register 0

Address 00140078 – ADC Digital Compare Limits Register 1

Address 0014007C – ADC Digital Compare Limits Register 2

Address 00140080 – ADC Digital Compare Limits Register 3

Address 00140084 – ADC Digital Compare Limits Register 4

Address 00140088 – ADC Digital Compare Limits Register 5

Bit Number	27:16	15:12	11:0
Bit Name	UPPER_LIMIT	RESERVED	LOWER_LIMIT
Access	R/W	-	R/W
Default	1111_1111_1111	0000	0000_0000_0000

Bits 27-16: UPPER_LIMIT – Configures the upper limit value. If the ADC conversion selected is equal or greater than the limit, the Digital Compare Interrupt Flag is set (bit 22 of ADC Control Register 1). Results of comparison can be read from the ADC Digital Compare Results Register (see Section 4.6.12).

Bits 15-12: RESERVED – Unused bits – Default to 0000

Bits 11-0: LOWER_LIMIT – Configures the lower limit value. If the ADC conversion selected is equal or less than the limit, the Digital Compare Interrupt Flag is set (bit 22 of ADC Control Register 1). Results of comparison can be read from the ADC Digital Compare Results Register (see Section 4.6.12).

4.6.11 ADC Digital Compare Enable Register (ADCCOMPEN)

Address 0014008C

Bit Number	27	26	25	24
Bit Name	COMP5_UP_INT_EN	COMP5_LO_INT_EN	COMP4_UP_INT_EN	COMP4_LO_INT_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit Number	23	22	21	20
Bit Name	COMP3_UP_INT_EN	COMP3_LO_INT_EN	COMP2_UP_INT_EN	COMP2_LO_INT_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit Number	19	18	17	16
Bit Name	COMP1_UP_INT_EN	COMP1_LO_INT_EN	COMP0_UP_INT_EN	COMP0_LO_INT_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit Number	15:14	13	12	11
Bit Name	RESERVED	COMP5_DATA_SEL	COMP4_DATA_SEL	COMP3_DATA_SEL
Access	-	R/W	R/W	R/W
Default	00	0	0	0

Bit Number	10	9	8	7:6
Bit Name	COMP2_DATA_SEL	COMP1_DATA_SEL	COMP0_DATA_SEL	RESERVED
Access	R/W	R/W	R/W	-
Default	0	0	0	00

Bit Number	5	4	3	2	1	0
Bit Name	COMP5_EN	COMP4_EN	COMP3_EN	COMP2_EN	COMP1_EN	COMP0_EN
Access	R/W	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0	0

Bit 27: COMP5_UP_INT_EN – Digital Comparator 5 Upper Limit Interrupt Enable

0 = Interrupt generation disabled on result above upper limit (Default)

1 = Interrupt generation enabled on result above upper limit

Bit 26: COMP5_LO_INT_EN – Digital Comparator 5 Lower Limit Interrupt Enable

0 = Interrupt generation disabled on result below lower limit (Default)
1 = Interrupt generation enabled on result below lower limit

Bit 25: COMP4_UP_INT_EN – Digital Comparator 4 Upper Limit Interrupt Enable

0 = Interrupt generation disabled on result above upper limit (Default)
1 = Interrupt generation enabled on result above upper limit

Bit 24: COMP4_LO_INT_EN – Digital Comparator 4 Lower Limit Interrupt Enable

0 = Interrupt generation disabled on result below lower limit (Default)
1 = Interrupt generation enabled on result below lower limit

Bit 23: COMP3_UP_INT_EN – Digital Comparator 3 Upper Limit Interrupt Enable

0 = Interrupt generation disabled on result above upper limit (Default)
1 = Interrupt generation enabled on result above upper limit

Bit 22: COMP3_LO_INT_EN – Digital Comparator 3 Lower Limit Interrupt Enable

0 = Interrupt generation disabled on result below lower limit (Default)
1 = Interrupt generation enabled on result below lower limit

Bit 21: COMP2_UP_INT_EN – Digital Comparator 2 Upper Limit Interrupt Enable

0 = Interrupt generation disabled on result above upper limit (Default)
1 = Interrupt generation enabled on result above upper limit

Bit 20: COMP2_LO_INT_EN – Digital Comparator 2 Lower Limit Interrupt Enable

0 = Interrupt generation disabled on result below lower limit (Default)
1 = Interrupt generation enabled on result below lower limit

Bit 19: COMP1_UP_INT_EN – Digital Comparator 1 Upper Limit Interrupt Enable

0 = Interrupt generation disabled on result above upper limit (Default)
1 = Interrupt generation enabled on result above upper limit

Bit 18: COMP1_LO_INT_EN – Digital Comparator 1 Lower Limit Interrupt Enable

0 = Interrupt generation disabled on result below lower limit (Default)
1 = Interrupt generation enabled on result below lower limit

Bit 17: COMP0_UP_INT_EN – Digital Comparator 0 Upper Limit Interrupt Enable

0 = Interrupt generation disabled on result above upper limit (Default)
1 = Interrupt generation enabled on result above upper limit

Bit 16: COMP0_LO_INT_EN – Digital Comparator 0 Lower Limit Interrupt Enable

0 = Interrupt generation disabled on result below lower limit (Default)
1 = Interrupt generation enabled on result below lower limit

Bits 15-14: RESERVED – Unused bits**Bit 13: COMP5_DATA_SEL** – Digital Comparator 5 Data Select

0 = Raw ADC Result 5 used for comparison (Default)
1 = Averaged ADC Result 5 used for comparison

Bit 12: COMP4_DATA_SEL – Digital Comparator 4 Data Select

0 = Raw ADC Result 4 used for comparison (Default)
1 = Averaged ADC Result 4 used for comparison

Bit 11: COMP3_DATA_SEL – Digital Comparator 3 Data Select

0 = Raw ADC Result 3 used for comparison (Default)
1 = Averaged ADC Result 3 used for comparison

Bit 10: COMP2_DATA_SEL – Digital Comparator 2 Data Select

0 = Raw ADC Result 2 used for comparison (Default)
1 = Averaged ADC Result 2 used for comparison

Bit 9: COMP1_DATA_SEL – Digital Comparator 1 Data Select

0 = Raw ADC Result 1 used for comparison (Default)
1 = Averaged ADC Result 1 used for comparison

Bit 8: COMP0_DATA_SEL – Digital Comparator 0 Data Select

0 = Raw ADC Result 0 used for comparison (Default)
1 = Averaged ADC Result 0 used for comparison

Bits 7-6: RESERVED – Unused bits**Bit 5: COMP5_EN** – Digital Comparator 5 Enable

0 = Comparator Disabled (Default)
1 = Comparator Enabled

Bit 4: COMP4_EN – Digital Comparator 4 Enable

0 = Comparator Disabled (Default)
1 = Comparator Enabled

Bit 3: COMP3_EN – Digital Comparator 3 Enable

0 = Comparator Disabled (Default)
1 = Comparator Enabled

Bit 2: COMP2_EN – Digital Comparator 2 Enable

0 = Comparator Disabled (Default)
1 = Comparator Enabled

Bit 1: COMP1_EN – Digital Comparator 1 Enable

0 = Comparator Disabled (Default)
1 = Digital Comparator 1 Enabled

Bit 0: COMP0_EN – Digital Comparator 0 Enable

0 = Comparator Disabled (Default)
1 = Comparator Enabled

4.6.12 ADC Digital Compare Results Register (ADCCOMPRESULT)

Address 00140090

Bit Number	27	26	25	24
Bit Name	DCOMP5_UP_RAW	DCOMP5_LO_RAW	DCOMP4_UP_RAW	DCOMP4_LO_RAW
Access	R	R	R	R
Default	-	-	-	-

Bit Number	23	22	21	20
Bit Name	DCOMP3_UP_RAW	DCOMP3_LO_RAW	DCOMP2_UP_RAW	DCOMP2_LO_RAW
Access	R	R	R	R
Default	-	-	-	-

Bit Number	19	18	17	16
Bit Name	DCOMP1_UP_RAW	DCOMP1_LO_RAW	DCOMP0_UP_RAW	DCOMP0_LO_RAW
Access	R	R	R	R
Default	-	-	-	-

Bit Number	15:12	11	10	9
Bit Name	RESERVED	DCOMP5_UP_INT	DCOMP5_LO_INT	DCOMP4_UP_INT
Access	-	R	R	R
Default	0000	-	-	-

Bit Number	8	7	6	5
Bit Name	DCOMP4_LO_INT	DCOMP3_UP_INT	DCOMP3_LO_INT	DCOMP2_UP_INT
Access	R	R	R	R
Default	-	-	-	-

Bit Number	4	3	2	1
Bit Name	DCOMP2_LO_INT	DCOMP1_UP_INT	DCOMP1_LO_INT	DCOMP0_UP_INT
Access	R	R	R	R
Default	-	-	-	-

Bit Number	0
Bit Name	DCOMP0_LO_INT
Access	R
Default	-

- Bit 27: DCOMP5_UP_RAW** – Digital Comparator 5 Upper Limit Raw Result
0 = Limit not exceeded
1 = Limit exceeded
- Bit 26: DCOMP5_LO_RAW** – Digital Comparator 5 Lower Limit Raw Result
0 = Limit not exceeded
1 = Limit exceeded
- Bit 25: DCOMP4_UP_RAW** – Digital Comparator 4 Upper Limit Raw Result
0 = Limit not exceeded
1 = Limit exceeded
- Bit 24: DCOMP4_LO_RAW** – Digital Comparator 4 Lower Limit Raw Result
0 = Limit not exceeded
1 = Limit exceeded
- Bit 23: DCOMP3_UP_RAW** – Digital Comparator 3 Upper Limit Raw Result
0 = Limit not exceeded
1 = Limit exceeded
- Bit 22: DCOMP3_LO_RAW** – Digital Comparator 3 Lower Limit Raw Result
0 = Limit not exceeded
1 = Limit exceeded
- Bit 21: DCOMP2_UP_RAW** – Digital Comparator 2 Upper Limit Raw Result
0 = Limit not exceeded
1 = Limit exceeded
- Bit 20: DCOMP2_LO_RAW** – Digital Comparator 2 Lower Limit Raw Result
0 = Limit not exceeded
1 = Limit exceeded
- Bit 19: DCOMP1_UP_RAW** – Digital Comparator 1 Upper Limit Raw Result
0 = Limit not exceeded
1 = Limit exceeded
- Bit 18: DCOMP1_LO_RAW** – Digital Comparator 1 Lower Limit Raw Result
0 = Limit not exceeded
1 = Limit exceeded
- Bit 17: DCOMP0_UP_RAW** – Digital Comparator 0 Upper Limit Raw Result
0 = Limit not exceeded
1 = Limit exceeded
- Bit 16: DCOMP0_LO_RAW** – Digital Comparator 0 Lower Limit Raw Result
0 = Limit not exceeded
1 = Limit exceeded
- Bits 15-12: RESERVED** – Unused bits
- Bit 11: DCOMP5_UP_INT** – Digital Comparator 5 Upper Limit Interrupt Result, cleared on read
0 = Limit not exceeded

1 = Limit exceeded

Bit 10: DCOMP5_LO_INT – Digital Comparator 5 Lower Limit Interrupt Result, cleared on read

0 = Limit not exceeded

1 = Limit exceeded

Bit 9: DCOMP4_UP_INT – Digital Comparator 4 Upper Limit Interrupt Result, cleared on read

0 = Limit not exceeded

1 = Limit exceeded

Bit 8: DCOMP4_LO_INT – Digital Comparator 4 Lower Limit Interrupt Result, cleared on read

0 = Limit not exceeded

1 = Limit exceeded

Bit 7: DCOMP3_UP_INT – Digital Comparator 3 Upper Limit Interrupt Result, cleared on read

0 = Limit not exceeded

1 = Limit exceeded

Bit 6: DCOMP3_LO_INT – Digital Comparator 3 Lower Limit Interrupt Result, cleared on read

0 = Limit not exceeded

1 = Limit exceeded

Bit 5: DCOMP2_UP_INT – Digital Comparator 2 Upper Limit Interrupt Result, cleared on read

0 = Limit not exceeded

1 = Limit exceeded

Bit 4: DCOMP2_LO_INT – Digital Comparator 2 Lower Limit Interrupt Result, cleared on read

0 = Limit not exceeded

1 = Limit exceeded

Bit 3: DCOMP1_UP_INT – Digital Comparator 1 Upper Limit Interrupt Result, cleared on read

0 = Limit not exceeded

1 = Limit exceeded

Bit 2: DCOMP1_LO_INT – Digital Comparator 1 Lower Limit Interrupt Result, cleared on read

0 = Limit not exceeded

1 = Limit exceeded

Bit 1: DCOMP0_UP_INT – Digital Comparator 0 Upper Limit Interrupt Result, cleared on read

0 = Limit not exceeded

1 = Limit exceeded

Bit 0: DCOMP0_LO_INT – Digital Comparator 0 Lower Limit Interrupt Result,
cleared on read

0 = Limit not exceeded

1 = Limit exceeded

4.6.13 ADC Averaging Control Register (ADCAVGCTRL)

Address 00140094

Bit Number	22:21	20	19	18:17	16
Bit Name	AVG5_CONFIG	AVG5_EN	RESERVED	AVG4_CONFIG	AVG4_EN
Access	R/W	R/W	-	R/W	R/W
Default	00	0	0	00	0

Bit Number	15	14:13	12	11
Bit Name	RESERVED	AVG3_CONFIG	AVG3_EN	RESERVED
Access	-	R/W	R/W	-
Default	0	00	0	0

Bit Number	10:9	8	7	6:5
Bit Name	AVG2_CONFIG	AVG2_EN	RESERVED	AVG1_CONFIG
Access	R/W	R/W	-	R/W
Default	00	0	0	00

Bit Number	4	3	2:1	0
Bit Name	AVG1_EN	RESERVED	AVG0_CONFIG	AVG0_EN
Access	R/W	-	R/W	R/W
Default	0	0	00	0

Bits 22-21: AVG5_CONFIG – ADC Averaging Module 5 Configuration

- 0 = Moving average of 4 samples (Default)
- 1 = Moving average of 8 samples
- 2 = Moving average of 16 samples
- 3 = Moving average of 32 samples

Bit 20: AVG5_EN – ADC Averaging Module 5 Enable

- 0 = ADC Averaging Disabled (Default)
- 1 = ADC Averaging Enabled

Bit 19: RESERVED – Unused bit

Bits 18-17: AVG4_CONFIG – ADC Averaging Module 4 Configuration

- 0 = Moving average of 4 samples (Default)
- 1 = Moving average of 8 samples
- 2 = Moving average of 16 samples
- 3 = Moving average of 32 samples

Bit 16: AVG4_EN – ADC Averaging Module 4 Enable

- 0 = ADC Averaging Disabled (Default)

1 = ADC Averaging Enabled

Bit 15: RESERVED – Unused bit

Bits 14-13: AVG3_CONFIG – ADC Averaging Module 3 Configuration

0 = Moving average of 4 samples (Default)

1 = Moving average of 8 samples

2 = Moving average of 16 samples

3 = Moving average of 32 samples

Bit 12: AVG3_EN – ADC Averaging Module 3 Enable

0 = ADC Averaging Disabled (Default)

1 = ADC Averaging Enabled

Bit 11: RESERVED – Unused bit

Bits 10-9: AVG2_CONFIG – ADC Averaging Module 2 Configuration

0 = Moving average of 4 samples (Default)

1 = Moving average of 8 samples

2 = Moving average of 16 samples

3 = Moving average of 32 samples

Bit 8: AVG2_EN – ADC Averaging Module 4 Enable

0 = ADC Averaging Disabled (Default)

1 = ADC Averaging Enabled

Bit 7: RESERVED – Unused bit

Bits 6-5: AVG1_CONFIG – ADC Averaging Module 1 Configuration

0 = Moving average of 4 samples (Default)

1 = Moving average of 8 samples

2 = Moving average of 16 samples

3 = Moving average of 32 samples

Bit 4: AVG1_EN – ADC Averaging Module 1 Enable

0 = ADC Averaging Disabled (Default)

1 = ADC Averaging Enabled

Bit 3: RESERVED – Unused bit

Bits 2-1: AVG0_CONFIG – ADC Averaging Module 0 Configuration

0 = Moving average of 4 samples (Default)

1 = Moving average of 8 samples

2 = Moving average of 16 samples

3 = Moving average of 32 samples

Bit 0: AVG0_EN – ADC Averaging Module 0 Enable

0 = ADC Averaging Disabled (Default)

1 = ADC Averaging Enabled

4.7 DPWM 0-3 Registers

4.7.1 DPWM Control Register 0 (DPWMCTRL0)

Address 00150000 – DPWM 3 Control Register 0

Address 00170000 – DPWM 2 Control Register 0

Address 001A0000 – DPWM 1 Control Register 0

Address 001D0000 – DPWM 0 Control Register 0

Bit Number	31:28
Bit Name	PWM_B_INTRA_MUX
Access	R/W
Default	0000

Bit Number	27:24	23
Bit Name	PWM_A_INTRA_MUX	CBC_PWM_C_EN
Access	R/W	R/W
Default	0000	0

Bit Number	22:21	20	19
Bit Name	RESERVED	CBC_PWM_AB_EN	CBC_ADV_CNT_EN
Access	R	R/W	R/W
Default	0	0	0

Bit Number	18:17	16	15
Bit Name	MIN_DUTY_MODE	RESERVED	MSYNC_SLAVE_EN
Access	R/W	R	R/W
Default	00	0	0

Bit Number	14	13
Bit Name	D_ENABLE	RESERVED
Access	R/W	R
Default	0	0

Bit Number	12	11	10
Bit Name	RESON_MODE_FIXED_DUTY_EN	PWM_B_FLT_POL	PWM_A_FLT_POL
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	9	8	7	6:4
Bit Name	BLANK_B_EN	BLANK_A_EN	RESERVED	PWM_MODE
Access	R/W	R/W	R	R/W
Default	0	0	0	010

Bit Number	3	2	1	0
Bit Name	PWM_B_INV	PWM_A_INV	CLA_EN	PWM_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	1	0

Bits 31-28: PWM_B_INTRA_MUX – Interchanges signals post edge generation

- 0 = Pass-through (Default)
- 1 = Edge-gen output, this module
- 2 = PWM-C, this module
- 3 = Crossover, this module
- 4 = Pass-through below A
- 5 = Pass-through below B
- 6 = Pass-through below C
- 7 = Pass-through below level-2 C
- 8 = Pass-through below level-3 C

Bits 27-24: PWM_A_INTRA_MUX – Combines signals prior to HR module

- 0 = Pass-through (Default)
- 1 = Edge-gen output, this module
- 2 = PWM-C, this module
- 3 = Crossover, this module
- 4 = Pass-through below A
- 5 = Pass-through below B
- 6 = Pass-through below C
- 7 = Pass-through below level-2 C
- 8 = Pass-through below level-3 C

Bit 23: CBC_PWM_C_EN – Set if Fault CBC changes PWM-C output

- 0 = PWM-C unaffected by Fault CBC (Default)
- 1 = PWM-C affected by Fault CBC

Bits 22-21: RESERVED – Unused Bits

Bit 20: CBC_PWM_AB_EN – Set if Fault CBC changes output waveform for PWM-A and PWM-B

- 0 = PWM-A and PWM-B unaffected by Fault CBC (Default)
- 1 = PWM-A and PWM-B affected by Fault CBC

Bit 19: CBC_ADV_CNT_EN – Selects cycle-by-cycle of operation

Normal Mode

0 = CBC disabled (Default)

1 = CBC enabled

Multi and Resonant Modes

0 = PWM-A and PWM-B operate independently (Default)

1 = PWM-A and PWM-B pulse matching enabled

Bits 18-17: MIN_DUTY_MODE – Minimum Duty Cycle Mode

00 = Suppression of minimum duty cycles is disabled (Default)

01 = CLA value is clamped to zero when below input value is less than MIN_DUTY_LOW

10 = CLA value is clamped to MIN_DUTY_LOW register value when input value is less than MIN_DUTY_LOW

Bit 16: RESERVED – Unused Bit**Bit 15: MSYNC_SLAVE_EN** – Multi-Sync Slave Mode Control

0 = PWM not synchronized to another PWM channel (Default)

1 = Enable Multi-Sync Slave Mode, current channel will be slaved from corresponding channel

Bit 14: D_ENABLE – Converts CLA duty value to DPWM as period-CLA duty value

0 = Value used for event calculations if CLA Duty (Default)

1 = Value used for event calculations is period minus CLA duty value

Bit 13: RESERVED – Unused Bit**Bit 12: RESON_MODE_FIXED_DUTY_EN** – Configures how duty cycle is controlled in Resonance Mode

0 = Resonant mode duty cycle set by Filter duty (Default)

1 = Resonant mode duty cycle set by Auto Switch High Register

Bit 11: PWM_B_FLT_POL – Sets the fault output polarity during a disable condition (i.e. fault or module disabled)

0 = PWM B fault output polarity is set to low (Default)

1 = PWM B fault output polarity is set to high

Bit 10: PWM_A_FLT_POL – Sets the fault output polarity during a disable condition (i.e. fault or module disabled)

0 = PWM A fault output polarity is set to low (Default)

1 = PWM A fault output polarity is set to high

Bit 9: BLANK_B_EN – Comparator Blanking Window B Enable

0 = Comparator Blanking Window for PWM-B Disabled (Default)

1 = Comparator Blanking Window for PWM-B Enabled

Bit 8: BLANK_A_EN – Comparator Blanking Window A Enable

0 = Comparator Blanking Window for PWM-A Disabled (Default)

1 = Comparator Blanking Window for PWM-B Enabled

Bit 7: RESERVED – Unused Bit

Bits 6-4: PWM_MODE – DPWM Mode

- 0 = Normal Mode
- 1 = Resonant Mode
- 2 = Multi-Output Mode
- 3 = Triangular Mode
- 4 = Leading Mode

Bit 3: PWM_B_INV – PWM B Output Polarity Control

- 0 = Non-inverted PWM B output (Default)
- 1 = Inverts PWM B output

Bit 2: PWM_A_INV – PWM A Output Polarity Control

- 0 = Non-inverted PWM A output (Default)
- 1 = Inverted PWM A output

Bit 1: CLA_EN – CLA Processing Enable

- 0 = Generate PWM waveforms from PWM Register values (Default)
- 1 = Enable CLA input

Bit 0: PWM_EN – PWM Processing Enable

- 0 = Disable PWM module, outputs zero (Default)
- 1 = Enable PWM operation

4.7.2 DPWM Control Register 1 (DPWMCTRL1)

Address 00150004 – DPWM 3 Control Register 1

Address 00170004 – DPWM 2 Control Register 1

Address 001A0004 – DPWM 1 Control Register 1

Address 001D0004 – DPWM 0 Control Register 1

Bit Number	31	30	29	28
Bit Name	PRESET_EN	SYNC_FET_EN	BURST_EN	CLA_DUTY_ADJ_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit Number	27:24	23:21	20	19
Bit Name	SYNC_OUT_DIV_SEL	CLA_SCALE	EXT_SYNC_EN	CBC_BSIDE_ACTIVE_EN
Access	R/W	R/W	R/W	R/W
Default	0000	000	0	0

Bit Number	18	17	16	15	14
Bit Name	AUTO_MODE_SEL	RESERVED	EVENT_UP_SEL	CHECK_OVERRIDE	GLOBAL PERIOD EN
Access	R/W	R	R/W	R/W	R/W
Default	0	0	01	1	0

Bit Number	13	12	11	10	9
Bit Name	PWM_B_OE	PWM_A_OE	GPIO_B_VAL	GPIO_B_EN	GPIO_A_VAL
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	8	7	6	5
Bit Name	GPIO_A_EN	PWM_HR_MULTI_OUT_EN	SFRAME_EN	PWM_B_PROT_DIS
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit Number	4	3:2	1	0
Bit Name	PWM_A_PROT_DIS	Hires_Scale	RESERVED	Hires_Dis
Access	R/W	R/W	R	R/W
Default	0	00	0	0

Bit 31: PRESET_EN – Counter Preset Enable

0 = Counter reset to 0 upon detection of sync (Default)

1 = Counter preset to Preset Count Value upon detection of sync

Bit 30: SYNC_FET_EN – SyncFET Mode Enabled

0 = SyncFET Mode Disabled (Default)

1 = SyncFET Mode Enabled (Default)

Bit 29: BURST_EN – Burst (Light Load) Mode Detection Enable

0 = Burst Mode (Light Load) Detection disabled (Default)

1 = Burst Mode (Light Load) Detection enabled

Bit 28: CLA_DUTY_ADJ_EN – Enables CLA Duty Adjust from Current/Flux Balancing

0 = CLA Duty Adjust not enabled (Default)

1 = CLA Duty Adjust enabled

Bits 27-24: SYNC_OUT_DIV_SEL – Sets the divider for generating the Sync Out pulse.

0000 = Sync Out generated on every switching cycle (Default)

0001 = Sync Out generated once every 2 switching cycles

0010 = Sync Out generated once every 3 switching cycles

.....

1111 = Sync Out generated once every 16 switching cycles

Bits 23-21: CLA_SCALE – Scaling for CLA Input Data

000 = CLA Value (Default)

001 = CLA Value multiplied by 2

010 = CLA Value divided by 2

011 = CLA Value multiplied by 4

100 = CLA Value divided by 4

101 = CLA Value multiplied by 8

110 = CLA Value divided by 8

111 = CLA Value

Bit 20: EXT_SYNC_EN – Slave DPWM to external sync

0 = DPWM not synchronized to external sync (Default)

1 = Slave DPWM to external sync

Bit 19: CBC_BSIDE_ACTIVE_EN – Sets if CBC responds to Fault CBC when PWM-B is active, only available in Multi and Reson modes

0 = Response to Fault CBC when PWM-A active (Default)

1 = Response to Fault CBC when PWM-A or PWM-B active

Bit 18: AUTO_MODE_SEL – Auto Switching Mode Select

0 = Auto Switching Mode disabled (Default)

1 = Auto Switching Mode enabled

Bits 17: RESERVED – Unused Bit

Bits 16: EVENT_UP_SEL – Update End Period Mode

0 = Events update at any time

1 = Events update at the end of the period (recommended)

Bit 15: CHECK_OVERRIDE – PWM Check Override

0 = DPWM checks mathematical settings within module, correct placement of Event settings/period settings. Invalid configurations are not allowed. (Default)

1 = Overrides checking for invalid configurations and turns off PWM mathematical checking functions

Bit 14: GLOBAL_PERIOD_EN

0 = Event calculations use DPWM Period register (Default)

1 = Event calculations use Global Period register

Bit 13: PWM_B_OE – Direction for PWM B pin

0 = PWM B configured as output (Default)

1 = PWM B configured as input

Bit 12: PWM_A_OE – Direction for PWM A pin

0 = PWM A configured as output (Default)

1 = PWM A configured as input

Bit 11: GPIO_B_VAL – Sets value of PWM B output in GPIO mode

0 = PWM B driven low in GPIO mode (Default)

1 = PWM B driven high in GPIO mode

Bit 10: GPIO_B_EN – Enables GPIO mode for PWM B output

0 = PWM B in DPWM mode (Default)

1 = PWM B in GPIO mode

Bit 9: GPIO_A_VAL – Sets value of PWM A output in GPIO mode

0 = PWM A driven low in GPIO mode (Default)

1 = PWM A driven high in GPIO mode

Bit 8: GPIO_A_EN – Enables GPIO mode for PWM A output

0 = PWM A in DPWM mode (Default)

1 = PWM A in GPIO mode

Bit 7: PWM_HR_MULT_OUT_EN – Control bit for Hi-Res Block

0 = Disabled (Default)

1 = Enabled

Bit 6: SFRAME_EN – PWM Single Step Frame Mode Enable

0 = Disable Single Frame Mode (Default)

1 = Enable Single Step Frame Mode. One EADC sample is requested, CLA then Filters, then one PWM duty cycle performed, then wait on Single Frame Trigger toggle before advancing to next frame.

Bit 5: PWM_B_PROT_DIS – PWM B Asynchronous Protection Disable

0 = Allows asynchronous protection to turn off PWM B Output (Default)

1 = Disables asynchronous protection from turning off PWM B Output

Bit 4: PWM_A_PROT_DIS – PWM A Asynchronous Protection Disable

0 = Allows asynchronous protection to turn off PWM A Output (Default)
1 = Disables asynchronous protection from turning off PWM A Output

Bits 3-2: HIRES_SCALE – Determines resolution of high resolution steps
00 = Resolution of 16 phases. Full resolution enabled. Resolution step = PCLK/16 (Default)
11 = Resolution of 2 phases. Resolution step = PCLK/2
10 = Resolution of 4 phases. Resolution step = PCLK/4
01 = Resolution of 8 phases. Resolution step = PCLK/8
00 = Resolution of 16 phases. Full Resolution enabled.
Resolution step = PCLK/16

Bit 1: RESERVED – Unused Bit

Bit 0: HIRES_DIS – PWM High Resolution Disable

0 = Enable High Resolution logic (Default)
1 = Disable High Resolution logic

4.7.3 DPWM Control Register 2 (DPWMCTRL2)

Address 00150008 – DPWM 3 Control Register 2

Address 00170008 – DPWM 2 Control Register 2

Address 001A0008 – DPWM 1 Control Register 2

Address 001D0008 – DPWM 0 Control Register 2

Bit Number	19:18	17	16
Bit Name	DTC_MODE	DTC_EN	BLANK_PCM_EN
Access	R/W	R/W	R/W
Default	00	0	0

Bit Number	15:12	11:10
Bit Name	SYNC_IN_DIV_RATIO	RESERVED
Access	R/W	R
Default	0000	0

Bit Number	9:8	7	6
Bit Name	FILTER_DUTY_SEL	IDE_DUTY_B_EN	IDE_DETECT_EN
Access	R/W	R/W	R/W
Default	00	0	0

Bit Number	5:4	3:2
Bit Name	SAMPLE_TRIG_1_OVERSAMPLE	SAMPLE_TRIG_1_MODE
Access	R/W	R/W
Default	00	00

Bit Number	1	0
Bit Name	SAMPLE_TRIG_2_EN	SAMPLE_TRIG_1_EN
Access	R/W	R/W
Default	0	1

Bit 19-18: DTC_MODE – DTC Mode Select

00 = Only DTC phase adjust A utilized in edge adjustments (Default)

01 = Only DTC phase adjust B utilized in edge adjustments

10 = Both DTC phase adjust A and B utilized in edge adjustments

11 = Reserved

Bit 17: DTC_EN – Enables Dead Time Compensation Mode

0 = Disabled (Default)

1 = Enabled

Bit 16: BLANK_PCM_EN – PCM Blanking Enable

0 = Blanking A window is not used with the PCM input (Default)

1 = Blanking A window is used with the PCM input

Bits 15-12: SLAVE_SYNC_IN_DIV_RATIO – Sets the number of syncs to be masked before a resync

Bit 11-10: RESERVED – Unused Bit

Bits 9-8: FILTER_DUTY_SEL – Sets which register is used for the max duty calculation at the Filter in RESON and MESH modes.

0 = PWM Period Register (Default)

1 = Event 2

2 = PWM Period Adjust Register (Bits 13:0)

Bit 7: IDE_DUTY_B_EN – IDE Duty Cycle Side B Enable

0 = Disabled (Default)

1 = Enabled

Bit 6: IDE_DETECT_EN – IDE Detect Enable

0 = Disabled (Default)

1 = Enabled

Bits 5-4: SAMPLE_TRIG_1_OVERSAMPLE – Oversample Select for Sample Trigger 1

00 = Trigger an EADC Sample at PWM Sample Trig Register value (Default)

01 = Trigger an EADC Sample at PWM Sample Trig Register value and at PWM Sample Trig Register value divided by 2

10 = Trigger a EADC Sample at PWM Sample Trig Register value, at PWM Sample Trig Register value divided by 2 and at PWM Sample Trig Register value divided by 4

11 = Trigger a EADC Sample at PWM Sample Trig Register value, at PWM Sample Trig Register value divided by 2, at PWM Sample Trig Register value divided by 4 and at PWM Sample Trig Register value divided by 8

Bits 3-2: SAMPLE_TRIG_1_MODE – Mode select for Sample Trigger 1

00 = Trigger value is set using PWM Sample Trig Register value (Default)

01 = Trigger value is adaptive midpoint (EV1+CLA_DUTY/2 + Adaptive Offset) and uses current CLA value at update event

10 = Trigger value is adaptive midpoint (EV1+CLA_DUTY + Adaptive Offset) and uses current CLA value at update event

11 = Trigger value is adaptive based on previous CBC location + Adaptive Offset

Bit 1: SAMPLE_TRIG_2_EN – Sample Trigger 2 Enable

0 = Disable Sample Trigger 2 (Default)

1 = Enable Sample Trigger 2

Bit 0: SAMPLE_TRIG_1_EN – Sample Trigger 1 Enable

- 0 = Disable Sample Trigger 1
- 1 = Enable Sample Trigger 1(Default)

4.7.4 DPWM Period Register (DPWMPRD)

Address 0015000C – DPWM 3 Period Register

Address 0017000C – DPWM 2 Period Register

Address 001A000C – DPWM 1 Period Register

Address 001D000C – DPWM 0 Period Register

Bit Number	17:4	3:0
Bit Name	PRD	RESERVED
Access	R/W	-
Default	00_0011_0100_0001	0000

Bits 17-4: PRD – PWM Period. Low resolution register, last 4 bits are read-only.

Bits 3-0: RESERVED – Unused bits

4.7.5 DPWM Event 1 Register (DPWMEV1)

Address 00150010 – DPWM 3 Event 1 Register

Address 00170010 – DPWM 2 Event 1 Register

Address 001A0010 – DPWM 1 Event 1 Register

Address 001D0010 – DPWM 0 Event 1 Register

Bit Number	17:4	3:0
Bit Name	EVENT1	RESERVED
Access	R/W	-
Default	00_0000_0001_0100	0000

Bits 17-4: EVENT1 – Configures the location of Event 1. Low resolution register, last 4 bits are unused.

Bits 3-0: RESERVED – Unused bits

4.7.6 DPWM Event 2 Register (DPWMEV2)

Address 00150014 – DPWM 3 Event 2 Register

Address 00170014 – DPWM 2 Event 2 Register

Address 001A0014 – DPWM 1 Event 2 Register

Address 001D0014 – DPWM 0 Event 2 Register

Bit Number	17:0
Bit Name	EVENT2
Access	R/W
Default	0_0000_0011_0000_0000

Bits 17-0: EVENT2 – Configures the location of Event 2. Value equals number of PCLK clock periods in Bits 17:4 and number of high resolution clock phases of PCL in Bits 3:0 (dependent on Bits 3:2 of DPWM Control Register 2). DPWM Event 3 Register (DPWMEV3)

Address 00150018 – Loop 4 DPWM Event 3 Register

Address 00170018 – Loop 3 DPWM Event 3 Register

Address 001A0018 – Loop 2 DPWM Event 3 Register

Address 001D0018 – Loop 1 DPWM Event 3 Register

Bit Number	17:0
Bit Name	EVENT3
Access	R/W
Default	00_0000_0011_1110_0000

Bits 17-0: EVENT3 – Configures the location of Event 3. Value equals number of PCLK clock periods in Bits 17:4 and number of high resolution clock phases of PCL in Bits 3:0.

4.7.7 DPWM Event 4 Register (DPWMEV4)

Address 0015001C – Loop 4 DPWM Event 4 Register

Address 0017001C – Loop 3 DPWM Event 4 Register

Address 001A001C – Loop 2 DPWM Event 4 Register

Address 001D001C – Loop 1 DPWM Event 4 Register

Bit Number	17:0
Bit Name	EVENT4
Access	R/W
Default	00_0000_0111_0000_0000

Bits 17-0: EVENT4 – Configures the location of Event 4. Value equals number of PCLK clock periods in Bits 17:4 and number of high resolution clock phases of PCL in Bits 3:0.

4.7.8 DPWM Sample Trigger 1 Register (DPWMSAMPTRIG1)

Address 00150020 – DPWM 3 Sample Trigger 1 Register

Address 00170020 – DPWM 2 Sample Trigger 1 Register

Address 001A0020 – DPWM 1 Sample Trigger 1 Register

Address 001D0020 – DPWM 0 Sample Trigger 1 Register

Bit Number	17:6	5:0
Bit Name	SAMPLE_TRIGGER	RESERVED
Access	R/W	-
Default	0000_0000_0100	00_0000

Bits 17-6: SAMPLE_TRIGGER – Configures the location of the sample trigger within a PWM period. Value equals the number of PCLK clock periods. Enables start of conversion for EADC. Low resolution register, last 6 bits are read-only.

Bits 5-0: RESERVED – Unused bits

4.7.9 DPWM Sample Trigger 2 Register (DPWMSAMPTRIG2)

Address 00150024 – DPWM 3 Sample Trigger 1 Register

Address 00170024 – DPWM 2 Sample Trigger 1 Register

Address 001A0024 – DPWM 1 Sample Trigger 1 Register

Address 001D0024 – DPWM 0 Sample Trigger 1 Register

Bit Number	17:6	5:0
Bit Name	SAMPLE_TRIGGER	RESERVED
Access	R/W	-
Default	0000_0000_0100	00_0000

Bits 17-6: SAMPLE_TRIGGER – Configures the location of the sample trigger within a PWM period. Value equals the number of PCLK clock periods. Enables start of conversion for EADC. Low resolution register, last 6 bits are read-only.

Bits 5-0: RESERVED – Unused bits

4.7.10 DPWM Phase Trigger Register (DPWMPHASETRIG)

Address 00150028 – DPWM 3 Phase Trigger Register

Address 00170028 – DPWM 2 Phase Trigger Register

Address 001A0028 – DPWM 1 Phase Trigger Register

Address 001D0028 – DPWM 0 Phase Trigger Register

Bit Number	17:4	3:0
Bit Name	PHASE_TRIGGER	RESERVED
Access	R/W	-
Default	00_0000_0000_0000	0000

Bits 17-4: PHASE_TRIGGER – Configures the phase trigger delay within multi-output mode. Value equals the number of PCLK clock periods. Low resolution register, last 4 bits are read-only

Bits 3-0: RESERVED – Unused bits

4.7.11 DPWM Cycle Adjust A Register (DPWMCYCADCJA)

Address 0015002C – DPWM 3 Cycle Adjust A Register

Address 0017002C – DPWM 2 Cycle Adjust A Register

Address 001A002C – DPWM 1 Cycle Adjust A Register

Address 001D002C – DPWM 0 Cycle Adjust A Register

Bit Number	15:0
Bit Name	CYCLE_ADJUST_A
Access	R/W
Default	0000_0000_0000_0000

Bits 15-0: CYCLE_ADJUST_A – Adjusts PWM A output signal. 16-bit signed number allows output signal to be delayed or sped up.

4.7.12 DPWM Cycle Adjust B Register (DPWMCYCADCJB)

Address 00150030 – DPWM 3 Cycle Adjust B Register

Address 00170030 – DPWM 2 Cycle Adjust B Register

Address 001A0030 – DPWM 1 Cycle Adjust B Register

Address 001D0030 – DPWM 0 Cycle Adjust B Register

Bit Number	15:0
Bit Name	CYCLE_ADJUST_B
Access	R/W
Default	0000_0000_0000_0000

Bits 15-0: CYCLE_ADJUST_B – Adjusts the PWM B output signal. 16-bit signed number allows output signal to be delayed or sped up.

i. DPWM Filter Reference Register (DPWMRES DUTY)

Address 00050034 – DPWM 3 Filter Reference Register

Address 00070034 – DPWM 2 Filter Reference Register

Address 000A0034 – DPWM 1 Filter Reference Register

Address 000D0034 – DPWM 0 Filter Reference Register

Bit Number	13:0
Bit Name	RESONANT_DUTY
Access	R/W
Default	00_0000_0000_0000

Bits 13-0: RESONANT_DUTY – Sends resonant duty multiplier to a connected filter, if applicable

4.7.13

4.7.14 DPWM Fault Control Register (DPWMFLTCTRL)

Address 00150038 – DPWM 3 Fault Control Register

Address 00170038 – DPWM 2 Fault Control Register

Address 001A0038 – DPWM 1 Fault Control Register

Address 001D0038 – DPWM 0 Fault Control Register

Bit Number	31
Bit Name	ALL_FAULT_EN
Access	R/W
Default	0

Bit Number	30	29:24	23	22:16
Bit Name	CBC_FAULT_EN	CBC_MAX_COUNT	RESERVED	AB_MAX_COUNT
Access	R/W	R/W	-	R/W
Default	0	00_0000	0	000_0000

Bit Number	15	14:8	7	6:0
Bit Name	FLT_RESTART	A_MAX_COUNT	CBC_FAULT_MODE	B_MAX_COUNT
Access	R/W	R/W	R/W	R/W
Default	0	000_0000	0	000_0000

Bit 31: ALL_FAULT_EN – DPWM Fault Module enable

0 = All DPWM Fault Modules disabled (Default)

1 = All DPWM Fault Modules enabled

Bit 30: CBC_FAULT_EN – CBC Fault Module enable

0 = CBC Fault Modules disabled (Default)

1 = CBC Fault Modules enabled

Bits 29-24: CBC_MAX_COUNT – Cycle-by-Cycle Fault Count, sets the number of received sequential faults on Cycle-by-Cycle Fault input before asserting the fault

Bits 23: RESERVED – Unused bit

Bits 22-16: AB_MAX_COUNT – Fault AB Count, sets the number of received sequential faults on Fault AB input before asserting the fault

Bits 15: FLT_RESTART – Enables DPWM after Fault.

1->0 = Enables DPWM on Falling Edge Transition of Bit.

Does nothing otherwise.

Bits 14-8: A_MAX_COUNT – Fault A Count, sets the number of received

sequential faults on Fault A input before asserting the fault

Bits 7: CBC_FAULT_MODE – CBC Fault Mode

0 = CBC Fault reacts to fault cbc input from fault mux

1 = CBC Fault reacts to output of frame CBC

Bits 6-0: B_MAX_COUNT – Fault B Count, sets the number of received sequential faults on Fault B input before asserting the fault

4.7.15 DPWM Overflow Register (DPWMOVERFLOW)

Address 0015003C – DPWM 3 Overflow Register

Address 0017003C – DPWM 2 Overflow Register

Address 001A003C – DPWM 1 Overflow Register

Address 001D003C – DPWM 0 Overflow Register

Bit Number	7	6	5	4	3:0
Bit Name	PWM_B_CHECK	PWM_A_CHECK	GPIO_B_IN	GPIO_A_IN	OVERFLOW
Access	R	R	R	R	R
Default	-	-	-	-	-

Bit 7: PWM_B_CHECK – Value of PWM B internal check

0 = Passed checks

1 = Failed checks (override required to enable output)

Bit 6: PWM_A_CHECK – Value of PWM B input

0 = Passed check

1 = Failed check (override required to enable output)

Bit 5: GPIO_B_IN0 – Value of PWM B input

0 = Low signal on PWM B

1 = High signal on PWM B

Bit 4: GPIO_A_IN – Value of PWM A input

0 = Low signal on PWM A

1 = High value on PWM A

Bit 3: OVERFLOW – PWM Event 4 Overflow Status

0 = CLA Event 4 has not overflowed

1 = Overflow condition found on CLA Event 4

Bit 2: OVERFLOW[2] – CLA Event 4 Overflow Status

0 = PWM Event 4 has not overflowed

1 = Overflow condition found on PWM Event 4

Bit 1: OVERFLOW[1] – CLA Event 3 Overflow Status

0 = CLA Event 3 has not overflowed

1 = Overflow condition found on CLA Event 3

Bit 0: OVERFLOW[0] – CLA Event 2 Overflow Status

0 = CLA Event 2 has not overflowed

1 = Overflow condition found on CLA Event 2

4.7.16 DPWM Flags/Interrupt Register (DPWMINT)

Address 00150040 – DPWM 3 Flags/Interrupt Register

Address 00170040 – DPWM 2 Flags/Interrupt Register

Address 001A0040 – DPWM 1 Flags/Interrupt Register

Address 001D0040 – DPWM 0 Flags/Interrupt Register

Bit Number	23	22	21	20	19	18	17	16
Bit Name	DTC_DISABLE	MODE_SWITCH	FLT_A	FLT_B	FLT_AB	FLT_CBC	PRD	INT
Access	R	R	R	R	R	R	R	R
Default	-	-	-	-	-	-	-	-

Bit Number	15:12	11	10
Bit Name	RESERVED	MODE_SWITCH_FLAG_CLR	MODE_SWITCH_FLAG_EN
Access	-	R/W	R/W
Default	0000	0	0

Bit Number	9	8	7
Bit Name	MODE_SWITCH_INT_EN	FLT_A_INT_EN	FLT_B_INT_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	6	5	4	3:0
Bit Name	FLT_AB_INT_EN	FLT_CBC_INT_EN	PRD_INT_EN	PRD_INT_SCALE
Access	R/W	R/W	R/W	R/W
Default	0	0	0	1111

Bit 23: DTC_DISABLE – DTC Disabled Flag

0 = Flag is not asserted

1 = Flag is set

Bit 22: MODE_SWITCH – Mode Switching Flag

0 = Flag is not asserted

1 = Flag is set

Bit 21: FLT_A – Fault A Flag

0 = Flag is not asserted

1 = Flag is set

Bit 20: FLT_B – Fault B Flag

0 = Flag is not asserted

1 = Flag is set

Bit 19: FLT_AB – Fault AB Flag

0 = Flag is not asserted

1 = Flag is set

Bit 18: FLT_CBC – Fault Cycle-by-Cycle Flag

0 = Flag is not asserted

1 = Flag is set

Bit 17: PRD – PWM Period Interrupt Flag

0 = PWM Period Interrupt Flag is not asserted

1 = PWM Period Interrupt Flag is set

Bit 16: INT – Interrupt Out

0 = INT is not asserted

1 = INT is set

Bits 15-12: RESERVED – Unused bits

Bit 11: MODE_SWITCH_FLAG_CLR – Mode Switching Flag Clear

0 = (Default)

1 = Risedge 0-1 clears flag generated.

Bit 10: MODE_SWITCH_FLAG_EN – Mode Switching Flag Enable

0 = Disables generation of flag for Mode Switching (Default)

1 = Enables generation of flag for Mode Switching.

Bit 9: MODE_SWITCH_INT_EN – Mode Switching Interrupt Enable

0 = Interrupt is not enabled (Default)

1 = Interrupt is enabled

Bit 8: FLT_A_INT_EN – Fault A Flag Interrupt Enable

0 = Interrupt is not enabled (Default)

1 = Interrupt is enabled

Bit 7: FLT_B_INT_EN – Fault B Flag Interrupt Enable

0 = Interrupt is not enabled (Default)

1 = Interrupt is enabled

Bit 6: FLT_AB_INT_EN – Fault AB Flag Interrupt Enable

0 = Interrupt is not enabled (Default)

1 = Interrupt is enabled

Bit 5: FLT_CBC_INT_EN – Fault Cycle-by-Cycle Flag Interrupt Enable

0 = Interrupt is not enabled (Default)

1 = Interrupt is enabled

Bit 4: PRD_INT_EN – PWM Period Interrupt Enable

0 = Disables generation of periodic PWM interrupt (Default)

1 = Enables generation of periodic PWM interrupt

Bits 3-0: PRD_INT_SCALE – This value scales the period interrupt signal from an interrupt every switching cycle to 16 switching cycles

0000 = Period Interrupt generated every switching cycle (Default)

0001 = Period Interrupt generated once every 2 switching cycles

0010 = Period Interrupt generated once every 4 switching cycles
0011 = Period Interrupt generated once every 6 switching cycles
0100 = Period Interrupt generated once every 8 switching cycles
0101 = Period Interrupt generated once every 16 switching cycles
0110 = Period Interrupt generated once every 32 switching cycles
0111 = Period Interrupt generated once every 48 switching cycles
1000 = Period Interrupt generated once every 64 switching cycles
1001 = Period Interrupt generated once every 80 switching cycles
1010 = Period Interrupt generated once every 96 switching cycles
1011 = Period Interrupt generated once every 128 switching cycles
1100 = Period Interrupt generated once every 160 switching cycles
1101 = Period Interrupt generated once every 192 switching cycles

Preliminary

4.7.17 DPWM Counter Preset Register (DPWMCNTPRE)

Address 00150044 – DPWM 3 Counter Preset Register

Address 00170044 – DPWM 2 Counter Preset Register

Address 001A0044 – DPWM 1 Counter Preset Register

Address 001D0044 – DPWM 0 Counter Preset Register

Bit Number	17:4	3:0
Bit Name	PRESET	RESERVED
Access	R/W	-
Default	00_0000_0000_0000	0000

Bit 17-4: PRESET – Counter preset value, counter reset to this value upon detection of sync when PRESET_EN bit in DPWMCTRL1 is enabled. Low resolution register, last 4 bits are read-only

Bits 3-0: RESERVED – Unused bits

4.7.18 DPWM Blanking A Begin Register (DPWMBLKABEG)

Address 00150048 – DPWM 3 Blanking A Begin Register

Address 00170048 – DPWM 2 Blanking A Begin Register

Address 001A0048 – DPWM 1 Blanking A Begin Register

Address 001D0048 – DPWM 0 Blanking A Begin Register

Bit Number	17:4	3:0
Bit Name	BLANK_A_BEGIN	RESERVED
Access	R/W	-
Default	00_0000_0000_0000	0000

Bit 17-4: BLANK_A_BEGIN – Configures start of Comparator Blanking Window for PWM A. Low resolution register, last 4 bits are read-only.

Bits 3-0: RESERVED – Unused bits

4.7.19 DPWM Blanking A End Register (DPWMBLKAEEND)

Address 0015004C – DPWM 3 Blanking A End Register

Address 0017004C – DPWM 2 Blanking A End Register

Address 001A004C – DPWM 1 Blanking A End Register

Address 001D004C – DPWM 0 Blanking A End Register

Bit Number	17:4	3:0
Bit Name	BLANK_A_END	RESERVED
Access	R/W	-
Default	00_0000_0000_0000	0000

Bit 17-4: BLANK_A_END – Configures end of Comparator Blanking Window for PWM A. Low resolution register, last 4 bits are read-only.

Bits 3-0: RESERVED – Unused bits

Preliminary

4.7.20 DPWM Blanking B Begin Register (DPWMBLKBEG)

Address 00150050 – DPWM 3 Blanking B Begin Register

Address 00170050 – DPWM 2 Blanking B Begin Register

Address 001A0050 – DPWM 1 Blanking B Begin Register

Address 001D0050 – DPWM 0 Blanking B Begin Register

Bit Number	17:4	3:0
Bit Name	BLANK_B_BEGIN	RESERVED
Access	R/W	-
Default	00_0000_0000_0000	0000

Bit 17-4: BLANK_B_BEGIN – Configures start of Comparator Blanking Window for PWM B. Low resolution register, last 4 bits are read-only.

Bits 3-0: RESERVED – Unused bits

4.7.21 DPWM Blanking B End Register (DPWMBLKBEND)

Address 00150054 – DPWM 3 Blanking B End Register

Address 00170054 – DPWM 2 Blanking B End Register

Address 001A0054 – DPWM 1 Blanking B End Register

Address 001D0054 – DPWM 0 Blanking B End Register

Bit Number	17:4	3:0
Bit Name	BLANK_B_END	RESERVED
Access	R/W	-
Default	00_0000_0000_0000	0000

Bit 17-4: BLANK_B_END – Configures end of Comparator Blanking Window for PWM B. Low resolution register, last 4 bits are read-only.

Bits 3-0: RESERVED – Unused bits

4.7.22 DPWM Minimum Duty Cycle High Register (DPWMMINDUTYHI)

Address 00150058 – DPWM 3 Minimum Duty Cycle High Register

Address 00170058 – DPWM 2 Minimum Duty Cycle High Register

Address 001A0058 – DPWM 1 Minimum Duty Cycle High Register

Address 001D0058 – DPWM 0 Minimum Duty Cycle High Register

Bit Number	17:4	3:0
Bit Name	MIN_DUTY_HIGH	RESERVED
Access	R/W	-
Default	00_0000_0000_0000	0000

Bit 17-4: MIN_DUTY_HIGH– Configures upper threshold for minimum duty cycle logic. Low resolution register, last 4 bits are read-only.

Bits 3-0: RESERVED – Unused bits

Preliminary

4.7.23 DPWM Minimum Duty Cycle Low Register (DPWMMINDUTYLO)

Address 0015005C – DPWM 3 Minimum Duty Cycle Low Register

Address 0017005C – DPWM 2 Minimum Duty Cycle Low Register

Address 001A005C – DPWM 1 Minimum Duty Cycle Low Register

Address 001D005C – DPWM 0 Minimum Duty Cycle Low Register

Bit Number	17:4	3: 0
Bit Name	MIN_DUTY_LOW	RESERVED
Access	R/W	-
Default	00_0000_0000_0000	0000

Bit 17-4: MIN_DUTY_LOW – Configures lower threshold for minimum duty cycle logic. Low resolution register, last 4 bits are read-only.

Bits 3-0: RESERVED – Unused bits

4.7.24 DPWM Adaptive Sample Register (DPWMADAPTIVE)

Address 00150060 – DPWM 3 Adaptive Sample Register

Address 00170060 – DPWM 2 Adaptive Sample Register

Address 001A0060 – DPWM 1 Adaptive Sample Register

Address 001D0060 – DPWM 0 Adaptive Sample Register

Bit Number	11:0
Bit Name	ADAPT_SAMP
Access	R/W
Default	0000_0000_0000

Bit 13-0: ADAPT_SAMP – Configures Adaptive Sample Adjust

4.7.25 DPWM Fault Status (DPWMFLTSTAT)

Address 00150064 – DPWM 3 Fault Input Status Register

Address 00170064 – DPWM 2 Fault Input Status Register

Address 001A0064 – DPWM 1 Fault Input Status Register

Address 001D0064 – DPWM 0 Fault Input Status Register

Bit Number	5	4	3	2	1	0
Bit Name	BURST	IDE_DETECT	FLT_A	FLT_B	FLT_AB	FLT_CBC
Access	R	R	R	R	R	R
Default	-	-	-	-	-	-

Bit 5: BURST – Burst Mode Detection Status

0 = Burst Mode Detection is not asserted

1 = Burst Mode Detection is set

Bit 4: IDE_DETECT – IDE Detection Status (from Analog Comparators)

0 = IDE Detection is not asserted

1 = IDE Detection is set

Bit 3: FLT_A – Fault A Detection Status

0 = Fault A Detection is not asserted

1 = Fault A Detection is set

Bit 2: FLT_B – Fault B Detection Status

0 = Fault B Detection is not asserted

1 = Fault B Detection is set

Bit 1: FLT_AB – Fault AB Detection Status

0 = Fault AB Detection is not asserted

1 = Fault AB Detection is set

Bit 0: FLT_CBC – Current Limit Detection Status

0 = Current Limit Detection is not asserted

1 = Current Limit Detection is set

4.7.26 DPWM Auto Switch High Upper Thresh Register (DPWMAUTOSWHIUPTHRESH)

Address 00150068 – DPWM 3 Auto Switch High Upper Thresh Register

Address 00170068 – DPWM 2 Auto Switch High Upper Thresh Register

Address 001A0068 – DPWM 1 Auto Switch High Upper Thresh Register

Address 001D0068 – DPWM 0 Auto Switch High Upper Thresh Register

Bit Number	17:4	3:0
Bit Name	AUTO_SWITCH_HIGH_UPPER	RESERVED
Access	R/W	-
Default	00_0000_0000_0000	0000

Bit 17-4: AUTO_SWITCH_HIGH_UPPER – Configures upper threshold for Auto Switch Mode High operation. Mode switching does not occur between Auto Switch High Upper and Auto Switch High Lower thresholds. Low resolution register, last 4 bits are read-only.

Bits 3-0: RESERVED – Unused bits

4.7.27 DPWM Auto Switch High Lower Thresh Register (DPWMAUTOSWHILOWTHRESH)

Address 0015006C – DPWM 3 Auto Switch High Lower Thresh Register

Address 0017006C – DPWM 2 Auto Switch High Lower Thresh Register

Address 001A006C – DPWM 1 Auto Switch High Lower Thresh Register

Address 001D006C – DPWM 0 Auto Switch High Lower Thresh Register

Bit Number	17:4	3:0
Bit Name	AUTO_SWITCH_HIGH_LOWER	RESERVED
Access	R/W	-
Default	00_0000_0000_0000	0000

Bit 17-4: AUTO_SWITCH_HIGH_LOWER – Configures lower threshold for Auto Switch Mode High operation. Mode switching does not occur between Auto Switch High Upper and Auto Switch High Lower thresholds. Low resolution register, last 4 bits are read-only.

Bits 3-0: RESERVED – Unused bits

4.7.28 DPWM Auto Switch Low Upper Thresh Register (DPWMAUTOSWLOUPTHRESH)

Address 00150070 – DPWM 3 Auto Switch Low Upper Thresh Register

Address 00170070 – DPWM 2 Auto Switch Low Upper Thresh Register

Address 001A0070 – DPWM 1 Auto Switch Low Upper Thresh Register

Address 001D0070 – DPWM 0 Auto Switch Low Upper Thresh Register

Bit Number	17:4	3:0
Bit Name	AUTO_SWITCH_LOW_UPPER	RESERVED
Access	R/W	-
Default	00_0000_0000_0000	0000

Bit 29-16: AUTO_SWITCH_LOW_UPPER – Configures upper threshold for Auto Switch Mode Low operation. Mode switching does not occur between Auto Switch Low Upper and Auto Switch Low Lower thresholds. Low resolution register, last 4 bits are read-only.

Bits 3-0: RESERVED – Unused bits

4.7.29 DPWM Auto Switch Low Lower Thresh Register (DPWMAUTOSWLOLOWTHRESH)

Address 00150074 – DPWM 3 Auto Switch Low Lower Thresh Register

Address 00170074 – DPWM 2 Auto Switch Low Lower Thresh Register

Address 001A0074 – DPWM 1 Auto Switch Low Lower Thresh Register

Address 001D0074 – DPWM 0 Auto Switch Low Lower Thresh Register

Bit Number	17:4	3:0
Bit Name	AUTO_SWITCH_LOW_LOWER	RESERVED
Access	R/W	-
Default	00_0000_0000_0000	0000

Bit 29-16: AUTO_SWITCH_LOW_LOWER– Configures lower threshold for Auto Switch Mode Low operation. Mode switching does not occur between Auto Switch Low Upper and Auto Switch Low Lower thresholds. Low resolution register, last 4 bits are read-only.

Bits 3-0: RESERVED – Unused bits

4.7.30 DPWM Auto Config Max Register (DPWMAUTOMAX)

Address 00150078 – DPWM 3 Auto Config Max Register

Address 00170078 – DPWM 2 Auto Config Max Register

Address 001A0078 – DPWM 1 Auto Config Max Register

Address 001D0078 – DPWM 0 Auto Config Max Register

Bit Number	31:28	27:24	23
Bit Name	PWM_B_INTRA_MUX	PWM_A_INTRA_MUX	CBC_PWM_C_EN
Access	R/W	R/W	R/W
Default	000	000	0

Bit Number	22:21	20
Bit Name	RESERVED	CBC_PWM_AB_EN
Access	-	R/W
Default	00	0

Bit Number	19	18:13
Bit Name	CBC_ADV_CNT_EN	RESERVED
Access	R/W	-
Default	0	00_0000

Bit Number	12				
Bit Name	RESON_MODE_FIXED_DUTY_EN				
Access	R/W				
Default	0				

Bit Number	11:7	6:4	3:2	1	0
Bit Name	RESERVED	PWM_MODE	RESERVED	CLA_EN	RESERVED
Access	-	R/W	-	R/W	-
Default	00000	000	00	0	0

Bits 31-28: PWM_B_INTRA_MUX – Interchanges signals post edge generation

0 = Pass-through (Default)

1 = Edge-gen output, this module

2 = PWM-C, this module

3 = Crossover, this module

4 = Pass-through below A

5 = Pass-through below B

6 = Pass-through below C

- 7 = Pass-through below level-2 C
- 8 = Pass-through below level-3 C

Bits 27-24: PWM_A_INTRA_MUX – Combines signals prior to HR module

- 0 = Pass-through (Default)
- 1 = Edge-gen output, this module
- 2 = PWM-C, this module
- 3 = Crossover, this module
- 4 = Pass-through below A
- 5 = Pass-through below B
- 6 = Pass-through below C
- 7 = Pass-through below level-2 C
- 8 = Pass-through below level-3 C

Bit 23: CBC_PWM_C_EN – Sets if Fault CBC changes PWM-C output

- 0 = PWM-C unaffected by Fault CBC (Default)
- 1 = PWM-C affected by Fault CBC

Bit 22-21: RESERVED – Unused Bit

Bit 20: CBC_PWM_AB_EN – Sets if Fault CBC changes output waveform for PWM-A and PWM-B

- 0 = PWM-A and PWM-B unaffected by Fault CBC (Default)
- 1 = PWM-A and PWM-B affected by Fault CBC

Bit 19: CBC_ADV_CNT_EN – Selects cycle-by-cycle of operation

Normal Mode

- 0 = CBC disabled (Default)
- 1 = CBC enabled

Multi and Resonant Modes

- 0 = PWM-A and PWM-B operate independently (Default)
- 1 = PWM-A and PWM-B pulse matching enabled

Bits 18-13: RESERVED – Unused Bits

Bit 12: RESON_MODE_FIXED_DUTY_EN – Configures how duty cycle is controlled in Resonance Mode

- 0 = Resonant mode duty cycle set by Filter duty (Default)
- 1 = Resonant mode duty cycle set by Auto Switch High Register

Bits 11-7: RESERVED – Unused Bits

Bits 6-4: PWM_MODE – DPWM Mode

- 0 = Normal Mode
- 1 = Resonant Mode
- 2 = Multi-Output Mode
- 3 = Triangular Mode
- 4 = Leading Mode

Bits 3-2: RESERVED – Unused Bits

Bit 1: CLA_EN – CLA Processing Enable

0 = Generate PWM waveforms from PWM Register values (Default)

1 = Enable CLA input

Bit 0: RESERVED – Unused bit

4.7.31 DPWM Auto Config Mid Register (DPWMAUTOMID)

Address 0015007C – DPWM 3 Auto Config Mid Register

Address 0017007C – DPWM 2 Auto Config Mid Register

Address 001A007C – DPWM 1 Auto Config Mid Register

Address 001D007C – DPWM 0 Auto Config Mid Register

Bit Number	31:28	27:24	23
Bit Name	PWM_B_INTRA_MUX	PWM_A_INTRA_MUX	CBC_PWM_C_EN
Access	R/W	R/W	R/W
Default	0000	0000	0

Bit Number	22:21	20
Bit Name	RESERVED	CBC_PWM_AB_EN
Access	-	R/W
Default	00	0

Bit Number	19	18:13
Bit Name	CBC_ADV_CNT_EN	RESERVED
Access	R/W	-
Default	0	00_0000

Bit Number	12		
Bit Name	RESON_MODE_FIXED_DUTY_EN		
Access	R/W		
Default	0		

Bit Number	11:8	6:4	3:2	1	0
Bit Name	RESERVED	PWM_MODE	RESERVED	CLA_EN	RESERVED
Access	-	R/W	-	R/W	-

Default	0000	0000	00	0	0
----------------	------	------	----	---	---

Bits 31-28: PWM_B_INTRA_MUX – Interchanges signals post edge generation

- 0 = Pass-through (Default)
- 1 = Edge-gen output, this module
- 2 = PWM-C, this module
- 3 = Crossover, this module
- 4 = Pass-through below A
- 5 = Pass-through below B
- 6 = Pass-through below C
- 7 = Pass-through below level-2 C
- 8 = Pass-through below level-3 C

Bits 27-24: PWM_A_INTRA_MUX – Combines signals prior to HR module

- 0 = Pass-through (Default)
- 1 = Edge-gen output, this module
- 2 = PWM-C, this module
- 3 = Crossover, this module
- 4 = Pass-through below A
- 5 = Pass-through below B
- 6 = Pass-through below C
- 7 = Pass-through below level-2 C
- 8 = Pass-through below level-3 C

Bit 23: CBC_PWM_C_EN – Sets if Fault CBC changes PWM-C output

- 0 = PWM-C unaffected by Fault CBC (Default)
- 1 = PWM-C affected by Fault CBC

Bit 22-21: RESERVED – Unused Bits**Bit 20: CBC_PWM_AB_EN** – Sets if Fault CBC changes output waveform for PWM-A and PWM-B

- 0 = PWM-A and PWM-B unaffected by Fault CBC (Default)
- 1 = PWM-A and PWM-B affected by Fault CBC

Bit 19: CBC_ADV_CNT_EN – Selects cycle-by-cycle of operation**Normal Mode**

- 0 = CBC disabled (Default)
- 1 = CBC enabled

Multi and Resonant Modes

- 0 = PWM-A and PWM-B operate independently (Default)
- 1 = PWM-A and PWM-B pulse matching enabled

Bits 18-13: RESERVED – Unused Bits

Bit 12: RESON_MODE_FIXED_DUTY_EN – Configures how duty cycle is controlled in Resonance Mode

0 = Resonant mode duty cycle set by Filter duty (Default)

1 = Resonant mode duty cycle set by Auto Switch High Register

Bits 11-7: RESERVED – Unused Bits

Bits 6-4: PWM_MODE – DPWM Mode

0 = Normal Mode

1 = Resonant Mode

2 = Multi-Output Mode

3 = Triangular Mode

4 = Leading Mode

Bits 3-2: RESERVED – Unused Bits

Bit 1: CLA_EN – CLA Processing Enable

0 = Generate PWM waveforms from PWM Register values (Default)

1 = Enable CLA input

Bit 0: RESERVED – Unused bit

4.7.32 DPWM Edge PWM Generation Control Register (DPWMEDGEGEN)

Address 00150080 – DPWM 3 Edge PWM Generation Control Register

Address 00170080 – DPWM 2 Edge PWM Generation Control Register

Address 001A0080 – DPWM 1 Edge PWM Generation Control Register

Address 001D0080 – DPWM 0 Edge PWM Generation Control Register

Bit Number	16	15	14:12	11
Bit Name	EDGE_EN	RESERVED	A_ON_EDGE	RESERVED
Access	R/W	-	R/W	-
Default	0	0	000	0

Bit Number	10:8	7	6:4	3	2:0
Bit Name	A_OFF_EDGE	RESERVED	B_ON_EDGE	RESERVED	B_OFF_EDGE
Access	R/W	-	R/W	-	R/W
Default	01	0	10	0	11

Bit 16: EDGE_EN – Enables edge generate module. When combining dpwm's, all modules must have this bit enabled.

Bits 14-12: A_ON_EDGE – Select input edge to trigger A ON output edge

- 0 = Current DPWM posedge A
- 1 = Current DPWM negedge A
- 2 = Current DPWM posedge B
- 3 = Current DPWM negedge B
- 4 = Below (n+1) DPWM posedge A
- 5 = Below (n+1) DPWM negedge A
- 6 = Below (n+1) DPWM posedge B
- 7 = Below (n+1) DPWM negedge B

Bit 15: RESERVED – Unused bit

Bits 10-8: A_OFF_EDGE – Select input edge to trigger A OFF output edge

- 0 = Current DPWM posedge A
- 1 = Current DPWM negedge A
- 2 = Current DPWM posedge B
- 3 = Current DPWM negedge B
- 4 = Below (n+1) DPWM posedge A
- 5 = Below (n+1) DPWM negedge A
- 6 = Below (n+1) DPWM posedge B
- 7 = Below (n+1) DPWM negedge B

Bit 7: RESERVED – Unused bit

Bits 6-4: B_ON_EDGE – Select input edge to trigger B ON output edge

- 0 = Current DPWM posedge A
- 1 = Current DPWM negedge A
- 2 = Current DPWM posedge B
- 3 = Current DPWM negedge B
- 4 = Below (n+1) DPWM posedge A
- 5 = Below (n+1) DPWM negedge A
- 6 = Below (n+1) DPWM posedge B
- 7 = Below (n+1) DPWM negedge B

Bit 3: RESERVED – Unused bit

Bit 2-0: B_OFF_EDGE – Select input edge to trigger B OFF output edge

- 0 = Current DPWM posedge A
- 1 = Current DPWM negedge A
- 2 = Current DPWM posedge B
- 3 = Current DPWM negedge B
- 4 = Below (n+1) DPWM posedge A
- 5 = Below (n+1) DPWM negedge A
- 6 = Below (n+1) DPWM posedge B
- 7 = Below (n+1) DPWM negedge B

4.7.33 DPWM Filter Duty Read Register (DPWMFILTERDUTYREAD)

Address 00150084 – DPWM 3 Filter Duty Read Register

Address 00170084 – DPWM 2 Filter Duty Read Register

Address 001A0084 – DPWM 1 Filter Duty Read Register

Address 001D0084 – DPWM 0 Filter Duty Read Register

Bit Number	17:0
Bit Name	FILTER_DUTY
Access	R
Default	-

Bits 17-0: FILTER_DUTY – Filter Duty value received by DPWM Module

4.7.34 DPWM CBC Location Register (DPWMCBCLOCATION)

Address 00150088 – DPWM 3 CBC Location Register

Address 00170088 – DPWM 2 CBC Location Register

Address 001A0088 – DPWM 1 CBC Location Register

Address 001D0088 – DPWM 0 CBC Location Register

Bit Number	13:0
Bit Name	CBC_LOCATION
Access	R
Default	-

Bits 13-0: CBC_LOCATION – Counter Value when CBC occurs

4.7.35

Preliminary

4.8 Filter Registers

Registers for Filter Modules 0-2 are identical in their bit definitions.

4.8.1 Filter Status Register (**FILTERSTATUS**)

Address 00160000 – Filter 2 Status Register

Address 00190000 – Filter 1 Status Register

Address 001C0000 – Filter 0 Status Register

Bit Number	4	3	2
Bit Name	FILTER_BUSY	YN_LOW_CLAMP	YN_HIGH_CLAMP
Access	R	R	R
Default	-	-	-

Bit Number	1	0
Bit Name	KI_YN_LOW_CLAMP	KI_YN_HIGH_CLAMP
Access	R	R
Default	-	-

Bit 4: FILTER_BUSY – Filter Busy Indicator

0 = Filter is waiting for new data

1 = Filter busy calculating

Bit 3: YN_LOW_CLAMP – PID Output Low Rail Indicator

0 = PID Output not equal to low rail

1 = PID Output equal to low rail

Bit 2: YN_HIGH_CLAMP – PID Output High Rail Indicator

0 = PID Output not equal to high rail

1 = PID Output equal to high rail

Bit 1: KI_YN_LOW_CLAMP – KI Feedback Low Rail Indicator

0 = KI Feedback not equal to low rail

1 = KI Feedback equal to low rail

Bit 0: KI_YN_HIGH_CLAMP – KI Feedback High Rail Indicator

0 = KI Feedback not equal to high rail

1 = KI Feedback equal to high rail

4.8.2 Filter Control Register (FILTERCTRL)

Address 00160004 – Filter 2 Control Register

Address 00190004 – Filter 1 Control Register

Address 001C0004 – Filter 0 Control Register

Bit Number	15	14	13:12
Bit Name	KI_ADDER_MODE	PERIOD_MULT_SEL	OUTPUT_MULT_SEL
Access	R/W	R/W	R/W
Default	1	0	00

Bit Number	11:9	8	7	6	5
Bit Name	YN_SCALE	NL_MODE	KD_STALL	KI_STALL	KP_OFF
Access	R/W	R/W	R/W	R/W	R/W
Default	000	0	0	0	0

Bit Number	4	3	2	1	0
Bit Name	KD_OFF	KI_OFF	FORCE_START	USE_CPU_SAMPLE	FILTER_EN
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	1

Bit 15: KI_ADDER_MODE – Configures addition of Xn and Xn-1 in Integral branch

0 = Only Xn used for addition (Xn + 0)

1 = Xn + Xn-1 used for addition (Default)

Bit 14: PERIOD_MULT_SEL – Selects output multiplicand used for multiplying with filter output to calculate DPWM Period value in Resonant Mode

0 = Switching period received from Loop Mux module (Default)

1 = KComp received from Loop Mux module

Bits 13-12: OUTPUT_MULT_SEL – Selects output multiplicand used for multiplying with filter output to calculate DPWM Duty value

0 = KComp received from Loop Mux module (Default)

1 = Switching period received from Loop Mux module

2 = Feed-Forward value received from Loop Mux module

3 = Resonant Duty value received from DPWM Module

Bit 11-9: YN_SCALE – Controls scaling of Yn value to compensate for filter coefficient scaling

0 = Filter output (Yn) not scaled (Default)

1 = Filter output (Yn) right shifted by 1

2 = Filter output (Yn) right shifted by 2

- 3 = Filter output (Yn) right shifted by 3
- 4 = Filter output (Yn) left shifted by 4
- 5 = Filter output (Yn) left shifted by 3
- 6 = Filter output (Yn) left shifted by 2
- 7 = Filter output (Yn) left shifted by 1

Bit 8: NL_MODE – Sets non-linear gain table configuration. Coefficient Bin mapping is controlled by Coefficient Configuration Register. Limit configuration is controlled by the Filter Nonlinear Limit Registers (See Sections 4.8.16 to 4.8.18)

- 0 = Non-symmetric mode (Default)
- 1 = Symmetric mode

Bit 7: KD_STALL – Freezes KD Branch, KD_YN remains at current value

- 0 = KD_YN recalculated on each filter update (Default)
- 1 = KD_YN stalled at present value

Bit 6: KI_STALL – Freezes KI Branch, KI_YN remains at current value

- 0 = KI_YN recalculated on each filter update (Default)
- 1 = KI_YN stalled at present value

Bit 5: KP_OFF – Turns off the KP branch

- 0 = KP branch calculating new outputs (Default)
- 1 = KP branch turned off

Bit 4: KD_OFF – Turns off the KD branch, KD_YN cleared to zero

- 0 = KD branch calculating new outputs (Default)
- 1 = KD branch turned off

Bit 3: KI_OFF – Turns off the KI branch, KI_YN cleared to zero

- 0 = KI branch calculating new outputs (Default)
- 1 = KI branch halted

Bit 2: FORCE_START – Initiates a filter calculation under firmware control

- 0 = No calculation started (Default)
- 1 = Calculation started

Bit 1: USE_CPU_SAMPLE – Forces filter to use error sample from CPU XN register (Section 4.8.3)

- 0 = Filter Mode, input data received from EADC (Default)
- 1 = CPU Mode, input data based on CPU XN register

Bit 0: FILTER_EN – Filter Enable

- 0 = Disables Filter operation
- 1 = Enables Filter operation (Default)

4.8.3 CPU XN Register (CPUXN)

Address 00160008 – Filter 2 CPU XN Register

Address 00190008 – Filter 1 CPU XN Register

Address 001C0008 – Filter 0 CPU XN Register

Bit Number	8:0
Bit Name	CPU_SAMPLE
Access	R/W
Default	0_0000_0000

Bits 8-0: CPU_SAMPLE – Forced X_n value, allows processor to use filter as ALU. Set Bit 2 of Filter Control Register to ‘1’ to force CPU_SAMPLE as input to Filter.

Preliminary

4.8.4 Filter XN Read Register (*FILTERXNREAD*)

Address 0016000C – Filter 2 XN Read Register

Address 0019000C – Filter 1 XN Read Register

Address 001C000C – Filter 0 XN Read Register

Bit Number	24:16	15:9	8:0
Bit Name	XN_M1	RESERVED	XN
Access	R	-	R
Default	-	000_0000	-

Bits 24-16: XN_M1 – 9-bit signed XN_M1 register value, read-only

Bits 15-9: RESERVED

Bits 8-0: XN – 9-bit signed XN register value, read-only

4.8.5 Filter KI_YN Read Register (*FILTERKIYNREAD*)

Address 00160010 – Filter 2 KI_YN Read Register

Address 00190010 – Filter 1 KI_YN Read Register

Address 001C0010 – Filter 0 KI_YN Read Register

Bit Number	23:0
Bit Name	KI_YN
Access	R
Default	-

Bits 23-0: KI_YN – 24-bit signed KI_YN register value, read-only

4.8.6 Filter KD_YN Read Register (*FILTERKDYNREAD*)

Address 00160014 – Filter 2 KD_YN Register

Address 00190014 – Filter 1 KD_YN Register

Address 001C0014 – Filter 0 KD_YN Register

Bit Number	23:0
Bit Name	KD_YN
Access	R
Default	-

Bits 23-0: KD_YN – 24-bit signed KD_YN register value, read-only

4.8.7 Filter YN Read Register (FILTERYNREAD)

Address 00160018 – Filter 2 YN Read Register

Address 00190018 – Filter 1 YN Read Register

Address 001C0018 – Filter 0 YN Read Register

Bit Number	23:0
Bit Name	YN
Access	R
Default	-

Bits 23-0: YN – 24-bit signed YN register value, read-only

4.8.8 Coefficient Configuration Register (COEFCOMFIG)

Address 0016001C – Filter 2 Coefficient Configuration Register

Address 0019001C – Filter 1 Coefficient Configuration Register

Address 001C001C – Filter 0 Coefficient Configuration Register

Bit Number	27	26:24	23	22:20
Bit Name	BIN6_ALPHA	BIN6_CONFIG	BIN5_ALPHA	BIN5_CONFIG
Access	R/W	R/W	R/W	R/W
Default	0	000	0	000

Bit Number	19	18:16	15	14:12	11
Bit Name	BIN4_ALPHA	BIN4_CONFIG	BIN3_ALPHA	BIN3_CONFIG	BIN2_ALPHA
Access	R/W	R/W	R/W	R/W	R/W
Default	0	000	0	000	0

Bit Number	10:8	7	6:4	3	2:0
Bit Name	BIN2_CONFIG	BIN1_ALPHA	BIN1_CONFIG	BIN0_ALPHA	BIN0_CONFIG
Access	R/W	R/W	R/W	R/W	R/W
Default	000	0	000	0	000

Bit 27: BIN6_ALPHA – Selects which alpha value to use in Bin 6 of Non-Linear Table. These bits are shadowed and updated to filter when filter is not processing an EADC sample

0 = Bank 0 KD Alpha (KD_ALPHA_0) selected (Default)

1 = Bank 1 KD Alpha (KD_ALPHA_1) selected

Bits 26-24: BIN6_CONFIG – Selects which coefficient set to place in Bin 6 of Non-Linear Table. These bits are shadowed and updated to filter when filter is not processing an EADC sample.

- 0 = Coefficient Set A Selected (Default)
- 1 = Coefficient Set B Selected
- 2 = Coefficient Set C Selected
- 3 = Coefficient Set D Selected
- 4 = Coefficient Set E Selected
- 5 = Coefficient Set F Selected
- 6 = Coefficient Set G Selected

Bit 23: BIN5_ALPHA – Selects which alpha value to use in Bin 5 of Non-Linear Table. These bits are shadowed and updated to filter when filter is not processing an EADC sample

- 0 = Bank 0 KD Alpha (KD_ALPHA_0) selected (Default)
- 1 = Bank 1 KD Alpha (KD_ALPHA_1) selected

Bits 22-20: BIN5_CONFIG – Selects which coefficient set to place in Bin 5 of Non-Linear Table. These bits are shadowed and updated to filter when filter is not processing an EADC sample.

- 0 = Coefficient Set A Selected (Default)
- 1 = Coefficient Set B Selected
- 2 = Coefficient Set C Selected
- 3 = Coefficient Set D Selected
- 4 = Coefficient Set E Selected
- 5 = Coefficient Set F Selected
- 6 = Coefficient Set G Selected

Bit 19: BIN4_ALPHA – Selects which alpha value to use in Bin 4 of Non-Linear Table. These bits are shadowed and updated to filter when filter is not processing an EADC sample

- 0 = Bank 0 KD Alpha (KD_ALPHA_0) selected (Default)
- 1 = Bank 1 KD Alpha (KD_ALPHA_1) selected

Bits 18-16: BIN4_CONFIG – Selects which coefficient set to place in Bin 4 of Non-Linear Table. These bits are shadowed and updated to filter when filter is not processing an EADC sample.

- 0 = Coefficient Set A Selected (Default)
- 1 = Coefficient Set B Selected
- 2 = Coefficient Set C Selected
- 3 = Coefficient Set D Selected
- 4 = Coefficient Set E Selected
- 5 = Coefficient Set F Selected
- 6 = Coefficient Set G Selected

Bit 15: BIN3_ALPHA – Selects which alpha value to use in Bin 3 of Non-Linear Table. These bits are shadowed and updated to filter when filter is not processing an EADC sample

- 0 = Bank 0 KD Alpha (KD_ALPHA_0) selected (Default)
- 1 = Bank 1 KD Alpha (KD_ALPHA_1) selected

Bits 14-12: BIN3_CONFIG – Selects which coefficient set to place in Bin 3 of Non-Linear Table. These bits are shadowed and updated to filter when filter is not processing an EADC sample.

- 0 = Coefficient Set A Selected (Default)
- 1 = Coefficient Set B Selected
- 2 = Coefficient Set C Selected
- 3 = Coefficient Set D Selected
- 4 = Coefficient Set E Selected
- 5 = Coefficient Set F Selected
- 6 = Coefficient Set G Selected

Bit 11: BIN2_ALPHA – Selects which alpha value to use in Bin 2 of Non-Linear Table. These bits are shadowed and updated to filter when filter is not processing an EADC sample

- 0 = Bank 0 KD Alpha (KD_ALPHA_0) selected (Default)
- 1 = Bank 1 KD Alpha (KD_ALPHA_1) selected

Bits 10-8: BIN2_CONFIG – Selects which coefficient set to place in Bin 2 of Non-Linear Table. These bits are shadowed and updated to filter when filter is not processing an EADC sample.

- 0 = Coefficient Set A Selected (Default)
- 1 = Coefficient Set B Selected
- 2 = Coefficient Set C Selected
- 3 = Coefficient Set D Selected
- 4 = Coefficient Set E Selected
- 5 = Coefficient Set F Selected
- 6 = Coefficient Set G Selected

Bit 7: BIN1_ALPHA – Selects which alpha value to use in Bin 1 of Non-Linear Table. These bits are shadowed and updated to filter when filter is not processing an EADC sample

- 0 = Bank 0 KD Alpha (KD_ALPHA_0) selected (Default)
- 1 = Bank 1 KD Alpha (KD_ALPHA_1) selected

Bits 6-4: BIN1_CONFIG – Selects which coefficient set to place in Bin 1 of Non-Linear Table. These bits are shadowed and updated to filter when filter is not processing an EADC sample.

- 0 = Coefficient Set A Selected (Default)
- 1 = Coefficient Set B Selected
- 2 = Coefficient Set C Selected
- 3 = Coefficient Set D Selected
- 4 = Coefficient Set E Selected

5 = Coefficient Set F Selected

6 = Coefficient Set G Selected

Bit 3: BIN0_ALPHA – Selects which alpha value to use in Bin 0 of Non-Linear Table. These bits are shadowed and updated to filter when filter is not processing an EADC sample

0 = Bank 0 KD Alpha (KD_ALPHA_0) selected (Default)

1 = Bank 1 KD Alpha (KD_ALPHA_1) selected

Bits 2-0: BIN1_CONFIG – Selects which coefficient set to place in Bin 1 of Non-Linear Table. These bits are shadowed and updated to filter when filter is not processing an EADC sample.

0 = Coefficient Set A Selected (Default)

1 = Coefficient Set B Selected

2 = Coefficient Set C Selected

3 = Coefficient Set D Selected

4 = Coefficient Set E Selected

5 = Coefficient Set F Selected

6 = Coefficient Set G Selected

4.8.9 Filter KP Coefficient 0 Register (*FILTERKPCOEF0*)

Address 00160020 – Filter 2 KP Coefficient 0 Register

Address 00190020 – Filter 1 KP Coefficient 0 Register

Address 001C0020 – Filter 0 KP Coefficient 0 Register

Bit Number	31:16	15:0
Bit Name	KP_COEF_1	KP_COEF_0
Access	R/W	R/W
Default	0000_0000_0000_0000	0100_0010_0011_0100

Bits 31-16: KP_COEF_1 – KP Coefficient 1, 16-bit signed coefficient, configurable to any bin using the Coefficient Control Register

Bits 15-0: KP_COEF_0 – KP Coefficient 0, 16-bit signed coefficient, configurable to any bin using the Coefficient Control Register

4.8.10 Filter KP Coefficient 1 Register (*FILTERKPCOEF1*)

Address 00160024 – Filter 2 KP Coefficient 1 Register

Address 00190024 – Filter 1 KP Coefficient 1 Register

Address 001C0024 – Filter 0 KP Coefficient 1 Register

Bit Number	15:0
Bit Name	KP_COEF_2
Access	R/W

Default	0000_0000_0000_0000
---------	---------------------

Bits 15-0: KP_COEF_2 – KP Coefficient 2, 16-bit signed coefficient, configurable to any bin using the Coefficient Control Register

4.8.11 Filter KI Coefficient 0 Register (*FILTERKICOEF0*)

Address 00160028 – Filter 2 KI Coefficient 0 Register

Address 00190028 – Filter 1 KI Coefficient 0 Register

Address 001C0028 – Filter 0 KI Coefficient 0 Register

Bit Number	31:16	15:0
Bit Name	KI_COEF_1	KI_COEF_0
Access	R/W	R/W
Default	0000_0000_0000_0000	0010_0100_0001_0010

Bits 31-16: KI_COEF_1 – KI Coefficient 1, 16-bit signed coefficient, configurable to any bin using the Coefficient Control Register

Bits 15-0: KI_COEF_0 – KI Coefficient 0, 16-bit signed coefficient, configurable to any bin using the Coefficient Control Register

4.8.12 Filter KI Coefficient 1 Register (*FILTERKICOEF1*)

Address 0016002C – Filter 2 KI Coefficient 1 Register

Address 0019002C – Filter 1 KI Coefficient 1 Register

Address 001C002C – Filter 0 KI Coefficient 1 Register

Bit Number	31:16	15:0
Bit Name	KI_COEF_3	KI_COEF_2
Access	R/W	R/W
Default	0000_0000_0000_0000	0000_0000_0000_0000

Bits 31-16: KI_COEF_3 – KI Coefficient 3, 16-bit signed coefficient, configurable to any bin using the Coefficient Control Register

Bits 15-0: KI_COEF_2 – KI Coefficient 2, 16-bit signed coefficient, configurable to any bin using the Coefficient Control Register

4.8.13 Filter KD Coefficient 0 Register (*FILTERKDCOEF0*)

Address 00160030 – Filter 2 KD Coefficient 0 Register

Address 00190030 – Filter 1 KD Coefficient 0 Register

Address 001C0030 – Filter 0 KD Coefficient 0 Register

Bit Number	31:16	15:0
Bit Name	KD_COEF_1	KD_COEF_0
Access	R/W	R/W
Default	0000_0000_0000_0000	1100_0100_0000_0001

Bits 31-16: KD_COEF_1 – KD Coefficient 1, 16-bit signed coefficient, configurable to any bin using the Coefficient Control Register

Bits 15-0: KD_COEF_0 – KD Coefficient 0, 16-bit signed coefficient, configurable to any bin using the Coefficient Control Register

4.8.14 Filter KD Coefficient 1 Register (*FILTERKDCOEF1*)

Address 00160034 – Filter 2 KD Coefficient 1 Register

Address 00190034 – Filter 1 KD Coefficient 1 Register

Address 001C0034 – Filter 0 KD Coefficient 1 Register

Bit Number	15:0
Bit Name	KD_COEF_2
Access	R/W
Default	0000_0000_0000_0000

Bits 15-0: KD_COEF_2 – KD Coefficient 2, 16-bit signed coefficient,

configurable to any bin using the Coefficient Control Register

Preliminary

4.8.15 Filter KD Alpha Register (*FILTERKDALPHA*)

Address 00160038 – Filter 2 KD Alpha Register

Address 00190038 – Filter 1 KD Alpha Register

Address 001C0038 – Filter 0 KD Alpha Register

Bit Number	24:16	15:9	8:0
Bit Name	KD_ALPHA_1	RESERVED	KD_ALPHA_0
Access	R/W	-	R/W
Default	0_0000_0000	000_0000	0_0101_0010

Bits 24-16: KD_ALPHA_1 – Bank 1 KD Alpha, 9-bit signed value, configurable to any bin using the Coefficient Control Register

Bits 15-9: RESERVED

Bits 8-0: KD_ALPHA_0 – Bank 0 KD Alpha, 9-bit signed value, configurable to any bin using the Coefficient Control Register

4.8.16 Filter Nonlinear Limit Register 0 (*FILTERNL0*)

Address 0016003C – Filter 2 Nonlinear Limit Register 0

Address 0019003C – Filter 1 Nonlinear Limit Register 0

Address 001C003C – Filter 0 Nonlinear Limit Register 0

Bit Number	24:16	15:9	8:0
Bit Name	LIMIT1	RESERVED	LIMIT0
Access	R/W	-	R/W
Default	0_0000_0000	000_0000	0_1111_1111

Bits 24-16: LIMIT1 – Configures LIMIT1 in Nonlinear Coefficient tables

Bits 15-9: RESERVED

Bits 8-0: LIMIT0 – Configures LIMIT0 in Nonlinear Coefficient tables

4.8.17 Filter Nonlinear Limit Register 1 (*FILTERNL1*)

Address 00160040 – Filter 2 Nonlinear Limit Register 1

Address 00190040 – Filter 1 Nonlinear Limit Register 1

Address 001C0040 – Filter 0 Nonlinear Limit Register 1

Bit Number	24:16	15:9	8:0
Bit Name	LIMIT3	RESERVED	LIMIT2
Access	R/W	-	R/W
Default	0_0000_0000	000_0000	0_0000_0000

Bits 24-16: LIMIT3 – Configures LIMIT3 in Nonlinear Coefficient tables

Bits 15-9: RESERVED

Bits 8-0: LIMIT2 – Configures LIMIT2 in Nonlinear Coefficient tables

4.8.18 Filter Nonlinear Limit Register 2 (FILTERNL2)

Address 00160044 – Filter 2 Nonlinear Limit Register 2

Address 00190044 – Filter 1 Nonlinear Limit Register 2

Address 001C0044 – Filter 0 Nonlinear Limit Register 2

Bit Number	24:16	15:9	8:0
Bit Name	LIMIT5	RESERVED	LIMIT4
Access	R/W	-	R/W
Default	0_0000_0000	000_0000	0_0000_0000

Bits 24-16: LIMIT5 – Configures LIMIT5 in Nonlinear Coefficient tables

Bits 15-9: RESERVED

Bits 8-0: LIMIT4 – Configures LIMIT4 in Nonlinear Coefficient tables

4.8.19 Filter KI Feedback Clamp High Register (FILTERKICLPHI)

Address 00160048 – Filter 2 KI Feedback Clamp High Register

Address 00190048 – Filter 1 KI Feedback Clamp High Register

Address 001C0048 – Filter 0 KI Feedback Clamp High Register

Bit Number	23:0
Bit Name	KI_CLAMP_HIGH
Access	R/W
Default	0111_1111_1111_1111_1111_1111

Bits 23-0: KI_CLAMP_HIGH – Sets the upper limit of KI_YN value. If calculated KI_YN exceeds this threshold, the KI_YN register will be set to KI_CLAMP_HIGH

4.8.20 Filter KI Feedback Clamp Low Register (FILTERKICLPL0)

Address 0016004C – Filter 2 KI Feedback Clamp Low Register

Address 0019004C – Filter 1 KI Feedback Clamp Low Register

Address 001C004C – Filter 0 KI Feedback Clamp Low Register

Bit Number	23:0
Bit Name	KI_CLAMP_LOW
Access	R/W

Default	0000_0000_0000_0000_0000_0000
---------	-------------------------------

Bits 23-0: KI_CLAMP_LOW – Sets the lower limit of KI_YN value. If calculated KI_YN falls below this threshold, the KI_YN register will be set to KI_CLAMP_LOW

4.8.21 Filter YN Clamp High Register (*FILTERYNCLPHI*)

Address 00160050 – Filter 2 YN Clamp High Register

Address 00190050 – Filter 1 YN Clamp High Register

Address 001C0050 – Filter 0 YN Clamp High Register

Bit Number	23:0
Bit Name	YN_CLAMP_HIGH
Access	R/W
Default	0111_1111_1111_1111_1111_1111

Bits 23-0: YN_CLAMP_HIGH – Sets the upper limit of YN value. If calculated YN exceeds this threshold, the YN register will be set to YN_CLAMP_HIGH

4.8.22 Filter YN Clamp Low Register (*FILTERYNCLPLO*)

Address 00160054 – Filter 2 YN Clamp Low Register

Address 00190054 – Filter 1 YN Clamp Low Register

Address 001C0054 – Filter 0 YN Clamp Low Register

Bit Number	23:0
Bit Name	YN_CLAMP_LOW
Access	R/W
Default	0000_0000_0000_0000_0000_0000

Bits 23-0: YN_CLAMP_LOW – Sets the lower limit of YN value. If calculated YN falls below this threshold, the YN register will be set to YN_CLAMP_LOW

4.8.23 Filter Output Clamp High Register (*FILTEROCLPHI*)

Address 00160058 – Filter 2 Output Clamp High Register

Address 00190058 – Filter 1 Output Clamp High Register

Address 001C0058 – Filter 0 Output Clamp High Register

Bit Number	17:0
Bit Name	OUTPUT_CLAMP_HIGH
Access	R/W
Default	11_1111_1111_1111_1111

Bits 17-0: OUTPUT_CLAMP_HIGH – Sets the upper limit of filter output value. If calculated filter output exceeds this threshold, the filter output will be set to OUTPUT_CLAMP_HIGH

4.8.24 Filter Output Clamp Low Register (*FILTEROCLPLO*)

Address 0016005C – Filter 2 Output Clamp Low Register

Address 0019005C – Filter 1 Output Clamp Low Register

Address 001C005C – Filter 0 Output Clamp Low Register

Bit Number	17:0
Bit Name	OUTPUT_CLAMP_LOW
Access	R/W
Default	00_0000_0000_0000_0000

Bits 17-0: OUTPUT_CLAMP_LOW – Sets the lower limit of filter output value. If calculated filter output falls below this threshold, the filter output will be set to OUTPUT_CLAMP_LOW

4.8.25 Filter Preset Register (*FILTERPRESET*)

Address 00160060 – Filter 2 Filter Preset Register

Address 00190060 – Filter 1 Filter Preset Register

Address 001C0060 – Filter 0 Filter Preset Register

Bit Number	27	26:24	23:0
Bit Name	PRESET_EN	PRESET_REG_SEL	PRESET_VALUE
Access	R/W	R/W	R/W
Default	00	000	0000_0000_0000_0000_0000

Bit 27: PRESET_EN – Set to ‘1’ to initiate write of internal filter register (Self cleared by hardware after successful programming)

Bits 26-24: PRESET_REG_SEL – Selects internal filter register to preset by processor

0 = XN_M1 Register (only bits 10:0 of PRESET_VALUE will be programmed into register)

1 = KI_YN Register

2 = KD_YN Register

3 = YN Register

4 = 18-bit Filter Data Register (after multiplication)

Bits 23-0: PRESET_VALUE – Value to preset into selected register

4.9 Front End Control Registers

Registers for Front End Control modules 0-2 are identical in their bit definitions

4.9.1 Ramp Control Register (RAMPCTRL)

Address 0x0018_0000 – Front End Control 2 Ramp Control Register

Address 0x001B_0000 – Front End Control 1 Ramp Control Register

Address 0x001E_0000 – Front End Control 0 Ramp Control Register

Bit Number	29:16	15:13	12
Bit Name	SYNC_FET_RAMP_START	RESERVED	RAMP_SAT_EN
Access	R/W	-	R/W
Default	00_0000_0000_0000	00	0

Bit Number	11	10	9
Bit Name	RAMP_COMP_INT_EN	RAMP_DLY_INT_EN	PREBIAS_INT_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	8	7	6:5	4
Bit Name	PCM_START_SEL	SYNC_FET_EN	MASTER_SEL	SLAVE_COMP_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	00	0

Bit Number	3	2	1	0
Bit Name	SLAVE_DELAY_EN	CONTROL_EN	FIRMWARE_START	RAMP_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bits 29-16: SYNC_FET_RAMP_START – Provides the starting value for the SyncFET Ramp with a resolution of High Frequency Oscillator Period/bit

Bits 15-13: RESERVED – Unused Bits

Bit 12: RAMP_SAT_EN – Enables addition or subtraction of DAC Saturation Step when EADC is in saturation.

0 = DAC Saturation Step logic is disabled, DAC incremented/decremented by value calculated by Ramp logic when EADC is in saturation (Default)

1 = DAC Saturation Step logic is enabled, DAC incremented/decremented by value stored in DAC Saturation Step register when EADC is in saturation

Bit 11: RAMP_COMP_INT_EN – Enables Ramp I/F Interrupt when soft-start/power-down ramp procedure is complete

- 0 = Soft-start/Power-Down Ramp Complete Interrupt is disabled (Default)
- 1 = Soft-start/Power-Down Ramp Complete Interrupt is enabled

Bit 10: RAMP_DLY_INT_EN – Enables Ramp I/F Interrupt when ramp delay procedure is complete

- 0 = Soft-start/Power-Down Ramp Delay Complete Interrupt is disabled (Default)
- 1 = Soft-start/Power-Down Ramp Delay Complete Interrupt is enabled

Bit 9: PREBIAS_INT_EN – Enables Ramp I/F Interrupt when Pre-Bias procedure is completed

- 0 = Pre-bias Complete Interrupt is disabled (Default)
- 1 = Pre-bias Complete Interrupt is enabled

Bit 8: PCM_START_SEL – Peak Current Mode Ramp Start Value Select

- 0 = Ramp starts from value programmed in DAC_VALUE bits in EADC_DAC_VALUE Register (Default)
- 1 = Ramp starts from filter output selected by PCM_SEL bits in Front End Control Mux Register

Bit 7: SYNC_FET_EN – Enables SyncFET Ramp Operation

- 0 = SyncFET Ramp Operation disabled (Default)
- 1 = SyncFET Ramp Operation enabled

Bits 6-5: MASTER_SEL – Selects Master Ramp I/F in slave mode

- 0 = Front End Control 0 acts as master (Default)
- 1 = Front End Control 1 acts as master
- 2 = Front End Control 2 acts as master

Bit 4: SLAVE_COMP_EN – Enables syncing of ramp start to Master Ramp I/F Complete pulse

- 0 = Ramp initiated by Master Ramp Complete pulse disabled (Default)
- 1 = Ramp initiated by Master Ramp Complete pulse enabled

Bit 3: SLAVE_DELAY_EN – Enables syncing of ramp start to Master Ramp I/F Delay Complete pulse

- 0 = Ramp initiated by Master Ramp Delay Complete pulse disabled (Default)
- 1 = Ramp initiated by Master Ramp Delay Complete pulse enabled

Bit 2: CONTROL_EN – Enables PMBus Control line to initiate ramp

- 0 = PMBus Control does not initiate ramp (Default)
- 1 = PMBus Control initiates ramp

Bit 1: FIRMWARE_START – Ramp start bit, self-clearing by ramp logic

- 0 = No ramp sequence initiated by firmware (Default)
- 1 = Ramp sequence initiated by firmware

Bit 0: RAMP_EN – Enable Ramp Logic (Pre-biasing should be disabled before asserting ramp, bit 16 of Pre-Bias Control Register)

0 = No soft start or power-down ramp controlled by hardware (Default)

1 = Enables hardware control of soft start or power-down ramp

Preliminary

4.9.2 Ramp Status Register (RAMPSTAT)

Address 0x0018_0004 – Front End Control 2 Ramp Status Register

Address 0x001B_0004 – Front End Control 1 Ramp Status Register

Address 0x001E_0004 – Front End Control 0 Ramp Status Register

Bit Number	11	10	9
Bit Name	EADC_DONE_RAW	RAMP_COMP_INT_STATUS	RAMP_DLY_INT_STATUS
Access	R	R	R
Default	-	-	-

Bit Number	8	7	6
Bit Name	PREBIAS_INT_STATUS	EADC_SAT_HIGH	EADC_SAT_LOW
Access	R	R	R
Default	-	-	-

Bit Number	5	4	3
Bit Name	EADC_EOC	PREBIAS_BUSY	RAMP_BUSY
Access	R	R	R
Default	-	-	-

Bit Number	2	1	0
Bit Name	RAMP_COMP_STATUS	RAMP_DLY_STATUS	PREBIAS_STATUS
Access	R	R	R
Default	-	-	-

Bit 11: EADC_DONE_RAW – EADC Conversion Done Raw Status

0 = EADC Conversion has not completed

1 = EADC Conversion has completed

Bit 10: RAMP_COMP_INT_STATUS – Ramp Complete latched status

0 = No Ramp Complete has been declared

1 = Ramp Complete has been declared

Bit 9: RAMP_DLY_INT_STATUS – Ramp Delay Complete latched status

0 = No Ramp Delay Complete has been declared

1 = Ramp Delay Complete has been declared

Bit 8: PREBIAS_INT_STATUS – Pre-Bias Complete latched status

0 = No Pre-Bias Complete has been declared

1 = Pre-Bias Complete has been declared

Bit 7: EADC_SAT_HIGH – EADC Saturation High Indicator

0 = EADC output is not saturated at high limit

1 = EADC output is saturated at high limit

Bit 6: EADC_SAT_LOW – EADC Saturation Low Indicator

0 = EADC output is not saturated at low limit

1 = EADC output is saturated at low limit

Bit 5: EADC_EOC – Indicates EADC end of conversion

Bit 4: PRE_BIAS_BUSY – Pre-Bias Busy

0 = Pre-Bias is not in progress

1 = Pre-Bias in progress

Bit 3: RAMP_BUSY – Ramp Busy

0 = Soft-Start/Power-Down Ramp is not in progress

1 = Soft-Start/Power-Down Ramp is in progress

Bit 2: RAMP_COMP_STATUS – Ramp Complete, Raw Status

0 = Ramp procedure is not complete

1 = Ramp procedure is complete

Bit 1: RAMP_DLY_STATUS – Ramp Delay Complete, Raw Status

0 = Ramp delay procedure is not complete

1 = Ramp delay procedure is complete

Bit 0: PRE_BIAS_STATUS – Pre-Bias Complete, Raw Status

0 = Pre-Bias is not completed

1 = Pre-Bias is completed

4.9.3 Ramp Cycle Register (RAMPCYCLE)

Address 0x0018_0008 – Front End Control 2 Ramp Cycle Register

Address 0x001B_0008 – Front End Control 1 Ramp Cycle Register

Address 0x001E_0008 – Front End Control 0 Ramp Cycle Register

Bit Number	23:8	7	6:0
Bit Name	DELAY_CYCLES	RESERVED	SWITCH_CYC_PER_STEP
Access	R/W	-	R/W
Default	0000_0000_0000_0000	0	000_0000

Bits 23-8: DELAY_CYCLES – Configures the number of delay cycles before an initiation of ramp sequence. Each delay cycle consists of n switching cycles, as specified by SWITCH_CYC_PER_STEP (Bits 6-0). Number of delay cycles can vary from 0 to 65535

0 = Ramp starts without delay (Default)

1 = Ramp starts after (1*SWITCH_CYC_PER_STEP) switching cycles

2 = Ramp starts after (2*SWITCH_CYC_PER_STEP) switching cycles

.....

65535 = Ramp starts after (65535*SWITCH_CYC_PER_STEP) switching cycles

Bit 7: RESERVED

Bits 6-0: SWITCH_CYC_PER_STEP – Selects number of switching cycles per DAC step. Number of subcycles can vary from 1 to 128.

0 = 1 switching cycle per step (Default)

1 = 2 subcycles per cycle

2 = 3 subcycles per cycle

.....

127 = 128 subcycles per cycle

4.9.4 EADC DAC Value Register (EADCDAC)

Address 0x0018_000C – Front End Control 2 EADC DAC Value Register

Address 0x001B_000C – Front End Control 1 EADC DAC Value Register

Address 0x001E_000C – Front End Control 0 EADC DAC Value Register

Bit Number	16	15	14	13:0
Bit Name	DAC_DITHER_ON_SAMPLE	DAC_DITHER_EN	RESERVED	DAC_VALUE
Access	R/W	R/W	-	R/W
Default	0	0	0	00_1111_1111_0000

Bit 16: DAC_DITHER_ON_SAMPLE – DAC Dither on Sample

0 = Dither on sample trigger disabled (default)

1 = Dither on sample trigger enabled

Bit 15: DAC_DITHER_EN – DAC Dithering Enable

0 = DAC Dithering disabled (Default)

1 = DAC Dithering enabled

Bit 15: RESERVED

Bits 13:0: DAC_VALUE - Programmable DAC Value, effective LSB equals 0.09765625mV

4.9.5 Ramp DAC Ending Value Register (RAMPDACEEND)

Address 0x0018_0010 – Front End Control 2 Ramp DAC Ending Register

Address 0x001B_0010 – Front End Control 1 Ramp DAC Ending Register

Address 0x001E_0010 – Front End Control 0 Ramp DAC Ending Register

Bit Number	13:0
Bit Name	RAMP_DAC_VALUE
Access	R/W
Default	00_0000_0000_0000

Bits 13:0: RAMP_DAC_VALUE – Programmable Ramp Ending DAC Value, LSB equals 0.09765625mV

4.9.6 DAC Step Register (DACSTEP)

Address 0x0018_0014 – Front End Control 2 DAC Step Register

Address 0x001B_0014 – Front End Control 1 DAC Step Register

Address 0x001E_0014 – Front End Control 0 DAC Step Register

Bit Number	17:0
Bit Name	DAC_STEP
Access	R/W
Default	00_0000_0000_0000_0000

Bits 17:0: DAC_STEP – Programmable 18-bit unsigned DAC Step. Bits 17:10 represent the real portion of the DAC Step (0-255 DAC counts at bit resolution of 0.09765625mV). Bits 9:0 represent the fractional portion of the DAC Step.

4.9.7 DAC Saturation Step Register (DACSATSTEP)

Address 0x0018_0018 – Front End Control 2 DAC Saturation Step Register

Address 0x001B_0018 – Front End Control 1 DAC Saturation Step Register

Address 0x001E_0018 – Front End Control 0 DAC Saturation Step Register

Bit Number	13:0
Bit Name	DAC_SAT_STEP
Access	R/W
Default	00_0000_0000_0000

Bits 13-0: DAC_SAT_STEP – Programmable DAC Saturation Step, LSB equals 0.009765625mV

0 = DAC not adjusted on EADC saturation during ramp (Default)

1 = DAC adjusted by 1 DAC count on EADC saturation during ramp

.....

1023 = DAC adjusted by 1023 DAC counts on EADC saturation during ramp

4.9.8 EADC Control Register (EADCCTRL)

Address 0x0018_0020 – Front End Control 2 EADC Control Register

Address 0x001B_0020 – Front End Control 1 EADC Control Register

Address 0x001E_0020 – Front End Control 0 EADC Control Register

Bit Number	28	27	26
Bit Name	D2S_COMP_EN	EN_HYST_HIGH	EN_HYST_LOW
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	25:22	21	20
Bit Name	SAMP_TRIG_SCALE	FRAME_SYNC_EN	SCFE_CNT_RST
Access	R/W	R/W	R/W
Default	0000	0	0

Bit Number	19:16	15	14
Bit Name	SCFE_CNT_INIT	EADC_INV	AUTO_GAIN_SHIFT_MODE
Access	R/W	R/W	R/W
Default	0000	0	0

Bit Number	13	12	11
Bit Name	AUTO_GAIN_SHIFT_EN	AVG_WEIGHT_EN	AVG_SPATIAL_EN

Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	10:9	8:6	5:4
Bit Name	AVG_MODE_SEL	EADC_MODE	AFE_GAIN
Access	R/W	R/W	R/W
Default	00	000	11

Bit Number	3	2	1	0
Bit Name	SCFE_GAIN_FILTER_SEL	SCFE_CLK_DIV_2	SCFE_ENA	EADC_ENA
Access	R/W	R/W	R/W	R/W
Default	1	1	1	1

Bit 28: D2S_COMP_EN – Analog Front End Ramp Comparator Enable

0 = Analog Front End Ramp Comparator disabled (Default)

1 = Analog Front End Ramp Comparator enabled

Bit 27: EN_HYST_HIGH – Increase comparator trip point by ~70mV

0 = Disables increase of ramp comparator trip point (Default)

1 = Enables increase of ramp comparator trip point

Bit 26: EN_HYST_LOW – Decrease comparator trip point by ~70mV

0 = Disables decrease of ramp comparator trip point (Default)

1 = Enables decrease of ramp comparator trip point

Bits 25-22: SAMP_TRIG_SCALE – Provides capability to mask incoming sample triggers to Front End Control

0 = EADC conversion initiated on every received sample trigger (Default)

1 = EADC conversion initiated once every 2 received sample triggers

2 = EADC conversion initiated once every 3 received sample triggers

.....

15 = EADC conversion initiated once every 16 received sample triggers

Bit 21: FRAME_SYNC_EN – Enable synchronization of switched cap front end counter to Switching Cycle Frame boundary

0 = Switch Cap Front End Counter not synchronized to frame (Default)

1 = Switch Cap Front End Counter synchronized to frame boundary

Bit 20: SCFE_CNT_RST – Force reset of Switched Cap Front End Counter

0 = Switch Cap Front End Counter operational (Default)

1 = Switch Cap Front End Counter reset

Bits 19-16: SCFE_CNT_INIT – Configures initial Switched Cap Front End Counter value out of reset or at start of switching cycle in Peak Current mode

Bit 15: EADC_INV – Enables EADC Data Inversion on data to filter module

0 = EADC Data is not inverted (Default)

1 = EADC Data Inverted

Bit 14: AUTO_GAIN_SHIFT_MODE – Configures Automatic Gain Shifting mode

0 = Fixed mode, gain shifting dependent on saturation of EADC for decreasing gain and less than 1/4 of dynamic range for increasing gain (Default)

1 = NL mode, gain shifting dependent on Non-Linear limit thresholds

Bit 13: AUTO_GAIN_SHIFT_EN – Enables Automatic Gain Shifting mode

0 = Automatic Gain Shifting Mode disabled (Default)

1 = Automatic Gain Shifting Mode enabled

Bit 12: AVG_WEIGHT_EN – Enables weighted averaging in EADC averaging mode (EADC_MODE = 1), only applicable in 4x and 8x averaging mode (AVG_MODE_SEL = 1 or 2). For 4x averaging, two oldest samples are each weighted by 1/8, the next oldest sample has a weight of 1/4 and the newest sample is weighted by 1/2. For 8x averaging, the four oldest samples are each weighted by 1/16, the next 2 oldest samples are weighted by 1/8, the next oldest sample is weighted by 1/4 and the newest sample is weighted by 1/4.

0 = Weighted averaging disabled (Default)

1 = Weighted averaging enabled

Bit 11: AVG_SPATIAL_EN – Enables spatial mode in EADC averaging mode

0 = (Default)

For 2x averaging, Each sample trigger from DPWM triggers 2 EADC start of conversions.

For 4x averaging, Each sample trigger from DPWM triggers 4 EADC start of conversions.

For 8x averaging, Each sample trigger from DPWM triggers 8 EADC start of conversions.

For 2x, 4x and 8x averaging; Each sample trigger from DPWM results in a single averaged sample to filter.

1 = EADC samples averaged based on received sample triggers from DPWM modules. Each sample trigger from DPWM triggers one EADC start of conversion.

For 2x averaging, 2 sample triggers from DPWM results in a single averaged sample to filter.

For 4x averaging, 4 sample triggers from DPWM results in a single averaged sample to filter.

For 8x averaging, 8 sample triggers from DPWM results in a single averaged sample to filter.

Bit 10-9: AVG_MODE_SEL – Averaging Mode Configuration

- 0 = 2x Averaging (Default)
- 1 = 4x Averaging
- 2 = 8x Averaging

Bits 8-6: EADC_MODE – Selects EADC Mode Operation

- 0 = Standard mode, EADC samples based on sample triggers from DPWM module (Default)
- 1 = Averaging Mode, configured by AVG_MODE_SEL
- 2 = Non-continuous SAR Mode
- 3 = Continuous SAR Mode
- 4 = Reserved
- 5 = Peak Current Mode
- 6 = Constant Power/Constant Current Control Mode (CPCC module controls switching between Standard Mode and Non-Continuous SAR Mode)
- 7 = Constant Power/Constant Current Control 2 Mode (CPCC module controls switching between Standard mode and Continuous SAR Mode)

Bits 5-4: AFE_GAIN – AFE Front End Gain Setting

- 0 = 1x Gain, 8mV/LSB
- 1 = 2x Gain, 4mV/LSB
- 2 = 4x Gain, 2mV/LSB
- 3 = 8x Gain, 1mV/LSB (Default)

Bit 3: SCFE_GAIN_FILTER_SEL – Switched Cap Noise Filter Enable

- 0 = Disables Switch Cap Noise Filter
- 1 = Enables Switch Cap Noise Filter (Default)

Bit 2: SCFE_CLK_DIV_2 – Switched Cap Front End Clock Divider Select

- 0 = Switch Cap Clock divide by 2
- 1 = Switch Cap Clock divide by 1 (Default)

Bit 1: SCFE_ENA – Switch Cap Front Enable

- 0 = Disables Switch Cap Front End logic
- 1 = Enables Switch Cap Front End logic (Default)

Bit 0: EADC_ENA – EADC Enable

- 0 = Disables EADC
- 1 = Enables EADC (Default)

4.9.9

4.9.10 Pre-Bias Control Register 0 (PREBIASCTRL0)

Address 0x0018_0028 – Front End Control 2 Pre-Bias Control Register 0

Address 0x001B_0028 – Front End Control 1 Pre-Bias Control Register 0

Address 0x001E_0028 – Front End Control 0 Pre-Bias Control Register 0

Bit Number	17	16	15:8	7:0
Bit Name	PRE_BIAS_POL	PRE_BIAS_EN	PRE_BIAS_RANGE	PRE_BIAS_LIMIT
Access	R/W	R/W	R/W	R/W
Default	0	0	1111_1111	0000_0000

Bit 17: PRE_BIAS_POL – Configures polarity of received error voltage

0 = Error equals Vref-Vin (Default)

1 = Error equals Vin-Vref

Bit 16: PRE_BIAS_EN – Enable Pre-Biasing of Error ADC (Ramp should be disabled during pre-biasing, bit 0 of Ramp Control Register)

0 = Pre-Biasing has not been initiated (Default)

1 = Pre-Biasing by hardware has been enabled

Bits 15-8: PRE_BIAS_RANGE – Sets the acceptable range around the zero error point. If Error ADC value stays in range for number of samples specified by **PRE_BIAS_LIMIT** (Bits 7:0), **PREBIAS_STATUS** (Bit 0 of Ramp Status Register) is enabled. Range will be +/- **PRE_BIAS_RANGE** around zero error point.

Bits 7-0: PRE_BIAS_LIMIT – Sets the acceptable number of samples in which the Error ADC value stays in range before asserting **PREBIAS_STATUS** (Bit 0 of Ramp Status Register). Counter limit ranges from 0 to 255. If

PREBIAS_STATUS is set, it will take **PRE_BIAS_LIMIT** samples outside of acceptable range before clearing **PREBIAS_STATUS**.

4.9.11 Pre-Bias Control Register 1 (PREBIASCTRL1)

Address 0x0018_002C – Front End Control 2 Pre-Bias Control Register 1

Address 0x001B_002C – Front End Control 1 Pre-Bias Control Register 1

Address 0x001E_002C – Front End Control 0 Pre-Bias Control Register 1

Bit Number	23:16	15:14	13:0
Bit Name	SAMPLES_PER_ADJ	RESERVED	MAX_DAC_ADJ
Access	R/W	-	R/W
Default	0000_0000	00	00_0000_0000_0000

Bits 23-16: SAMPLES_PER_ADJ – Configures the number of EADC samples

between Pre-Bias DAC setpoint adjustments

0 = DAC Setpoint adjustment on each EADC sample

1 = DAC Setpoint adjustment after 2 EADC sample

2 = DAC Setpoint adjustment after 3 EADC samples

.....

255 = DAC Setpoint adjustment after 256 EADC samples

Bits 15-14: RESERVED – Unused Bits

Bits 13-0: MAX_DAC_ADJ – Configures the maximum DAC setpoint adjustment step

4.9.12 SAR Control Register (SARCTRL)

Address 0x0018_0030 – Front End Control 2 SAR Control Register

Address 0x001B_0030 – Front End Control 1 SAR Control Register

Address 0x001E_0030 – Front End Control 0 SAR Control Register

Bit Number	31:24	23:16	15:8
Bit Name	EADC_WINDOW_2	EADC_WINDOW_1	SAR_RANGE
Access	R/W	R/W	R/W
Default	0010_1000	0110_0000	0001_0000

Bit Number	7:2	1:0
Bit Name	RESERVED	SAR_RESOLUTION
Access	-	R/W
Default	0000_00	00

Bits 31-24: EADC_WINDOW_2 – Configures acceptable range of error values to transition to AFE Gain of 2 during SAR process

Bits 23-16: EADC_WINDOW_1 – Configures acceptable range of error values to transition to AFE Gain of 1 during SAR process

Bits 15-8: SAR_RANGE – Configures acceptable range of error values before declaring SAR completion

Bits 7-2: RESERVED – Unused bits

Bits 1-0: SAR_RESOLUTION – Configures the final resolution for SAR Conversions

0 = 8mV Resolution, 1x AFE Gain

1 = 4mV Resolution, 2x AFE Gain

2 = 2mV Resolution, 4x AFE Gain

3 = 1mV Resolution, 8x AFE Gain

4.9.13 SAR Timing Register (SARTIMING)

Address 0x0018_0034 – Front End Control 2 SAR Timing Register

Address 0x001B_0034 – Front End Control 1 SAR Timing Register

Address 0x001E_0034 – Front End Control 0 SAR Timing Register

Bit Number	10:8	7
Bit Name	SAR_TIMING_UPPER	RESERVED
Access	R/W	-
Default	100	0

Bit Number	6:4	3	2:0
Bit Name	SAR_TIMING_MID	RESERVED	SAR_TIMING_LOWER
Access	R/W	-	R/W
Default	011	0	010

Bits 10-8: SAR_TIMING_UPPER – Configures timing for Bits 9:8 of DAC setpoint for SAR Algorithm

Bit 7: RESERVED – Unused bit

Bits 6-4: SAR_TIMING_MID – Configures timing for Bits 7:6 of DAC setpoint for SAR Algorithm

Bit 3: RESERVED – Unused bit

Bits 2-0: SAR_TIMING_LOWER – Configures timing for Bits 5:0 of DAC setpoint for SAR Algorithm

4.9.14 EADC Value Register (EADCVALUE)

Address 0x0018_0038 – Front End Control 2 EADC Value Register

Address 0x001B_0038 – Front End Control 1 EADC Value Register

Address 0x001E_0038 – Front End Control 0 EADC Value Register

Bit Number	25:16	15	14
Bit Name	ABS_VALUE	EADC_SAT_HIGH	EADC_SAT_LOW
Access	R	R	R
Default	-	-	-

Bit Number	13:9	8:0
Bit Name	RESERVED	ERROR_VALUE
Access	-	R
Default	0_0000	-

Bits 25-16: ABS_VALUE – 10-bit Absolute Value calculated by Front End

Control Module with a resolution of 1.5625mV/bit

Bit 15: EADC_SAT_HIGH – EADC Saturation High Indicator

0 = EADC output is not saturated at high limit

1 = EADC output is saturated at high limit

Bit 14: EADC_SAT_LOW – EADC Saturation Low Indicator

0 = EADC output is not saturated at low limit

1 = EADC output is saturated at low limit

Bits 13-9: RESERVED – Unused bits

Bits 8-0: ERROR_VALUE – Signed 9-bit Error value measured by Front End Control Module with a resolution of 1mV/bit

4.9.15 EADC Raw Value Register (EADCRAWVALUE)

Address 0x0018_003C – Front End Control 2 EADC Raw Value Register

Address 0x001B_003C – Front End Control 1 EADC Raw Value Register

Address 0x001E_003C – Front End Control 0 EADC Raw Value Register

Bit Number	8:0
Bit Name	RAW_ERROR_VALUE
Access	R
Default	-

Bits 8-0: RAW_ERROR_VALUE – Signed 9-bit Error value measured by Front End Control Module with a resolution of 1mV/bit. Value is raw EADC data before averaging.

4.9.16 DAC Status Register (DACSTAT)

Address 0x0018_0040 – Front End Control 2 DAC Status Register

Address 0x001B_0040 – Front End Control 1 DAC Status Register

Address 0x001E_0040 – Front End Control 0 DAC Status Register

Bit Number	9:0
Bit Name	DAC_VALUE
Access	R
Default	00_0000_0000

Bits 9-0: DAC_VALUE – Current 10-bit Value sent to DAC

4.10 Miscellaneous Analog Control

The Miscellaneous Analog Control module provides control signals to the oscillator and AFE blocks.

i. Clock Trim Register (CLKTRIM)

Address FFF7F000

Bit Number	16	15:0
Bit Name	RESET_DISABLE	RESERVED
Access	R/W	
Default	0	xx

Bits 16: RESET_DISABLE

0 = Reset pin resets device (Default)

1 = Reset pin does not reset the device

Bits 15-0: RESERVED – may be non-zero, should not be changed by firmware

4.10.1 Package ID Register (PKGID)

Address FFF7F010

Bit Number	1:0
Bit Name	PKG_ID
Access	R/W
Default	00

Bits 1-0: PKG_ID – Represents package type of device

0 = 64-pin package (Default)

1 = 40-pin package

2 = 48-pin package

4.10.2 Brownout Register (BROWNOUT)

Address FFF7F014

Bit Number	2	1	0
Bit Name	INT	INT_EN	COMP_EN
Access	R	R/W	R/W
Default	-	0	0

Bit 2: INT – Brownout Interrupt Status

0 = No Brownout Condition observed

1 = Brownout Condition observed

Bit 1: INT_EN – Brownout Interrupt Enable

0 = Brownout Interrupt disabled (Default)

1 = Brownout Interrupt enabled

Bit 0: COMP_EN – Brownout Comparator Enable

0 = Brownout comparator logic disabled (Default)

1 = Brownout comparator logic enabled

4.10.3 Global I/O EN Register (GLBIOEN)

Address FFF7F018

Bit Number	29:0
Bit Name	GLOBAL_IO_EN
Access	R/W
Default	00_0000_0000_0000_0000_0000_0000_0000

Bits 29-0: GLOBAL_IO_EN – This register enables the global control of digital I/O pins

0 = Control of IO is done by the functional block assigned to the IO
(Default)

1 = Control of IO is done by Global IO registers.

Bit assignment is done by this table:

BIT	PIN_NAME
29	FAULT[3]
28	ADC_EXT_TRIG
27	TCK
26	TDO
25	TMS
24	TDI
23	SCI_TX[1]
22	SCI_TX[0]
21	SCI_RX[1]
20	SCI_RX[0]
19	TMR_CAP
18	TMR_PWM[1]
17	TMR_PWM[0]
16	PMBUS-CLK
15	PMBUS-DATA
14	CONTROL
13	ALERT
12	EXT_INT
11	FAULT[2]
10	FAULT[1]
9	FAULT[0]
8	SYNC
7	DPWM3B
6	DPWM3A
5	DPWM2B

4	DPWM2A
3	DPWM1B
2	DPWM1A
1	DPWM0B
0	DPWM0A

4.10.4 Global I/O OE Register (GLBIOOE)

Address FFF7F01C

Bit Number	29:0
Bit Name	GLOBAL_IO_OE
Access	R/W
Default	00_0000_0000_0000_0000_0000_0000_0000

Bits 29-0: GLOBAL_IO_OE – This register controls the output enable signals for all digital I/O pins

0 = Input (Default)

1 = Output

Bit assignment is done by this table:

BIT	PIN_NAME
29	FAULT[3]
28	ADC_EXT_TRIG
27	TCK
26	TDO
25	TMS
24	TDI
23	SCI_TX[1]
22	SCI_TX[0]
21	SCI_RX[1]
20	SCI_RX[0]
19	TMR_CAP
18	TMR_PWM[1]
17	TMR_PWM[0]
16	PMBUS-CLK
15	PMBUS-DATA
14	CONTROL
13	ALERT
12	EXT_INT
11	FAULT[2]
10	FAULT[1]
9	FAULT[0]
8	SYNC
7	DPWM3B
6	DPWM3A
5	DPWM2B
4	DPWM2A

3	DPWM1B
2	DPWM1A
1	DPWM0B
0	DPWM0A

4.10.5 Global I/O Open Drain Control Register (GLBLOOD)

Address FFF7F020

Bit Number	29:0
Bit Name	GLOBAL_IO_OD
Access	R/W
Default	00_0000_0000_0000_0000_0000_0000_0000

Bits 29-0: GLOBAL_IO_OD – This register controls if the global IO is configured as an open drain. This bit multiplexes the GLOBAL_IO_VALUE register to the OE signals

0 = Normal I/O (Default)

1 = Open Drain

Bit assignment is done by this table:

BIT	PIN_NAME
29	FAULT[3]
28	ADC_EXT_TRIG
27	TCK
26	TDO
25	TMS
24	TDI
23	SCI_TX[1]
22	SCI_TX[0]
21	SCI_RX[1]
20	SCI_RX[0]
19	TMR_CAP
18	TMR_PWM[1]
17	TMR_PWM[0]
16	PMBUS-CLK
15	PMBUS-DATA
14	CONTROL
13	ALERT
12	EXT_INT
11	FAULT[2]
10	FAULT[1]
9	FAULT[0]
8	SYNC
7	DPWM3B
6	DPWM3A
5	DPWM2B

4	DPWM2A
3	DPWM1B
2	DPWM1A
1	DPWM0B
0	DPWM0A

4.10.6 Global I/O Value Register (GLBIOVAL)

Address FFF7F024

Bit Number	29:0
Bit Name	GLOBAL_IO_VALUE
Access	R/W
Default	00_0000_0000_0000_0000_0000_0000_0000

Bits 29-0: GLOBAL_IO_VALUE – This register set the output value of the digital I/O pins when configured as outputs

0 = Digital I/O pin configured as low in output mode (Default)

1 = Digital I/O pin configured as high in output mode

Bit assignment is done by this table:

BIT	PIN_NAME
29	FAULT[3]
28	ADC_EXT_TRIG
27	TCK
26	TDO
25	TMS
24	TDI
23	SCI_TX[1]
22	SCI_TX[0]
21	SCI_RX[1]
20	SCI_RX[0]
19	TMR_CAP
18	TMR_PWM[1]
17	TMR_PWM[0]
16	PMBUS-CLK
15	PMBUS-DATA
14	CONTROL
13	ALERT
12	EXT_INT
11	FAULT[2]
10	FAULT[1]

9	FAULT[0]
8	SYNC
7	DPWM3B
6	DPWM3A
5	DPWM2B
4	DPWM2A
3	DPWM1B
2	DPWM1A
1	DPWM0B
0	DPWM0A

4.10.7 Global I/O Read Register (GLBIOREAD)

Address FFF7F028

Bit Number	29:0
Bit Name	GLOBAL_IO_READ
Access	R
Default	-

Bits 29-0: GLOBAL_IO_READ – This register provides the value on these signals after I/O muxing

0 = Digital I/O pin low (Default)

1 = Digital I/O pin high

Bit assignment is done by this table:

BIT	PIN_NAME
29	FAULT[3]
28	ADC_EXT_TRIG
27	TCK
26	TDO
25	TMS
24	TDI
23	SCI_TX[1]
22	SCI_TX[0]
21	SCI_RX[1]
20	SCI_RX[0]
19	TMR_CAP
18	TMR_PWM[1]
17	TMR_PWM[0]
16	PMBUS-CLK
15	PMBUS-DATA

14	CONTROL
13	ALERT
12	EXT_INT
11	FAULT[2]
10	FAULT[1]
9	FAULT[0]
8	SYNC
7	DPWM3B
6	DPWM3A
5	DPWM2B
4	DPWM2A
3	DPWM1B
2	DPWM1A
1	DPWM0B
0	DPWM0A

4.10.8

4.10.9 I/O Mux Control Register (IOMUX)

Address **FFF7F030**

Bit Number	12:11
Bit Name	FAULT_01_MUX_SEL
Access	R/W
Default	00

Bit Number	10:9	8:7	6:4
Bit Name	EXT_TRIG_MUX_SEL	JTAG_CLK_MUX_SEL	JTAG_DATA_MUX_SEL
Access	R/W	R/W	R/W
Default	00	01	000

Bit Number	3:2	1	0
Bit Name	SYNC_MUX_SEL	UART_MUX_SEL	PMBUS_MUX_SEL
Access	R/W	R/W	R/W
Default	00	0	0

Bits 12-11: FAULT_01_MUX_SEL – Fault 0 and 1 Pin Mux Select

I/O Pin	0	1	2
FAULT-0	FAULT-0	SPI-CS	I2C-DATA
FAULT-1	FAULT-1	SPI-CLK	I2C-CLK

Bits 10-9: EXT_TRIG_MUX_SEL – EXT_TRIG Pin Mux Select

I/O Pin	0	1	2	3
EXT_TRIG	EXT_TRIG	TCAP	SYNC	PWM-0

Bits 8-7: JTAG_CLK_MUX_SEL – TCK Pin Mux Select

I/O Pin	0	1	2	3
TCK	TCK	TCAP	SYNC	PWM-0

Bits 6-4: JTAG_DATA_MUX_SEL – TDO/TDI Pin Mux Select

I/O Pin	0	1	2	3	4
TDO	TDO	SCI_TX-0	ALERT	FAULT-0	SPI-MOSI
TDI	TDI	SCI_RX-0	CONTROL	FAULT-1	SPI-MISO

Bits 3-2: SYNC_MUX_SEL – SYNC Pin Mux Select

I/O Pin	0	1	2	3
SYNC	SYNC	TCAP	EXT_TRIG	PWM-0

Bit 1: UART_MUX_SEL – SCI_RX_1/SCI_TX_1 Pins Mux Select

I/O Pin	0	1
SCI_TX-1	SCI_TX-1	ALERT
SCI_RX-1	SCI_RX-1	CONTROL

Bit 0: PMBUS_MUX_SEL – SCL/SDA Pins Mux Select

I/O Pin	0	1
SCL	SCL	SCI_TX-0
SDA	SDA	SCI_RX-0

4.10.10 Current Sharing Control Register (CSCTRL) Address FFF7F038

Bit Number	23:16	15:8	7:4	3:0
Bit Name	DPWM_DUTY	DPMW_PERIOD	RESERVED	TEST_MODE
Access	R/W	R/W	-	R/W
Default	0000_0000	0000_0000	0000	0000

Bits 23-16: DPWM_DUTY – Configures Pulse Width/Duty Cycle for DPWM output to Current Sharing circuit. Resolution of LSB equals period of MCLK clock

Bits 15-8: DPMW_PERIOD – Configures Period for DPWM output to Current Sharing circuit. Output period equals DPMW_PERIOD+1 * LSB resolution. Resolution of LSB equals period of MCLK clock

Bits 7-4: RESERVED – Unused bits

Bits 3-0: TEST_MODE – Controls Current Sharing Operation

Test Mode	EN_SW1	EN_SW2	DIS_RES	DPWM	EN_HALF_CURR
0000	0	0	1	0	0
0001	1	0	0	ACTIVE	0
0010	0	0	1	0	0
0011	0	1	1	0	0
01XX	1	0	1	1	0
10XX	0	0	0	0	0
11XX	1	0	0	1	1

4.10.11 Temperature Reference Register (TEMPREF)

Address FFF7F03C

Bit Number	11:0
Bit Name	TEMP_REF
Access	R/W
Default	0000_0000_0000

Bits 11-0: TEMP_REF – Reference measurement taken during factory trim, ADC12 measurement of the internal temperature sensor at room temperature for use in offset calibration

4.10.12 Power Disable Control Register (PWRDISCTRL)

Address FFF7F040

Bit Number	19	18
Bit Name	I2C_CLK_EN	SPI_CLK_EN
Access	R/W	R/W
Default	1	1

Bit Number	17	16	15
Bit Name	PCM_CLK_EN	CPCC_CLK_EN	FILTER2_CLK_EN
Access	R/W	R/W	R/W
Default	1	1	1

Bit Number	14	13	12	11
Bit Name	FILTER1_CLK_EN	FILTER0_CLK_EN	FE_CTRL2_CLK_EN	FE_CTRL1_CLK_EN
Access	R/W	R/W	R/W	R/W
Default	1	1	1	1

Bit Number	10	9	8
Bit Name	FE_CTRL0_CLK_EN	DPWM3_CLK_EN	DPWM2_CLK_EN
Access	R/W	R/W	R/W
Default	1	1	1

Bit Number	7	6	5	4
Bit Name	DPWM1_CLK_EN	DPWM0_CLK_EN	SCI1_CLK_EN	SCI0_CLK_EN
Access	R/W	R/W	R/W	R/W
Default	1	1	1	1

Bit Number	3	2	1	0
Bit Name	ADC12_CLK_EN	PMBUS_CLK_EN	GIO_CLK_EN	TIMER_CLK_EN
Access	R/W	R/W	R/W	R/W
Default	1	1	1	1

Bit 19: I2C_CLK_EN – Clock Enable for I2C Module

0 = Disables clocks to I2C Module

1 = Enables clocks to I2C Module (Default)

Bit 18: SPI_CLK_EN – Clock Enable for SPI Module

0 = Disables clocks to SPI Module

1 = Enables clocks to SPI Module (Default)

Bit 17: PCM_CLK_EN – Clock Enable for Digital Peak Current Control Module

0 = Disables clocks to Digital Peak Current Control Module

1 = Enables clocks to Digital Peak Current Control Module (Default)

Bit 16: CPCC_CLK_EN – Clock Enable for Constant Power/Constant Current Module

0 = Disables clocks to Constant Power/Constant Current Module

1 = Enables clocks to Constant Power/Constant Current Module (Default)

Bit 15: FILTER2_CLK_EN – Clock Enable for Filter 2 Module

0 = Disables clocks to Filter 2 Module

1 = Enables clocks to Filter 2 Module (Default)

Bit 14: FILTER1_CLK_EN – Clock Enable for Filter 1 Module

0 = Disables clocks to Filter 1 Module

1 = Enables clocks to Filter 1 Module (Default)

Bit 13: FILTER0_CLK_EN – Clock Enable for Filter 0 Module

0 = Disables clocks to Filter 0 Module

1 = Enables clocks to Filter 0 Module (Default)

Bit 12: FE_CTRL2_CLK_EN – Clock Enable for Front End Control 2 Module

0 = Disables clocks to Front End Control 2 Module

1 = Enables clocks to Front End Control 2 Module (Default)

Bit 11: FE_CTRL1_CLK_EN – Clock Enable for Front End Control 1 Module

0 = Disables clocks to Front End Control 1 Module

1 = Enables clocks to Front End Control 1 Module (Default)

Bit 10: FE_CTRL0_CLK_EN – Clock Enable for Front End Control 0 Module

0 = Disables clocks to Front End Control 0 Module

1 = Enables clocks to Front End Control 0 Module (Default)

Bit 9: DPWM3_CLK_EN – Clock Enable for DPWM 3 Module

0 = Disables clocks to DPWM 3 Module

1 = Enables clocks to DPWM 3 Module (Default)

Bit 8: DPWM2_CLK_EN – Clock Enable for DPWM 2 Module

0 = Disables clocks to DPWM 2 Module

1 = Enables clocks to DPWM 2 Module (Default)

Bit 7: DPWM1_CLK_EN – Clock Enable for DPWM 1 Module

0 = Disables clocks to DPWM 1 Module

1 = Enables clocks to DPWM 1 Module (Default)

Bit 6: DPWM0_CLK_EN – Clock Enable for DPWM 0 Module

0 = Disables clocks to DPWM 0 Module

1 = Enables clocks to DPWM 0 Module (Default)

Bit 5: SCI1_CLK_EN – Clock Enable for SCI/UART 1Module

0 = Disables clocks to SCI/UART 1 Module

1 = Enables clocks to SCI/UART 1 Module (Default)

Bit 4: SCI0_CLK_EN – Clock Enable for SCI/UART 0 Module

0 = Disables clocks to SCI/UART 0 Module

1 = Enables clocks to SCI/UART 0 Module (Default)

Bit 3: ADC12_CLK_EN – Clock Enable for ADC12 Control Module

0 = Disables clocks to ADC12 Control Module

1 = Enables clocks to ADC12 Control Module (Default)

Bit 2: PMBUS_CLK_EN – Clock Enable for PMBus Interface Module

0 = Disables clocks to PMBus Interface Module

1 = Enables clocks to PMBus Interface Module (Default)

Bit 1: GIO_CLK_EN – Clock Enable for GIO Module

0 = Disables clocks to GIO Module

1 = Enables clocks to GIO Module (Default)

Bit 0: TIMER_CLK_EN – Clock Enable for Timer Module

0 = Disables clocks to Timer Module

1 = Enables clocks to Timer Module (Default)

4.10.13 DTC UART Pin Mux Select Register (DTCUARTSEL)

Address FFF7F048

Bit Number	4	3	2	1	0
Bit Name	DTC_ON_UART	DTC_B_SEL	DTC_A_SEL	UART1_RX_SEL	UART0_RX_SEL
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit 4: DTC_ON_UART – DTC Phase A/B on UART pins

0 = DTC Phase-A input from TDI pin

1 = DTC Phase-B input from TDO pin

0 = DTC Phase-A input from SCI_TX 0 pin

1 = DTC Phase-B input from SCI_RX 0 pin

Bit 3: DTC_B_SEL – DTC Phase-B Pin Mux Select

0 = DTC Phase-B input from TDO pin

1 = DTC Phase-B input from SYNC pin

Bit 2: DTC_A_SEL – DTC Phase-A Pin Mux Select

0 = DTC Phase-A input from TDI pin

1 = DTC Phase-A input from TCK pin

Bit 1: UART1_RX_SEL – UART 1 RX Mux

0 = UART 1 RX input from UART 1 RX pin

1 = UART 1 RX input from UART 0 RX pin

Bit 0: UART0_RX_SEL – UART 0 RX Mux

0 = UART 0 RX input from UART 0 RX pin

1 = UART 0 RX input from UART 1 RX pin

4.11 PMBus Interface

4.11.1 PMBUS Control Register 1 (PMBCTRL1)

Address FFF7F600

Bit Number	20	19	18	17
Bit Name	PRC_CALL	GRP_CMD	PEC_ENA	EXT_CMD
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit Number	16	15:8	7:1	0
Bit Name	CMD_ENA	BYTE_COUNT	SLAVE_ADDR	RW
Access	R/W	R/W	R/W	R/W
Default	0	0000_0000	000_0000	0

Bit 20: PRC_CALL – Master Process Call Message Enable

0 = Default state for all messages besides Process Call message (Default)

1 = Enables transmission of Process Call message

Bit 19: GRP_CMD – Master Group Command Message Enable

0 = Default state for all messages besides Group Command message (Default)

1 = Enables transmission of Group Command message

Bit 18: PEC_ENA – Master PEC Processing Enable

0 = Disables PEC processing (Default)

1 = Enables PEC byte transmission/reception

Bit 17: EXT_CMD – Master Extended Command Code Enable (Only for Read)

0 = Use 1 byte for Command Code (Default)

1 = Use 2 bytes for Command Code

Bit 16: CMD_ENA – Master Command Code Enable

0 = Disables use of command code on Master initiated messages (Default)

1 = Enables use of command code on Master initiated messages

Bits 15-8: BYTE_COUNT – Indicates number of data bytes transmitted in current message. Byte count does not include any device addresses, command words or block lengths in block messages. In block messages, the PMBus Interface automatically inserts the block length into the message based on the byte count setting. The firmware only needs to load the address, command words and data to be transmitted. PMBus Interface supports byte writes up to 255 bytes.

Bits 7-1: SLAVE_ADDR – Specifies the address of the slave to which the current message is directed towards.

Bit 0: RW – Indicates if current Master initiated message is read operation or write operation.

- 0 = Message is a write transaction (data from Master to Slave) (Default)
- 1 = Message is a read transaction (data from Slave to Master)

4.11.2 PMBus Transmit Data Buffer (PMBTBUF)

Address FFF7F604

Bit Number	31:24	23:16	15:8	7:0
Bit Name	BYTE3	BYTE2	BYTE1	BYTE0
Access	R/W	R/W	R/W	R/W
Default	0000_0000	0000_0000	0000_0000	0000_0000

Bits 31-24: BYTE3 – Last data byte transmitted from Transmit Data Buffer

Bits 23-16: BYTE2 – Third data byte transmitted from Transmit Data Buffer

Bits 15-8: BYTE1 – Second data byte transmitted from Transmit Data Buffer

Bits 7-0: BYTE0 – First data byte transmitted from Transmit Data Buffer

4.11.3 PMBus Receive Data Register (PMBRBUF)

Address FFF7F608

Bit Number	31:24	23:16	15:8	7:0
Bit Name	BYTE3	BYTE2	BYTE1	BYTE0
Access	R	R	R	R
Default	-	-	-	-

Bits 31-24: BYTE3 – Last data byte received in Receive Data Buffer

Bits 23-16: BYTE2 – Third data byte received in Receive Data Buffer

Bits 15-8: BYTE1 – Second data byte received in Receive Data Buffer

Bits 7-0: BYTE0 – First data byte received in Receive Data Buffer

4.11.4 PMBus Acknowledge Register (PMBACK)

Address FFF7F60C

Bit Number	0
Bit Name	ACK
Access	R/W
Default	0

Bit 0: ACK – Allows firmware to acknowledge or not acknowledge received data

0 = NACK received data (Default)

1 = Acknowledge received data, bit clears upon issue of ACK on PMBus

Preliminary

4.11.5 PMBus Status Register (PMBST)

Address FFF7F610

Bit Number	21	20	19	18
Bit Name	SCL_RAW	SDA_RAW	CONTROL_RAW	ALERT_RAW
Access	R	R	R	R
Default	-	-	-	-

Bit Number	17	16	15
Bit Name	CONTROL_EDGE	ALERT_EDGE	MASTER
Access	R	R	R
Default	-	-	-

Bit Number	14	13	12	11	10
Bit Name	LOST_ARB	BUS_FREE	UNIT_BUSY	RPT_START	SLAVE_ADDR_READY
Access	R	R	R	R	R
Default	-	-	-	-	-

Bit Number	9	8	7	6
Bit Name	CLK_HIGH_DETECTED	CLK_LOW_TIMEOUT	PEC_VALID	NACK
Access	R	R	R	R
Default	-	-	-	-

Bit Number	5	4	3	2:0
Bit Name	EOM	DATA_REQUEST	DATA_READY	RD_BYTE_COUNT
Access	R	R	R	R
Default	-	-	-	-

Bit 21: SCL_RAW – PMBus Clock Pin Real Time Status

0 = PMBus clock pin observed at logic level low

1 = PMBus clock pin observed at logic level high

Bit 20: SDA_RAW – PMBus Data Pin Real Time Status

0 = PMBus data pin observed at logic level low

1 = PMBus data pin observed at logic level high

Bit 19: CONTROL_RAW – Control Pin Real Time Status

0 = Control pin observed at logic level low

1 = Control pin observed at logic level high

Bit 18: ALERT_RAW – Alert Pin Real Time Status

0 = Alert pin observed at logic level low

1 = Alert pin observed at logic level high

Bit 17: CONTROL_EDGE – Control Edge Detection Status

0 = Control pin has not transitioned

1 = Control pin has been asserted by another device on PMBus

Bit 16: ALERT_EDGE – Alert Edge Detection Status

0 = Alert pin has not transitioned

1 = Alert pin has been asserted by another device on PMBus

Bit 15: MASTER – Master Indicator

0 = PMBus Interface in Slave Mode or Idle Mode

1 = PMBus Interface in Master Mode

Bit 14: LOST_ARB – Lost Arbitration Flag

0 = Master has attained control of PMBus

1 = Master has lost arbitration and control of PMBus

Bit 13: BUS_FREE – PMBus Free Indicator

0 = PMBus processing current message

1 = PMBus available for new message

Bit 12: UNIT_BUSY – PMBus Busy Indicator

0 = PMBus Interface is idle, ready to transmit/receive message

1 = PMBus Interface is busy, processing current message

Bit 11: RPT_START – Repeated Start Flag

0 = No Repeated Start received by interface

1 = Repeated Start condition received by interface

Bit 10: SLAVE_ADDR_READY – Slave Address Ready

0 = Indicates no slave address is available for reading

1 = Slave address ready to be read from Receive Data Register (Bits 6:0)

Bit 9: CLK_HIGH_DETECTED – Clock High Detection Status

0 = No Clock High condition detected

1 = Clock High exceeded 50ms during message

Bit 8: CLK_LOW_TIMEOUT – Clock Low Timeout Status

0 = No clock low timeout detected

1 = Clock low timeout detected, clock held low for greater than 35ms

Bit 7: PEC_VALID – PEC Valid Indicator

0 = Received PEC not valid (if EOM is asserted)

1 = Received PEC is valid

Bit 6: NACK – Not Acknowledge Flag Status

0 = Data transmitted has been accepted by receiver

1 = Receiver has not accepted transmitted data

Bit 5: EOM – End of Message Indicator

0 = Message still in progress or PMBus in idle state.

1 = End of current message detected

Bit 4: DATA_REQUEST – Data Request Flag

0 = No data needed by PMBus Interface

1 = PMBus Interface request additional data. PMBus clock stretching enabled to stall bus until firmware provides transmit data.

Bit 3: DATA_READY – Data Ready Flag

0 = No data available for reading by processor

1 = PMBus Interface read buffer full, firmware required to read data prior to further bus activity. PMBus clock stretching enabled to stall bus until data is read by firmware.

Bits 2-0: RD_BYTE_COUNT – Number of Data Bytes available in Receive Data Register

0 = No received data

1 = 1 byte received. Data located in Receive Data Register, Bits 7-0

2 = 2 bytes received. Data located in Receive Data Register, Bits 15-0

3 = 3 bytes received. Data located in Receive Data Register, Bits 23-0

4 = 4 bytes received. Data located in Receive Data Register, Bits 31-0

4.11.6 PMBus Interrupt Mask Register (PMBINTM)

Address FFF7F614

Bit Number	9	8	7	6
Bit Name	CLK_HIGH_TIMEOUT	LOST_ARB	CONTROL	ALERT
Access	R/W	R/W	R/W	R/W
Default	1	1	1	1

Bit Number	5	4	3
Bit Name	EOM	SLAVE_ADDR_READY	DATA_REQUEST
Access	R/W	R/W	R/W
Default	1	1	1

Bit Number	2	1	0
Bit Name	DATA_READY	BUS_LOW_TIMEOUT	BUS_FREE
Access	R/W	R/W	R/W
Default	1	1	1

Bit 9: CLK_HIGH_TIMEOUT – Clock High Timeout Interrupt Mask

0 = Generates interrupt if clock high exceeds 55ms during message

1 = Disables interrupt generation for Clock High timeout (Default)

Bit 8: LOST_ARB – Lost Arbitration Interrupt Mask

- 0 = Generates interrupt upon assertion of Lost Arbitration flag
 1 = Disables interrupt generation upon assertion of Lost Arbitration flag
 (Default)

Bit 7: CONTROL – Control Detection Interrupt Mask

- 0 = Generates interrupt upon assertion of Control flag
 1 = Disables interrupt generation upon assertion of Control flag (Default)

Bit 6: ALERT – Alert Detection Interrupt Mask

- 0 = Generates interrupt upon assertion of Alert flag
 1 = Disables interrupt generation upon assertion of Alert flag (Default)

Bit 5: EOM – End of Message Interrupt Mask

- 0 = Generates interrupt upon assertion of End of Message flag
 1 = Disables interrupt generation upon assertion of End of Message flag
 (Default)

Bit 4: SLAVE_ADDR_READY – Slave Address Ready Interrupt Mask

- 0 = Generates interrupt upon assertion of Slave Address Ready flag
 1 = Disables interrupt generation upon assertion of Slave Address Ready flag (Default)

Bit 3: DATA_REQUEST – Data Request Interrupt Mask

- 0 = Generates interrupt upon assertion of Data Request flag
 1 = Disables interrupt generation upon assertion of Data Request flag
 (Default)

Bit 2: DATA_READY – Data Ready Interrupt Mask

- 0 = Generates interrupt upon assertion of Data Ready flag
 1 = Disables interrupt generation upon assertion of Data Ready flag
 (Default)

Bit 1: BUS_LOW_TIMEOUT – Clock Low Timeout Interrupt Mask

- 0 = Generates interrupt upon assertion of Clock Low Timeout flag
 1 = Disables interrupt generation upon assertion of Clock Low Timeout flag (Default)

Bit 0: BUS_FREE – Bus Free Interrupt Mask

- 0 = Generates interrupt upon assertion of Bus Free flag
 1 = Disables interrupt generation upon assertion of Bus Free flag (Default)

4.11.7 PMBus Control Register 2 (PMBCTRL2)**Address FFF7F618**

Bit Number	22:21	20	19	18:16
Bit Name	RX_BYTE_ACK_CNT	MAN_CMD	TX_PEC	TX_COUNT
Access	R/W	R/W	R/W	R/W

Default	11	0	0	000
----------------	----	---	---	-----

Bit Number	15	14:8	7	6:0
Bit Name	PEC_ENA	SLAVE_MASK	MAN_SLAVE_ACK	SLAVE_ADDR
Access	R/W	R/W	R/W	R/W
Default	0	111_1111	0	111_1100

Bit 22-21: RX_BYTE_ACK_CNT – Configures number of data bytes to automatically acknowledge when receiving data in slave mode.

00 = 1 byte received by slave. Firmware is required to manually acknowledge every received byte.

01 = 2 bytes received by slave. Hardware automatically acknowledges the first received byte. Firmware is required to manually acknowledge after the second received byte.

10 = 3 bytes received by slave. Hardware automatically acknowledges the first 2 received bytes. Firmware is required to manually acknowledge after the third received byte.

11 = 4 bytes received by slave. Hardware automatically acknowledges the first 3 received bytes. Firmware is required to manually acknowledge after the fourth received byte (Default)

Bit 20: MAN_CMD – Manual Command Acknowledgement Mode

0 = Slave automatically acknowledges received command code (Default)
 1 = Data Request flag generated after receipt of command code, firmware required to issue ACK to continue message

Bit 19: TX_PEC – Asserted when the slave needs to send a PEC byte at end of message. PMBus Interface will transmit the calculated PEC byte after transmitting the number of data bytes indicated by TX Byte Cnt(Bits 19:17).

0 = No PEC byte transmitted (Default)
 1 = PEC byte transmitted at end of current message

Bit 18-16: TX_COUNT – Number of valid bytes in Transmit Data Register

0 = No bytes valid (Default)
 1 = One byte valid, Byte #0 (Bits 7:0 of Receive Data Register)
 2 = Two bytes valid, Bytes #0 and #1 (Bits 15:0 of Receive Data Register)
 3 = Three bytes valid, Bytes #0-2 (Bits 23:0 of Receive Data Register)
 4 = Four bytes valid, Bytes #0-3 (Bits 31:0 of Receive Data Register)

Bit 15: PEC_ENA – PEC Processing Enable

0 = PEC processing disabled (Default)
 1 = PEC processing enabled

Bit 14-8: SLAVE_MASK – Used in address detection, the slave mask enables acknowledgement of multiple device addresses by the slave. Writing a ‘0’ to a bit

within the slave mask enables the corresponding bit in the slave address to be either ‘1’ or ‘0’ and still allow for a match. Writing a ‘0’ to all bits in the mask enables the PMBus Interface to acknowledge any device address. Upon power-up, the slave mask defaults to 7Fh, indicating the slave will only acknowledge the address programmed into the Slave Address (Bits 6-0).

Bit 7: MAN_SLAVE_ACK – Manual Slave Address Acknowledgement Mode

0 = Slave automatically acknowledges device address specified in SLAVE_ADDR, Bits 6-0 (Default)

1 = Enables the Manual Slave Address Acknowledgement Mode.

Firmware is required to read received address and acknowledge on every message

Bits 6-0: SLAVE_ADDR – Configures the current device address of the slave. Used in automatic slave address acknowledge mode (default mode). The PMBus Interface will compare the received device address with the value stored in the Slave Address bits and the mask configured in the Slave Mask bits. If matching, the slave will acknowledge the device address.

4.11.8 PMBus Hold Slave Address Register (PMBHSA) Address FFF7F61C

Bit Number	7:1	0
Bit Name	SLAVE_ADDR	SLAVE_RW
Access	R	R
Default	-	-

Bits 7-1: SLAVE_ADDR – Stored device address acknowledged by the slave

Bit 0: SLAVE_RW – Stored R/W bit from address acknowledged by the slave

0 = Write Access

1 = Read Access

4.11.9 PMBus Control Register 3 (PMBCTRL3)

Address FFF7F620

Bit Number	25		24:23	
Bit Name	CLK_HI_EN			Reserved
Access	R/W			R/W
Default	0			0

Bit Number	22	21	20	19	18
Bit Name	MASTER_EN	SLAVE_EN	CLK_LO_DIS	IBIAS_B_EN	IBIAS_A_EN
Access	R/W	R/W	R/W	R/W	R/W
Default	0	1	0	0	0

Bit Number	17	16	15	14	13
Bit Name	SCL_DIR	SCL_VALUE	SCL_MODE	SDA_DIR	SDA_VALUE
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	12	11	10	9
Bit Name	SDA_MODE	CNTL_DIR	CNTL_VALUE	CNTL_MODE
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit Number	8	7	6	5
Bit Name	ALERT_DIR	ALERT_VALUE	ALERT_MODE	CNTL_INT_EDGE
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit Number	4	3	2	1	0
Bit Name	FAST_MODE_PLUS	FAST_MODE	BUS_LO_INT_EDGE	ALERT_EN	RESET
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit 25: CLK_HI_EN – PMBus Clock High Timeout Enable

0 = PMBus Clock High Timeout disabled (Default)

1 = PMBus Clock High Timeout enabled

Bit 24-23: Reserved – Unused Bits**Bit 22: MASTER_EN** – PMBus Master Enable

0 = Disables PMBus Master capability (Default)

1 = Enables PMBus Master capability

Bit 21: SLAVE_EN – PMBus Slave Enable

0 = Disables PMBus Slave capability

1 = Enables PMBus Slave capability (Default)

Bit 20: CLK_LO_DIS – Clock Low Timeout Disable

0 = Clock Low Timeout Enabled (Default)

1 = Clock Low Timeout Disabled

Bit 19: IBIAS_B_EN – PMBus Current Source B Control

0 = Disables Current Source for PMBUS address detection thru ADC (Default)

1 = Enables Current Source for PMBUS address detection thru ADC

Bit 18: IBIAS_A_EN – PMBus Current Source A Control

0 = Disables Current Source for PMBUS address detection thru ADC (Default)

1 = Enables Current Source for PMBUS address detection thru ADC

Bit 17: SCL_DIR – Configures direction of PMBus clock pin in GPIO mode

0 = PMBus clock pin configured as output (Default)

1 = PMBus clock pin configured as input

Bit 16: SCL_VALUE – Configures output value of PMBus clock pin in GPIO Mode

0 = PMBus clock pin driven low in GPIO Mode (Default)

1 = PMBus clock pin driven high in GPIO Mode

Bit 15: SCL_MODE – Configures mode of PMBus Clock pin

0 = PMBus clock pin configured in functional mode (Default)

1 = PMBus clock pin configured as GPIO

Bit 14: SDA_DIR – Configures direction of PMBus data pin in GPIO mode

0 = PMBus data pin configured as output (Default)

1 = PMBus data pin configured as input

Bit 13: SDA_VALUE – Configures output value of PMBus data pin in GPIO Mode

0 = PMBus data pin driven low in GPIO Mode (Default)

1 = PMBus data pin driven high in GPIO Mode

Bit 12: SDA_MODE – Configures mode of PMBus Data pin

0 = PMBus data pin configured in functional mode (Default)

1 = PMBus data pin configured as GPIO

Bit 11: CNTL_DIR – Configures direction of Control pin in GPIO mode

0 = Control pin configured as output (Default)

1 = Control pin configured as input

Bit 10: CNTL_VALUE – Configures output value of Control pin in GPIO Mode

0 = Control pin driven low in GPIO Mode (Default)

1 = Control pin driven high in GPIO Mode

Bit 9: CNTL_MODE – Configures mode of Control pin

0 = Control pin configured in functional mode (Default)

1 = Control pin configured as GPIO

Bit 8: ALERT_DIR – Configures direction of Alert pin in GPIO mode

0 = Control pin configured as output (Default)

1 = Control pin configured as input

Bit 7: ALERT_VALUE – Configures output value of Alert pin in GPIO Mode

0 = Alert pin driven low in GPIO Mode (Default)

1 = Alert pin driven high in GPIO Mode

Bit 6: ALERT_MODE – Configures mode of Alert pin

0 = Alert pin configured in functional mode (Default)

1 = Aler3 pin configured as GPIO

Bit 5: CNTL_INT_EDGE – Control Interrupt Edge Select

0 = Interrupt generated on falling edge of Control (Default)

1 = Interrupt generated on rising edge of Control

Bit 4: FAST_MODE_PLUS – Fast Mode Plus Enable

0 = Standard 100 KHz mode enabled (Default)

1 = Fast Mode Plus enabled (1MHz operation on PMBus)

Bit 3: FAST_MODE – Fast Mode Enable

0 = Standard 100 KHz mode enabled (Default)

1 = Fast Mode enabled (400KHz operation on PMBus)

Bit 2: BUS_LO_INT_EDGE – Clock Low Timeout Interrupt Edge Select

0 = Interrupt generated on rising edge of clock low timeout (Default)

1 = Interrupt generated on falling edge of clock low timeout

Bit 1: ALERT_EN – Slave Alert Enable

0 = PMBus Alert is not driven by slave, pulled up high on PMBus (Default)

1 = PMBus Alert driven low by slave

Bit 0: RESET – PMBus Interface Synchronous Reset

0 = No reset of internal state machines (Default)

1 = Control state machines are reset to initial states

Preliminary

4.12 GIO – General Purpose Input/Output Module

GIO Registers have the following attributes:

- Addresses placed on word boundaries
- Byte, Half-word and Word Writes are permitted
- All Registers can be read in any mode
- All Registers are writeable

4.12.1 Fault IO Direction Register (FAULTDIR)

Address FFF7FA00

Bit Number	6	5	4	3	2	1	0
Bit Name	TMS_DIR	TDI_DIR	TDO_DIR	FLT3_DIR	FLT2_DIR	FLT1_DIR	FLT0_DIR
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0	0	0

Bit 6: TMS_DIR – TMS Pin Configuration

0 = TMS pin configured as an input pin in GPIO mode (Default)

1 = TMS pin configured as an output pin in GPIO mode

Bit 5: TDI_DIR – TDI Pin Configuration

0 = TDI pin configured as an input pin in GPIO mode (Default)

1 = TDI pin configured as an output pin in GPIO mode

Bit 4: TDO_DIR – TDO Pin Configuration

0 = TDO pin configured as an input pin in GPIO mode (Default)

1 = TDO pin configured as an output pin in GPIO mode

Bit 3: FLT3_DIR – FAULT[3] Pin Configuration

0 = FAULT[3] pin configured as an input pin (Default)

1 = FAULT[3] pin configured as an output pin

Bit 2: FLT2_DIR – FAULT[2] Pin Configuration

0 = FAULT[2] pin configured as an input pin (Default)

1 = FAULT[2] pin configured as an output pin

Bit 1: FLT1_DIR – FAULT[1] Pin Configuration

0 = FAULT[1] pin configured as an input pin (Default)

1 = FAULT[1] pin configured as an output pin

Bit 0: FLT0_DIR – FAULT[0] Pin Configuration

0 = FAULT[0] pin configured as an input pin (Default)

1 = FAULT[0] pin configured as an output pin

4.12.2 Fault Input Register (FAULTIN)

Address FFF7FA04

Bit Number	6	5	4	3	2	1	0
Bit Name	TMS_IN	TDI_IN	TDO_IN	FLT3_IN	FLT2_IN	FLT1_IN	FLT0_IN
Access	R	R	R	R	R	R	R
Default	-	-	-	-	-	-	-

Bit 6: TMS_IN – Input Value of TMS Pin

- 0 = TMS pin driven low in GPIO mode
- 1 = TMS pin driven high in GPIO mode

Bit 5: TDI_IN – Input Value of TDI Pin

- 0 = TDI pin driven low in GPIO mode
- 1 = TDI pin driven high in GPIO mode

Bit 4: TDO_IN – Input Value of TDO Pin

- 0 = TDO pin driven low in GPIO mode
- 1 = TDO pin driven high in GPIO mode

Bit 3: FLT3_IN – Input Value of FAULT[3] Pin

- 0 = FAULT[3] pin driven low
- 1 = FAULT[3] pin driven high

Bit 2: FLT2_IN – Input Value of FAULT[2] Pin

- 0 = FAULT[2] pin driven low
- 1 = FAULT[2] pin driven high

Bit 1: FLT1_IN – Input Value of FAULT[1] Pin

- 0 = FAULT[1] pin driven low
- 1 = FAULT[1] pin driven high

Bit 0: FLT0_IN – Input Value of FAULT[0] Pin

- 0 = FAULT[0] pin driven low
- 1 = FAULT[0] pin driven high

4.12.3 Fault Output Register (FAULTOUT)

Address FFF7FA08

Bit Number	6	5	4	3
Bit Name	TMS_OUT	TDI_OUT	RESERVED	FLT3_OUT
Access	R/W	R/W	-	R/W
Default	0	0	0	0

Bit Number	2	1	0
Bit Name	FLT2_OUT	FLT1_OUT	FLT0_OUT
Access	R/W	R/W	R/W
Default	0	0	0

Bit 6: TMS_OUT – TMS Pin Output Value

0 = TMS pin driven low when configured as output in GPIO mode
(Default)

1 = TMS pin driven high when configured as output in GPIO mode

Bit 5: TDI_OUT – TDI Pin Output Value

0 = TDI pin driven low when configured as output in GPIO mode
(Default)

1 = TDI pin driven high when configured as output in GPIO mode

Bit 4: RESERVED – Unused Bit

Bit 3: FLT3_OUT – FAULT[3] Pin Output Value

0 = FAULT[3] pin driven low when configured as output (Default)
1 = FAULT[3] pin driven high when configured as output

Bit 2: FLT2_OUT – FAULT[2] Pin Output Value

0 = FAULT[2] pin driven low when configured as output (Default)
1 = FAULT[2] pin driven high when configured as output

Bit 1: FLT1_OUT – FAULT[1] Pin Output Value

0 = FAULT[1] pin driven low when configured as output (Default)
1 = FAULT[1] pin driven high when configured as output

Bit 0: FLT0_OUT – FAULT[0] Pin Output Value

0 = FAULT[0] pin driven low when configured as output (Default)
1 = FAULT[0] pin driven high when configured as output

4.12.4 Fault Interrupt Enable Register (FAULTINTENA)

Address FFF7FA14

Bit Number	6	5	4
Bit Name	TMS_INT_EN	TDI_INT_EN	TDO_INT_EN
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	3	2	1	0
Bit Name	FLT3_INT_EN	FLT2_INT_EN	FLT1_INT_EN	FLT0_INT_EN
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit 6: TMS_INT_EN – TMS Interrupt Enable

0 = Interrupt disabled for TMS pin (Default)

1 = Interrupt enabled for TMS pin in GPIO mode

Bit 5: TDI_INT_EN – TDI Interrupt Enable

0 = Interrupt disabled for TDI pin (Default)

1 = Interrupt enabled for TDI pin in GPIO mode

Bit 4: TDO_INT_EN – TDO Interrupt Enable

0 = Interrupt disabled for TDO pin (Default)

1 = Interrupt enabled for TDO pin in GPIO mode

Bit 3: FLT3_INT_EN – FAULT[3] Interrupt Enable

0 = Interrupt disabled for FAULT[3] pin (Default)

1 = Interrupt enabled for FAULT[3] pin

Bit 2: FLT2_INT_EN – FAULT[2] Interrupt Enable

0 = Interrupt disabled for FAULT[2] pin (Default)

1 = Interrupt enabled for FAULT[2] pin

Bit 1: FLT1_INT_EN – FAULT[1] Interrupt Enable

0 = Interrupt disabled for FAULT[1] pin (Default)

1 = Interrupt enabled for FAULT[1] pin

Bit 0: FLT0_INT_EN – FAULT[0] Interrupt Enable

0 = Interrupt disabled for FAULT[0] pin (Default)

1 = Interrupt enabled for FAULT[0] pin

4.12.5 Fault Interrupt Polarity Register (FAULTINTPOL)**Address FFF7FA18**

Bit Number	6	5	4
Bit Name	TMS_INT_POL	TDI_INT_POL	TDO_INT_POL
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	3	2	1	0
Bit Name	FLT3_INT_POL	FLT2_INT_POL	FLT1_INT_POL	FLT0_INT_POL
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit 6: TMS_INT_POL – TMS Interrupt Polarity Select

0 = Interrupt generated on falling edge (Default)
 1 = Interrupt generated on rising edge

Bit 5: TDI_INT_POL – TDI Interrupt Polarity Select

0 = Interrupt generated on falling edge (Default)
 1 = Interrupt generated on rising edge

Bit 4: TDO_INT_POL – TDO Interrupt Polarity Select

0 = Interrupt generated on falling edge (Default)
 1 = Interrupt generated on rising edge

Bit 3: FLT3_INT_POL – FAULT[3] Interrupt Polarity Select

0 = Interrupt generated on falling edge (Default)
 1 = Interrupt generated on rising edge

Bit 2: FLT2_INT_POL – FAULT[2] Interrupt Polarity Select

0 = Interrupt generated on falling edge (Default)
 1 = Interrupt generated on rising edge

Bit 1: FLT1_INT_POL – FAULT[1] Interrupt Polarity Select

0 = Interrupt generated on falling edge (Default)
 1 = Interrupt generated on rising edge

Bit 0: FLT0_INT_POL – FAULT[0] Interrupt Polarity Select

0 = Interrupt generated on falling edge (Default)
 1 = Interrupt generated on rising edge

4.12.6 Fault Interrupt Pending Register (FAULTINTPEND)

Address FFF7FA1C

Bit Number	6	5	4
Bit Name	TMS_INT_PEND	TDI_INT_PEND	TDO_INT_PEND
Access	R/W	R/W	R/W
Default	0	0	0

Bit Number	3	2	1	0
Bit Name	FLT3_INT_PEND	FLT2_INT_PEND	FLT1_INT_PEND	FLT0_INT_PEND
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit 6: TMS_INT_PEND – TMS has caused an interrupt. Writing a 1 to a bit will clear the interrupt flag

0 = No Interrupt detected (Default)

1 = Interrupt pending

Bit 5: TDI_INT_PEND – TDI has caused an interrupt. Writing a 1 to a bit will clear the interrupt flag

0 = No Interrupt detected (Default)

1 = Interrupt pending

Bit 4: TDO_INT_PEND – TDO has caused an interrupt. Writing a 1 to a bit will clear the interrupt flag

0 = No Interrupt detected (Default)

1 = Interrupt pending

Bit 3: FLT3_INT_PEND – FAULT[3] has caused an interrupt. Writing a 1 to a bit will clear the interrupt flag

0 = No Interrupt detected (Default)

1 = Interrupt pending

Bit 2: FLT2_INT_PEND – FAULT[2] has caused an interrupt. Writing a 1 to a bit will clear the interrupt flag

0 = No Interrupt detected (Default)

1 = Interrupt pending

Bit 1: FLT1_INT_PEND – FAULT[1] has caused an interrupt. Writing a 1 to a bit will clear the interrupt flag

0 = No Interrupt detected (Default)

1 = Interrupt pending

Bit 0: FLT0_INT_PEND – FAULT[0] has caused an interrupt. Writing a 1 to a bit will clear the interrupt flag

0 = No Interrupt detected (Default)

1 = Interrupt pending

4.12.7 External Interrupt Direction Register (EXTINTDIR)

Address FFF7FA20

Bit Number	0
Bit Name	EXT_INT_DIR
Access	R/W
Default	0

Bit 0: EXT_INT_DIR – EXT-INT Pin Configuration

- 0 = EXT-INT pin configured as an input pin (Default)
- 1 = EXT-INT pin configured as an output pin

4.12.8 External Interrupt Input Register (EXTINTIN)

Address FFF7FA24

Bit Number	0
Bit Name	EXT_INT_IN
Access	R
Default	-

Bit 0: EXT_INT_IN – Input Value of EXT-INT Pin

- 0 = EXT-INT pin driven low in GPIO mode
- 1 = EXT-INT pin driven high in GPIO mode

4.12.9 External Interrupt Output Register (EXTINTOUT)

Address FFF7FA28

Bit Number	0
Bit Name	EXT_INT_OUT
Access	R/W
Default	0

Bit 0: EXT_INT_OUT – EXT-INT Pin Output Value

- 0 = EXT-INT pin driven low (Default)
- 1 = EXT-INT pin driven high

4.12.10 External Interrupt Enable Register (EXTINTENA)

Address FFF7FA34

Bit Number	0
Bit Name	EXT_INT_EN
Access	R/W
Default	0

Bit 0: EXT_INT_EN – EXT-INT Interrupt Enable

0 = Interrupt disabled for EXT-INT pin (Default)

1 = Interrupt enabled for EXT-INT pin

4.12.11 External Interrupt Polarity Register (EXTTINTPOL)
Address FFF7FA38

Bit Number	0
Bit Name	EXT_INT_POL
Access	R/W
Default	0

Bit 0: EXT_INT_POL – EXT-INT Interrupt Polarity Select

0 = Interrupt generated on falling edge (Default)

1 = Interrupt generated on rising edge

4.12.12 External Interrupt Pending Register (EXTINTPEND)
Address FFF7FA3C

Bit Number	0
Bit Name	EXT_INT_PEND
Access	R/W
Default	0

Bit 0: EXT_INT_PEND – EXT-INT has caused an interrupt. Writing a 1 to a bit will clear the interrupt flag.

4.13 Timer Module

Timer Registers have the following attributes:

- 32-bit wide
- Addresses placed on word boundaries
- Byte, Half-Word and word writes permitted
- All Registers can be read in any mode
- All Registers, except for the Timer Powerdown Control Register, are writeable in any mode. The Timer Powerdown Control Register is writeable only in privilege mode.

4.13.1 24-bit Counter Data Register (T24CNTDAT)

Address FFF7FD00

Bit Number	23:0
Bit Name	CNT_DAT
Access	R
Default	-

Bits 23-0: CNT_DAT: – Contains the 24-bit counter value

4.13.2 24-bit Counter Control Register (T24CNTCTRL)

Address FFF7FD04

Bit Number	15:8	7:3	2	1	0
Bit Name	PRESCALE	RESERVED	EXT_CLK_SEL	OV_INT_ENA	OV_FLAG
Access	R/W	-	R/W	R/W	R
Default	0000_0000	00000	0	0	0

Bits 15-8: PRESCALE – Defines the prescaler value used to select the 24-bit counter resolution. The minimum divider ratio is 4, prescaler value less than 3 defaults to 3.

$$\text{Counter Resolution} = (\text{Prescaler Value}+1) * 1/\text{ICLK}$$

Bits 7-3: RESERVED – Unused bits

Bit 2: EXT_CLK_SEL – External Clock Select

0 = Selects ICLK as clock for 24-bit counter (Default)

1 = Selects External Clock on FAULT-0 as clock for 24-bit counter

Bit 1: OV_INT_ENA – Counter Overflow Interrupt Enable

0 = Disables 24-bit Counter Overflow Interrupt (Default)

1 = Enables 24-bit Counter Overflow Interrupt

Bit 0: OV_FLAG – Indicates a counter overflow. Overflow event is cleared by writing a ‘1’ to this bit. If a clear and an overflow event occur at the same time, the flag will remain high (set has priority versus clear).

0 = No counter overflow since last clear

1 = Counter overflow since last clear

4.13.3 24-bit Capture Channel Data Register (T24CAPDAT)

Address FFF7FD08

Bit Number	23:0
Bit Name	CAP_DAT
Access	R
Default	-

Bits 23-0: CAP_DAT– Contains the 24-bit input capture value

4.13.4 24-bit Capture Channel Control Register (T24CAPCTRL)

Address FFF7FD14

Bit Number	5:4	3:2	1	0
Bit Name	CAP_SEL	EDGE	CAP_INT_ENA	CAP_INT_FLAG
Access	R/W	R/W	R/W	R/W
Default	00	00	0	0

Bits 5-4: CAP_SEL – Capture Pin Select

- 00 = TCAP pin (Default)
- 01 = SCI_RX[0] pin
- 10 = SCI_RX[1] pin
- 11 = SYNC pin

Bits 3-2: EDGE – Input Capture Edge Select

- 00 = No Capture (Default)
- 01 = Rising Edge
- 10 = Falling Edge
- 11 = Both Edges

Bit 1: CAP_INT_ENA – Input Capture Interrupt Enable

- 0 = Disables 24-bit input capture interrupt (Default)
- 1 = Enables 24-bit input capture interrupt

Bit 0: CAP_INT_FLAG – Flag which indicates a valid input capture event. This bit is cleared by writing a ‘1’ to it or by reading the corresponding Capture Channel Data Register. If a clear and a valid capture event occur at the same time, the flag will remain high (set has priority versus clear).

- 0 = No valid capture event since last clear
- 1 = Valid capture event since last clear

4.13.5 24-bit Capture I/O Control and Data Register (T24CAPIO)

Address FFF7FD20

Bit Number	2	1	0
Bit Name	TCAP_IN	TCAP_OUT	TCAP_DIR
Access	R	R/W	R/W
Default	-	0	0

Bit 2: TCAP_IN – Input data for pin TCAP pin, when connected to chip I/O

0 = Logic level low detected on TCAP pin

1 = Logic level high detected on TCAP pin

Bit 1: TCAP_OUT – Output data for pin TCAP pin, when connected to chip I/O

0 = Logic level low driven on TCAP pin in output mode (Default)

1 = Logic level high driven on TCAP pin in output mode

Bit 0: TCAP_DIR – Controls data direction for pin TCAP, when connected to chip I/O

0 = TCAP pin configured as input (Default)

1 = TCAP pin configured as output

4.13.6 24-bit Output Compare Channel 0 Data Register (T24CMPDAT0) Address FFF7FD24

Bit Number	23:0
Bit Name	CMP_DAT
Access	R/W
Default	0000_0000_0000_0000_0000_0000

Bits 23-0: CMP_DAT – Contains the 24-bit output comparison value

4.13.7 24-bit Output Compare Channel 1 Data Register (T24CMPDAT1) Address FFF7FD28

Bit Number	23:0
Bit Name	CMP_DAT
Access	R/W
Default	0000_0000_0000_0000_0000_0000

Bits 23-0: CMP_DAT – Contains the 24-bit output comparison value

4.13.8 24-bit Output Compare Channel 0 Control Register (T24CMPCTRL0) Address FFF7FD2C

Bit Number	1	0
Bit Name	CMP_INT_ENA	CMP_INT_FLAG
Access	R/W	R/W

Default	0	0
----------------	---	---

Bit 1: CMP_INT_ENA– Output Compare Channel Interrupt

0 = Disables Output Compare Channel Interrupt (Default)

1 = Enables Output Compare Channel Interrupt

Bit 0: CMP_INT_FLAG – Indicates a valid output compare event. Bit can be cleared by writing a ‘1’ to the bit or by rewriting the 24-bit Output Compare Channel Data Register. If a clear and compare event occur at the same time, the flag will remain high (set has priority versus clear).

0 = No compare event since last clear

1 = Compare event since last clear

4.13.9 24-bit Output Compare Channel 1 Control Register (T24CMPCTRL1)**Address FFF7FD30**

Bit Number	1	0
Bit Name	CMP_INT_ENA	CMP_INT_FLAG
Access	R/W	R/W
Default	0	0

Bit 1: CMP_INT_ENA– Output Compare Channel Interrupt

0 = Disables Output Compare Channel Interrupt (Default)

1 = Enables Output Compare Channel Interrupt

Bit 0: CMP_INT_FLAG – Indicates a valid output compare event. Bit can be cleared by writing a ‘1’ to the bit or by rewriting the 24-bit Output Compare Channel Data Register. If a clear and compare event occur at the same time, the flag will remain high (set has priority versus clear).

0 = No compare event since last clear

1 = Compare event since last clear

4.13.10 PWMx Counter Data Register (T16PWMxCNTDAT)**Address FFF7FD34 – 16-bit PWM0 Counter Data Register****Address FFF7FD58 – 16-bit PWM1 Counter Data Register****Address FFF7FD6C – 16-bit PWM2 Counter Data Register****Address FFF7FD80 – 16-bit PWM3 Counter Data Register**

Bit Number	15:0
Bit Name	CNT_DAT
Access	R
Default	-

Bits 15-0: CNT_DAT – Contains the 16-bit counter value. Read-only.

4.13.11 PWM_x Counter Control Register (T16PWM_xCNTCTRL)

Address FFF7FD38 – 16-bit PWM0 Counter Control Register

Address FFF7FD5C – 16-bit PWM1 Counter Control Register

Address FFF7FD70 – 16-bit PWM2 Counter Control Register

Address FFF7FD84 – 16-bit PWM3 Counter Control Register

Bit Number	15:8	7	6:5	4
Bit Name	PRESCALE	RESERVED	SYNC_SEL	SYNC_EN
Access	R/W	-	R/W	R/W
Default	0000_0000	0	00	0

Bit Number	3	2	1	0
Bit Name	SW_RESET	CMP_RESET_ENA	OV_INT_ENA	OV_INT_FLAG
Access	R/W	R/W	R/W	R/W
Default	0	0	0	0

Bit 15-8: PRESCALE – Defines the prescaler value to select the PWM counter resolution.

$$\text{Counter Resolution} = (\text{Prescaler} + 1) * 1/\text{ICLK}$$

Bit 7: RESERVED – Unused bit

Bits 6:5: SYNC_SEL – Configures master PWM counter

0 = PWM0 Counter (Default)

1 = PWM1 Counter

2 = PWM2 Counter

3 = PWM3 Counter

Bit 4: SYNC_EN – PWM counter starts when master PWM counter is enabled

0 = PWM counter independent of other PWM counters (Default)

1 = PWM counter controlled by Master PWM counter

Bit 3: SW_RESET – PWM counter reset by software. This bit is cleared after reset and has to be set to run the PWM counter.

0 = PWM counter reset and counter stop (Default)

1 = PWM counter is running

Bit 2: CMP_RESET_ENA – Enables PWM counter reset by compare action of T16CMPxDR.

0 = Disable PWM counter reset by compare action (Default)

1 = Enable PWM counter reset by compare action

Bit 1: OV_INT_ENA – PWM Counter Overflow Interrupt Enable

0 = Disable PWM counter overflow interrupt (Default)

1 = Enable PWM counter overflow interrupt

Bit 0: OV_INT_FLAG – Flag which indicates a PWM counter overflow. This bit

is cleared by writing ‘1’ to it. If a clear and an overflow event occur at the same time, the flag will remain high (set has priority versus clear).

0 = No PWM counter overflow since last clear

1 = PWM counter overflow since last clear

4.13.12 PWM x 16-bit Compare Channel 0-1 Data Register (T16PWM x CMPyDAT)

Address FFF7FD3C – 16-bit PWM0 Compare Channel 0 Data Register

Address FFF7FD40 – 16-bit PWM0 Compare Channel 1 Data Register

Address FFF7FD60 – 16-bit PWM1 Compare Channel 0 Data Register

Address FFF7FD64 – 16-bit PWM1 Compare Channel 1 Data Register

Address FFF7FD74 – 16-bit PWM2 Compare Channel 0 Data Register

Address FFF7FD78 – 16-bit PWM2 Compare Channel 1 Data Register

Address FFF7FD88 – 16-bit PWM3 Compare Channel 0 Data Register

Address FFF7FD8C – 16-bit PWM3 Compare Channel 1 Data Register

Bit Number	15:0
Bit Name	CMP_DAT
Access	R/W
Default	0000_0000_0000_0000

Bits 15-0: CMP_DAT – Contains the 16-bit compare value. When in PWM mode, the value in the T16PWM x CMPyDAT is loaded after a match with the PWM x Counter Data Register. When in OC mode, it has to be written by the CPU. The mode is controlled by the bit SHADOW in the PWM x /Dual Compare Control Register. If both Registers T16PWM x CMP0DAT and T16PWM x CMP1DAT contain the same value, the interrupt and pin behavior is controlled by output compare channel 0 (T16PWM x CMP0DAT has priority over T16PWM x CMP1DAT).

4.13.13 PWM Compare Control Register (*T16PWMxCMPCTRL*)

Address FFF7FD44 – 16-bit PWM0 Compare Control Register

Address FFF7FD68 – 16-bit PWM1 Compare Control Register

Bit Number	12	11	10	9	8
Bit Name	SHADOW	PWM_IN	PWM_OUT	PWM_OUT_ENA	PWM_OUT_DRV
Access	R/W	R	R/W	R/W	R/W
Default	0	-	0	0	0

Bit Number	7:6	5:4	3
Bit Name	PWM_OUT_ACTION1	PWM_OUT_ACTION0	CMP1_INT_ENA
Access	R/W	R/W	R/W
Default	00	00	0

Bit Number	2	1	0
Bit Name	CMP1_INT_FLAG	CMP0_INT_ENA	CMP0_INT_FLAG
Access	R/W	R/W	R/W
Default	0	0	0

Bit 12: SHADOW – Controls the update of the 16-bit output compare Registers.

0 = PWM output compare Registers immediately written (Default)

1 = PWM output compare Registers updated through the buffers
T16PWMxCMPyDAT after a match occurs in the corresponding
Register T16PWMxCMPyDAT.

Bit 11: PWM_IN – Input value of PWM pin when configured in PWM mode

0 = Logic level low detected on PWM pin

1 = Logic level high detected on PWM pin

Bit 10: PWM_OUT – Data to be written into the output latch when
PWM_OUT_DRV is high.

0 = Output latch is cleared when PWM_OUT_DRV=1 (Default)

1 = Output latch is set when PWM_OUT_DRV=1

Bit 9: PWM_OUT_ENA – FAN-PWM pin configuration

0 = FAN-PWM configured as an input pin (Default)

1 = FAN-PWM configured as an output pin

Bit 8: PWM_OUT_DRV – Causes the value of the bit PWM_OUT to be written
into the output latch. So it is possible to preload the output latch or to use the pin
as GPIO. The compare action has priority before the preload function. This bit is
always read as ‘0’.

0 = Output latch not affected by the value of PWM_OUT (Default)

1 = Value of OUT written into the output latch

Bits 7-6: PWM_OUT_ACTION1 – These 2 bits select the output action when a compare equal is detected on T16CMP1DAT

00 = No action (Default)

01 = Set pin

10 = Clear pin

11 = Toggle pin

Bits 5-4: PWM_OUT_ACTION0 – Selects the output action when a compare equal is detected on T16CMP0DAT.

00 = No action (Default)

01 = Set pin

10 = Clear pin

11 = Toggle pin

Bit 3: CMP1_INT_ENA – Compare 1 Interrupt Enable

0 = Disables Compare 1 Interrupt (Default)

1 = Enables Compare 1 Interrupt

Bit 2: CMP1_INT_FLAG – Flag which indicates a valid output compare 1 event. This bit is cleared by writing ‘1’ to this bit or by rewriting

T16PWMxCMP1DAT. If a clear and a compare event occurs at the same time, the flag will remain high (set has priority versus write clear).

0 = No compare event since last clear

1 = Compare event since last clear

Bit 1: CMP0_INT_ENA – Compare 0 Interrupt Enable

0 = Disables Compare 0 Interrupt (Default)

1 = Enables Compare 0 Interrupt

Bit 0: CMP0_INT_FLAG – Flag which indicates a valid output compare 1 event. This bit is cleared by writing ‘1’ to this bit or by rewriting

T16PWMxCMP0DAT. If a clear and a compare event occurs at the same time, the flag will remain high (set has priority versus write clear).

0 = No compare event since last clear

1 = Compare event since last clear

4.13.14 PWMx Compare Control Register (T16PWMxCMPCTRL)

Address FFF7FD7C – 16-bit PWM2 Compare Control Register

Address FFF7FD90 – 16-bit PWM3 Compare Control Register

Bit Number	12	11:4	3
Bit Name	SHADOW	RESERVED	CMP1_INT_ENA
Access	R/W	R/W	R/W
Default	0	0000_0000	0

Bit Number	2	1	0
Bit Name	CMP1_INT_FLAG	CMP0_INT_ENA	CMP0_INT_FLAG
Access	R/W	R/W	R/W
Default	0	0	0

Bit 12: SHADOW – Controls the update of the 16-bit output compare Registers.

0 = PWM output compare Registers immediately written (Default)

1 = PWM output compare Registers updated through the buffers

T16PWMxCMPyDAT after a match occurs in the corresponding Register T16PWMxCMPyDAT.

Bits 11-4: RESERVED – Unused bits

Bit 3: CMP1_INT_ENA – Compare 1 Interrupt Enable

0 = Disables Compare 1 Interrupt (Default)

1 = Enables Compare 1 Interrupt

Bit 2: CMP1_INT_FLAG – Flag which indicates a valid output compare 1 event. This bit is cleared by writing ‘1’ to this bit or by rewriting T16PWMxCMP1DAT. If a clear and a compare event occurs at the same time, the flag will remain high (set has priority versus write clear).

0 = No compare event since last clear

1 = Compare event since last clear

Bit 1: CMP0_INT_ENA – Compare 0 Interrupt Enable

0 = Disables Compare 0 Interrupt (Default)

1 = Enables Compare 0 Interrupt

Bit 0: CMP0_INT_FLAG – Flag which indicates a valid output compare 1 event. This bit is cleared by writing ‘1’ to this bit or by rewriting T16PWMxCMP0DAT. If a clear and a compare event occurs at the same time, the flag will remain high (set has priority versus write clear).

0 = No compare event since last clear

1 = Compare event since last clear

4.13.15 Watchdog Status (WDST)

Address FFF7FD94

Bit Number	3	2	1	0
Bit Name	WAKE_EV_RAW	WD_EV_RAW	WAKE_EV_INT	WD_EV_INT
Access	R	R	R	R
Default	-	-	-	-

Bit 3: WAKE_EV_RAW – Watchdog Wake Event Raw Status

- 0 = Watchdog Timer has not reached ½ of terminal count
- 1 = Watchdog Timer has reached ½ of terminal count

Bit 2: WD_EV_RAW – Watchdog Event Raw Status

- 0 = Watchdog Timer has not reached terminal count
- 1 = Watchdog Timer has reached terminal count

Bit 1: WAKE_EV_INT – Watchdog Wake Event Interrupt Status, cleared on read of Watchdog Status Register

- 0 = Watchdog Timer has not reached ½ of terminal count
- 1 = Watchdog Timer has reached ½ of terminal count

Bit 0: WD_EV_INT – Watchdog Event Interrupt Status, cleared on read of Watchdog Status Register

- 0 = Watchdog Timer has not reached terminal count
- 1 = Watchdog Timer has reached terminal count

4.13.16 Watchdog Control (WDCTRL)

Address FFF7FD98

Bit Number	14:8	7	6	5	4
Bit Name	PERIOD	RESERVED	PROTECT	CPU_RESET_EN	WDRST_INT_EN
Access	R/W	-	R/W	R/W	R/W
Default	111_1111	0	1	0	0

Bit Number	3	2	1	0
Bit Name	WKEV_INT_EN	WKEV_EN	WDRST_EN	CNT_RESET
Access	R/W	R/W	R/W	R/W
Default	0	0	0	1

Bits 14-8: PERIOD - Configures the time for the watchdog reset.

- H'7F ~ 1.3s (minimum) (Default)
- H'00 ~ 10ms (maximum)

Bit 7: RESERVED – Unused bits

Bit 6: PROTECT – Watchdog Protect Bit, Active Low

0 = Watchdog enable bits are protected, only can be cleared by POR.
CPU_RESET_ENA (Bit 5), WDRST_ENA (Bit 2) and WKEV_ENA (Bit 1) are automatically set high when PROTECT is written low.
1 = Watchdog enable bits can be set by processor (Default)

Bit 5: CPU_RESET_EN – Enables Watchdog Reset Event to reset the CPU

0 = Watchdog Reset does not reset CPU (Default)
1 = Watchdog Reset does resets CPU

Bit 4: WDRST_INT_EN – Watchdog Reset Event Interrupt Enable

0 = Disables generation of Watchdog Reset Interrupt (Default)
1 = Enables generation of Watchdog Reset Interrupt

Bit 3: WKEN_INT_EN – Watchdog Wake Event Interrupt Enable

0 = Disables generation of Watchdog Wake Event Interrupt (Default)
1 = Enables generation of Watchdog Wake Event Interrupt

Bit 2: WKEV_EN – Watchdog Wake Event Comparator Enable

0 = Disables Watchdog Wake Event Comparator (Default)
1 = Enables Watchdog Wake Event Comparator

Bit 1: WDRST_EN – Watchdog Reset Event Comparator Enable

0 = Disables Watchdog Reset Event Comparator (Default)
1 = Enables Watchdog Reset Event Comparator

Bit 0: CNT_RESET – This bit resets the watchdog counters. This bit self clears and if the enables are set, the counters restart counting.

0 = Watchdog counters enabled (Default)
1 = Watchdog counters reset

4.14 Memory Controller - MMC

All MMC control Registers have the following attributes:

- 16-bit wide
- Addresses placed on word boundaries
- 16-bit data is placed on the least significant data bus D[15:0]
- Only half-word writes are permitted
- Registers are readable in any mode, but writeable only in privilege mode

4.14.1 Static Memory Control Register (SMCTRL)

Address FFFFFD00

Bit Number	13:12	11:9	7:4	3	1:0
Bit Name	LEAD	TRAIL	ACTIVE	ENDIAN	WIDTH
Access	R/W	R/W	R/W	R	R/W
Default	00	000	0000	-	00

Bits 13-12: LEAD – Address setup time cycles (write operations)

- 00 = No setup time required (Default)
- 01 = Write strobe is delayed one cycle
- 10 = Write strobe is delayed two cycles
- 11 = Write strobe is delayed three cycles

Bits 11-9: TRAIL – Number of Trailing wait states. Determine the trailing wait states after read and write operations to the memory associated with the chip select corresponding to the wait states.

Bit s 7-4: ACTIVE – Active Wait states (both read/write operations)

- 0000 = 0 Wait states (Default)
- 0001 = 1 Wait states
- 0010 = 2 Wait states
- 0011 = 3 Wait states
- 0100 = 4 Wait states
- 0101 = 5 Wait states
- 0110 = 6 Wait states
- 0111 = 7 Wait states
- 1000 = 8 Wait states
- 1001 = 9 Wait states
- 1010 = 10 Wait states
- 1011 = 11 Wait states
- 1100 = 12 Wait states
- 1101 = 13 Wait states
- 1110 = 14 Wait states
- 1111 = 15 Wait states

Bit 3: ENDIAN – Endian Mode Identification

- 0 = CPU configured in big endian mode
- 1 = CPU configured in little endian mode

Bits 1-0: WIDTH – Data Width for Memories

- 00 = 8 bits (Default)
- 01 = 16 bits
- 10 = 32 bits
- 11 = Reserved

4.14.2 Write Control Register (WCTRL)

Address FFFFFD2C

Bit Number	1	0
Bit Name	TRAIL_OVR	WBUF_ENA
Access	R/W	R/W
Default	0	0

Bit 1: TRAIL_OVR – Write trailing wait state override.

0 = At least one trailing wait state (Default)

1 = TRAIL sets trailing wait states

Bit 0: WBUF_ENA – Write buffer enable. When this bit is 1, the memory controller latches the data and control signals in the first cycle for write operations to the memories and peripherals on the expansion bus and lets the CPU perform other operations. However, the CPU starts a wait state if there is another request before the memory controller finishes.

0 = Write buffer disabled (Disabled)

1 = Write buffer enabled

ii. Peripheral Control Register (PCTRL)

Address FFFFFD30

Bit Number	0
Bit Name	PBUF_ENA
Access	R/W
Default	0

Bit 0: PBUF_ENA – Write buffer enable. When this bit is set to 1, the memory controller latches the data and control signals in the first cycle for write operations to the memories and peripherals on the expansion bus and lets the CPU perform other operations. However, the CPU starts a wait state if there is another request before the memory controller finishes.

0 = Write buffer disabled (Default)

1 = Write buffer enabled

4.14.3 Peripheral Location Register (PLOC)

Address FFFFFD34

Bit Number	15:0
Bit Name	LOC
Access	R/W
Default	0000_0000_0000_0000

Bits 15-0: LOC – These 16 bits represent the peripheral location bits, which correspond to each of the 16 peripheral selects.

0 = Peripheral is internal (Default)

1 = Peripheral is external

4.14.4 Peripheral Protection Register (PPROT)

Address FFFFFD38

Bit Number	15:0
Bit Name	PROT
Access	R/W
Default	0000_0000_0000_0000

Bits 15-0: PROT – These 16 bits represent the peripheral protection bits, which correspond to each of the 16 peripheral selects.

0 = Peripheral is accessible in all modes (Default)

1 = Peripheral is accessible in privilege mode only

4.15 DEC – Address Manager

The DEC generates the memory selects and SAR peripheral select signals by decoding the address and control signals from the ARM processor. In addition, the DEC provides the control signals for the Program and Data Flash.

The assigned memory selects for Cyclone are as follows:

- Memory Select 0 => Boot ROM (1Kx32)
- Memory Select 1 => Program Flash 1(8Kx32)
- Memory Select 2 => Data Flash (512x32)
- Memory Select 3 => Data RAM (1Kx32)
- Memory Select 4 => Loop Mux (1Kx32)
- Memory Select 5 => Fault Mux (1Kx32)
- Memory Select 6 => ADC12 Control (1Kx32)
- Memory Select 7 => DPWM3 (1Kx32)
- Memory Select 8 => Filter 2 (1Kx32)
- Memory Select 9 => DPWM 2 (1Kx32)
- Memory Select 10 => Front End Control 2 (1Kx32)
- Memory Select 11 => Filter 1 (1Kx32)
- Memory Select 12 => DPWM 1 (1Kx32)
- Memory Select 13 => Front End Control 1 (1Kx32)
- Memory Select 14 => Filter 0 (1Kx32)
- Memory Select 15 => DPWM 0 (1Kx32)
- Memory Select 16 => Front End Control 0 (1Kx32)
- Memory Select 17 => Program Flash 2(8Kx32)

4.15.1 Memory Fine Base Address High Register 0 (MFBAHR0)

Address FFFFFE00

Bit Number	15:0
Bit Name	ADDRESS[31:16]
Access	R/W
Default	0000_0000_0000_0000

Bits 15-0: ADDRESS[31:16] – 16 Most Significant Bits of the Base Address.
The Base Address sets the 22 most significant bits of the memory address.

4.15.2 Memory Fine Base Address Low Register 0 (MFBALR0)

Address FFFFFE04

Bit Number	15:10	8	7:4	1	0
Bit Name	ADDRESS[15:10]	MS	BLOCK_SIZE	RONLY	PRIV
Access	R/W	R/W	R/W	R/W	R/W
Default	000000	0	0000	0	0

Bits15-10: ADDRESS[15:10] – 6 Least Significant Bits of the Base Address. The Base Address sets the 22 most significant bits of the memory address.

Bit 8: MS – Memory Map Select

0 = Memory Map configuration not updated (Default)

1 = Enables the fine and coarse memory selects and activates the memory map

Bits 7-4: BLOCK_SIZE – Configures the size of the memory

0000 = Memory select is disabled (Default)

0001 = 1K Bytes

0010 = 2K Bytes

0011 = 4K Bytes

0100 = 8K Bytes

0101 = 16K Bytes

0110 = 32K Bytes

0111 = 64K Bytes

1000 = 128K Bytes

1001 = 256K Bytes

1010 = 512K Bytes

1011 = 1M Bytes

1100 = 2M Bytes

1101 = 4M Bytes

1110 = 8M Bytes

1111 = 16M Bytes

Bit 1: RONLY – Read-only protection. This bit sets read-only protection for the memory selected by the memory select. An illegal access exception is generated when a write is attempted to the memory.

0 = Read/write access to memory (Default)

1 = Read accesses to memory only

Bit 0: PRIV – Privilege mode protection. This bit sets privilege mode protection for the memory Registration selected by the memory select. An illegal access exception is generated on any access to memory protected by privilege mode.

0 = User/privilege mode accesses to memory (Default)

1 = Privilege mode accesses to memory only

4.15.3 Memory Fine Base Address High Register 1-3,17 (MFBAHR_x)

Address FFFFFE08 – Memory Fine Base Address High Register 1

Address FFFFFE10 – Memory Fine Base Address High Register 2

Address FFFFFE18 – Memory Fine Base Address High Register 3

Address FFFFFE88 – Memory Fine Base Address High Register 17

Bit Number	15:0
Bit Name	ADDRESS[31:16]
Access	R/W
Default	0000_0000_0000_0000

Bits 15-0: ADDRESS[31:16] – 16 Most Significant Bits of the Base Address.

The Base Address sets the 22 most significant bits of the memory address.

4.15.4 Memory Fine Base Address Low Register 1-3,17(MFBALR_x)

Address FFFFFE0C – Memory Fine Base Address Low Register 1

Address FFFFFE14 – Memory Fine Base Address Low Register 2

Address FFFFFE1C – Memory Fine Base Address Low Register 3

Address FFFFFE8C – Memory Fine Base Address Low Register 17

Bit Number	15:10	9	7:4	1	0
Bit Name	ADDRESS[15:10]	AW	BLOCK_SIZE	RONLY	PRIV
Access	R/W	R/W	R/W	R/W	R/W
Default	000000	0	0000	0	0

Bits 15-10: ADDRESS[15:10] – 6 Least Significant Bits of the Base Address.

The Base Address sets the 22 most significant bits of the memory address.

Bit 9: AW – Auto-wait-on-write. When this bit is set, any write operation on this memory select takes two system cycles.

0 = Write operation is not supplemented with an additional cycle (Default)

1 = Write operation takes an additional cycle

Bits 7-4: BLOCK_SIZE – Configures the size of the memory

0000 = Memory select is disabled (Default)

0001 = 1K Bytes

0010 = 2K Bytes

0011 = 4K Bytes

0100 = 8K Bytes

0101 = 16K Bytes

0110 = 32K Bytes

0111 = 64K Bytes

1000 = 128K Bytes

1001 = 256K Bytes

1010 = 512K Bytes
 1011 = 1M Bytes
 1100 = 2M Bytes
 1101 = 4M Bytes
 1110 = 8M Bytes
 1111 = 16M Bytes

Bit 1: RONLY – Read-only protection. This bit sets read-only protection for the memory selected by the memory select. An illegal access exception is generated when a write is attempted to the memory.

- 0 = Read/write access to memory (Default)
- 1 = Read accesses to memory only

Bit 0: PRIV – Privilege mode protection. This bit sets privilege mode protection for the memory Registration selected by the memory select. An illegal access exception is generated on any access to memory protected by privilege mode.

- 0 = User/privilege mode accesses to memory (Default)
- 1 = Privilege mode accesses to memory only

4.15.5 Memory Fine Base Address High Register 4 (MFBAHR4)

Address FFFFEB0 – Memory Fine Base Address High Register 4

Bit Number	15:0
Bit Name	ADDRESS[31:16]
Access	R/W
Default	0000_0000_0001_0010

Bits 15-0: ADDRESS[31:16] – 16 Most Significant Bits of the Base Address. The Base Address sets the 22 most significant bits of the memory address.

4.15.6 Memory Fine Base Address Low Register 4-16 (MFBALRx)

Address FFFFEB4 – Memory Fine Base Address Low Register 4

Address FFFFEB2C – Memory Fine Base Address Low Register 5

Address FFFFEB34 – Memory Fine Base Address Low Register 6

Address FFFFEB3C – Memory Fine Base Address Low Register 7

Address FFFFEB44 – Memory Fine Base Address Low Register 8

Address FFFFEB4C – Memory Fine Base Address Low Register 9

Address FFFFEB54 – Memory Fine Base Address Low Register 10

Address FFFFEB5C – Memory Fine Base Address Low Register 11

Address FFFFEB64 – Memory Fine Base Address Low Register 12

Address FFFFEB6C – Memory Fine Base Address Low Register 13

Address FFFFEB74 – Memory Fine Base Address Low Register 14

Address FFFFEB7C – Memory Fine Base Address Low Register 15

Address FFFF84 – Memory Fine Base Address Low Register 16

Bit Number	15:10	9	8:2	1	0
Bit Name	ADDRESS[15:10]	AW	RESERVED	RONLY	PRIV
Access	R/W	R/W	-	R/W	R/W
Default	000000	0	0_0000_00	0	0

Bits 15-10: ADDRESS[15:10] – 6 Least Significant Bits of the Base Address.

The Base Address sets the 22 most significant bits of the memory address.

Bit 9: AW – Auto-wait-on-write. When this bit is set, any write operation on this memory select takes two system cycles.

0 = Write operation is not supplemented with an additional cycle (Default)

1 = Write operation takes an additional cycle

Bits 8-2: RESERVED – Unused bits

Bit 1: RONLY – Read-only protection. This bit sets read-only protection for the memory selected by the memory select. An illegal access exception is generated when a write is attempted to the memory.

0 = Read/write access to memory (Default)

1 = Read accesses to memory only

Bit 0: PRIV – Privilege mode protection. This bit sets privilege mode protection for the memory Registration selected by the memory select. An illegal access exception is generated on any access to memory protected by privilege mode.

0 = User/privilege mode accesses to memory (Default)

1 = Privilege mode accesses to memory only

4.15.7 Memory Fine Base Address High Register 5 (MFBAHR5)**Address FFFF88 – Memory Fine Base Address High Register 5**

Bit Number	15:0
Bit Name	ADDRESS[31:16]
Access	R/W
Default	0000_0000_0001_0011

Bits 15-0: ADDRESS[31:16] – 16 Most Significant Bits of the Base Address.

The Base Address sets the 22 most significant bits of the memory address.

4.15.8 Memory Fine Base Address High Register 6 (MFBAHR6)

Address FFFFFE30 – Memory Fine Base Address High Register 6

Bit Number	15:0
Bit Name	ADDRESS[31:16]
Access	R/W
Default	0000_0000_0001_0100

Bits 15-0: ADDRESS[31:16] – 16 Most Significant Bits of the Base Address.

The Base Address sets the 22 most significant bits of the memory address.

4.15.9 Memory Fine Base Address High Register 7 (MFBAHR7)

Address FFFFFE38 – Memory Fine Base Address High Register 7

Bit Number	15:0
Bit Name	ADDRESS[31:16]
Access	R/W
Default	0000_0000_0001_0101

Bits 15-0: ADDRESS[31:16] – 16 Most Significant Bits of the Base Address.

The Base Address sets the 22 most significant bits of the memory address.

4.15.10 Memory Fine Base Address High Register 8 (MFBAHR8)

Address FFFFFE40 – Memory Fine Base Address High Register 8

Bit Number	15:0
Bit Name	ADDRESS[31:16]
Access	R/W
Default	0000_0000_0001_0110

Bits 15-0: ADDRESS[31:16] – 16 Most Significant Bits of the Base Address.

The Base Address sets the 22 most significant bits of the memory address.

4.15.11 Memory Fine Base Address High Register 9 (MFBAHR9)

Address FFFFFE48 – Memory Fine Base Address High Register 9

Bit Number	15:0
Bit Name	ADDRESS[31:16]
Access	R/W
Default	0000_0000_0001_0111

Bits 15-0: ADDRESS[31:16] – 16 Most Significant Bits of the Base Address.

The Base Address sets the 22 most significant bits of the memory address.

4.15.12 Memory Fine Base Address High Register 10 (MFBAHR10)

Address FFFFFE50 – Memory Fine Base Address High Register 10

Bit Number	15:0
Bit Name	ADDRESS[31:16]
Access	R/W
Default	0000_0000_0001_1000

Bits 15-0: ADDRESS[31:16] – 16 Most Significant Bits of the Base Address.
The Base Address sets the 22 most significant bits of the memory address.

4.15.13 Memory Fine Base Address High Register 11 (MFBAHR11)

Address FFFFFE58 – Memory Fine Base Address High Register 11

Bit Number	15:0
Bit Name	ADDRESS[31:16]
Access	R/W
Default	0000_0000_0001_1001

Bits 15-0: ADDRESS[31:16] – 16 Most Significant Bits of the Base Address.
The Base Address sets the 22 most significant bits of the memory address.

4.15.14 Memory Fine Base Address High Register 12 (MFBAHR12)

Address FFFFFE60 – Memory Fine Base Address High Register 12

Bit Number	15:0
Bit Name	ADDRESS[31:16]
Access	R/W
Default	0000_0000_0001_1010

Bits 15-0: ADDRESS[31:16] – 16 Most Significant Bits of the Base Address.
The Base Address sets the 22 most significant bits of the memory address.

4.15.15 Memory Fine Base Address High Register 13 (MFBAHR13)
Address FFFFFE68 – Memory Fine Base Address High Register 13

Bit Number	15:0
Bit Name	ADDRESS[31:16]
Access	R/W
Default	0000_0000_0001_1011

Bits 15-0: ADDRESS[31:16] – 16 Most Significant Bits of the Base Address.
 The Base Address sets the 22 most significant bits of the memory address.

4.15.16 Memory Fine Base Address High Register 14 (MFBAHR14)
Address FFFFFE70 – Memory Fine Base Address High Register 14

Bit Number	15:0
Bit Name	ADDRESS[31:16]
Access	R/W
Default	0000_0000_0001_1100

Bits 15-0: ADDRESS[31:16] – 16 Most Significant Bits of the Base Address.
 The Base Address sets the 22 most significant bits of the memory address.

4.15.17 Memory Fine Base Address High Register 15 (MFBAHR15)
Address FFFFFE78 – Memory Fine Base Address High Register 15

Bit Number	15:0
Bit Name	ADDRESS[31:16]
Access	R/W
Default	0000_0000_0001_1101

Bits 15-0: ADDRESS[31:16] – 16 Most Significant Bits of the Base Address.
 The Base Address sets the 22 most significant bits of the memory address.

4.15.18 Memory Fine Base Address High Register 16 (MFBAHR16)
Address FFFFFE80 – Memory Fine Base Address High Register 16

Bit Number	15:0
Bit Name	ADDRESS[31:16]
Access	R/W
Default	0000_0000_0001_1110

Bits 15-0: ADDRESS[31:16] – 16 Most Significant Bits of the Base Address.
The Base Address sets the 22 most significant bits of the memory address.

4.15.19 Program Flash Block 1 Control Register (PFLASHCTRL1)
FFFFFE90

Bit Number	11	10	9	8	7:5	4:0
Bit Name	BUSY	RESERVED	PAGE_ERASE	MASS_ERASE	RESERVED	PAGE_S
Access	R	-	R/W	R/W	R/W	R/W
Default	-	0	0	0	000	00000

Bit 11: BUSY – Program Flash Block 1 Busy Indicator

0 = Program Flash available for read/write/erase access
1 = Program Flash unavailable for read/write/erase access

Bit 10: Reserved

Bit 9: PAGE_ERASE – Program Flash Block 1 Page Erase Enable

0 = No Page Erase initiated on Program Flash (Default)
1 = Page Erase on Program Flash enabled. Page erased is based on PAGE_SEL (Bits 4-0). Interlock Key must be set in the Flash Interlock Register (Section 4.15.21) before initiating a Page Erase cycle. This bit is cleared upon completion of Page Erase cycle.

Bit 8: MASS_ERASE – Program Flash Block 1 Mass Erase Enable

0 = No Mass Erase initiated on Program Flash (Default)
1 = Mass Erase of Program Flash enabled. Interlock Key must be set in the Flash Interlock Register (Section 4.15.21) before initiating a Mass Erase cycle. This bit is cleared upon completion of Mass Erase cycle.

Bits 4-0: PAGE_SEL – Selects page to be erased during Page Erase Cycle

4.15.20 Data Flash Control Register (DFLASHCTRL)

Address FFFFFE94

Bit Number	11	10	9	8	7:6	5:0
Bit Name	BUSY	RESERVED	PAGE_ERASE	MASS_ERASE	RESERVED	PAGE_
Access	R	-	R/W	R/W	-	R/W
Default	-	0	0	0	-	00000

Bit 11: BUSY – Data Flash Busy Indicator

0 = Data Flash available for read/write/erase access

1 = Data Flash unavailable for read/write/erase access

Bit 10: Reserved

Bit 9: PAGE_ERASE – Data Flash Page Erase Enable

0 = No Page Erase initiated on Data Flash (Default)

1 = Page Erase Cycle on Data Flash enabled. Page erased is based on PAGE_SEL (Bits 4-0). These bits are cleared upon completion of Page Erase cycle.

Bit 8: MASS_ERASE – Data Flash Mass Erase Enable

0 = No Mass Erase initiated on Data Flash (Default)

1 = Mass Erase of Data Flash enabled. Bit is cleared upon completion of mass erase.

Bits 5-0: PAGE_SEL – Selects page to be erased during Page Erase Cycle

4.15.21 Flash Interlock Register (FLASHILOCK)

Address FFFFFE98

Bit Number	31:0
Bit Name	INTERLOCK_KEY
Access	R/W
Default	0000_0000_0000_0000_0000_0000_0000_0000

Bit 31-0: INTERLOCK_KEY – Flash Interlock Key. Register must be set to 0x42DC157E prior to every Program Flash#1 or Data Flash write, Mass Erase or Page Erase or 0x6C97D0C5 prior to every Program Flash#2 write, Mass Erase or Page Erase. If the Interlock Key is not set, the write/erase cycle to the Flash will not initiate. This register will clear upon the completion of a write or erase cycle to the Flash modules.

4.15.22 Program Flash Block 2 Control Register (PFLASHCTRL2)

Address FFFFFE9C

Bit Number	11	10	9	8	7:5	4:0
Bit Name	BUSY	RESERVED	PAGE_ERASE	MASS_ERASE	RESERVED	PAGE_S
Access	R	-	R/W	R/W	R/W	R/W
Default	-	0	0	0	000	00000

Bit 11: BUSY – Program Flash Block 2 Busy Indicator

0 = Program Flash available for read/write/erase access

1 = Program Flash unavailable for read/write/erase access

Bit 10: Reserved

Bit 9: PAGE_ERASE – Program Flash Block 2 Page Erase Enable

0 = No Page Erase initiated on Program Flash (Default)

1 = Page Erase on Program Flash enabled. Page erased is based on

PAGE_SEL (Bits 4-0). Interlock Key must be set in the Flash Interlock Register (Section 4.15.21) before initiating a Page Erase cycle. This bit is cleared upon completion of Page Erase cycle.

Bit 8: MASS_ERASE – Program Flash Block 2 Mass Erase Enable

0 = No Mass Erase initiated on Program Flash (Default)

1 = Mass Erase of Program Flash enabled. Interlock Key must be set in the Flash Interlock Register (Section 4.15.21) before initiating a Page Erase cycle.. This bit is cleared upon completion of Mass Erase cycle.

Bits 4-0: PAGE_SEL – Selects page to be erased during Page Erase Cycle

4.16 CIM – Central Interrupt Module

CIM Registers have the following attributes:

- 32-bit wide
- Addresses placed on word boundaries
- Byte, half-word and word writes permitted
- All Registers have read/write access in any mode
- Interrupt Mask and FIQ/IRQ Program Control Registers are writeable in privilege mode only. A write in user mode to these Registers causes a peripheral illegal access exception.

4.16.1 IRQ Index Offset Vector Register (IRQIVEC)

Address FFFFFFF20

Bit Number	7:0
Bit Name	IRQIVEC
Access	R
Default	-

Bits 7-0: IRQIVEC – Index of the IRQ Pending Interrupt (Cleared upon read)

0 = No interrupt pending

1 = Pending interrupt on Channel 0

2 = Pending interrupt on Channel 1

N = Pending interrupt on Channel N-1, where N <= 31

4.16.2 FIQ Index Offset Vector Register (FIQIVEC)

Address FFFFFFF24

Bit Number	7:0
Bit Name	FIQIVEC
Access	R
Default	-

Bits 7-0: FIQIVEC – Index of the FIQ pending interrupt (Cleared upon read)

0 = No interrupt pending

1 = Pending interrupt on Channel 0

2 = Pending interrupt on Channel 1

N = Pending interrupt on Channel N-1, where N <= 31.

4.16.3 FIQ/IRQ Program Control Register (FIRQPR)

Address FFFFFFF2C

A 32-bit FIQ/IRQ program control Register (FIRQPR) determines whether a given interrupt request will be FIQ or IRQ type.

Bit Number	31	30
Bit Name	EXT_FAULT_INT	SYS_SSI_INT
Access	R/W	R/W
Default	0	0

Bit Number	29	28	27	26	25
Bit Name	DPWM0_INT	DPWM1_INT	DPWM2_INT	DPWM3_INT	FAULT_MUX_INT
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	24	23	22	21	20
Bit Name	ADC_INT	CPCC_INT	T24_OC0_INT	T24_CAP_INT	T24_OC1_INT
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	19	18	17	16	15
Bit Name	DTC_INT	T24_OVF	T16_PWM0_INT	T16_PWM1_INT	T16_PWM2_INT
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	14	13	12	11	10
Bit Name	T16_PWM3_INT	FE2_INT	FE1_INT	FE0_INT	DCOMP_I2C_SPI_INT
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	9	8	7	6	5
Bit Name	PMBUS_INT	UART1_TX_INT	UART1_RX_INT	UART0_TX_INT	UART0_RX_INT
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	4	3	2	1	0
Bit Name	UART_0_1_ERR_INT	WD_WAKE_INT	WD_FULL_INT	EXT_INT	BROWNOUT_INT
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit 0: BROWMOUT_INT – Brownout Interrupt Request

- 0 = Interrupt request is of IRQ type (Default)
 1 = Interrupt request is of FIQ type

Bit 1: EXT_INT – External Interrupt Request

- 0 = Interrupt request is of IRQ type (Default)
 1 = Interrupt request is of FIQ type

Bit 2: WD_FULL_INT – Watchdog Max Count Reached Interrupt Request

- 0 = Interrupt request is of IRQ type (Default)
 1 = Interrupt request is of FIQ type

Bit 3: WD_WAKE_INT – Watchdog Half Count Reached Interrupt Request

- 0 = Interrupt request is of IRQ type (Default)
 1 = Interrupt request is of FIQ type

Bit 4: UART_0_1_ERR_INT – UART0/1 ERR Interrupt Request

- 0 = Interrupt request is of IRQ type (Default)
 1 = Interrupt request is of FIQ type

Bit 5: UART0_RX_INT – UART0 RX Interrupt Request

- 0 = Interrupt request is of IRQ type (Default)
 1 = Interrupt request is of FIQ type

Bit 6: UART0_TX_INT – UART0 TX Interrupt Request

- 0 = Interrupt request is of IRQ type (Default)
 1 = Interrupt request is of FIQ type

Bit 7: UART1_RX_INT – UART1 RX Interrupt Request

- 0 = Interrupt request is of IRQ type (Default)
 1 = Interrupt request is of FIQ type

Bit 8: UART1_TX_INT – UART1 TX Interrupt Request

- 0 = Interrupt request is of IRQ type (Default)
 1 = Interrupt request is of FIQ type

Bit 9: PMBUS_INT – PMBus Interrupt Request

- 0 = Interrupt request is of IRQ type (Default)
 1 = Interrupt request is of FIQ type

Bit 10: DCOMP_I2C_SPI_INT – Digital Comparator/I2C/SPI Interrupt Request

- 0 = Interrupt request is of IRQ type (Default)
 1 = Interrupt request is of FIQ type

Bit 11: FE0_INT – Front End 0 Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 12: FE1_INT – Front End 1 Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 13: FE2_INT – Front End 2 Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 14: T16_PWM3_INT – 16-bit Timer 3 PWM Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 15: T16_PWM2_INT – 16-bit Timer 2 PWM Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 16: T16_PWM1_INT – 16-bit Timer 1 PWM Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 17: T16_PWM0_INT – 16-bit Timer 0 PWM Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 18: T24_OVF_INT – 24-bit Timer Overflow Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 19: DTC_INT – DTC Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 20: T24_OC1_INT – 24-bit Output Compare 1 Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 21: T24_CAP_INT – 24-bit Timer Capture Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 22: T24_OC0_INT – 24-bit Output Compare 0 Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 23: CPCC_INT – CPCC Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 24: ADC_INT – ADC12 Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 25: FAULT_MUX_INT – Fault Mux Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 26: DPWM3_INT – DPWM3 Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 27: DPWM2_INT – DPWM2 Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 28: DPWM1_INT – DPWM1 Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 29: DPWM0_INT – DPWM0 Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 30: EXT_FAULT_INT – External Fault Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

Bit 31: SYS_SSI_INT – SYS SSI Interrupt Request

0 = Interrupt request is of IRQ type (Default)
1 = Interrupt request is of FIQ type

4.16.4 Pending Interrupt Read Location Register (INTREQ)

Address FFFFFFF30

Bit Number	31	30
Bit Name	EXT_FAULT_INT	SYS_SSI_INT
Access	R	R
Default	-	-

Bit Number	29	28	27	26	25
Bit Name	DPWM0_INT	DPWM1_INT	DPWM2_INT	DPWM3_INT	FAULT_MUX_INT
Access	R	R	R	R	R
Default	-	-	-	-	-

Bit Number	24	23	22	21	20
Bit Name	ADC_INT	CPCC_INT	T24_OC0_INT	T24_CAP_INT	T24_OC1_INT
Access	R	R	R	R	R
Default	-	-	-	-	-

Bit Number	19	18	17	16	15
Bit Name	DTC_INT	T24_OVF	T16_PWM0_INT	T16_PWM1_INT	T16_PWM2_INT
Access	R	R	R	R	R
Default	-	-	-	-	-

Bit Number	14	13	12	11	10
Bit Name	T16_PWM3_INT	FE2_INT	FE1_INT	FE0_INT	DCOMP_I2C_SPI_INT
Access	R	R	R	R	R
Default	-	-	-	-	-

Bit Number	9	8	7	6	5
Bit Name	PMBUS_INT	UART1_TX_INT	UART1_RX_INT	UART0_TX_INT	UART0_RX_INT
Access	R	R	R	R	R
Default	-	-	-	-	-

Bit Number	4	3	2	1	0

Bit Name	UART_0_1_ERR_INT	WD_WAKE_INT	WD_FULL_INT	EXT_INT	BROWNOUT_INT
Access	R	R	R	R	R
Default	-	-	-	-	-

Bit 0: BROWMOUT_INT – Brownout Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 1: EXT_INT – External Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 2: WD_FULL_INT – Watchdog Max Count Reached Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 3: WD_WAKE_INT – Watchdog Half Count Reached Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 4: UART_0_1_ERR_INT – UART0/1 ERR Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 5: UART0_RX_INT – UART0 RX Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 6: UART0_TX_INT – UART0 TX Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 7: UART1_RX_INT – UART1 RX Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 8: UART1_TX_INT – UART1 TX Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 9: PMBUS_INT – PMBus Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 10: DCOMP_I2C_SPI_INT – Digital Comparator/I2C/SPI Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 11: FE0_INT – Front End 0 Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 12: FE1_INT – Front End 1 Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 13: FE2_INT – Front End 2 Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 14: T16_PWM3_INT – 16-bit Timer 3 PWM Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 15: T16_PWM2_INT – 16-bit Timer 2 PWM Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 16: T16_PWM1_INT – 16-bit Timer 1 PWM Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 17: T16_PWM0_INT – 16-bit Timer 0 PWM Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 18: T24_OVF_INT – 24-bit Timer Overflow Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 19: DTC_INT – DTC Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 20: T24_OC1_INT – 24-bit Output Compare 1 Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 21: T24_CAP_INT – 24-bit Timer Capture Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 22: T24_OC0_INT – 24-bit Output Compare 0 Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 23: CPCC_INT – CPCC Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 24: ADC_INT – ADC12 Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 25: FAULT_MUX_INT – Fault Mux Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 26: DPWM3_INT – DPWM3 Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 27: DPWM2_INT – DPWM2 Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 28: DPWM1_INT – DPWM1 Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 29: DPWM0_INT – DPWM0 Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 30: EXT_FAULT_INT – External Fault Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

Bit 31: SYS_SSI_INT – SYS SSI Interrupt Request

0 = No interrupt has occurred

1 = Interrupt is pending

4.16.5 Interrupt Mask Register (REQMASK)

Address FFFFFFF34

Bit Number	31	30
Bit Name	EXT_FAULT_INT	SYS_SSI_INT
Access	R/W	R/W
Default	0	0

Bit Number	29	28	27	26	25
Bit Name	DPWM0_INT	DPWM1_INT	DPWM2_INT	DPWM3_INT	FAULT_MUX_INT
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	24	23	22	21	20
Bit Name	ADC_INT	CPCC_INT	T24_OC0_INT	T24_CAP_INT	T24_OC1_INT
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	19	18	17	16	15
Bit Name	DTC_INT	T24_OVF	T16_PWM0_INT	T16_PWM1_INT	T16_PWM2_INT
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	14	13	12	11	10
Bit Name	T16_PWM3_INT	FE2_INT	FE1_INT	FE0_INT	DCOMP_I2C_SPI_INT
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	9	8	7	6	5
Bit Name	PMBUS_INT	UART1_TX_INT	UART1_RX_INT	UART0_TX_INT	UART0_RX_INT
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit Number	4	3	2	1	0

Bit Name	UART_0_1_ERR_INT	WD_WAKE_INT	WD_FULL_INT	EXT_INT	BROWNOUT_INT
Access	R/W	R/W	R/W	R/W	R/W
Default	0	0	0	0	0

Bit 0: BROWMOUT_INT – Brownout Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)

1 = Interrupt request channel is enabled

Bit 1: EXT_INT – External Interrupt Request

0 = Interrupt request channel is disabled (Default)

1 = Interrupt request channel is enabled

Bit 2: WD_FULL_INT – Watchdog Max Count Reached Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)

1 = Interrupt request channel is enabled

Bit 3: WD_WAKE_INT – Watchdog Half Count Reached Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)

1 = Interrupt request channel is enabled

Bit 4: UART_0_1_ERR_INT – UART0/1 ERR Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)

1 = Interrupt request channel is enabled

Bit 5: UART0_RX_INT – UART0 RX Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)

1 = Interrupt request channel is enabled

Bit 6: UART0_TX_INT – UART0 TX Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)

1 = Interrupt request channel is enabled

Bit 7: UART1_RX_INT – UART1 RX Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)

1 = Interrupt request channel is enabled

Bit 8: UART1_TX_INT – UART1 TX Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)

1 = Interrupt request channel is enabled

Bit 9: PMBUS_INT – PMBus Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)

1 = Interrupt request channel is enabled

Bit 10: DCOMP_I2C_SPI_INT – Digital Comparator/I2C/SPI Interrupt Mask

Select

0 = Interrupt request channel is disabled (Default)

1 = Interrupt request channel is enabled

Bit 11: FE0_INT – Front End 0 Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 12: FE1_INT – Front End 1 Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 13: FE2_INT – Front End 2 Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 14: T16_PWM3_INT – 16-bit Timer 3 PWM Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 15: T16_PWM2_INT – 16-bit Timer 2 PWM Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 16: T16_PWM1_INT – 16-bit Timer 1 PWM Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 17: T16_PWM0_INT – 16-bit Timer 0 PWM Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 18: T24_OVF_INT – 24-bit Timer Overflow Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 19: DTC_INT – DTC Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 20: T24_OC1_INT – 24-bit Output Compare 1 Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 21: T24_CAP_INT – 24-bit Timer Capture Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 22: T24_OC0_INT – 24-bit Output Compare 0 Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 23: CPCC_INT – CPCC Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 24: ADC_INT – ADC12 Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 25: FAULT_MUX_INT – Fault Mux Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 26: DPWM3_INT – DPWM3 Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 27: DPWM2_INT – DPWM2 Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 28: DPWM1_INT – DPWM1 Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 29: DPWM0_INT – DPWM0 Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 30: EXT_FAULT_INT – External Fault Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

Bit 31: SYS_SSI_INT – SYS SSI Interrupt Mask Select

0 = Interrupt request channel is disabled (Default)
1 = Interrupt request channel is enabled

4.17 SYS – System Module

SYS Registers have the following attributes:

- Addresses placed on word boundaries
- Byte, half-word and word writes permitted
- All Registers can be read in any mode of operation.
- Global Control Register is writeable in privilege mode only. All other Registers are writeable in any mode.

4.17.1 Clock Control Register (CLKCNTL)

Address FFFFFFFD0

The clock control Register configures the MCLK divider for low power modes and the clock multiplexer which drives the Sync pin when configured to output the CLKOUT signal. CLKCNTL is accessible in user and privilege mode and supports byte, half-word and word accesses. Any access to this Register takes two SYSCLK cycles.

Bit Number	9:8	7	6:5	4	3	2:0
Bit Name	M_DIV_RATIO	RESERVED	CLKSR	RESERVED	CLKDOUT	RESERVED
Access	R/W	-	R/W	-	R/W	-
Default	00	0	00	0	0	000

Bits 9-8: M_DIV_RATIO – MCLK (Processor Clock) Divide Ratio

00 = MCLK frequency equals High Frequency Oscillator divided by 8
(Default)

01 = MCLK frequency equals High Frequency Oscillator divided by 16

10 = MCLK frequency equals High Frequency Oscillator divided by 32

11 = MCLK frequency equals High Frequency Oscillator divided by 64

Bit 7: RESERVED

Bit 6-5: CLKSR – These bits control the source/function of CLKOUT

00 = Driven by value in CLKDOUT (Bit 3) (Default)

01 = Driven by the interface clock (ICLK)

10 = Driven by the CPU clock (MCLK)

11 = Driven by the system clock (SYSCLK)

Bit 4: RESERVED – Unused bit

Bit 3: CLKDOUT – This pin represents the output value of CLKOUT

0 = CLKOUT driven to logic low in output mode (Default)

1 = CLKOUT driven to logic high in output mode

Bits 2-0: RESERVED

4.17.2 System Exception Control Register (SYSECR)

Address FFFFFFFE0

The system exception control Register contains bits that allow the user to generate a software reset. The OVR bits disable some reset/abort conditions when TRST is high.

Bit Number	15:14	13:3	2	1	0
Bit Name	RESET	RESERVED	PACCOVR	ACCOVR	ILLOVR
Access	R/W	-	R/W	R/W	R/W
Default	01	-	0	0	0

Bits 15-14: RESET – Software Reset Enable. These bits always read as 01

01 = No reset

1X = Global system reset (X = don't care)

X0 = Global system reset (X = don't care)

Bits 13-3: RESERVED

Bit 2: PACCOVR – Peripheral Access Violation Override

0 = Peripheral access violation error causes a reset or abort (Default)

1 = No action taken on a peripheral access violation

Bit 1: ACCOVR – Memory Access Reset Override

0 = Memory access violation error causes a reset or abort (Default)

1 = No action taken on an illegal address

Bit 0: ILLOVR – Illegal Address Reset Override

0 = Illegal address causes a reset or abort (Default)

1 = No action taken on an illegal address

4.17.3 System Exception Status Register (SYSESR)

Address FFFFFFFE4

The System Exception Status Register contains flags for different reset/abort sources. On power-up, all bits are cleared to 0. When a reset condition is recognized, the appropriate bit in the Register is set and the value of the bit is maintained through the reset. When a new reset condition occurs, the current contents of this Register are not cleared. The contents of this Register are cleared on a power-on reset or by software.

Bit Number	15	14	13	12	11	10
Bit Name	PORRST	CLKRST	WDRST	ILLMODE	ILLADR	ILLACC
Access	R/W	R/W	R/W	R/W	R/W	R/W

Default	0	0	0	0	0	0
----------------	---	---	---	---	---	---

Bit Number	9	8	7	6:0
Bit Name	PILLACC	ILLMAP	SWRST	RESERVED
Access	R/W	R/W	R/W	-
Default	0	0	0	000_0000

Bit 15: PORRST – Power-On reset flag. Set when power-on reset is asserted. Reset is asserted as long as power-on-reset is active. Whenever a device is powered, this bit is set.

User and privilege modes (read)

0 = Power-up reset has not occurred since the last clear

1 = Power-up reset has occurred since the last clear

User and privilege modes (write)

0 = Clears the corresponding bit to 0

1 = No effect

Bit 14: CLKRST – This bit represents the clock fail flag. This bit indicates a clock fault condition has occurred. After power-on-reset, the CLKRST is reset to 0. Value remains unchanged during other resets.

User and privilege modes (read)

0 = Clock failure has not occurred since the last clear

1 = Clock failure has occurred since the last clear

User and privilege modes (write)

0 = Clears the corresponding bit to 0

1 = No effect

Bit 13: WDRST – This bit represents the watchdog reset flag. This bit indicates that the last reset was caused by the watchdog.

User and privilege modes (read)

0 = Watchdog reset has not occurred since the last clear

1 = Watchdog reset has occurred since the last clear

User and privilege modes (write)

0 = Clears the corresponding bit to 0

1 = No effect

Bit 12: ILLMODE – This bit represents the illegal mode flag. This bit is set when the mode bits in the program status Register are set to an illegal value.

User and privilege modes (read)

0 = Illegal mode has not occurred since the last clear

1 = Illegal mode has occurred since the last clear

User and privilege modes (write)

0 = Clears the corresponding bit to 0

1 = No effect

Bit 11: ILLADR – This bit represents the illegal address access flag. This bit is set when an access to an unimplemented location in the memory map is detected in non-user mode.

User and privilege modes (read)

0 = Illegal address has not occurred since the last clear

1 = Illegal address has occurred since the last clear

User and privilege modes (write)

0 = Clears the corresponding bit to 0

1 = No effect

Bit 10: ILLACC – This bit represents the illegal memory access flag. This bit is set when an access to a protected location without permission rights is detected in non-user mode.

User and privilege modes (read)

0 = Illegal memory access has not occurred since the last clear

1 = Illegal memory access has occurred since the last clear

User and privilege modes (write)

0 = Clears the corresponding bit to 0

1 = No effect

Bit 9: PILLACC – This bit represents the peripheral illegal access flag. This bit is set when a peripheral access violation is detected in user mode.

User and privilege modes (read)

0 = Illegal peripheral access has not occurred since the last clear

1 = Illegal peripheral access has occurred since the last clear

User and privilege modes (write)

0 = Clears the corresponding bit to 0

1 = No effect

Bit 8: ILLMAP – This bit represents the illegal address map flag. This bit is set when the base addresses of one or more memories overlap. Reset occurs when the overlapped registration is accessed.

User and privilege modes (read)

0 = Illegal address mapping has not occurred since the last clear

1 = Illegal address mapping has occurred since the last clear

User and privilege modes (write)

0 = Clears the corresponding bit to 0

1 = No effect

Bit 7: SWRST – This bit represents the software reset flag. This bit is set when the last reset is caused by software writing the RESET bits.

User and privilege modes (read)

0 = Software reset has not occurred since the last clear

- 1 = Software reset has occurred since the last clear
- User and privilege modes (write)
- 0 = Clears the corresponding bit to 0
- 1 = No effect

Bit 6-0: RESERVED

4.17.4 Abort Exception Status Register (ABRTESR)

Address FFFFFFFE8

The Abort Exception Status Register shows the abort cause.

Bit Number	15	14	13	12:0
Bit Name	ADRABT	MEMABT	PACCVIO	RESERVED
Access	R/W	R/W	R/W	-
Default	0	0	0	0_0000_0000_0000

Bit 15: ADRABT – This bit represents the illegal address abort. An illegal address access was detected in user mode. An abort was generated due to an illegal address access from either the MPU or system

- User and privilege modes (read)
- 0 = No illegal address
- 1 = Abort caused by an illegal address
- User and privilege modes (write)
- 0 = Clears bit to 0
- 1 = No effect

Bit 14: MEMABT – This bit represents the memory access abort. This bit indicates an illegal memory access was detected in user mode. An abort was generated due to the illegal memory access from either the MPU or system.

- User and privilege modes (read)
- 0 = No illegal memory access
- 1 = Abort caused by an illegal memory access
- User and privilege modes (write)
- 0 = Clears bit to 0
- 1 = No effect

Bit 13: PACCVIO – This bit represents the peripheral access violation error. This bit indicates a peripheral access violation error was detected during a peripheral Register access in user mode. An abort was generated due to a peripheral access violation.

- User and privilege modes (read)
- 0 = No peripheral access violation
- 1 = Abort caused by a peripheral access violation
- User and privilege modes (write)

0 = Clears bit to 0

1 = No effect

Bit 12-0: RESERVED – Unused bits

4.17.5 Global Status Register (GLBSTAT)

Address FFFFFFFE

The Global Status Register specifies the module that triggered the illegal address, illegal access, abort or reset. When a new reset condition reset occurs, the current contents of this Register are not cleared. The contents of this Register are cleared on a power-on reset or by software.

Bit Number	7	6	5:0
Bit Name	SYSADDR	SYSACC	RESERVED
Access	R/W	R/W	-
Default	0	0	0000

Bit 7: SYSADDR – This bit represents the system illegal address flag. This bit is set when the system detects an illegal address.

User and privilege modes (read)

0 = No system illegal address

1 = Abort or reset caused by a system illegal address

User and privilege modes (write)

0 = Clears bit to 0

1 = No effect

Bit 6: SYSACC – This bit represents the system illegal access flag. This bit is set when the system detects an illegal access.

User and privilege modes (read)

0 = No system illegal access

1 = Abort or reset caused by a system illegal access

User and privilege modes (write)

0 = Clears bit to 0

1 = No effect

Bit 5-0: RESERVED

4.17.6 Device Identification Register (DEV)

Address FFFFFFF0

The Device Identification Register contains device specification information that is hard coded during device manufacturing. This register is read-only.

Bit Number	15:0
Bit Name	DEV
Access	R
Default	1001_0100_0111_1111

Bits 15-0: DEV – These bits represent the device identification code.

4.17.7 System Software Interrupt Flag Register (SSIF)

Address FFFFFFF8

The System Software Interrupt Flag Register is set when a software interrupt is triggered. The flag allows the user to poll for a software interrupt.

Bit Number	0
Bit Name	SSIFLAG
Access	R/W
Default	0

Bit 0: SSIFLAG – This bit represents the system software interrupt flag. This bit is set when a correct SSKEY is written to the System Software Interrupt Flag Register. This bit is cleared only by software.

User and privilege modes (read)

0 = No IRQ/FIQ interrupt request has been generated since the last clear

1 = IRQ/FIQ interrupt request has been generated since the last clear

User and privilege modes (write)

0 = Clears bit to 0

1 = No effect

4.17.8 System Software Interrupt Request Register (SSIR)

Address **FFFFFFF**C

The System Software Interrupt Request Register contains a key sequence that triggers a software interrupt request to the CIM. Also, the Register contains an 8-bit data field.

Bit Number	15:8	7:0
Bit Name	SSKEY	SSDATA
Access	R/W	R/W
Default	0000_0000	0000_0000

Bits 15-8: SSKEY – These bits represent the system software interrupt request key. These write-only bits are executable in both user and privilege modes. A 0x75 written to these bits initiates IRQ/FIQ interrupts. Data in this field is always read as zero.

Bits 7-0: SSDATA – These bits represent the system software interrupt data. The SSDATA bits provide an 8-bit field that can be used for passing messages into the system software interrupt.

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have **not** been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products	Applications		
Audio	www.ti.com/audio	Automotive and Transportation	www.ti.com/automotive
Amplifiers	amplifier.ti.com	Communications and Telecom	www.ti.com/communications
Data Converters	dataconverter.ti.com	Computers and Peripherals	www.ti.com/computers
DLP® Products	www.dlp.com	Consumer Electronics	www.ti.com/consumer-apps
DSP	dsp.ti.com	Energy and Lighting	www.ti.com/energy
Clocks and Timers	www.ti.com/clocks	Industrial	www.ti.com/industrial
Interface	interface.ti.com	Medical	www.ti.com/medical
Logic	logic.ti.com	Security	www.ti.com/security
Power Mgmt	power.ti.com	Space, Avionics and Defense	www.ti.com/space-avionics-defense
Microcontrollers	microcontroller.ti.com	Video and Imaging	www.ti.com/video
RFID	www.ti-rfid.com	TI E2E Community	
OMAP Applications Processors	www.ti.com/omap	e2e.ti.com	
Wireless Connectivity	www.ti.com/wirelessconnectivity		