

🕳 Order

Now



Reference

Design

参考資料

JAJSE49B-AUGUST 2017-REVISED FEBRUARY 2018

Support &

Community

2.2

# DRV10987 12V~24V、三相、センサレスBLDCモータ・ドライバ

Technical

Documents

## 1 特長

- 動作電圧範囲:
  - モータ動作: 6.2V~28V
- 合計ドライバH + L r<sub>DS(on)</sub>
- − T<sub>A</sub> = 25℃ ି 250mΩ
- ドライバ電流: 連続巻線電流2A (ピーク3A)
- センサレスの正弦180°整流方式
- EMI管理のため出力PWMスルー・レートと周波数 を変更可能
- 初期位置検出アルゴリズムによりスタートアップ
   時のバック・スピンを防止
- 外部検出抵抗不要
- 柔軟なユーザー・インターフェイス・オプション
  - I<sup>2</sup>Cインターフェイス: コマンドおよびフィードバック のためレジスタにアクセス
  - 専用SPEEDピン: アナログまたはPWM入力に対応
  - 専用FGピン: TACHフィードバックに使用
  - スピンアップ・プロファイルをEEPROMでカスタマイズ可能
  - DIRピンによる順方向-逆方向制御
- 5V、100mAのバック・コンバータを内蔵
- 3.3V、20mAのLDOを内蔵
- スタンバイ電流: 8.5mA
- スタンバイ・バージョン(DRV10987S)の消費電 流: 8.5mA
- スリープ・バージョン(DRV10987D)の消費電流: 48μA
- 保護機能
  - 過電流保護(位相間、位相とGNDとの間、位相と V<sub>cc</sub>との間の短絡)
  - ロック検出機能によりロータのロック状況を検出
  - 電圧サージ防止(AVS)保護
  - 低電圧誤動作防止(UVLO)
  - 過電圧保護
  - 熱警告およびシャットダウン
- 熱特性強化型パッケージ

2 アプリケーション

Tools &

Software

- 扇風機およびシーリングファン
- 空気清浄機および加湿器
- 乾燥機の循環ファン
- 排水ポンプおよび送水ポンプ
- 三相BLDCおよびPMSMモータ

# 3 概要

DRV10987デバイスは三相のセンサレス180°正弦モー タ・ドライバで、パワーMOSFETが内蔵されており、最大 2Aまでの連続駆動電流を供給できます。このデバイスは コストが重要で、低ノイズで、外付け部品数の少ないファン やポンプ用途向けに特化して設計されています。™

DRV10987デバイスは、最低6.2Vの電源電圧でモータへ 電流を供給します。電源電圧が28Vを超える場合、デバイ スはモータの駆動を停止し、DRV10987の回路を保護し ます。

製品情報 <sup>(1)</sup>


型番	パッケージ	本体サイズ(公称)
DRV10987	HTSSOP (24)	7.80mm×6.40mm

(1) 利用可能なすべてのパッケージについては、このデータシートの末 尾にある注文情報を参照してください。

デバイスの比較

型番	バージョン
DRV10987D	スリープ・バージョン
DRV10987S	スタンバイ・バージョン

## アプリケーションの回路図

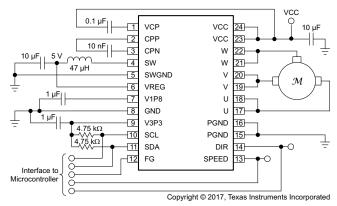



JAJSE49B-AUGUST 2017-REVISED FEBRUARY 2018

# 目次

1	特長	:
2	アプ	リケーション1
3	概要	·
4	改訂	'履歴2
5	概要	(続き)3
6	Pin	Configuration and Functions 3
7	Spe	cifications5
	7.1	Absolute Maximum Ratings 5
	7.2	ESD Ratings5
	7.3	Recommended Operating Conditions 6
	7.4	Thermal Information 6
	7.5	Electrical Characteristics7
	7.6	Typical Characteristics 12
8	Deta	ailed Description 13
	8.1	Overview 13
	8.2	Functional Block Diagram 14
	8.3	Feature Description 14

	8.4	Device Functional Modes	<mark>21</mark>
	8.5	Register Maps	47
9	App	lication and Implementation	<mark>64</mark>
	9.1	Application Information	64
	9.2	Typical Application	64
10	Pow	ver Supply Recommendations	<mark>67</mark>
11	Laye	out	67
	11.1	Layout Guidelines	<mark>67</mark>
	11.2	Layout Example	67
12	デバ	イスおよびドキュメントのサポート	<mark>68</mark>
	12.1	商標	<mark>68</mark>
	12.2	静電気放電に関する注意事項	<mark>68</mark>
	12.3	ドキュメントの更新通知を受け取る方法	<mark>68</mark>
	12.4	コミュニティ・リソース	<mark>68</mark>
	12.5	Glossary	68
13	メカニ	ニカル、パッケージ、および注文情報	<mark>68</mark>

# 4 改訂履歴

Re	evision A (November 2017) から Revision B に変更	Page
•	Removed non-essential specifications from the Specifications section	5
•	Updated naming convention in Step-Down Regulator subsection	14
•	Changed the Conditions to Enter or Exit Sleep or Standby Condition table to reflect Electrical Characteristics parameter names	18
•	Changed the Conditions to Enter or Exit Sleep or Standby Condition table to reflect Electrical Characteristics parameter names	19
•	変更 eeWRnEn field description to properly reflect actual function	55
•	Changed BEMF comparator hysteresis to reflect Electrical Characteristics specifications	58

# 2017年8月発行のものから更新

•	「特長」一覧にスタンバイおよびスリープ・バージョンの消費電流を追加	1
•	「デバイスの比較」表を追加	. 1
	「概要(続き)」セクションに、デバイスのスリープ・バージョンとスタンバイ・バージョンの解説を追加	
•	Added table note to 表 1, Conditions to Enter or Exit Sleep or Standby Condition	19
•	Added subsection, Required Sequence to Enter Sleep Mode	19
•	追加 constraints for external inductor	65

www.tij.co.jp

Page



#### www.ti.com


# 5 概要(続き)

DRV10987デバイスは、独自のセンサレス制御方式を使用して連続的な正弦駆動を行うため、整流の結果として一般に発生する純音響の発生が大幅に低下しています。デバイスへのインターフェイスは、単純で柔軟に設計されています。モータはPWM、アナログ、またはI<sup>2</sup>C入力により直接制御できます。モータ速度のフィードバックは、FGピンとI<sup>2</sup>Cインターフェイスの両方から同時に得られます。

DRV10987デバイスには降圧レギュレータが搭載されており、電源電圧を効率的に5Vへ降圧して、内部と外部の回路に電力を供給できます。スタンバイ・モード(8.5mA)バージョン(DRV10987S)ではレギュレータが実行状態に維持され、スリープ・モード(48μA)バージョン(DRV10987D)ではレギュレータがシャットオフされます。このデータシートでは、スリープとスタンバイの機能について特に説明する場所を除き、 全体を通して、DRV10987D (スリープ・バージョン)とDRV10987S (スタンバイ・バージョン)の両方のデバイスについて、 DRV10987という部品番号を使用します。

ユーザーは、I<sup>2</sup>Cインターフェイスを使用してレジスタの特定のモータ・パラメータを再プログラム、およびEEPROMをプログ ラムし、特定のアプリケーション用に性能を最適化できます。DRV10987デバイスは、熱効率の高い、サーマル・パッドの露 出したHTSSOP 24ピン・パッケージで供給されます。規定の動作時周囲温度範囲は-40℃~125℃です。

## 6 Pin Configuration and Functions

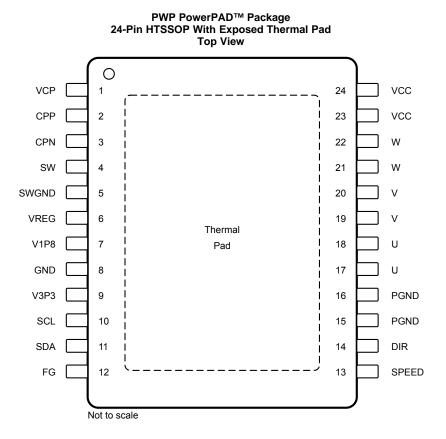

DRV10987 JAJSE49B – AUGUST 2017 – REVISED FEBRUARY 2018

www.ti.com

NSTRUMENTS

Texas

			Pin Functions
PI	1	TYPE	DESCRIPTION
N/AME	HTSSOP	(1)	DESCRIPTION
CPN	3	Р	Charge pump pin 1, use a ceramic capacitor between CPN and CPP
CPP	2	Р	Charge pump pin 2, use a ceramic capacitor between CPN and CPP
DIR	14	I	Direction; When low, phase driving sequence is $U \rightarrow V \rightarrow W$ When high, phase driving sequence is $U \rightarrow W \rightarrow V$
FG	12	0	FG signal output indicates speed of motor
GND	8	Р	Digital and analog ground
PGND	15, 16	Р	Power ground
SCL	10	I	I <sup>2</sup> C clock signal
SDA	11	I/O	l <sup>2</sup> C data signal
SPEED	13	I	Speed control signal for PWM or analog input speed command
SW	4	0	Step-down regulator switching node output
SWGND	5	Р	Step-down regulator ground
U	17, 18	0	Motor U phase
V	19, 20	0	Motor V phase
V1P8	7	Ρ	Internal 1.8-V digital core voltage. V1P8 capacitor must connect to GND. This is an output, but is not specified to drive external loads.
V3P3	9	Р	Internal 3.3-V supply voltage. V3P3 capacitor must connect to GND. This is an output and may drive external loads not to exceed $I_{V3P3\_MAX}$ .
V <sub>CC</sub>	23, 24	Р	Device power supply
VCP	1	Р	Charge pump output, use a ceramic capacitor between VCP and $\rm V_{\rm CC}$
VREG	6	Р	Step-down regulator output and feedback point
W	21, 22	0	Motor W phase
Thermal pad (GND)	_	Ρ	The exposed thermal pad must be electrically connected to the ground plane by soldering to the PCB for proper operation, and connected to the bottom side of the PCB through vias for better thermal spreading.

(1) I = Input, O = Output, I/O = Input/output, P = Power



# 7 Specifications

## 7.1 Absolute Maximum Ratings

over operating ambient temperature range (1)

		MIN	MAX	UNIT
	V <sub>CC</sub>	-0.3	28	
	$V_{CC}$ during overvoltage protection( $V_{CC}$ slew rate < 10 V/ms)	-0.3	45	
Input voltage <sup>(2)</sup>	SPEED	-0.3	4	v
Input voltage	PGND, SWGND	-0.3	0.3	v
	SCL, SDA	-0.3	4	
	DIR	-0.3	4	
	U, V, W	-1	30	
	SW	-1	30	
	VREG	-0.3	7	
	FG	-0.3	4	
Output voltage (2)	VCP	-0.3	V <sub>CC</sub> + 6	V
	CPN	-0.3	30	
	СРР	-0.3	V <sub>CC</sub> + 6	
	V3P3	-0.3	4	
	V1P8	-0.3	2.5	
T <sub>J_MAX</sub>	Maximum junction temperature	-40	150	°C
T <sub>stg</sub>	Storage temperature	-55	150	°C

(1) Stresses beyond those listed under Absolute Maximum Ratings may cause permanent damage to the device. These are stress ratings only, which do not imply functional operation of the device at these or any other conditions beyond those indicated under Recommended Operating Conditions. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.

(2) All voltage values are with respect to the ground terminal (GND) unless otherwise noted.

## 7.2 ESD Ratings

			VALUE	UNIT
, Electrostatic	Electrostatic	Human body model (HBM), per ANSI/ESDA/JEDEC JS-001, all pins <sup>(1)</sup>	±2000	V
V <sub>(ESD)</sub>	discharge	Charged device model (CDM), per JEDEC specification JESD22-C101, all pins <sup>(2)</sup>	±750	v

(1) JEDEC document JEP155 states that 500-V HBM allows safe manufacturing with a standard ESD control process.

(2) JEDEC document JEP157 states that 250-V CDM allows safe manufacturing with a standard ESD control process.

STRUMENTS

EXAS

# 7.3 Recommended Operating Conditions

		MIN	NOM	MAX	UNIT	
Supply voltage	V <sub>CC</sub> , register contents preserved	4.5	12	45	V	
Supply voltage	V <sub>CC</sub> , motor operational	6.2	12	28	v	
	U, V, W	-0.7		29		
	SCL, SDA, FG, SPEED, DIR	-0.1	3.3	3.6		
	PGND, GND, SWGND	-0.1		0.1	<i>\</i> /	
Voltage range	VCP, CPP	-0.1		V <sub>CC</sub> + 5	V	
	CPN	-0.1		V <sub>CC</sub>		
	SW	-0.7		V <sub>CC</sub>		
Current range	Step-down regulator with inductor (buck mode) output current			100		
	Step-down regulator with resistor (linear mode) output current 5		5	mA		
	V3P3 LDO output current (no load on VREG and step-down regulator in linear mode)			5	ΠΛ	
T <sub>A</sub>	Operating ambient temperature	-40		125	S°	

#### 7.4 Thermal Information

		DRV10987	
	THERMAL METRIC <sup>(1)</sup>	PWP (HTSSOP)	UNIT
		24 PINS	
$R_{\thetaJA}$	Junction-to-ambient thermal resistance	36.1	°C/W
R <sub>0JC(top)</sub>	Junction-to-case (top) thermal resistance	17.4	°C/W
$R_{\theta JB}$	Junction-to-board thermal resistance	14.8	°C/W
ΨJT	Junction-to-top characterization parameter	0.4	°C/W
Ψјв	Junction-to-board characterization parameter	14.5	°C/W
R <sub>0JC(bot)</sub>	Junction-to-case (bottom) thermal resistance	1.1	°C/W

(1) For more information about traditional and new thermal metrics, see Semiconductor and IC Package Thermal Metrics .



www.ti.com

# 7.5 Electrical Characteristics

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
SUPPLY CUR	RENT (DRV10987D)					
1	Sleep current	$V_{SPEED} = 0 V; V_{CC} = 12 V; T_A = 25^{\circ}C$		48	54	μA
I <sub>ccSLEEP1</sub>	Sleep current	$V_{SPEED} = 0 V; V_{CC} = 12 V; across temperature$			81	μΑ
		V <sub>SPEED</sub> > 0 V; step-down regulator with inductor (buck mode); no motor load		10	15	
I <sub>cc</sub>	Active current	V <sub>SPEED</sub> > 0 V; step-down regulator with resistor (linear mode); no motor load		13	16	mA
SUPPLY CUR	RENT (DRV10987S)	· · · · · · · · · · · · · · · · · · ·				
I <sub>ccSTBY</sub>	Standby current	V <sub>SPEED</sub> = 0 V; step-down regulator with inductor (buck mode)		8.5	14	mA
	·	V <sub>SPEED</sub> = 0 V; buck regulator with resistor (linear mode)		11	15	
		V <sub>SPEED</sub> > 0 V; buck regulator with inductor; no motor load		10	15	
I <sub>cc</sub>	Active current	V <sub>SPEED</sub> > 0 V; buck regulator with resistor; no motor load		13	16	mA
UVLO						
V <sub>UVLO_R</sub>	UVLO rising threshold voltage		5.8	6	6.2	V
V <sub>UVLO_F</sub>	UVLO falling threshold voltage		5.6	5.8	6	V
V <sub>UVLO_HYS</sub>	UVLO threshold voltage hysteresis		170	195	220	mV
V <sub>V1P8_UVLO_R</sub>	V1P8 UVLO rising threshold		1.5	1.6	1.7	V
V <sub>V1P8_UVL0_F</sub>	V1P8 UVLO falling threshold		1.4	1.55	1.65	V
$V_{V3P3\_UVL0\_R}$	V3P3 UVLO rising threshold		2.7	2.85	2.95	V
V <sub>V3P3_UVLO_F</sub>	V3P3 UVLO falling threshold		2.5	2.7	2.8	V
V <sub>VREG_UVLO_R</sub>	VREG UVLO rising threshold		4	4.2	4.3	V
V <sub>VREG_UVLO_F</sub>	VREG UVLO falling threshold		3.9		4.2	V
LDO OUTPUT	ſ					
V3P3		Step-down regulator with inductor (buck mode), 20-mA load	3.1	3.3	3.5	V
	Output voltage	Step-down regulator with resistor (linear mode), no load	3.1	3.3	3.5	v
I <sub>V3P3_MAX</sub>	Maximum load from V3P3	Step-down regulator with inductor (buck mode)			20	mA
V1P8	Output voltage	No load	1.7	1.8	1.9	V

TEXAS INSTRUMENTS

www.ti.com

# **Electrical Characteristics (continued)**

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT	
STEP-DOWN	REGULATOR						
V <sub>REG</sub>		$\label{eq:LSW} \begin{array}{l} L_{SW} = 47 \ \mu H, \ C_{SW} = 10 \ \mu F \\ I_{\text{load}} = 100 \ \text{mA} \end{array}$	4.5	5	5.5	V	
	Regulator output voltage	$\label{eq:RSW} \begin{array}{l} R_{SW} = 39 \; \Omega, \; C_{SW} = 10 \; \muF \\ I_{load} = 5 \; mA \end{array}$	4.5	5	5.5	v	
I <sub>REG_MAX_L</sub>	Maximum load from V <sub>REG</sub> in buck mode	$L_{SW}$ = 47 µH, $C_{SW}$ = 10 µF			100	mA	
I <sub>REG_MAX_R</sub>	Maximum load from V <sub>REG</sub> in linear mode	$R_{SW}$ = 39 $\Omega$ , $C_{SW}$ = 10 $\mu$ F			5	mA	
INTEGRATE	D MOSFET						
	Series resistance (H + L)	$T_A = 25^{\circ}C; V_{CC} > 6.5 V; I_O = 1 A$		250	400	mΩ	
r <sub>DS(ON)</sub>	Selles lesistance (H + L)	$T_A = 125^{\circ}C; V_{CC} > 6.5V; I_O = 1 A$		325	550		
SPEED - AN	ALOG MODE						
V <sub>AN/A_FS</sub>	Analog full-speed voltage		V <sub>(V3P3)</sub> × 0.9		V <sub>(V3P3)</sub>	V	
V <sub>AN/A_ZS</sub>	Analog zero-speed voltage		0		100	mV	
t <sub>SAM</sub>	Sampling period for analog voltage on SPEED pin			320		μs	
V <sub>AN/A_RES</sub>	Analog voltage resolution			6.5		mV	
SPEED – PW	/M DIGITAL MODE						
V <sub>DIG_IH</sub>	PWM input high voltage		2.2			V	
V <sub>DIG_IL</sub>	PWM input low voltage				0.6	V	
f <sub>PWM</sub>	PWM input frequency		0.1		100	kHz	



www.ti.com

# **Electrical Characteristics (continued)**

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
SLEEP MODE	(DRV10987D)					
V <sub>EN_SL</sub>	Analog voltage to enter sleep mode	SpdCtrlMd = 0 (analog mode)			100	mV
$V_{EX\_SL}$	Analog voltage to exit sleep mode	SpdCtrlMd = 0 (analog mode)	2.2			V
t <sub>EX_SL_ANA</sub>	Time needed to exit from sleep mode	SpdCtrlMd = 0 (analog mode) V <sub>SPEED</sub> > V <sub>EX_SL</sub>		2		μs
t <sub>EX_SL_DR_ANA</sub>	Time taken to drive motor after exiting from sleep mode	SpdCtrlMd = 0 (analog mode) $V_{SPEED} > V_{EN_{SL}}$ ; ISDen = 0; BrkDoneThr[2:0] = 0		350		ms
t <sub>EX_SL_PWM</sub>	Time needed to exit from sleep mode	SpdCtrlMd = 1 (PWM mode) V <sub>SPEED</sub> > V <sub>DIG_IH</sub>		2		μs
t <sub>EX_SL_DR_PWM</sub>	Time taken to drive motor after exiting from sleep mode	$\label{eq:SpdCtrlMd} \begin{array}{l} SpdCtrlMd = 1 \ (PWM \ mode) \\ V_{SPEED} > V_{DIG\_IH}; \ ISDen = 0; \\ BrkDoneThr[2:0] = 0 \end{array}$		350		ms
t <sub>EN_SL_ANA</sub>	Time needed to enter sleep mode	SpdCtrlMd = 0 (analog mode) V <sub>SPEED</sub> < V <sub>EN_SL</sub> ; AvSIndEn = 0		6		ms
t <sub>EN_SL_PWM</sub>	Time needed to enter sleep mode	SpdCtrlMd = 1 (PMW mode) $V_{SPEED} < V_{DIG_IL}$ ; AvSIndEn = 0		60		ms
R <sub>PD_SPEED_SL</sub>	Internal SPEED pin pull down resistance to ground	V <sub>SPEED</sub> = 0 (Sleep mode)	55			kΩ
STANDBY MO	DE (DRV10987S)					
V <sub>EN_SB</sub>	Analog voltage to enter standby mode	SpdCtrlMd = 0 (analog mode)			100	mV
V <sub>EX_SB</sub>	Analog voltage to exit standby mode	SpdCtrlMd = 0 (analog mode)	0.17			V
t <sub>EX_SB_ANA</sub>	Time needed to exit from standby mode	SpdCtrlMd = 0 (analog mode) $V_{SPEED} > V_{EX_{SB}}$	1		700	ms
tex_sb_dr_ana	Time taken to drive motor after exiting standby mode	$\label{eq:spdCtrlMd} \begin{array}{l} SpdCtrlMd = 0 \mbox{ (analog mode)} \\ V_{SPEED} > V_{EN\_SB}; \mbox{ ISDen} = 0; \\ BrkDoneThr[2:0] = 0 \end{array}$		350		ms
t <sub>EX_SB_PWM</sub>	Time needed to exit from standby mode	SpdCtrlMd = 1 (PWM mode) V <sub>SPEED</sub> > V <sub>DIG_IH</sub>		2		μs
t <sub>EX_SB_DR_PWM</sub>	Time taken to drive motor after exiting standby mode	SpdCtrlMd = 1 (PWM mode) V <sub>SPEED_DUTY</sub> > 0; ISDen = 0; BrkDoneThr[2:0] = 0		350		ms
t <sub>EN_SB_ANA</sub>	Time needed to enter standby mode	SpdCtrlMd = 0 (analog mode) V <sub>SPEED</sub> < V <sub>EN_SB</sub> ; AvSIndEn = 0		6		ms
t <sub>EN_SB_</sub> PWM	Time needed to enter standby mode	SpdCtrlMd = 1 (PMW mode) $V_{SPEED} < V_{DIG_{IL}}$ AvSIndEn = 0		60		ms
DIGITAL I/O (D	IR INPUT, FG OUTPUT)					
V <sub>DIR_H</sub>	Input high		2.2			V
V <sub>DIR_L</sub>	Input low				0.6	V
V <sub>FG_OH</sub>	Output high voltage	$I_0 = 5 \text{ mA}$		3.3		V
V <sub>FG_OL</sub>	Output low voltage	$I_0 = 5 \text{ mA}$			0.6	V
I <sup>2</sup> C SERIAL IN	TERFACE					
V <sub>I2C_H</sub>	Input high		2.2			V
V <sub>I2C_L</sub>	Input low				0.6	V
f <sub>I2C</sub>	I <sup>2</sup> C clock frequency		0		400	kHz
LOCK DETECT	TION RELEASE TIME				l	
tLOCK_OFF	Lock release time			5		S
t <sub>LCK_ETR</sub>	Lock enter time			0.3		S

# **Electrical Characteristics (continued)**

	PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
OVERCURRE	ENT PROTECTION					
I <sub>OC_limit_HS</sub>	HS overcurrent protection	V <sub>CC</sub> < 28.5 V	3.5	4.25	5.5	А
I <sub>OC_limit_LS</sub>	LS overcurrent protection	V <sub>CC</sub> < 28.5 V	3.5	4.25	5.5	А
THERMAL S	HUTDOWN					
T <sub>SDN</sub>	Junction temperature shutdown threshold		150	165	180	°C
T <sub>SDN_HYS</sub>	Junction temperature shutdown hysteresis		15	20	25	°C
T <sub>WARN</sub>	Junction temperature warning threshold		115	125	140	°C
PHASE DRIV	/ER	•				
SL <sub>PH_LH0</sub>	Phase slew rate switching low to high	PHslew = 0; measure 20% to 80%; $V_{CC}$ = 12 V	85	120	145	V/µs
SL <sub>PH_LH1</sub>	Phase slew rate switching low to high	PHslew = 1; measure 20% to 80%; $V_{CC}$ = 12 V	60	80	100	V/µs
$SL_{PH_LH2}$	Phase slew rate switching low to high	PHslew = 2; measure 20% to 80%; $V_{CC}$ = 12 V	38	50	62	V/µs
SL <sub>PH_LH3</sub>	Phase slew rate switching low to high	PHslew = 3; measure 20% to 80%; $V_{CC}$ = 12 V	27	35	44	V/µs
SL <sub>PH_HL0</sub>	Phase slew rate switching high to low	PHslew = 0; measure 80% to 20%; $V_{CC}$ = 12 V	85	120	145	V/µs
$SL_{PH_{HL1}}$	Phase slew rate switching high to low	PHslew = 1; measure 80% to 20%; $V_{CC}$ = 12 V	59	80	100	V/µs
$SL_{PH_HL2}$	Phase slew rate switching high to low	PHslew = 2; measure 80% to 20%; $V_{CC}$ = 12 V	36	50	60	V/µs
$SL_{PH_{HL3}}$	Phase slew rate switching high to low	PHslew = 3; measure 80% to 20%; $V_{CC}$ = 12 V	25	35	45	V/µs
EEPROM						
EE <sub>Prog</sub>	Programing voltage		6.2			V
EE <sub>RET</sub>	Retention		10			Years
EE <sub>END</sub>	Endurance		1000			Cycles
OVERVOLTA	GE PROTECTION					
V <sub>OV_R</sub>	Overvoltage protection rising $V_{CC}$ threshold		28.5	29.2	30	V
V <sub>OV_F</sub>	Overvoltage protection exit on falling $V_{CC}$ threshold		27.7	28.2	28.8	V
V <sub>OV_HYS</sub>	Overvoltage protection hysteresis		0.73	1	1.1	V
BEMF COMP	PARATOR					
DEME	DEME compositor hystores	BEMF_HYS = 0	7	20	30	m\/
$BEMF_{HYS}$	BEMF comparator hysteresis	BEMF_HYS = 1	17	40	51	mV



# Speed Pin $V_{EX_{SL}}$ $V_{\text{EN}_{SL}}$ tex SL ANA $t_{\text{EN}_{\text{SL}}\text{ANA}}$ V1P8 tex\_sl\_dr\_ana Phase Pin Motor Drive State 図 1. DRV10987D Analog Mode Timing $V_{\text{DIG}_{IH}}$ Speed Pin V<sub>DIG\_IL</sub> $t_{EX_SL_PWM}$ t<sub>EN\_SL\_PWM</sub> V1P8 t<sub>EX\_SL\_DR\_PWM</sub> Phase Pin Motor Drive State 2. DRV10987D PWM Mode Timing Speed Pin $V_{EX\_SB}$ $V_{\text{EN}\_\text{SB}}$ t<sub>EX\_SB\_ANA</sub> t<sub>EN\_SB\_ANA</sub> Internal Signal (Digital Reset) $t_{EX\_SB\_DR\_ANA}$ Phase Pin Motor Drive State -



Texas Instruments

www.tij.co.jp


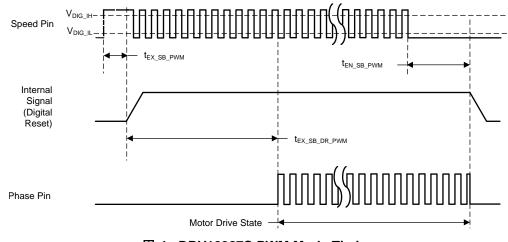


図 4. DRV10987S PWM Mode Timing

# 7.6 Typical Characteristics



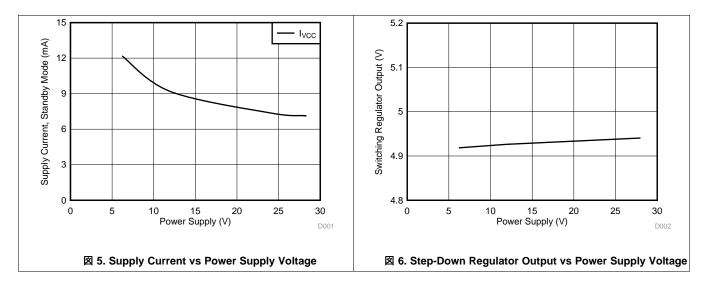

# 8 Detailed Description

## 8.1 Overview

The DRV10987 device is a three-phase sensorless motor driver with integrated power MOSFETs that provides drive-current capability up to 2 A continuously. The device is specifically designed for low-noise, low-external-component-count motor-drive applications. The device is configurable through a simple I<sup>2</sup>C interface to accommodate different motor parameters and spin-up profiles for different customer applications.

A 180° sensorless control scheme provides continuous sinusoidal output voltages to the motor phases to enable ultra-quiet motor operation by keeping the electrically induced torque ripple small.

The DRV10987 device features extensive protection and fault-detection mechanisms to ensure reliable operation. Voltage surge protection prevents the input  $V_{CC}$  capacitor from overcharging, which typically occurs during motor deceleration. The device provides overcurrent protection without the need for an external current-sense resistor. Rotor-lock detection is available through several methods. These methods can be configured with register settings to ensure reliable operation. The device provides additional protection for undervoltage lockout (UVLO) and for thermal shutdown.

The commutation control algorithm continuously measures the motor phase current and periodically measures the  $V_{CC}$  supply voltage. The device uses this information for BEMF estimation, and the information is also provided through the I<sup>2</sup>C register interface for debug and diagnostic use in the system, if desired.

A step-down regulator in buck mode efficiently steps down the supply voltage. The output of this regulator provides power for the internal circuits and can also be used to provide power for an external circuit such as a microcontroller. If providing power for an external circuit is not necessary (and to reduce system cost), configure the step-down regulator as a linear regulator by replacing the inductor with a resistor.


The DRV10987 device has a flexible interface, capable of supporting both analog and digital inputs. In addition to the I<sup>2</sup>C interface, the device has FG, DIR, and SPEED pins. SPEED is the speed–command input pin. DIR is the direction–control input pin. FG is the speed indicator output, which shows the frequency of the motor commutation.

EEPROM is integrated in the DRV10987 device as memory for the motor parameter and operation settings. EEPROM data transfers to the registers after power-on.

The DRV10987 device can also operate in register mode. If the system includes a microcontroller communicating through the I<sup>2</sup>C interface, the device can dynamically update the motor parameters and operation settings by writing to the registers. In this configuration, the EEPROM data is bypassed by the register settings.



## 8.2 Functional Block Diagram

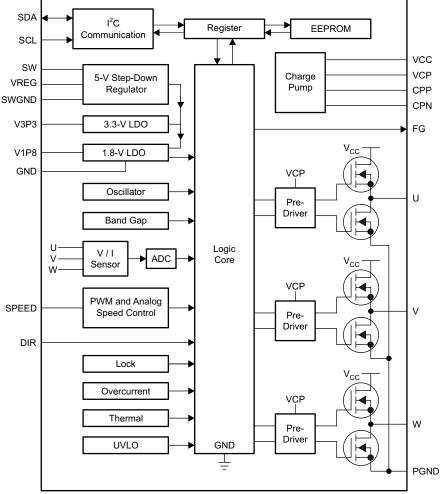

Copyright © 2017, Texas Instruments Incorporated

## 8.3 Feature Description

#### 8.3.1 Regulators


## 8.3.1.1 Step-Down Regulator

The DRV10987 device includes a step-down hysteretic voltage regulator that can be operated as either a switching buck regulator using an external inductor or as a linear regulator using an external resistor. The best efficiency is achieved when the step-down regulator is in buck mode. The regulator output voltage is 5 V. When the regulated voltage drops by the hysteresis level, the high-side FET turns on to raise the regulated voltage back to the target of 5 V. The switching frequency of the hysteretic regulator is not constant and changes with load.


If the step-down regulator is configured in buck mode, see  $I_{REG_MAX_L}$  in Electrical Characteristics to determine the amount of current provided for external load. If the step-down regulator is configured in linear mode, see  $I_{REG_MAX_R}$  in Electrical Characteristics to determine the amount of current provided for external load. Active current  $I_{CC}$  is higher in buck mode compared to linear mode.



## Feature Description (continued)

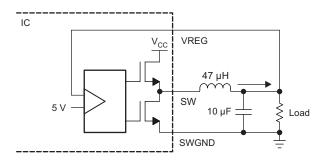

Step-Down Regulator With External Inductor (Buck Mode)

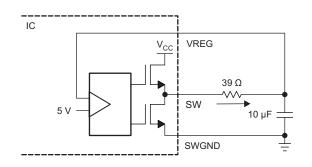

Step-Down Regulator With External Resistor (Linear Mode)

#### 図 7. Step-Down Regulator Configurations

## 8.3.1.2 3.3-V and 1.8-V LDOs

The DRV10987 device includes a 3.3-V LDO and a 1.8-V LDO. The 1.8-V LDO is for internal circuits only. The 3.3-V LDO is mainly for internal circuits, but can also drive external loads not to exceed  $I_{V3P3\_MAX}$ . For example, it can work as a pullup voltage for the FG, DIR, SDA, and SCL interfaces.

Both the V1P8 and V3P3 capacitors must be connected to GND.

#### 8.3.2 Protection Circuits

#### 8.3.2.1 Thermal Shutdown

The DRV10987 device has a built-in thermal shutdown function, which shuts down the device when the junction temperature is more than  $T_{SDN}$ °C and recovers operating conditions when the junction temperature falls to  $T_{SDN} - T_{SDN HYS}$ °C.

The OverTemp status bit (address 0x00, bit 15) is set during thermal shutdown. In addition to the thermal shutdown function, there is a warning bit that is set whenever the device exceeds  $T_{WARN}$  and is indicated by the TempWarning bit of the FaultReg register (address 0x00, bit 14).

#### 8.3.2.2 Undervoltage Lockout (UVLO)

The DRV10987 device has a built-in UVLO function block. The device is locked out when  $V_{CC}$  is below  $V_{UVLO_F}$  and is unlocked when  $V_{CC}$  is above  $V_{UVLO_R}$ . The hysteresis of the UVLO threshold is  $V_{UVLO_HYS}$ . In addition to the main supply, the step-down regulator, charge pump, and 3.3-V LDO all have undervoltage lockout monitors.

#### 8.3.2.3 Overcurrent Protection (OCP)

The overcurrent protection function acts to protect the device if the current, as measured from the FETs, exceeds the  $I_{OC-limit}$  threshold. The overcurrent protection function protects the device in the event of a short-circuit condition on the motor phases. A short-circuit condition includes phase shorts to GND, phase shorts to phase, or phase shorts to V<sub>CC</sub>. The DRV10987 device places the output drivers into a high-impedance state until the lock time  $t_{LOCK}$  OFF has expired. The OverCurr status bit of the FaultReg register (address 0x00, bit 11) is set.

The DRV10987 device also provides software current-limit and lock-detection current-limit functions to protect the device and motor (see *Current Limits* and *Lock Detect and Fault Handling*).



## Feature Description (continued)

#### 8.3.2.4 Lock


When the motor is blocked or stopped by an external force, lock protection is triggered, and the device stops driving the motor immediately. After the lock release time  $t_{LOCK\_OFF}$ , the DRV10987 device resumes driving the motor again. If the lock condition is still present, it enters the next lock protection cycle, and repeats until the lock condition is removed. With this lock protection, the motor and device do not overheat or become damaged due to the motor being locked (see *Lock Detect and Fault Handling*).

During a lock condition the Status register indicates which of the locks has occurred.

#### 8.3.3 Motor Speed Control

The DRV10987 device offers four methods for indirectly controlling the speed of the motor by adjusting the output voltage amplitude. This can be accomplished by varying the supply voltage ( $V_{CC}$ ) or by controlling the speed command. The speed command can be controlled in one of three ways. The user can set the speed command by adjusting either the PWM input (PWM in) or the analog input (Analog) or by writing the speed command directly through the I<sup>2</sup>C serial port (I<sup>2</sup>C). The speed command is used to determine the PWM duty cycle output (PWM\_DCO) (see  $\boxtimes$  9).


The PWM input (PWM in) can have a minimum duty cycle limit applied. DutyCycleLimit[1:0], accessible through the  $I^2C$  interface, allows the user to configure the minimum duty cycle behavior. This behavior is illustrated in  $\boxtimes$  8.

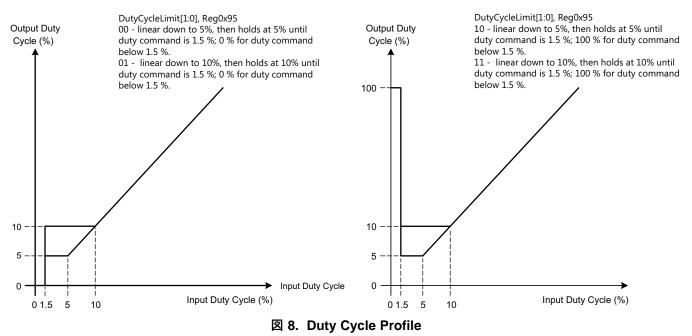

The speed command may not always be equal to the PWM\_DCO because the DRV10987 device has the AVS function (see *Anti-Voltage Surge Function*), the software current-limit function (see *Software Current Limit*), and the closed-loop accelerate function (see *Closed-Loop Accelerate*) to optimize the control performance. These functions can limit the PWM\_DCO, which affects the output amplitude (see 🛛 9).




### Feature Description (continued)

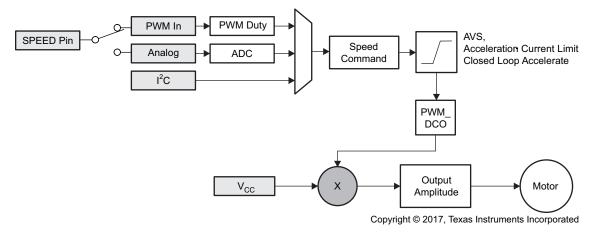

#### 2 9. Multiplexing the Speed Command to the Output Amplitude Applied to the Motor

The output voltage amplitude applied to the motor is developed through sine wave modulation so that the phaseto-phase voltage is sinusoidal.

When any phase is measured with respect to ground, the waveform is sinusoidally coupled with third-order harmonics. This encoding technique permits one phase to be held at ground while the other two phases are pulse-width modulated.  $\boxtimes$  10 and  $\boxtimes$  11 show the sinusoidal encoding technique used in the DRV10987 device.

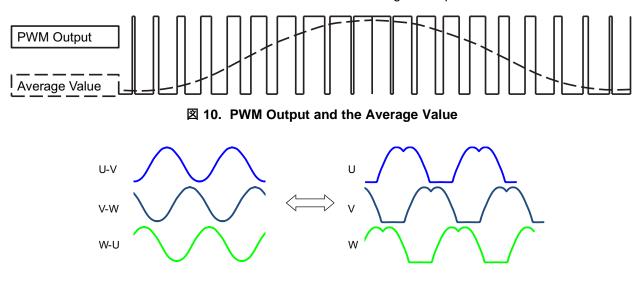

Sinusoidal Voltage From Phase to Phase

Sinusoidal Voltage With Third-Order Harmonics From Phase to GND

#### 図 11. Representing Sinusoidal Voltages With Third-Order Harmonic Output

The output amplitude is determined by the magnitude of V<sub>CC</sub> and the PWM duty cycle output (PWM\_DCO). The PWM\_DCO represents the peak duty cycle that is applied in one electrical cycle. The maximum amplitude is reached when PWM\_DCO is at 100%. The peak output amplitude is V<sub>CC</sub>. When the PWM\_DCO is at 50%, the peak amplitude is V<sub>CC</sub> / 2 (see  $\boxtimes$  12).

## Feature Description (continued)

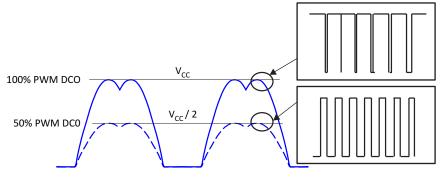


図 12. Output Voltage Amplitude Adjustment

Motor speed is controlled indirectly by controlling the output amplitude, which is achieved by either controlling  $V_{CC}$ , or controlling the PWM\_DCO. The DRV10987 device provides different options for the user to control the PWM\_DCO:

- Analog input (SPEED pin)
- PWM encoded digital input (SPEED pin)
- I<sup>2</sup>C serial interface.

See the *Closed Loop* section for more information.

### 8.3.4 Overvoltage Protection

The recommended operation voltage of the DRV10987 device is from 6.2 V to 28 V. The device is able to drive the motor within this  $V_{CC}$  range.

If  $V_{CC}$  goes higher than  $V_{OV_R}$ , DRV10987 stops driving the motor and protects its own circuitry. When  $V_{CC}$  drops below  $V_{OV_F}$ , the DRV10987 device continues to operate the motor based on the user's command. The overvoltage protection works as long as the  $V_{CC}$  slew rate is more than 10 V/ms.

#### 8.3.5 Sleep or Standby Condition

The DRV10987 device is available in either a sleep mode (DRV10987D) or standby mode version (DRV10987S). The DRV10987 device enters either sleep or standby to conserve energy. When the device enters either sleep or standby, the device stops driving the motor. The step-down regulator is disabled in the sleep mode version to conserve more energy. The I<sup>2</sup>C interface is disabled and any register data not stored in EEPROM is reset for the sleep mode version. The switching regulator remains active in the standby mode version. The register data is maintained, and the I<sup>2</sup>C interface remains active for standby mode version.

For different speed command modes,  $\frac{1}{5}$  1 shows the timing and command to enter the sleep or standby condition.

表 1. Conditions to Enter or Exit Sleep or Standby Cor
---

SPEED COMMAND MODE	ENTER STANDBY CONDITION	ENTER SLEEP CONDITION	EXIT FROM STANDBY CONDITION	EXIT FROM SLEEP CONDITION
Analog	SPEED pin voltage < $V_{EN_SB}$ for $t_{EN_SB_ANA}$	SPEED pin voltage < $V_{EN_SL}$ for $t_{EN_SL_ANA}$	SPEED pin voltage > $V_{EX\_SB}$ for $t_{EX\_SB\_ANA}$	SPEED pin voltage > $V_{EX_SL}$ for $t_{EX_SL_ANA}$
PWM	SPEED pin low (V < V <sub>DIG_IL</sub> ) for t <sub>EN_SB_PWM</sub>	SPEED pin low (V < V <sub>DIG_IL</sub> ) for t <sub>EN_SL_PWM</sub>		SPEED pin high (V > $V_{DIG_IH}$ ) for $t_{EX_SL_PWM}$ <sup>(1)</sup>

<sup>(1)</sup> See 表 2 for details on PWM duty cycle requirements to exit sleep mode.



## Feature Description (continued)

SPEED COMMAND MODE	ENTER STANDBY CONDITION	ENTER SLEEP CONDITION	EXIT FROM STANDBY CONDITION	EXIT FROM SLEEP CONDITION
I <sup>2</sup> C	SpdCtrl[8:0] is programmed as 0 for t <sub>EN_SB_PWM</sub>	See Required Sequence to Enter Sleep Mode <sup>(2)</sup>	SpdCtrl[8:0] is programmed as non-zero for t <sub>EX_SB_PWM</sub>	$\begin{array}{l} \text{SPEED pin high (V > V_{\text{DIG_IH}})} \\ \text{for } t_{\text{EX_SL_PWM}} \left(\text{PWM mode}\right) \\ \text{or SPEED pin voltage >} \\ \text{V}_{\text{EX_SL}} \text{ for } t_{\text{EX_SL_ANA}} \left(\text{Analog mode}\right) \end{array}$

表 1. Conditions to Enter or Exit Sleep or Standby Condition (continued)

(2) See Required Sequence to Enter Sleep Mode for the required sequence to enter sleep mode.

Note that when using the analog speed command, a higher voltage is required to exit from the sleep condition than from the standby condition. The  $l^2C$  speed command cannot take the device out of the sleep condition because  $l^2C$  communication is disabled during the sleep condition.

### 表 2. Minimum PWM Duty Cycle Requirement for Different PWM Frequency to Exit Sleep Condition

INPUT PWM FREQUENCY (kHz)	PWM DUTY CYCLE (%)
0.1 to 0.5	14
0.5 to 1	11
1 to 50	9
50 to 100	4
100	3.5

### 8.3.5.1 Required Sequence to Enter Sleep Mode

In I<sup>2</sup>C speed command mode, either of two sequence options can be used to enter sleep mode.

#### 8.3.5.1.1 Option 1

- 1. Provide a non-zero value to the speed control register. For example, write 100 to register 0x30, speedCtrl[8:0].
- 2. Set the I<sup>2</sup>C OverRide bit to 1. That is, write 1 to register 0x30, speedCtrl[15].
- In analog mode, be sure SPEED pin voltage is less than V<sub>EN\_SL</sub> for t<sub>EN\_SL\_ANA</sub>. In PWM mode, make sure SPEED pin is low (V < V<sub>DIG\_IL</sub>) for t<sub>EN\_SL\_PWM</sub>.
- 4. Provide the value of zero to the speed control register to enter sleep mode. That is, write 0 to register 0x30, speedCtrl[8:0].

#### 8.3.5.1.2 Option 2

- 1. Set the motor disable bit to 1. That is, write 1 to register 0x60, EECtrl[15].
- 2. Set the I<sup>2</sup>C OverRide bit to 1. That is, write 1 to register 0x30, speedCtrl[15].
- 3. Set the motor disable bit to 0. That is, write 0 to register 0x60, EECtrl[15].
- 4. Provide the value of zero to the speed control register to enter sleep mode. That is, write 0 to register 0x30, speedCtrl[8:0].

#### 8.3.6 EEPROM Access

The DRV10987 device has 112 bits (7 registers with 16-bit width) of EEPROM data, which are used to program the motor parameters as described in the  $l^2C$  Serial Interface.

The procedure for programming the EEPROM is as follows. TI recommends to perform the EEPROM programming without the motor spinning, cycle the power after the EEPROM write, and read back the EEPROM to verify the programming is successful.

- 1. Power up with any voltage within operating voltage range (6.2 V to 28 V)
- 2. Wait 10 ms
- 3. Write register 0x60 to set MTR\_DIS = 1; this disables the motor driver.
- 4. Write register 0x31 with 0x0000 to clear the EEPROM access code

DRV10987

JAJSE49B-AUGUST 2017-REVISED FEBRUARY 2018

TEXAS INSTRUMENTS

www.tij.co.jp

- 5. Write register 0x31 with 0xC0DE to enable access to EEPROM
- 6. Read register 0x32 for eeReadyStatus = 1
- 7. Case-A: Mass Write
  - A. Write all individual shadow registers
    - a. Write register 0x90 (CONFIG1) with CONFIG1 data
    - b. ...
    - c. Write register 0x96 (CONFIG7) with CONFIG7 data
  - B. Write the following to register 0x35
    - a. ShadowRegEn = 0
    - b. eeRefresh = 0
    - c. eeWRnEn = 1
    - d. EEPROM Access Mode = 10
  - C. Wait for register 0x32 eeReadyStatus = 1 EEPROM is now updated with the contents of the shadow registers.
- 8. Case-B: Mass Read
  - A. Write the following to register 0x35
    - a. ShadowRegEn = 0
    - b. eeRefresh = 0
    - c. eeWRnEn = 0
    - d. eeAccMode = 10
  - B. Internally, the device starts reading the EEPROM and storing it in the shadow registers.
  - C. Wait for register 0x32 eeReadyStatus = 1 shadow registers now contain the EEPROM values
- 9. Write register 0x60 to set MTR\_DIS = 0; this re-enables the motor driver



### 8.4 Device Functional Modes

This section includes the logic required to be able to reliably start and drive the motor. It describes the processes used in the logic core and provides the information needed to configure the parameters effectively to work over a wide range of applications.

#### 8.4.1 Motor Parameters

See the DRV10983-Q1 Tuning Guide for the motor parameter measurement.

The motor phase resistance ( $R_{PH_CT}$ ) and BEMF constant (Kt) are two important parameters used to characterize a BLDC motor. The DRV10987 device requires these parameters to be configured in the register. The motor phase resistance is programmed by writing the values for Rm[6:0] (combination of RMShift[2:0] and RMValue[3:0]) in the Config1 register. The BEMF constant is programmed by writing the values for Kt[6:0] (combination of KTShift[2:0] and KTValue[3:0]) in the Config2 register.

#### 8.4.1.1 Motor Phase Resistance (R<sub>PH CT</sub>)

For a wye-connected motor, the motor phase resistance refers to the resistance from the phase output to the center tap,  $R_{PH CT}$  (denoted as  $R_{PH CT}$  in  $\boxtimes$  13).

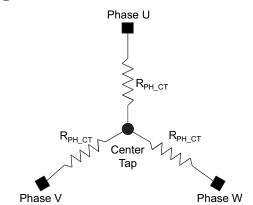


図 13. Wye-Connected Motor Phase Resistance

For a delta-connected motor, the motor phase resistance refers to the equivalent phase to center tap in the wye configuration. In  $\boxtimes$  14, it is denoted as R<sub>Y</sub>. R<sub>PH CT</sub> = R<sub>Y</sub>.

For both the delta-connected motor and the wye-connected motor, the easy way to get the equivalent  $R_{PH_CT}$  is to measure the resistance between two phase terminals ( $R_{PH_PH}$ ), and then divide this value by two,  $R_{PH_CT} = \frac{1}{2}$   $R_{PH_PH}$ .

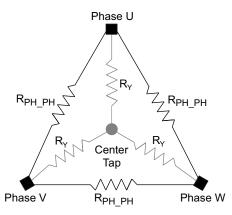


図 14. Delta-Connected Motor and the Equivalent Wye Connections



## **Device Functional Modes (continued)**

The motor phase resistance ( $R_{PH_CT}$ ) must be converted to a 7-bit digital register value Rm[6:0] to program the motor phase resistance value. The digital register value can be determined as follows:

- 1. Convert the motor phase resistance ( $R_{PH_CT}$ ) to a digital value where the LSB is weighted to represent 9.67 m $\Omega$ : Rmdig =  $R_{PH_CT}$  / 0.00967.
- 2. Encode the digital value such that Rmdig = RMValue[3:0] << RMShift[2:0].

The maximum resistor value,  $R_{PH\_CT}$ , that can be programmed for the DRV10987 device is 18.5  $\Omega$ , which represents Rmdig = 1920 and an encoded Rm[6:0] value of 0x7Fh. The minimum resistor the DRV10987 device supports is 0.029  $\Omega$ ,  $R_{PH\_CT}$ , which represents Rmdig = 3.

For convenience, the encoded value for Rm[6:0] can also be obtained from  $\frac{1}{5}$  3.

RM[6:0] {RI RMValu	MShift[2:0], ue[3:0]}	_ R <sub>PH_CT</sub> (Ω)	RM[6:0] {R RMValu	MShift[2:0], ue[3:0]}	R <sub>PH CT</sub> (Ω)		MShift[2:0], ue[3:0]}	R <sub>PH_CT</sub> (Ω)
BINARY	HEX		BINARY	HEX		BINARY	HEX	
000 0000	0x00	0	0101000	0x28	0.3104	1011000	0x58	2.4832
000 0001	0x01	0.0097	010 1001	0x29	0.3492	101 1001	0x59	2.7936
000 0010	0x02	0.0194	010 1010	0x2A	0.388	101 1010	0x5A	3.104
000 0011	0x03	0.0291	010 1011	0x2B	0.4268	101 1011	0x5B	3.4144
000 0100	0x04	0.0388	010 1100	0x2C	0.4656	101 1100	0x5C	3.7248
000 0101	0x05	0.0485	010 1101	0x2D	0.5044	101 1101	0x5D	4.0352
000 0110	0x06	0.0582	010 1110	0x2E	0.5432	101 1110	0x5E	4.3456
000 0111	0x07	0.0679	010 1111	0x2F	0.582	101 1111	0x5F	4.656
000 1000	0x08	0.0776	011 1000	0x38	0.6208	110 1000	0x68	4.9664
000 1001	0x09	0.0873	011 1001	0x39	0.6984	110 1001	0x69	5.5872
000 1010	0x0A	0.097	011 1010	0x3A	0.776	110 1010	0x6A	6.208
000 1011	0x0B	0.1067	011 1011	0x3B	0.8536	110 1011	0x6B	6.8288
000 1100	0x0C	0.1164	011 1100	0x3C	0.9312	110 1100	0x6C	7.4496
000 1101	0x0D	0.1261	011 1101	0x3D	1.0088	110 1101	0x6D	8.0704
000 1110	0x0E	0.1358	011 1110	0x3E	1.0864	110 1110	0x6E	8.6912
000 1111	0x0F	0.1455	011 1111	0x3F	1.164	110 1111	0x6F	9.312
001 1000	0x18	0.1552	100 1000	0x48	1.2416	111 1000	0x78	9.9328
001 1001	0x19	0.1746	100 1001	0x49	1.3968	111 1001	0x79	11.1744
001 1010	0x1A	0.194	100 1010	0x4A	1.552	111 1010	0x7A	12.416
001 1011	0x1B	0.2134	100 1011	0x4B	1.7072	111 1011	0x7B	13.6576
001 1100	0x1C	0.2328	100 1100	0x4C	1.8624	111 1100	0x7C	14.8992
001 1101	0x1D	0.2522	100 1101	0x4D	2.0176	111 1101	0x7D	16.1408
001 1110	0x1E	0.2716	100 1110	0x4E	2.1728	111 1110	0x7E	17.3824
001 1111	0x1F	0.291	100 1111	0x4F	2.328	111 1111	0x7F	18.624

表 3. Motor Phase Resistance Look-Up Table



#### 8.4.1.2 BEMF Constant (Kt)

The BEMF constant, Kt[6:0], describes the phase-to-phase BEMF voltage of the motor as a function of the motor velocity.

**15** shows the measurement technique for this constant as used in the DRV10987 device.

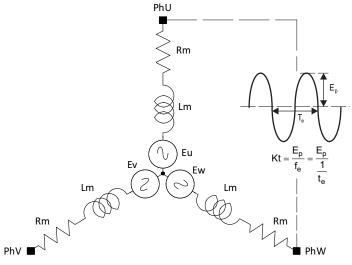


図 15. Kt Definition

With the motor coasting, use an oscilloscope to capture the differential voltage waveform between any two phases. Derive the motor BEMF constant used by the DRV10987 device as shown in  $\pm$  1.

$$Kt = E_p \times t_e$$

where

- $E_p$  is  $\frac{1}{2}$  the peak-to-peak amplitude of the measured voltage
- t<sub>e</sub> is the electrical period

(1)

The measured BEMF constant (Kt) must be converted to a 7-bit digital register value Kt[6:0] (combination of KtShift[2:0] and KtValue[3:0]) to program the BEMF constant value. The digital register value can be determined as follows:

- 1. Convert the measured Kt to a weighted digital value:  $Kt_{ph_{dig}} = 1090 \times Kt$
- 2. Encode the digital value such that Kt<sub>ph dig</sub> = KtValue[3:0] << KtShift[2:0].

The maximum Kt that can be programmed is 1760 mV/Hz. This represents a digital value of 1920 and an encoded Kt[6:0] value of 0x7Fh. The minimum Kt that can be programmed is 0.92 mV/Hz, which represents a digital value of 1 and an encoded Kt[6:0] value of 0x01h.

For convenience, the encoded value of Kt[6:0] may also be obtained from 表 4.

Kt[6:0] {Kt KtValu	:Shift[2:0], e[3:0]}	Kt (mV/Hz)		tShift[2:0], e[3:0]}	Kt (mV/Hz)		(tShift[2:0], 1e[3:0]}	Kt (mV/Hz)
BINARY	HEX		BINARY	HEX		BINARY	HEX	
000 0000	0x00	0	010 1000	0x28	29.44	101 1000	0x58	235.52
000 0001	0x01	0.92	010 1000	0x29	33.12	101 1000	0x59	264.96
000 0010	0x02	1.84	010 1000	0x2A	36.8	101 1000	0x5A	294.4
000 0011	0x03	2.76	010 1000	0x2B	40.48	101 1000	0x5B	323.84
000 0100	0x04	3.68	010 1000	0x2C	44.16	101 1000	0x5C	353.28
000 0101	0x05	4.6	010 1000	0x2D	47.84	101 1000	0x5D	382.72
000 0110	0x06	5.52	010 1000	0x2E	51.52	101 1000	0x5E	412.16
000 0111	0x07	6.44	010 1000	0x2F	55.2	101 1000	0x5F	441.6
000 1000	0x08	7.36	011 1000	0x38	58.88	110 1000	0x68	471.04
000 1001	0x09	8.28	011 1000	0x39	66.24	110 1000	0x69	529.92
000 1010	0x0A	9.2	011 1000	0x3A	73.6	110 1000	0x6A	588.8
000 1011	0x0B	10.12	011 1000	0x3B	80.96	110 1000	0x6B	647.68
000 1100	0x0C	11.04	011 1000	0x3C	88.32	110 1000	0x6C	706.56
000 1101	0x0D	11.96	011 1000	0x3D	95.68	110 1000	0x6D	765.44
000 1110	0x0E	12.88	011 1000	0x3E	103.04	110 1000	0x6E	824.32
000 1111	0x0F	13.8	011 1000	0x3F	110.4	110 1000	0x6F	883.2
001 1000	0x18	14.72	100 1000	0x48	117.76	111 1000	0x78	942.08
001 1001	0x19	16.56	100 1000	0x49	132.48	111 1000	0x79	1059.84
001 1010	0x1A	18.4	100 1000	0x4A	147.2	111 1000	0x7A	1177.6
001 1011	0x1B	20.24	100 1000	0x4B	161.92	111 1000	0x7B	1295.36
001 1100	0x1C	22.08	100 1000	0x4C	176.64	111 1000	0x7C	1413.12
001 1101	0x1D	23.92	100 1000	0x4D	191.36	111 1000	0x7D	1530.88
001 1110	0x1E	25.76	100 1000	0x4E	206.08	111 1000	0x7E	1648.64
001 1111	0x1F	27.6	100 1000	0x4F	220.8	111 1000	0x7F	1766.4

# 表 4. BEMF Constant (Kt) Look-Up Table

## 8.4.2 Starting the Motor Under Different Initial Conditions

The motor can be in one of three states when the DRV10987 device attempts to begin the start-up process. The motor may be stationary, or spinning in the forward or reverse directions. The DRV10987 device includes a number of features to allow for reliable motor start under all of these conditions. 🛛 16 shows the motor start-up flow for each of the three initial motor states.

## 8.4.2.1 Case 1 – Motor is Stationary

If the motor is stationary, the commutation logic must be initialized to be in phase with the position of the motor. The DRV10987 device provides for two options to initialize the commutation logic to the motor position. Initial position detect (IPD) determines the position of the motor based on the deterministic inductance variation, which is often present in BLDC motors. The *align-and-go* technique forces the motor into alignment by applying a voltage across a particular motor phase to force the motor to rotate in alignment with this phase.

## 8.4.2.2 Case 2 – Motor is Spinning in the Forward Direction

If the motor is spinning forward with enough velocity, the DRV10987 device may be configured to go directly into closed loop. By resynchronizing to the spinning motor, the user achieves the fastest possible start-up time for this initial condition.

## 8.4.2.3 Case 3 – Motor is Spinning in the Reverse Direction

If the motor is spinning in the reverse direction, the DRV10987 device provides several methods to convert it back to the forward direction.




www.tij.co.jp



One method, reverse drive, allows the motor to be driven so that it accelerates through zero velocity. The motor achieves the shortest possible spin-up time in systems where the motor is spinning in the reverse direction.

If this feature is not selected, then the DRV10987 device may be configured either to wait for the motor to stop spinning or to brake the motor. After the motor has stopped spinning, the motor start-up sequence proceeds as it would for a motor which is stationary.

Take care when using the reverse-drive or brake feature to ensure that the current is limited to an acceptable level and that the supply voltage does not surge as a result of energy being returned to the power supply.

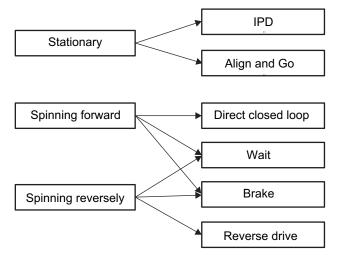

**図** 16. Start the Motor Under Different Initial Conditions

JAJSE49B-AUGUST 2017-REVISED FEBRUARY 2018

www.tij.co.jp

#### 8.4.3 Motor Start Sequence

☑ 17 shows the motor-start sequence implemented in the DRV10987 device.

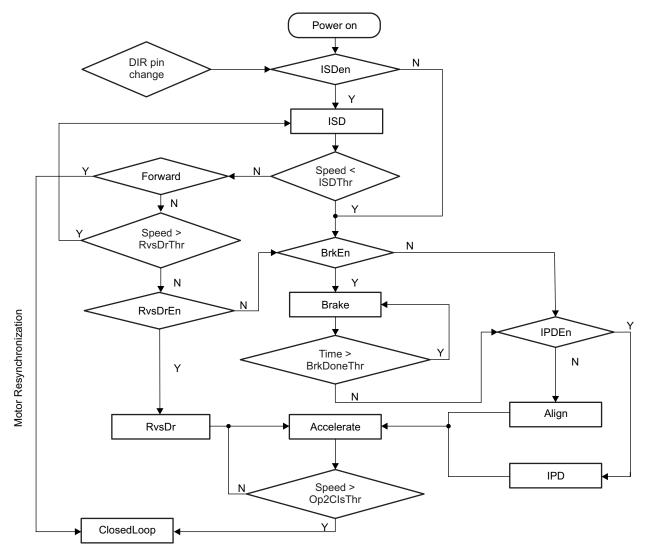


図 17. Motor Starting-Up Flow

- Accelerate State The DRV10987 device accelerates the motor according to the settings of StAccel and StAccel2. After applying the accelerate settings, the MSS advances to the Speed>Op2ClsThr judgment.
- Align State The DRV10987 device performs the align function (see *Align*). After the align completes, the MSS transitions to the Accelerate state.
- Brake State The device performs the brake function (see Motor Brake).
- **BrkEn Judgment** The MSS checks to determine whether the brake function is enabled (BrkDoneThr[2:0] ≠ 000). If the brake function is enabled, the MSS advances to the brake state.
- **ClosedLoop State** In this state, the DRV10987 device drives the motor based on feedback from the commutation control algorithm.
- **DIR Pin Change Judgment** If the DIR pin is changed during any of above states, DRV10987 device stops driving the motor and restarts from the beginning.
- **Forward Judgment** The MSS determines whether the motor is spinning in the forward or the reverse direction. If the motor is spinning in the forward direction, the DRV10987 device executes the

TEXAS INSTRUMENTS

#### www.tij.co.jp

resynchronization (see *Motor Resynchronization*) process by transitioning directly into the ClosedLoop state. If the motor is spinning in the reverse direction, the MSS proceeds to the Speed>RvsDrThr.

- **IPDEn Judgment** The MSS checks to see if IPD has been enabled (IPDCurrThr[3:0] ≠ 0000). If the IPD is enabled, the MSS transitions to the IPD state. Otherwise, it transitions to the align state.
- **IPD State** The DRV10987 device performs the IPD function. The IPD function is described in *Initial Position Detect (IPD)*. After the IPD completes, the MSS transitions to the accelerate state.
- **ISD State** The MSS determines the initial condition of the motor (see *Initial Speed Detect (ISD)*).
- **ISDen Judgment** After power-on, the DRV10987 MSS enters the ISDen judgment where it checks to see if the initial speed detect (ISD) function is enabled (ISDen = 1). If ISD is disabled, the MSS proceeds directly to the BrkEn Judgment. If ISD is enabled, the motor start sequence advances to the ISD state.
- **Power-On State** This is the initial power-on state of the motor start sequencer (MSS). The MSS starts in this state on initial power-up or whenever the DRV10987 device comes out of standby mode.
- **RvsDrEn Judgment** The MSS checks to see if the reverse drive function is enabled (RvsDrEn = 1). If it is, the MSS transitions into the RvsDr state. If the reverse drive function is not enabled, the MSS advances to the BrkEn judgment.
- **RvsDr State** The DRV10987 device drives the motor in the forward direction to force it to rapidly decelerate (see *Reverse Drive*). When it reaches zero velocity, the MSS transitions to the Accelerate state.
- **Speed**<**ISDThr Judgment** If the motor speed is lower than the threshold defined by ISDThr[1:0], then the motor is considered to be stationary and the MSS proceeds to the BrkEn judgment. If the speed is greater than the threshold defined by ISDThr[1:0], the start sequence proceeds to the Forward judgment.
- **Speed>Op2CIsThr Judgment** The motor accelerates until the drive rate exceeds the threshold configured by the Op2CIsThr[4:0] settings. When this threshold is reached, the DRV10987 device enters into the ClosedLoop state.
- Speed>RvsDrThr Judgment The motor start sequencer checks to see if the reverse speed is greater than the threshold defined by RvsDrThr[1:0]. If it is, then the MSS returns to the ISD state to allow the motor to decelerate. This prevents the DRV10987 device from attempting to reverse drive or brake a motor that is spinning too quickly. If the reverse speed of the motor is less than the threshold defined by RvsDrThr[1:0], then the MSS advances to the RvsDrEn judgment.
- **Time>BrkDoneThr Judgment** The MSS applies brake for a time configured by BRKDoneThr[2:0]. After brake state, the MSS advances to the IPDEn judgment.

#### 8.4.3.1 Initial Speed Detect (ISD)

The ISD function is used to identify the initial condition of the motor. If the function is disabled, the DRV10987 device does not perform the initial speed detect function and treats the motor as if it is stationary.

Phase-to-phase comparators are used to detect the zero crossings of the motor BEMF voltage while it is coasting (motor phase outputs are in the high-impedance state). 🛛 18 shows the configuration of the comparators.



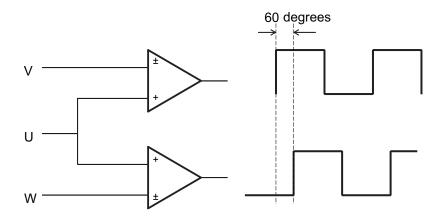


図 18. Initial Speed Detect Function

If the UW comparator output is lagging the UV comparator by 60°, the motor is spinning forward. If the UW comparator output is leading the UV comparator by 60°, the motor is spinning in reverse.

The motor speed is determined by measuring the time between two rising edges of either of the comparators.

If neither of the comparator outputs toggles for a given amount of time, the condition is defined as stationary. The amount of time can be programmed by setting the register bits ISDThr[1:0].

### 8.4.3.2 Motor Resynchronization

The resynchronize function works when the ISD function is enabled and determines that the initial state of the motor is spinning in the forward direction. The speed and position information measured during ISD are used to initialize the drive state of the DRV10987 device, which can transition directly into the closed-loop running state without needing to stop the motor.

#### 8.4.3.3 Reverse Drive

The ISD function measures the initial speed and the initial position; the DRV10987 reverse drive function acts to reverse accelerate the motor through zero speed and to continue accelerating until the closed loop threshold is reached (see  $\boxtimes$  19). If the reverse speed is greater than the threshold configured in RvsDrThr[1:0], then the DRV10987 device waits until the motor coasts to a speed that is less than the threshold before driving the motor to reverse accelerate.

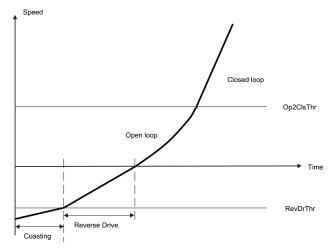


図 19. Reverse Drive Function



Reverse drive is suitable for applications where the load condition is light at low speed and relatively constant and where the reverse speed is low (for example, a fan motor with little friction). For other load conditions, the motor brake function provides a method for helping force a motor which is spinning in the reverse direction to stop spinning before the device initiates a normal start-up sequence.

#### 8.4.3.4 Motor Brake

The motor brake function can be used to stop the spinning motor before attempting to start the motor. The brake is applied by turning on all three of the low-side driver FETs.

Brake is enabled by configuring a non-zero BrkDoneThr[2:0]. The driver comes out of the brake state only when the phase current is lower than BrkCurThrSel for BrkDoneThr[2:0] time. After the motor is stopped, the motor position is unknown. To proceed with restarting in the correct direction, the IPD or align-and-go algorithm must be implemented. The motor start sequence is the same as it would be for a motor starting in the stationary condition. The driver enters the brake state before entering the IPD or *align-and-go* state.

The motor brake function can be disabled, in which case the DRV10987 device skips the brake state and attempts to spin the motor as if it were stationary. If this happens while the motor is spinning in either direction, the start-up sequence may not be successful.

#### 8.4.3.5 Motor Initialization

#### 8.4.3.5.1 Align

The DRV10987 device aligns a motor by injecting dc current through a particular phase pattern which is current flowing into phase V, flowing out from phase W for a certain time (configured by AlignTime[2:0]). The current magnitude is determined by OpenLCurr[1:0]. The motor should be aligned at the known position.

The time of align affects the start-up timing (see *Start-Up Timing*). A bigger-inertia motor requires longer align time.

#### 8.4.3.5.2 Initial Position Detect (IPD)


The inductive sense method is used to determine the initial position of the motor when IPD is enabled. IPD is enabled by selecting IPDCurrThr[3:0] to any value other than 0000.

IPD can be used in applications where reverse rotation of the motor is unacceptable. Because IPD is not required to wait for the motor to align with the commutation, it can allow for a faster motor start sequence. IPD works well when the inductance of the motor varies as a function of position. Because it works by pulsing current to the motor, it can generate acoustics which must be taken into account when determining the best start method for a particular application.

#### 8.4.3.5.2.1 IPD Operation

IPD operates by sequentially applying voltage across two of the three motor phases according to the following sequence: VW WV UV VU WU UW (see 20). When the current reaches the threshold configured in IPDCurrThr[3:0], the voltage across the motor is stopped. The DRV10987 device measures the time it takes from when the voltage is applied until the current threshold is reached. The time varies as a function of the inductance in the motor windings. The state with the shortest time represents the state with the minimum inductance. The minimum inductance is because of the alignment of the north pole of the motor with this particular driving state.



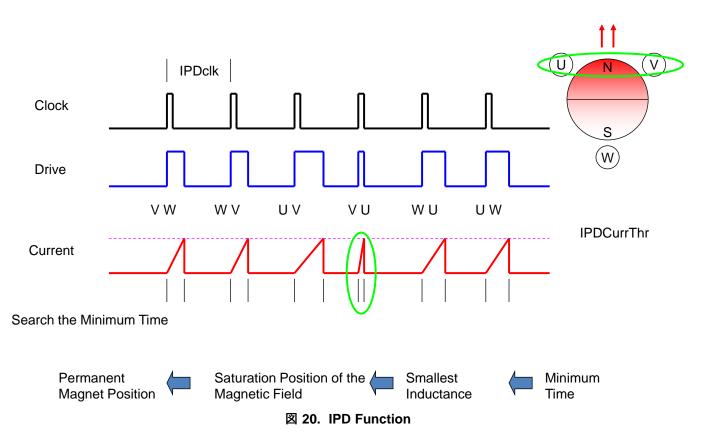

#### 8.4.3.5.2.2 IPD Release Mode

Two options are available for stopping the voltage applied to the motor when the current threshold is reached. If IPDRIsMd = 0, the recirculate mode is selected. The low-side (S6) MOSFET remains on to allow the current to recirculate between the MOSFET (S6) and body diode (S2) (see  $\boxtimes 21$ ). If IPDRIsMd = 1, the high-impedance mode is selected. Both the high-side (S1) and low-side (S6) MOSFETs are turned off and the current flies back across the body diodes into the power supply (see  $\boxtimes 22$ ).

In the high-impedance state, the phase current has a faster settle-down time, but that could result in a surge on  $V_{CC}$ . Manage this with appropriate selection of either a clamp circuit or by providing sufficient capacitance between  $V_{CC}$  and GND. If the voltage surge cannot be contained and if it is unacceptable for the application, then select the recirculate mode. When selecting the recirculate mode, select the IPDClk[1:0] bits to give the current in the motor windings enough time to decay to 0.

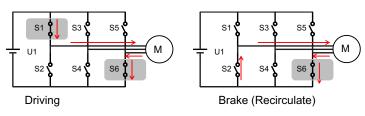


図 21. IPD Release Mode 0




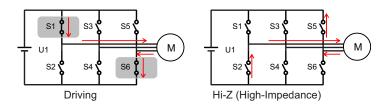


図 22. IPD Release Mode 1

#### 8.4.3.5.2.3 IPD Advance Angle

After the initial position is detected, the DRV10987 device begins driving the motor at an angle specified by IPDAdvcAgl[1:0].

Advancing the drive angle anywhere from  $0^{\circ}$  to  $180^{\circ}$  results in positive torque. Advancing the drive angle by  $90^{\circ}$  results in maximum initial torque. Applying maximum initial torque could result in uneven acceleration to the rotor. Select the IPDAdvcAgl[1:0] to allow for smooth acceleration in the application (see 23).

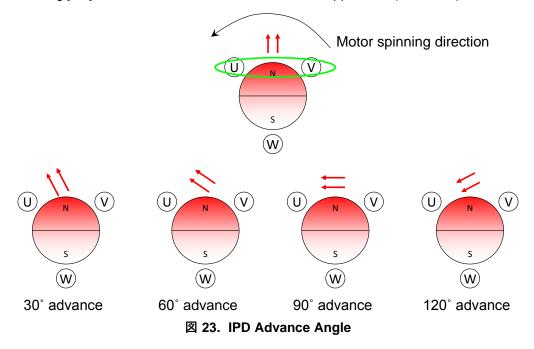

#### 8.4.3.5.3 Motor Start

After it is determined that the motor is stationary and after completing the motor initialization with either align or IPD, the DRV10987 device begins to accelerate the motor. This acceleration is accomplished by applying a voltage determined by the open-loop current setting (OpenLCurr[1:0]) to the appropriate drive state and by increasing the rate of commutation without regard to the real position of the motor (referred to as open-loop operation). The function of the open-loop operation is to drive the motor to a minimum speed so that the motor generates sufficient BEMF to allow the commutation control logic to accurately drive the motor.

表 5 lists the configuration options that can be set in the register to optimize the initial motor acceleration stage for different applications.




DESCRIPTION	REG. NAME	CONFIGURATION BITS	MIN. VALUE	MAX. VALUE
Open- to closed-loop threshold	CONFIG4	Op2ClsThr[4:0]	0.8 Hz	204.8 Hz
Align time	CONFIG4	AlignTime[2:0]	40 ms	5.3 s
First-order acceleration coefficient	CONFIG4	StAccel[2:0]	0.019 Hz/s	76 Hz/s
Second-order acceleration coefficient	CONFIG4	StAccel2[2:0]	0.0026 Hz/s <sup>2</sup>	57 Hz/s <sup>2</sup>
Open-loop current setting			200 mA	1.6 A
Align current setting	CONFIG3	OpenLCurr[1:0]	150 mA	1.2 A
Open-loop current ramping	CONFIG3	OpLCurrRt[2:0]	0.023 V <sub>CC</sub> /s	6 V <sub>CC</sub> /s

表 5. Configuration	<b>Options for Controlling</b>	<b>Open-Loop Motor Start</b>

## 8.4.3.6 Start-Up Timing

Start-up timing is determined by the align and accelerate time. The align time can be set by AlignTime[2:0]. The accelerate time is defined by the open-loop to closed-loop threshold Op2ClsThr[4:0] along with the first-order acceleration coefficient StAccel[2:0](A1) and second-order acceleration coefficient StAccel2[2:0](A2) acceleration coefficients.  $\boxtimes$  24 shows the motor start-up process.

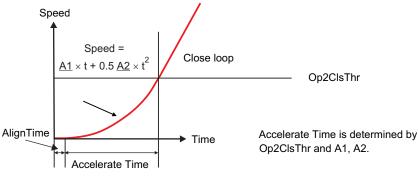

☑ 24. Motor Start-Up Process

Select the first-order and second-order acceleration coefficients to allow the motor to reliably accelerate from zero velocity up to the closed-loop threshold in the shortest time possible. Using slow acceleration coefficients for open loop stage can help improve reliability in applications where it is difficult to initialize the motor accurately with either align or IPD.

Select the open- to closed-loop threshold to allow the motor to accelerate to a speed that generates sufficient BEMF for closed-loop control. This is determined by the BEMF constant of the motor based on the relationship described in  $\pm 2$ .

 $BEMF = Kt \times speed (Hz)$ 

#### 8.4.4 Align Current

During the align state, the measured align current is dependent on the actual motor phase resistance and  $r_{DS(on)}$  of the internal FETs. The relationship between measured align current and configured align current is derived from the actual motor phase resistance, configured motor phase resistance, and  $r_{DS(on)}$ .

 $\frac{R_{m}}{R_{motor} + r_{DS(on)}}$ 

where

- AlignCurrent\_Measured is the actual align current measured during the align state
- AlignCurrent\_Configured is the align current configured by OpenLCurr[1:0]
- R<sub>motor</sub> is the actual motor phase resistance
- r<sub>DS(on)</sub> is the resistance between the drain and source of the FETs during the on-state
- R<sub>m</sub> is configured by Rm[6:0]

(2)



#### 8.4.5 Start-Up Current Setting

The start-up current setting is to control the peak start-up current during open loop. During open-loop operation, it is desirable to control the magnitude of drive current applied to the motor. This is helpful in controlling and optimizing the rate of acceleration. The limit takes effect during reverse drive, align, and acceleration.


The start current is set by programming the OpenLCurr[1:0] bits. The current should be selected to allow the motor to reliably accelerate to the handoff threshold. Heavier loads may require a higher current setting, but it should be noted that the rate of acceleration is limited by the acceleration rate (StAccel[2:0], StAccel2[2:0]). If the motor is started with more current than necessary to reliably reach the handoff threshold, it results in higher power consumption.

The start current is controlled based on the relationship shown in  $\exists 4$  and  $\boxtimes 25$ . The duty cycle applied to the motor is derived from the calculated value for  $U_{\text{Limit}}$  and the magnitude of the supply voltage,  $V_{\text{CC}}$ , as well as the drive state of the motor.

$$U_{l \text{ imit}} = I_{l \text{ imit}} \times Rm + Speed (Hz) \times Kt$$

where

- I<sub>Limit</sub> is configured by OpenLCurr[1:0]
- Rm is configured by Rm[6:0]
- Speed is variable based the open-loop acceleration profile of the motor
- Kt is configured by Kt[6:0]

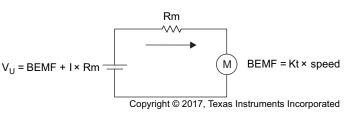

25. Motor Start-Up Current

#### 8.4.5.1 Start-Up Current Ramp-Up

A fast change in the applied drive current may result in a sudden change in the driving torque. In some applications, this could result in acoustic noise. To avoid this, the DRV10987 device allows the option of limiting the rate at which the current is applied to the motor. OpLCurrRt[2:0] sets the maximum voltage ramp-up rate that is applied to the motor. The waveforms in 26 show how this feature can be used to gradually ramp the current applied to the motor.



Start Driving With Fast Current Ramp

Start Driving With Slow Current Ramp

図 26. Motor Start-Up Current Ramp

### 8.4.6 Closed Loop

In closed loop operation, the DRV10987 device continuously samples the current in the U phase of the motor and uses this information to estimate the BEMF voltage that is present. The drive state of the motor is controlled based on the estimated BEMF voltage.

Copyright © 2017–2018, Texas Instruments Incorporated

(4)

33



JAJSE49B-AUGUST 2017-REVISED FEBRUARY 2018

## 8.4.6.1 Half-Cycle Control and Full-Cycle Control

The estimated BEMF used to control the drive state of the motor has two zero-crosses every electrical cycle. The DRV10987 device can be configured to update the drive state either once every electrical cycle or twice for every electrical cycle. When AdjMode is programmed to 1, half-cycle adjustment is applied. The control logic is triggered at both the rising edge and falling edge. When AdjMode is programmed to 0, full-cycle adjustment is applied. The control logic is triggered only at the rising edge (see 27).

Half-cycle adjustment provides a faster response when compared with full-cycle adjustment. Use half-cycle adjustment whenever the application requires operation over large dynamic loading conditions. Use the full-cycle adjustment for low-current (<1 A) applications because it offers more tolerance for current-measurement offset errors.


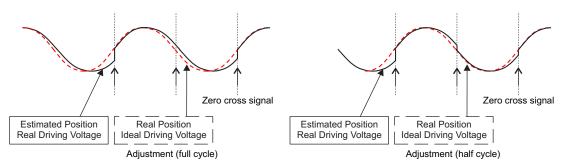



図 27. Closed-Loop Control Commutation-Adjustment Mode

## 8.4.6.2 Analog-Mode Speed Control

The SPEED input pin can be configured to operate as an analog input (SpdCtrlMd = 0).

When configured for analog mode, the voltage range on the SPEED pin can be varied from 0 to V3P3. If SPEED >  $V_{ANA\_FS}$ , the speed command is maximum. If  $V_{ANA\_ZS} \leq$  SPEED <  $V_{ANA\_FS}$  the speed command changes linearly according to the magnitude of the voltage applied at the SPEED pin. If SPEED <  $V_{ANA\_ZS}$  the speed command is to stop the motor.  $\boxtimes$  28 shows the speed command when operating in analog mode.

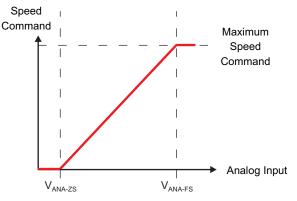

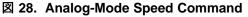

## 8.4.6.3 Digital PWM-Input-Mode Speed Control

If SpdCtrlMd = 1, the SPEED input pin is configured to operate as a PWM-encoded digital input. The PWM duty cycle applied to the SPEED pin can be varied from 0 to 100%. The speed command is proportional to the PWM input duty cycle. The speed command stops the motor when the PWM input keeps at 0 for  $t_{EN SL SB}$  (see 29).

The frequency of the PWM input signal applied to the SPEED pin is defined as  $f_{PWM}$ . This is the frequency the device can accept to control motor speed. It does not correspond to the PWM output frequency that is applied to the motor phase. The PWM output frequency can be configured to be either 25 kHz when the PWMFreq bit is set to 0 or to 50 kHz when PWMFreq bit is set to 1.



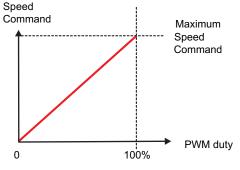


図 29. PWM-Mode Speed Command

#### 8.4.6.4 <sup>2</sup>C-Mode Speed Control

The DRV10987 device can also command the speed through the I<sup>2</sup>C serial interface. To enable this feature, the OverRide bit is set to 1. When the DRV10987 device is configured to operate in I<sup>2</sup>C mode, it ignores the signal applied to the SPEED pin.

The speed command can be set by writing the SpdCtrl[8:0] bits. The 9-bit SpdCtrl [8:0] located in the SpeedCtrl registers is used to set the peak amplitude voltage applied to the motor. The maximum speed command is set when SpdCtrl [8:0] is set to 0x1FF (511).

#### 8.4.6.5 Closed-Loop Accelerate

To prevent sudden changes in the torque applied to the motor which could result in acoustic noise, the DRV10987 device provides the option of limiting the maximum rate at which the speed command changes. ClsLpAccel[2:0] can be programmed to set the maximum rate at which the speed command changes (shown in  $\boxtimes 30$ ).

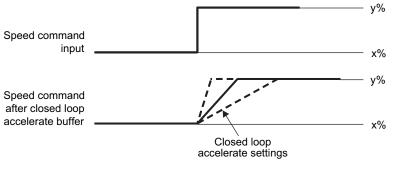


図 30. Closed-Loop Accelerate

#### 8.4.6.6 Control Coefficient

The DRV10987 device continuously measures the motor current and uses this information to control the drive state of the motor when operating in closed-loop mode. In applications where noise makes it difficult to control the commutation optimally, the CtrlCoef[1:0] can be used to attenuate the feedback used for closed-loop control. The loop is less reactive to the noise on the feedback and provides for a smoother output.

#### 8.4.6.7 Commutation Control

To achieve the best efficiency, it is often desirable to control the drive state of the motor so that the motor phase current is aligned with the motor BEMF voltage.

To align the motor phase current with the motor BEMF voltage, consider the inductive effect of the motor. The voltage applied to the motor should be applied in advance of the motor BEMF voltage (see  $\boxtimes$  31). The DRV10987 device provides configuration bits for controlling the time (t<sub>adv</sub>) between the driving voltage and BEMF.

Copyright © 2017–2018, Texas Instruments Incorporated

**DRV10987** JAJSE49B-AUGUST 2017-REVISED FEBRUARY 2018

www.tij.co.jp

(6)

(7)

STRUMENTS

For motors with salient pole structures, aligning the motor BEMF voltage with the motor current may not achieve the best efficiency. In these applications, the timing advance should be adjusted accordingly. Accomplish this by operating the system at constant speed and load conditions and by adjusting tady until the minimum current is achieved.

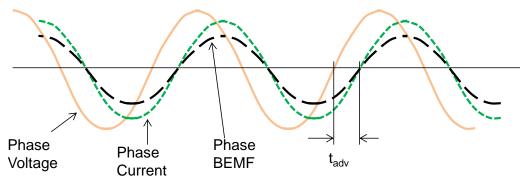


図 31. Advance Time (t<sub>adv</sub>) Definition

The DRV10987 device has two options for adjusting the motor commutate advance time. When CommAdvMode = 0, mode 0 is selected. When CommAdvMode = 1, mode 1 is selected.

Mode 0:  $t_{adv}$  is maintained to be a fixed time relative to the estimated BEMF zero cross as determined by  $\pm 5$ . (5)

 $t_{adv} = t_{SETTING}$ 

Mode 1:  $t_{adv}$  is maintained to be a variable time relative to the estimated BEMF zero cross as determined by  $\pm$  6.  $t_{adv} = t_{SETTING} \times (V_U - BEMF) / V_U.$ 

where

- Vuis the phase voltage amplitude ٠
- BEMF is the phase BEMF amplitude

t<sub>SETTING</sub> (in µs) is determined by the configuration of the TCtrlAdvShift [2:0] and TCtrlAdvValue [3:0] bits as defined in  $\exists$  7. For convenience, the available t<sub>SETTING</sub> values are provided in  $\frac{1}{5}$  6.

t<sub>SETTING</sub> = 2.5 μs × [TCtrlAdvValue[3:0]] << TCtrlAdvShift[2:0]



表 6. Configuring Commutation Advance Timing by Adjusting t <sub>SETTING</sub>								
TCtrlAd {TCtrlAdv TCtrlAdvV	Shift[2:0],	t <sub>SETTING</sub> (μs)	{TCtrlAdv	TCtrlAdv [6:0] {TCtrlAdvShift[2:0], TCtrlAdvValue[3:0]}		TCtrlAc {TCtrlAdv TCtrlAdvV	t <sub>SETTING</sub> (μs)	
Binary	Hex		Binary	Hex		Binary	Hex	
000 0000	0x00	0	010 1000	0x28	80	101 1000	0x58	640
000 0001	0x01	2.5	010 1001	0x29	90	101 1001	0x59	720
000 0010	0x02	5	010 1010	0x2A	100	101 1010	0x5A	800
000 0011	0x03	7.5	010 1011	0x2B	110	101 1011	0x5B	880
000 0100	0x04	10	010 1100	0x2C	120	101 1100	0x5C	960
000 0101	0x05	12.5	010 1101	0x2D	130	101 1101	0x5D	1040
000 0110	0x06	15	010 1110	0x2E	140	101 1110	0x5E	1120
000 0111	0x07	17.5	010 1111	0x2F	150	101 1111	0x5F	1200
000 1000	0x08	20	011 1000	0x38	160	110 1000	0x68	1280
000 1001	0x09	22.5	011 1001	0x39	170	110 1001	0x69	1440
000 1010	0x0A	25	011 1010	0x3A	200	110 1010	0x6A	1600
000 1011	0x0B	27.5	011 1011	0x3B	220	110 1011	0x6B	1760
000 1100	0x0C	30	011 1100	0x3C	240	110 1100	0x6C	1920
000 1101	0x0D	32.5	011 1101	0x3D	260	110 1101	0x6D	2080
000 1110	0x0E	35	011 1110	0x3E	280	110 1110	0x6E	2240
000 1111	0x0F	37.5	011 1111	0x3F	300	110 1111	0x6F	2400
001 1000	0x18	40	100 1000	0x48	320	111 1000	0x78	2560
001 1001	0x19	45	100 1001	0x49	360	111 1001	0x79	2880
001 1010	0x1A	50	100 1010	0x4A	400	111 1010	0x7A	3200
001 1011	0x1B	55	100 1011	0x4B	440	111 1011	0x7B	3520
001 1100	0x1C	60	100 1100	0x4C	480	111 1100	0x7C	3840
001 1101	0x1D	65	100 1101	0x4D	520	111 1101	0x7D	4160
001 1110	0x1E	70	100 1110	0x4E	560	111 1110	0x7E	4480
001 1111	0x1F	75	100 1111	0x4F	600	111 1111	0x7F	4800

## 表 6. Configuring Commutation Advance Timing by Adjusting tSETTING

## 8.4.7 Current Limits

The DRV10987 device has several current-limit modes to help ensure optimal control of the motor and to ensure safe operation. The various current-limit modes are listed in 表 7. Software current limit is used to provide a means of controlling the amount of current delivered to the motor. This is useful when the system must limit the amount of current pulled from the power supply during motor start-up. The lock-detection current limit is a configurable threshold that can be used to limit the current applied to the motor. Overcurrent protection is used to protect the device; therefore, it cannot be disabled or configured to a different threshold. The current-limit modes are described in the following sections.

表 7.	DRV10987	<b>Current-Limit Modes</b>
------	----------	----------------------------

CURRENT LIMIT MODE	SITUATION	ACTION	FAULT DIAGNOSIS
Software Current Limit	Motor start	Limit the output voltage amplitude	No fault
Lock0: Lock-Detection Current Limit Triggered	Motor locked	Stop driving the motor and enter the lock state	Mechanical rotation error
Overcurrent Protection (OCP)	Short circuit	Stop driving the motor and enter the lock state	Circuit connection

### 8.4.7.1 Software Current Limit

The software current limit limits the voltage applied to the motor to prevent the current from exceeding the programmed threshold. The software current limit threshold is configured by writing the SWiLimitThr[3:0] bits to select I<sub>LIMIT</sub>. The software current limit does not use a direct measurement of current. It uses the programmed motor phase resistance,  $R_{PH_{cT}}$ , and programmed BEMF constant (Kt) to limit the voltage,  $V_{U}$ , applied to the motor as shown in  $\mathbb{Z}$  32 and  $\vec{\pm}$  8.

(8)

ISTRUMENTS

When the software current limit is active, it does not stop the motor from spinning nor does it trigger a fault. The functionality of the software current limit is only available in closed-loop control.

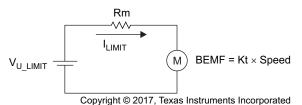


図 32. Software Current Limit

 $V_{U\_LIMIT} = I_{LIMIT} \times R_{PH\_CT} + Speed \times Kt$ 

#### 8.4.8 Lock Detect and Fault Handling


The DRV10987 device provides several options for determining if the motor becomes locked as a result of some external torque. Five lock-detect schemes work together to ensure the lock condition is detected quickly and reliably. 🛛 33 shows the logic which integrates the various lock-detect schemes. When a lock condition is detected, the DRV10987 device takes action to prevent continuously driving the motor in order to prevent damage to the system or the motor.

In addition to detecting if there is a locked motor condition, the DRV10987 device also identifies and takes action if there is no motor connected to the system.

Each of the five lock-detect schemes and the no-motor detection can be disabled by their respective register bits, LockEn[5:0].

When a lock condition is detected, the FaultReg register provides an indication of which of the six different conditions was detected on Lock5 to Lock0. These bits are reset when the motor restarts. The bits in the FaultReg register are set even if the lock detect scheme is disabled.

The DRV10987 device reacts to either locked-rotor or no-motor-connected conditions by putting the output drivers into a high-impedance state. To prevent the energy in the motor from pumping the supply voltage, the DRV10987 device incorporates an anti-voltage-surge (AVS) process whenever the output stages transition into the high-impedance state. The AVS function is described in *Anti-Voltage Surge Function*. After entering the high-impedance state as a result of a fault condition, the system tries to restart after  $t_{LOCK OFF}$ .

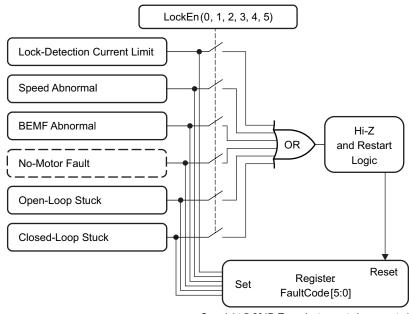

Copyright © 2017, Texas Instruments Incorporated

図 33. Lock Detect and Fault Diagnosis



#### 8.4.8.1 Lock0: Lock-Detection Current Limit Triggered

The lock-detection current-limit function provides a configurable threshold for limiting the current to prevent damage to the system. This is often tripped in the event of a sudden locked-rotor condition. The DRV10987 device continuously monitors the current in the low-side drivers as shown in 🛛 34. If the current goes higher than the threshold configured by the HWiLimitThr[2:0] bits, then the DRV10987 device stops driving the motor by placing the output phases into a high-impedance state. The Lock0 bit is set and a lock condition is reported. The device retries after  $t_{LOCK OFF}$ .

Set the lock-detection current limit to a higher value than the software current limit.


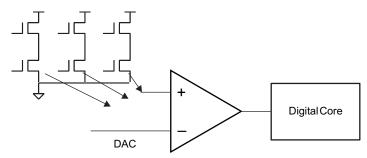


図 34. Lock-Detection Current Limit

#### 8.4.8.2 Lock1: Abnormal Speed

If the motor is operating normally, the motor BEMF should always be less than the output amplitude. The DRV10987 device uses two methods of monitoring the BEMF in the system. The U phase current is monitored to maintain an estimate of BEMF based on the setting for Rm[6:0] {RmShift[2:0],RmValue[3:0]}. In addition, the BEMF is estimated based on the operation speed of the motor and the setting for Kt[6:0] {KtShift[2:0],KtValue[3:0]}.  $\boxtimes$  35 shows the method for using this information to detect a lock condition. If the motor BEMF is much higher than the output amplitude for a certain period of time, t<sub>LCK\_ETR</sub>, it means the estimated speed is wrong, and the motor has gotten out of phase.

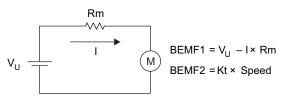

Lock Detected If BEMF2 > V<sub>U</sub> Copyright © 2017, Texas Instruments Incorporated

#### 図 35. Lock Detection 1

#### 8.4.8.3 Lock2: Abnormal Kt

For any given motor, the integrated value of BEMF during half of an electrical cycle is constant. The value is determined by the BEMF constant (Kt) (see  $\boxtimes$  36). The BEMF constant is the same regardless of whether the motor is running fast or slow. This constant value is continuously monitored by calculation and used as a criterion to determine the motor lock condition, and is referred to as Ktc.

Based on the Kt value programmed, create a range from Kt\_low to Kt\_high. If Ktc goes beyond the range for a certain period of time,  $t_{LCK ETR}$ , lock is detected. Kt\_low and Kt\_high are determined by KtLckThr[1:0] (see  $\boxtimes$  37).



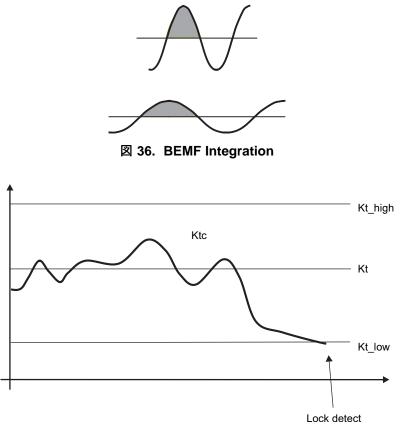


図 37. Abnormal-Kt Lock Detect

#### 8.4.8.4 Lock3: No-Motor Fault

The phase U current is checked after transitioning from open loop to closed loop. If the phase U current is not greater than 140 mA then the motor is not connected as shown in 🛛 38. This condition is treated and reported as a fault.

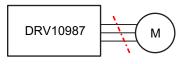


図 38. No-Motor Error

#### 8.4.8.5 Lock4: Open-Loop Motor-Stuck Lock

Lock4 is used to detect locked-motor conditions while the motor start sequence is in open loop.

For a successful startup, motor speed should be equal to the open-to-closed-loop handoff threshold when the motor is transitioning into closed loop. However, if the motor is locked, the motor speed is not able to match the open-loop drive rate.

If the motor BEMF is not detected for one electrical cycle after the open-loop drive rate exceeds the threshold, then the open loop was unsuccessful as a result of a locked-rotor condition.

#### 8.4.8.6 Lock5: Closed-Loop Motor-Stuck Lock

If the motor suddenly becomes locked, motor speed and Ktc are not able to be refreshed because the BEMF zero cross of the motor may not appear after the lock. In this condition, lock can also be detected by the following scheme: if the current commutation period is 2× longer than the previous period.




#### 8.4.9 Anti-Voltage Surge Function

When a motor is driven, energy is transferred from the power supply into the motor. Some of this energy is stored in the form of inductive energy or as mechanical energy. The DRV10987 device includes circuits to prevent this energy from being returned to the power supply, which could result in pumping up the  $V_{CC}$  voltage. This function is referred to as the AVS and acts to protect the DRV10987 device as well as other circuits that share the same  $V_{CC}$  connection. Two forms of AVS protection are used to prevent both the mechanical energy and the inductive energy from being returned to the supply. Each of these modes can be independently disabled through the register configuration bits AVSMEn and AVSIndEn.

#### 8.4.9.1 Mechanical AVS Function

If the speed command suddenly drops such that the BEMF voltage generated by the motor is greater than the voltage that is applied to the motor, then the mechanical energy of the motor is returned to the power supply and the  $V_{CC}$  voltage surges. The mechanical AVS function works to prevent this from happening. The DRV10987 device buffers the speed command value and limits the resulting output voltage,  $V_{U\_MIN}$ , so that it is not less than the BEMF voltage of the motor. The BEMF voltage in the mechanical AVS function is determined using the programmed value for the motor Kt (Kt[6:0]) along with the speed. 🛛 39 shows the criteria used by the mechanical AVS function.

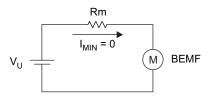

 $V_{U\_MIN}$  = BEMF + I<sub>MIN</sub> × Rm = BEMF Copyright © 2017, Texas Instruments Incorporated

#### 図 39. Mechanical AVS

The mechanical AVS function can operate in one of two modes, which can be configured by the register bit AVSMMd:

- AVSMMd = 0 AVS mode is always active to prevent the applied voltage from being less than the BEMF voltage.
- AVSMMd = 1 AVS mode becomes active when  $V_{CC}$  reaches 24 V. The motor acts as a generator and returns energy into the power supply until  $V_{CC}$  reaches 24 V. This mode can be used to enable faster deceleration of the motor in applications where returning energy to the power supply is allowed.

#### 8.4.9.2 Inductive AVS Function

When the DRV10987 device transitions from driving the motor into a high-impedance state, the inductive current in the motor windings continues to flow and the energy returns to the power supply through the intrinsic body diodes in the FET output stage (see  $\boxtimes$  40).

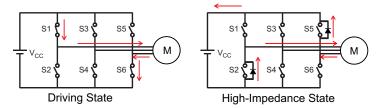


図 40. Inductive-Mode Voltage Surge

To prevent the inductive energy from being returned to the power supply, the DRV10987 system transitions from driving to a high-impedance state by first turning OFF the active high-side drivers, and turning ON all low-side drivers. The DRV10987 device monitors phase current after entering the BRAKE state and transitions into the high-impedance state when the amplitude of the phase current is less than BrkCurThrSel for a fixed period of time (BrkDoneThr[2:0])(see 🛛 41).



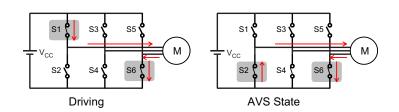


図 41. Inductive AVS

In this example, current is applied to the motor through the high-side driver on phase U (S1) and returned through the low-side driver on phase W (S6). The high-side driver on phase U is turned OFF' and all low-side drivers are tunned ON to allow the inductive energy in the resulting LR circuit to decay. If BrkDoneThr[2:0] = 000, no brake is applied and the device does not protect from inductive energy even with the inductive AVS feature enabled.

#### 8.4.10 PWM Output

The DRV10987 device has 32 options for PWM dead time. These options can be used to configure the time between one of the bridge FETs turning off and the complementary FET turning on. Deadtime[4:0] can be used to configure dead times between 40 and 1280 ns. Take care that the dead time is long enough to prevent the bridge FETs from shooting through.

The DRV10987 device offers two options for PWM switching frequency. When the configuration bit PWMFreq is set to 0, the output PWM frequency is 25 kHz, and when PWMFreq is set to 1, the output PWM frequency is 50 kHz.

### 8.4.11 FG Customized Configuration


The DRV10987 device provides information about the motor speed through the *frequency generate* (FG) pin. FG also provides information about the driving state of the DRV10987 device.

### 8.4.11.1 FG Configuration

The FG output frequency can be configured by FGcycle[3:0]. The default FG toggles once every electrical cycle (FGcycle = 0000). Many applications configure the FG output so that it provides two pulses for every mechanical rotation of the motor. The configuration bits provided in the DRV10987 device can accomplish this for 2-pole, 4-pole, 6-pole, and 8-pole motors up to 32-pole motors. This is illustrated in  $\mathbb{X}$  42 for 2, 4, 6, and 8-pole motors.

☑ 42 shows the DRV10987 device has been configured to provide FG pulses once every electrical cycle (4 poles), twice every three electrical cycles (6 poles), and once every two electrical cycles (8 poles).



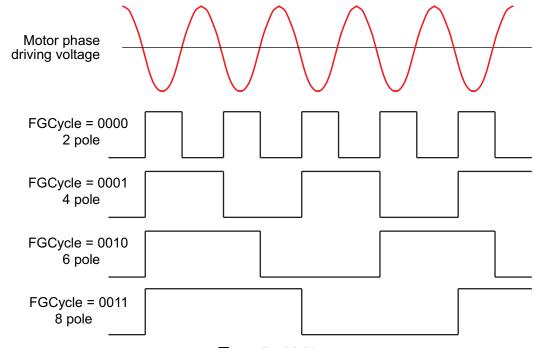

## 図 42. FG Divider

## 8.4.11.2 FG Open-Loop and Lock Behavior

Note that the FG output reflects the driving state of the motor. During normal closed-loop behavior, the driving state and the actual state of the motor are synchronized. During open-loop acceleration, however, this may not reflect the actual motor speed. During a locked-motor condition, the FG output is driven high.

The DRV10987 device provides three options for controlling the FG output during open loop, as shown in  $\boxtimes$  43. The selection of these options is determined by the FGOLSel[1:0] setting.

- Option0: Open-loop, FG output based on driving frequency
- Option1: Open-loop, no FG output (keep high)
- Option2: FG output based on driving frequency at the first power-on start-up, and no FG output (keep high) for any subsequent restarts



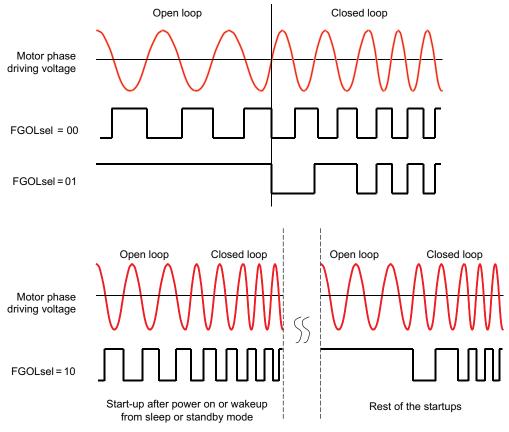


図 43. FG Behavior During Open Loop

### 8.4.12 Diagnostics and Visibility

The DRV10987 device offers extensive visibility into the motor system operation conditions stored in internal registers. This information can be monitored through the  $I^2C$  interface. Information can be monitored relating to the device status, motor speed, supply voltage, speed command, motor phase-voltage amplitude, fault status, and others. The data is updated on the fly.

### 8.4.12.1 Motor-Status Readback

The motor FaultReg register provides information on overtemperature (OverTemp), overcurrent (OverCurr), and locked rotor (Lock0–Lock5).

#### 8.4.12.2 Motor-Speed Readback

The motor operation speed is automatically updated in register MotorSpeed while the motor is spinning. The value is determined by the period for calculated BEMF zero crossings on phase U. The electrical speed of the motor is denoted as *Velocity (Hz)* and is calculated as shown in  $\pm$  9.

As an example consider the following:

MotorSpeed = 0x01FF;

Velocity = 512 (0x01FF) / 10 = 51 Hz

For a 4-pole motor, this translates to:  $51 \frac{\text{ecycles}}{\text{sec ond}} \times \frac{1}{2} \frac{\text{mechcycle}}{\text{ecycle}} \times 60 \frac{\text{sec ond}}{\text{minute}} = 1530 \text{ RPM}$ 

(9)

# **DRV10987** JAJSE49B-AUGUST 2017-REVISED FEBRUARY 2018

# 8.4.12.3 Motor Electrical-Period Readback

The motor-operation electrical period is automatically updated in register MotorPeriod while the motor is spinning. The electrical period is measured as the time between calculated BEMF zero crossings for phase U. The electrical period of the motor is denoted as  $t_{FIF}$  PERIOD (µs) and is calculated as shown in  $\vec{t}$  10.

 $t_{ELE\_PERIOD}$  (µs) = {MotorPeriod} × 10

As an example consider the following:

MotorPeriod = 0x01FF;

 $t_{ELE PERIOD} = 512 (0x01FF) \times 10 = 5120 \ \mu s$ 

The motor electrical period and motor speed satisfies the condition of  $\pm$  11.

 $t_{ELE PERIOD}$  (s) × Velocity (Hz) = 1

## 8.4.12.4 BEMF Constant Readback

For any given motor, the integrated value of BEMF during half of an electronic cycle is a constant, Ktc (see Lock2: Abnormal Kt).

The integration of the motor BEMF is processed periodically (updated every electrical cycle) while the motor is spinning. The result is stored in register MotorKt.

The relationship is shown in  $\pm$  12.

Ktc (V/Hz) = ({MotorKt} / 2) / 1090

## 8.4.12.5 Motor Estimated Position by IPD

After inductive sense is executed, the rotor position is detected within 60 electrical degrees of resolution. The position is stored in register IPDPosition.

The value stored in IPDPosition corresponds to one of the six motor positions plus the IPD advance angle as shown in 表 8. For more information about IPD, see Initial Position Detect (IPD).

	U V v W	U v v v	U s V N W	U V N W	U V v W		
Rotor position (°)	0	60	120	180	240	300	
Data1	0	43	85	128	171	213	
IPD advance angle	30	60	90	120			
Data2	22	44	63	85			
Register data	(Data1 + Data2) mod (256)						

## 表 8. IPD Position Read Back

## 8.4.12.6 Supply-Voltage Readback

The power supply is monitored periodically during motor operation. This information is available in register SupplyVoltage. The power supply voltage is recorded as shown in  $\pm$  13.

V<sub>POWERSUPPLY</sub> (V) = Supply Voltage × 30 V / 256



www.tij.co.jp

(11)

(10)

(12)

(13)

#### DRV10987

JAJSE49B-AUGUST 2017-REVISED FEBRUARY 2018

#### 8.4.12.7 Speed-Command Readback

The DRV10987 device converts the various types of speed command into a speed command value (SpeedCmd) as shown in 🛛 44. By reading SpeedCmd, the user can observe PWM input duty cycle (PWM digital mode), analog voltage (analog mode), or I<sup>2</sup>C data (I<sup>2</sup>C mode). This value is calculated as shown in  $\vec{\pm}$  14.

 $\pm$  14 shows how the speed command as a percentage can be calculated and set in SpeedCmd.

Duty<sub>SPEED</sub> (%) = SpeedCmd × 100 / 255

where

- Duty<sub>SPEED</sub> = Speed command as a percentage
- SpeedCmd = Register value

#### 8.4.12.8 Speed-Command Buffer Readback

If software current limit and AVS are enabled, the PWM duty cycle output (read back at spdCmdBuffer) may not always match the input command (read back at SpeedCmd) shown in 🛛 44. See *Anti-Voltage Surge Function* and *Current Limits*.


By reading the value of spdCmdBuffer, the user can observe buffered speed command (output PWM duty cycle) to the motor.

 $\pm$  15 shows how the buffered speed is calculated.

 $Duty_{OUTPUT}$  (%) = spdCmdBuffer × 100 / 255

where

• Duty<sub>OUTPUT</sub> = The maximum duty cycle of the output PWM, which represents the output amplitude as a percentage.

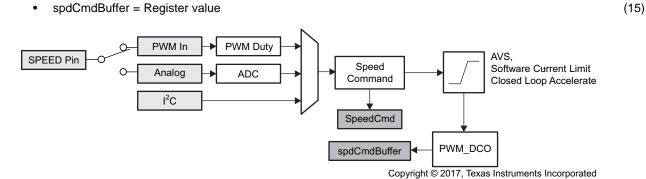

### 図 44. SpeedCmd and spdCmdBuffer Registers

### 8.4.12.9 Fault Diagnostics

See Lock Detect and Fault Handling.



(14)



#### 8.5 Register Maps

#### 8.5.1 I<sup>2</sup>C Serial Interface

The DRV10987 device provides an I<sup>2</sup>C slave interface with slave address 101 0010. TI recommends a pullup resistor of 4.7 k $\Omega$  to 3.3 V for I<sup>2</sup>C interface ports SCL and SDA. The protocol for the I<sup>2</sup>C interface is given in  $\boxtimes$  45.

#### I2C Write

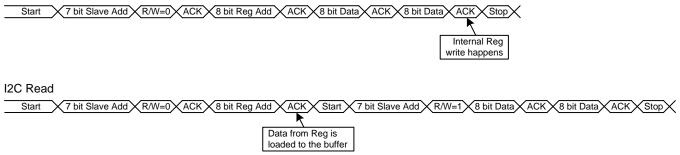


図 45. I<sup>2</sup>C Protocol

Seven read/write registers (0x30:0x36) are used to set motor speed and control device registers and EEPROM. Device operation status can be read back through nine read-only registers (0x0:0x08). Another seven EEPROM registers (0x90:0x96) can be accessed to program motor parameters and optimize the spin-up profile for the application.

#### 8.5.2 Register Map

REGISTER		D15	D14	D13	D12	D11	D10	D9	D8
NAME	ADDR.	D7	D6	D5	D4	D3	D2	D1	D0
FaultReg <sup>(1)(2)</sup>	0x00	OverTemp	TempWarni ng	VCC_OV	VREG_OC	OverCurr	CP_UVLO	VREG_UVL O	VCC_UVLO
		V3P3_UVL O	Reserved	Lock5	Lock4	Lock3	Lock2	Lock1	Lock0
MotorSpeed (1)	0x01				MotorSpe	eed[15:0]			
MotorPeriod <sup>(1)</sup>	0x02				MotorPe	riod[15:0]			
MotorKt <sup>(1)</sup>	0x03				Motork	(t[15:0]			
MotorCurrent (1)	0x04			Reserved			Mo	otorCurrent[10	:8]
					MotorCu	rrent[7:0]			
IPDPosition /	0x05	IPDPosition[7:0]							
SupplyVoltage (1)					SupplyVo	ltage[7:0]			
SpeedCmd /	0x06				SpeedC	md[7:0]			
spdCmdBuffer <sup>(1)</sup>					spdCmdE	Buffer[7:0]			
AnalogInLvI (1)	0x07			Rese	erved			commandSe	enseAdc[9:8]
					commandSe	enseAdc[7:0]			
Device ID /	0x08				DielD	<b>D</b> [7:0]			
Revision ID <sup>(1)</sup>			RevisionID[7:0]						
SpeedCtrl (3)	0x30	OverRide Reserved SpeedCtrl ]						SpeedCtrl[8 ]	
					Speed	Ctrl[7:0]			
EEPROM Programming1 <sup>(3)</sup>	0x31				ENPROG	KEY[15:0]			

(1) Read only

(2) Fault Register requires 0xFF to be written to the register to clear the bits.

(3) R/W

DRV10987

JAJSE49B-AUGUST 2017-REVISED FEBRUARY 2018



Register	Maps	(continued)
----------	------	-------------

REGISTER		D15	D14	D13	D12	D11	D10	D9	D8
NAME	ADDR.	D7	D6	D5	D4	D3	D2	D1	D0
EEPROM	0x32				Rese	erved			
Programming2 <sup>(3)</sup>					Reserved				eeReadySt atus
EEPROM	0x33				Rese	erved			
Programming3 (3)					eeIndAdd	dress[7:0]			
EEPROM Programming4 <sup>(3)</sup>	0x34				eeIndWD	ata[15:0]			
EEPROM Programming5 <sup>(3)</sup>	0x35		Reserved		ShadowRe gEn		Reserved		eeRefresh
				Reserved			eeWRnEn	eeAccN	lode[1:0]
EEPROM Programming6 <sup>(3)</sup>	0x36				eeIndRD	ata[15:0]			
EECTRL	0x60	MTR_DIS				Reserved			
					Rese	erved			
CONFIG1 <sup>(4)</sup>	0x90	SSMCo	SMConfig[1:0] FGOLSel[1:0]				FGCy	cle[3:0]	
		ClkCycleAdj ust	Adj RMShift[2:0]			RMValue[3:0]			
CONFIG2 <sup>(4)</sup>	0x91	Reserved		KtShift[2:0]	KtValue[3:0]				
		CommAdv Mode	т	CtrlAdvShift[2:	:0]	TCtrlAdvValue[3:0]			
CONFIG3 <sup>(4)</sup>	0x92	ISDTr	nr[1:0]	BrkCurrThr Sel	BEMF_HYS	ISDEn	RvsDrEn	RvsDr	Thr[1:0]
		OpenLC	Curr[1:0]	OpLCurrRt[2:0]			BrkDoneThr[2:0]		
CONFIG4 <sup>(4)</sup>	0x93	Reserved	AccelRange Sel		StAccel2[2:0]		StAccel[2:0]		
			(	Op2ClsThr[4:0	)]			AlignTime[2:0	]
CONFIG5 <sup>(4)</sup>	0x94	OTWarning	_ILimit[1:0]	LockEn5	LockEn4	LockEn3	LockEn2	LockEn1	LockEn0
			SwILimit[3:0]		HwILimit[2:0]			IPDasHwILi mit	
CONFIG6 <sup>(4)</sup>	0x95	SpdCtlrMd	PWMFreq	KtLck1	[hr[1:0]	AvSIndEn	AVSMEn	AVSMMd	IPDRIsMd
		CLoopDis				DutyCycleLimit[1:0] SlewRate[1:		ate[1:0]	
CONFIG7 <sup>(4)</sup>	0x96	IPDAdvo	cAg[1:0]					IPDC	lk[1:0]
		Reserved	CtrlCo	ef[1:0]			DeadTime[4:0	]	

(4) EEPROM

Texas Instruments

ADDRESS	DEFAULT VALUE
0x90	0xC000
0x91	0x0049
0x92	0x00C1
0x93	0x3788
0x94	0x3BAF
0x95	0x7840
0x96	0x007A

#### 表 9. Default EEPROM Values

#### 8.5.3 Register Descriptions

201000000000000000000000000000000000000								
ACCESS TYPE	CODE DESCRIP							
READ TYPE								
R	R	Read						
WRITE TYPE								

#### 表 10. Access Type Codes

R	R	Read
WRITE TYPE		
W	W	Write
W1C	W 1C	Write 1 to clear
RESET OR DE	FAULT VALUE	
-n		Value after reset or the default value

# 8.5.3.1 FaultReg Register (address = 0x00) [reset = 0x00]

### 図 46. FaultReg Register

15	14	13	12	11	10	9	8
OverTemp	TempWarning	VCC_OV	VREG_OC	OverCurr	CP_UVLO	VREG_UVLO	VCC_UVLO
R/W1C-0	R//W1C-0	R/W1C-0	R/W1C-0	R/W1C-0	R/W1C-0	R/W1C-0	R/W1C-0
7	6	5	4	3	2	1	0
V3P3_UVLO	Reserved	Lock5	Lock4	Lock3	Lock2	Lock1	Lock0
R/W1C-0	R/W1C-0	R/W1C-0	R/W1C-0	R/W1C-0	R/W1C-0	R/W1C-0	R/W1C-0

#### 表 11. FaultReg Register Field Descriptions

Bit	Field	Туре	Reset	Description
15	OverTemp	R//W1C	0	Bit to indicate device temperature is over the limit.
14	TempWarning	R/W1C	0	Bit to indicate device temperature is over the warning limit.
13	VCC_OV	R/W1C	0	Bit to indicate the supply voltage is above the upper limit.
12	VREG_OC	R/W1C	0	Bit to indicate that the switching regulator is in an overcurrent condition.
11	OverCurr	R/W1C	0	Bit to indicate that an overcurrent event happened.
10	CP_UVLO	R/W1C	0	Bit to indicate that the charge pump is in an undervoltage fault condition.
9	VREG_UVLO	R/W1C	0	Bit to indicate that the switching regulator (VREG) is in an undervoltage fault condition.
8	VCC_UVLO	R/W1C	0	Bit to indicate that the supply ( $V_{CC}$ ) is in an undervoltage fault condition.
7	V3P3_UVLO	R/W1C	0	Bit to indicate that the 3.3 V LDO regulator is in an undervoltage fault condition.
6	Reserved	R/W1C	0	Do not access this bit.

TEXAS INSTRUMENTS

www.tij.co.jp

Bit	Field	Туре	Reset	Description
5	Lock5	R/W1C	0	Stuck in closed loop fault
4	Lock4	R/W1C	0	Stuck in open loop fault
3	Lock3	R/W1C	0	No motor fault
2	Lock2	R/W1C	0	Kt abnormal fault
1	Lock1	R/W1C	0	Speed abnormal fault
0	Lock0	R/W1C	0	Hardware current-limit fault

### 表 11. FaultReg Register Field Descriptions (continued)

## 8.5.3.2 MotorSpeed Register (address = 0x01) [reset = 0x00]

### 図 47. MotorSpeed Register

15	14	13	12	11	10	9	8
MotorSpeed[15]	MotorSpeed[14]	MotorSpeed[13]	MotorSpeed[12]	MotorSpeed[11]	MotorSpeed[10]	MotorSpeed[9]	MotorSpeed[8]
R-0	R-0	R-0	R-0	R-0	R-0	R-0	R-0
7	6	5	4	3	2	1	0
MotorSpeed[7]	MotorSpeed[6]	MotorSpeed[5]	MotorSpeed[4]	MotorSpeed[3]	MotorSpeed[2]	MotorSpeed[1]	MotorSpeed[0]
R-0	R-0	R-0	R-0	R-0	R-0	R-0	R-0

### 表 12. MotorSpeed Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:0	MotorSpeed[15:0]	R	0x00	16-bit value indicating the motor speed. Motor speed in Hz = MotorSpeed[15:0] / 10

#### 8.5.3.3 MotorPeriod Register (address = 0x02) [reset = 0x00]

## 図 48. MotorPeriod Register

15	14	13	12	11	10	9	8
MotorPeriod[15]	MotorPeriod[14]	MotorPeriod[13]	MotorPeriod[12]	MotorPeriod[11]	MotorPeriod[10]	MotorPeriod[9]	MotorPeriod[8]
R-0	R-0	R-0	R-0	R-0	R-0	R-0	R-0
7	6	5	4	3	2	1	0
MotorPeriod[7]	MotorPeriod[6]	MotorPeriod[5]	MotorPeriod[4]	MotorPeriod[3]	MotorPeriod[2]	MotorPeriod[1]	MotorPeriod[0]
R-0	R-0	R-0	R-0	R-0	R-0	R-0	R-0

### 表 13. MotorPeriod Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:0	MotorPeriod[15:0]	R	0x00	16-bit value indicating the motor period. Motor period = MotorPeriod[15:0] × 10 = period in $\mu$ s

## 8.5.3.4 MotorKt Register (address = 0x03) [reset = 0x00]

15	14	13	12	11	10	9	8
MotorKt[15]	MotorKt[14]	MotorKt[13]	MotorKt[12]	MotorKt[11]	MotorKt[10]	MotorKt[9]	MotorKt[8]
R-0	R-0	R-0	R-0	R-0	R-0	R-0	R-0
7	6	5	4	3	2	1	0
MotorKt[7]	MotorKt[6]	MotorKt[5]	MotorKt[4]	MotorKt[3]	MotorKt[2]	MotorKt[1]	MotorKt[0]
R-0	R-0	R-0	R-0	R-0	R-0	R-0	R-0

#### 図 49. MotorKt Register

#### 表 14. MotorKt Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:0	MotorKt[15:0]	R	0x00	16-bit value indicating the motor measured BEMF.constant Ktc (V/Hz) = {MotorKt[15:0]} / 2 / 1090

### 8.5.3.5 MotorCurrent Register (address = 0x04) [reset = 0x00]

#### 図 50. MotorCurrent Register

15	14	13	12	11	10	9	8
Reserved	Reserved	Reserved	Reserved	Reserved	MotorCurrent[1 0]	MotorCurrent[9]	MotorCurrent[8]
R-0	R-0	R-0	R-0	R-0	R-0	R-0	R-0
7	6	5	4	3	2	1	0
MotorCurrent[7]	MotorCurrent[6]	MotorCurrent[5]	MotorCurrent[4]	MotorCurrent[3]	MotorCurrent[2]	MotorCurrent[1]	MotorCurrent[0]
R-0	R-0	R-0	R-0	R-0	R-0	R-0	R-0

#### 表 15. MotorCurrent Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:11	Reserved	R	0	Do not access these bits.
10:0	MotorCurrent[10:0]	R	0x00	11-bit value indicating the motor current. Current (A) = 3 × (MotorCurrent[10:0] 1023) / 2048

#### 8.5.3.6 IPDPosition–SupplyVoltage Register (address = 0x05) [reset = 0x00]

#### ☑ 51. IPDPosition–SupplyVoltage Register

15	14	13	12	11	10	9	8
IPDPosition [7]	IPDPosition [6]	IPDPosition [5]	IPDPosition [4]	IPDPosition [3]	IPDPosition [2]	IPDPosition [1]	IPDPosition [0]
R-0							
7	6	5	4	3	2	1	0
SupplyVoltage[ 7]	SupplyVoltage[ 6]	SupplyVoltage[ 5]	SupplyVoltage[ 4]	SupplyVoltage[ 3]	SupplyVoltage[ 2]	SupplyVoltage[ 1]	SupplyVoltage[ 0]
R-0							

### 表 16. IPDPosition-SupplyVoltage Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:8	IPDPosition [7:0]	R	0x0	8-bit value indicating the estimated motor position during IPD plus the IPD advance angle (see $\frac{1}{8}$ 8)
7:0	SupplyVoltage[7:0]	R	0x0	8-bit value indicating the supply voltage V <sub>POWERSUPPLY</sub> (V) = SupplyVoltage[7:0] × 30 V / 255 For example, SupplyVoltage[7:0] = 0x67, V <sub>POWERSUPPLY</sub> (V) = 0x67 (102) × 30 / 255 = 12 V

### 8.5.3.7 SpeedCmd–spdCmdBuffer Register (address = 0x06) [reset = 0x00]

15	14	13	12	11	10	9	8
SpeedCmd[7]	SpeedCmd[6]	SpeedCmd[5]	SpeedCmd[4]	SpeedCmd[3]	SpeedCmd[2]	SpeedCmd[1]	SpeedCmd[0]
R-0							
7	6	5	4	3	2	1	0
spdCmdBuffer[[							
7]	6]	5]	4]	3]	2]	1]	0]
R-0							

### ☑ 52. SpeedCmd–spdCmdBuffer Register

#### 表 17. SpeedCmd-spdCmdBuffer Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:8	SpeedCmd[7:0]	R		8-bit value indicating the speed command based on analog or PWMin or $I^2C$ . FF indicates 100% speed command.
7:0	spdCmdBuffer[7:0]	R	0x0	8-bit value indicating the speed command after buffer output. FF indicates 100% speed command.

### 8.5.3.8 AnalogInLvI Register (address = 0x07) [reset = 0x00]

#### 図 53. AnalogInLvI Register

15	14	13	12	11	10	9	8
Reserved	Reserved	Reserved	Reserved	Reserved	Reserved	commandSnsA DC[9]	commandSnsA DCt[8]
R-0							
7	6	5	4	3	2	1	0
commandSnsA DC[7]	commandSnsA DC[6]	commandSnsA DC[5]	commandSnsA DC[4]	commandSnsA DC[3]	commandSnsA DC[2]	commandSnsA DC[1]	commandSnsA DC[0]
R-0							

### 表 18. AnalogInLvI Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:10	Reserved	R	0	Do not access these bits.
9:0	commandSnsADC[9:0]	R	0x00	10-bit value indicating the analog speed input converted to a digital word. AnalogSPEED (V) = AnalogInLvI × V3P3 / 1024

### 8.5.3.9 DeviceID–RevisionID Register (address = 0x08) [reset = 0x00]

#### 図 54. DeviceID–RevisionID Register

15	14	13	12	11	10	9	8
DielD[7]	DieID[6]	DieID[5]	DieID[4]	DieID[3]	DieID[2]	DieID[1]	DieID[0]
R-0							
7	6	5	4	3	2	1	0
RevisionID[7]	RevisionID[6]	RevisionID[5]	RevisionID[4]	RevisionID[3]	RevisionID[2]	RevisionID[1]	RevisionID[0]
R-0							



Bit	Field	Туре	Reset	Description
15:8	DielD[7:0]	R	0x0	8-bit unique device identification.
7:0	RevisionID[7:0]	R	0x0	8-bit revision ID for the device $0000 0000 \rightarrow \text{REV A}$ $0000 0001 \rightarrow \text{REV B}$ 

#### 表 19. DeviceID-RevisionID Register Field Descriptions

## 8.5.3.10 Unused Registers (addresses = 0x011 Through 0x2F)

Registers 0x09 through 0x2F are not used.

#### 8.5.3.11 SpeedCtrl Register (address = 0x30) [reset = 0x00]

义	55.	SpeedCtrl	Register
---	-----	-----------	----------

15	14	13	12	11	10	9	8
OverRide	Reserved	Reserved	Reserved	Reserved	Reserved	Reserved	SpeedCtrl[8]
R/W-0	R-0	R-0	R-0	R-0	R-0	R-0	R/W-0
7	6	5	4	3	2	1	0
SpeedCtrl[7]	SpeedCtrl[6]	SpeedCtrl[5]	SpeedCtrl[4]	SpeedCtr[3]	SpeedCtrl[2]	SpeedCtrl[1]	SpeedCtrl[0]
R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0

#### 表 20. SpeedCtrl Register Field Descriptions

Bit	Field	Туре	Reset	Description
15	OverRide	R/W	0	Used to control the SpdCtrl[8:0] bits. If OverRide = 1, the user can write the speed command directly through $I^2C$ .
14:9	Reserved	R	0x0	Do not access these bits.
8:0	SpeedCtrl[8:0]	R/W	0x00	9-bit value used for the motor speed. If OverRide = 1, speed command can be written by the user through $I^2C$ .

## 8.5.3.12 EEPROM Programming1 Register (address = 0x31) [reset = 0x00]

15	14	13	12	11	10	9	8
ENPROGKEY [15]	ENPROGKEY [14]	ENPROGKEY [13]	ENPROGKEY [12]	ENPROGKEY [11]	ENPROGKEY [10]	ENPROGKEY [9]	ENPROGKEY [9]
R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0
7	6	5	4	3	2	1	0
ENPROGKEY [7]	ENPROGKEY [6]	ENPROGKEY [5]	ENPROGKEY [4]	ENPROGKEY [3]	ENPROGKEY [2]	ENPROGKEY [1]	ENPROGKEY [0]
R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0

#### 図 56. EEPROM Programming1 Register

### 表 21. EEPROM Programming1 Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:0	ENPROGKEY[15:0]	R/W	0x00	EEPROM access key 0xCODE $\rightarrow$ access key for customer space; registers 0x90 to 0x96

## 8.5.3.13 EEPROM Programming2 Register (address = 0x32) [reset = 0x00]

#### 357. EEPROM Programming2 Register

15	14	13	12	11	10	9	8
Reserved							
R-0							
7	6	5	4	3	2	1	0
Reserved	eeReadyStatus						
R-0							

#### 表 22. EEPROM Programming2 Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:1	Reserved	R	0x00	Do not access these bits.
0	eeReadyStatus	R	0	EEPROM status bit. 0: EEPROM not ready for read/write access 1: EEPROM ready for read/write access

## 8.5.3.14 EEPROM Programming3 Register (address = 0x33) [reset = 0x00]

### 図 58. EEPROM Programming3 Register

15	14	13	12	11	10	9	8
Reserved							
R-0							
7	6	5	4	3	2	1	0
eeIndAddress [7]	eeIndAddress [6]	eeIndAddress [5]	eeIndAddress [4]	eeIndAddress [3]	eeIndAddress [2]	eeIndAddress [1]	eeIndAddress [0]
R-0							



表 23. EEPROM Programming3 F	Register Field Descriptions
-----------------------------	-----------------------------

Bit	Field	Туре	Reset	Description
15:8	Reserved	R	0x0	Do not access these bits.
7:0	eeIndAddress[7:0]	R	0x0	EEPROM individual access address. Contents of this register define the address of EEPROM for the individual access operation. For example, for writing/reading CONFIG1 in individual access mode happens if eeIndAddress = 0x90.

## 8.5.3.15 EEPROM Programming4 Register (address = 0x34) [reset = 0x00]

15	14	13	12	11	10	9	8
eeIndWData [15]	eeIndWData [14]	eeIndWData [13]	eeIndWData [12]	eeIndWData [11]	eeIndWData [10]	eeIndWData[9]	eeIndWData[8]
R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0
7	6	5	4	3	2	1	0
eeIndWData[7]	eeIndWData[6]	eeIndWData[5]	eeIndWData[4]	eeIndWData[3]	eeIndWData[2]	eeIndWData[1]	eeIndWData[0]
R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0

☑ 59. EEPROM Programming4 Register

#### 表 24. EEPROM Programming4 Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:0	eeIndWData[15:0]	R/W	0x00	EEPROM individual access write data Contents of this register are the data to be written to EEPROM of the registers specified by eeIndAddress.

## 8.5.3.16 EEPROM Programming5 Register (address = 0xYY) [reset = 0x00]

#### 図 60. EEPROM Programming5 Register

15	14	13	12	11	10	9	8
Reserved	Reserved	Reserved	ShadowRegEn	Reserved	Reserved	Reserved	eeRefresh
R-0	R-0	R-0	R/W-0	R-0	R-0	R-0	R-0
7	6	5	4	3	2	1	0
Reserved	Reserved	Reserved	Reserved	Reserved	eeWRnEn	eeAccMode[1]	eeAccMode[0]
R-0	R-0	R-0	R-0	R-0	R/W-0	R/W-0	R/W-0

### 表 25. EEPROM Programming5 Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:13	Reserved	R	000	Do not access these bits.
12	ShadowRegEn	R/W	0	<ul> <li>Enable shadow register.</li> <li>0: Shadow register is not used.</li> <li>1: Shadow register values are used for device operation (EEPROM contents are ignored). I<sup>2</sup>C read returns the contents of the shadow registers.</li> </ul>
11:9	Reserved	R	000	Do not access these bits.
8	eeRefresh	R/W	0	EEPROM refresh 0: Normal operation 1: Sync shadow registers with contents of EEPROM.
7:3	Reserved	R	0x0	Do not access these bits.
2	eeWRnEn	R/W	0	EEPROM Write/Read enable 0 : EEPROM read enable 1 : EEPROM write enable

Texas Instruments

www.tij.co.jp

#### 表 25. EEPROM Programming5 Register Field Descriptions (continued)

Bit	Field	Туре	Reset	Description
1:0	eeAccMode[1:0]	R/W	00	EEPROM access mode 00: EEPROM access disabled 01: EEPROM individual access enabled 10: EEPROM mass access enabled 11: Reserved

## 8.5.3.17 EEPROM Programming6 Register (address = 0x36) [reset = 0x00]

#### 図 61. EEPROM Programming6 Register

15	14	13	12	11	10	9	8
eeIndRData[15]	eeIndRData[14]	eeIndRData[13]	eeIndRData[12]	eeIndRData[11]	eeIndRData[10]	eeIndRData[9]	eeIndRData[8]
R-0	R-0	R-0	R-0	R-0	R-0	R-0	R-0
7	6	5	4	3	2	1	0
eeIndRData[7]	eeIndRData[6]	eeIndRData[5]	eeIndRData[4]	eeIndRData[3]	eeIndRData[2]	eeIndRData[1]	eeIndRData[0]
R-0	R-0	R-0	R-0	R-0	R-0	R-0	R-0

### 表 26. EEPROM Programming6 Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:0	eeIndRData[15:0]	R	0x00	EEPROM Individual Access Read Data Contents of this register reflect the value of EEPROM location accessed through the individual read.

### 8.5.3.18 Unused Registers (addresses = 0x37 Through 0x5F)

Registers 0x37 through 0x5F are not used.

### 8.5.3.19 EECTRL Register (address = 0x60) [reset = 0x00]

#### 図 62. EECTRL Register

15	14	13	12	11	10	9	8
MTR_DIS	Reserved						
W-0	R-0						
7	6	5	4	3	2	1	0
Reserved							
R-0							

#### 表 27. EECTRL Register Field Descriptions

Bit	Field	Туре	Reset	Description
15	MTR_DIS	W	0	Control to disable motor operation. For use during EEPROM programming. This bit is write-only (cannot be read). 0: Motor control is enabled. 1: Motor control is disabled.
14:0	Reserved	R	0x00	Reserved

### 8.5.3.20 Unused Registers (addresses = 0x61 Through 0x8F)

Registers 0x61 through 0x8F are not used.

# 8.5.3.21 CONFIG1 Register (address = 0x90) [reset = 0x00]

15	14	13	12	11	10	9	8
SSMConfig[1]	SSMConfig[0]	FGOLSel[1]	FGOLSel[0]	FGCycle[3]	FGCycle[2]	FGCycle[1]	FGCycle[0]
R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0
7	6	5	4	3	2	1	0
7 ClkCycleAdjust	6 RMShift[2]	5 RMShift[1]	4 RMShift[0]	3 RMValue[3]	2 RMValue[2]	1 RMValue[1]	0 RMValue[0]

図 63. CONFIG1 Register

# 表 28. CONFIG1 Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:14	SSMConfig[1:0]	R/W	00	Spread spectrum modulation control 00: No spread spectrum 01: ±5% dithering 1:0: ±10% dithering 11: ±15% dithering
13:12	FGOLSel[1:0]	R/W	00	FG open-loop output select 00: FG outputs in both open loop and closed loop 01: FG outputs only in closed loop 10: FG outputs closed loop and the first open loop 11: Reserved
11:8	FGCycle[3:0]	R/W	0x0	FG motor pole option n: FG output is electrical speed / (n + 1) 0: FG / 1 (2 pole) 1: FG / 2 (4 pole) 2: FG / 3 (6 pole) 3: FG / 4 (8 pole)  15: FG / 16 (32 pole)
7	ClkCycleAdjust	R/W	0	0: Full-cycle adjust 1: Half-cycle adjust
6:4	RMShift[2:0]	R/W	000	Number of shift bits to determine the motor phase resistance. $R_{PH\_CT} = RmValue << RmShift$ $R_{PH\_CT}' = (bin) \{RPhase / 0.009615\}$ After calculating $R_{PH\_CT}'$ value, split the value with shift number and significant number according the length of the $R_{PH\_CT}'$ value. If the length of $R_{PH\_CT}'$ is within 4 bits; $RmValue[3:0] = R_{PH\_CT}'$ ; RmShift[2:0] = 000 If the length of $R_{PH\_CT}'$ is 5 bits; $RmValue[3:0] = R_{PH\_CT}'[4:1]$ ; RmShift[2:0] = 001 and so on.
3:0	RMValue[3:0]	R/W	0x0	Significant portion of the motor resistor, used in conjunction with RmShift[2:0]

## 8.5.3.22 CONFIG2 Register (address = 0x91) [reset = 0x00]

# 図 64. CONFIG2 Register

15	14	13	12	11	10	9	8
Reserved	KtShift[2]	KtShift[1]	KtShift[0]	KtValue[3]	KtValue[2]	KtValue[1]	KtValue[0]
R-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0
7	6	5	4	3	2	1	0
CommAdvMod e	TCtrlAdvShift[2]	TCtrlAdvShift[1]	TCtrlAdvShift[0]		TCtrlAdv	/alue[3:0]	
R/W-0	R/W-0	R/W-0	R/W-0		R	-0	

DRV10987 JAJSE49B – AUGUST 2017 – REVISED FEBRUARY 2018



www.tij.co.jp

Bit	Field	Туре	Reset	Description
15	Reserved	R	0	Do not access this bit
14:12	KtShift[2:0]	R/W	000	Number of shift bits to determine the motor BEMF constant. Kt = KtValue << KtShift
11:8	KtValue[3:0]	R/W	0x0	
7	CommAdvMode	R/W	0	<ul> <li>Commutation advance mode</li> <li>O: Voltage advance is maintained at a fixed time<sup>(1)</sup> relative to the estimated BEMF.</li> <li>1: Voltage advance is maintained at a variable time relative to the estimated BEMF based on: t<sub>adv</sub> = t<sub>setting</sub> × (V<sub>U(BEMF)</sub>) / V<sub>U</sub></li> </ul>
6:4	TCtrlAdvShift[2:0]	R/W	000	Number of shift bits to determine the commutation advance timing t <sub>adv</sub> = TCtrlAdvValue << TCtrlAdvShift
3:0	TCtrlAdvValue[3:0]	R/W	0x0	Commutation advance value.

## 表 29. CONFIG2 Register Field Descriptions

(1) EEPROM

# 8.5.3.23 CONFIG3 Register (address = 0x92) [reset = 0x00]

# 図 65. CONFIG3 Register

15	14	13	12	11	10	9	8
ISDThr[1]	ISDThr[0]	BrkCurThrSel	BEMF_HYS	ISDEn	RvsDrEn	RvsDrThr[1]	RvsDrThr[0]
R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0
7	6	5	4	3	2	1	0
OpenLCurr[1]	OpenLCurr[0]	OpLCurrRt[2]	OpLCurrRt[1]	OpLCurrRt[0]	BrkDoneThr[2]	BrkDoneThr[1]	BrkDoneThr[0]
R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0

# 表 30. CONFIG3 Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:14	ISDThr[1:0]	R/W	00	ISD stationary judgment threshold 00: 6 Hz (80 ms, no zero cross) 01: 3 Hz (160 ms, no zero cross) 10: 1.6 Hz (320 ms, no zero cross) 11: 0.8 Hz (640 ms, no zero cross)
13	BrkCurThrSel	R/W	0	Brake current-level-threshold selection. 0: 24 mA 1: 48 mA
12	BEMF_HYS	R/W	0	0: Low hysteresis for BEMF comparator (approximately 20 mV) 1: High hysteresis for BEMF comparator (approximately 40 mV). See the BEMF COMPARATOR section of Electrical Characteristics.
11	ISDEn	R/W	0	0: Initial speed detect (ISD) disabled 1: ISD enabled
10	RvsDrEn	R/W	0	0: Reverse drive disabled 1: Reverse drive enabled
9:8	RvsDrThr[1:0]	R/W	00	The threshold where device starts to process reverse drive (RvsDr) or brake. 00: 6.3 Hz 01: 13 Hz 10: 26 Hz 11: 51 Hz



		-	-	
Bit	Field	Туре	Reset	Description
7:6	OpenLCurr[1:0]	R/W	00	Open-loop current setting. 00: 0.2 A 01: 0.4 A 10: 0.8 A 11: 1.6 A Align current setting. 00: 0.15 A 01: 0.3 A 10: 0.6 A 11: 1.2 A
5:3	OpLCurrRt[2:0]	R/W	000	$\begin{array}{l} \mbox{Open-loop current ramp-up setting.} \\ 000: 6 \ V_{CC}/s \\ 001: 3 \ V_{CC}/s \\ 010: 1.5 \ V_{CC}/s \\ 011: 0.7 \ V_{CC}/s \\ 100: 0.34 \ V_{CC}/s \\ 101: 0.16 \ V_{CC}/s \\ 110: 0.07 \ V_{CC}/s \\ 111: 0.023 \ V_{CC}/s \end{array}$
2:0	BrkDoneThr[2:0]	R/W	000	Braking mode setting. 000: No brake (BrkEn = 0) 001: 2.7 s 010: 1.3 s 011: 0.67 s 100: 0.33 s 101: 0.16 s 110: 0.08 s 111: 0.04 s

#### 表 30. CONFIG3 Register Field Descriptions (continued)

## 8.5.3.24 CONFIG4 Register (address = 0x93) [reset = 0x00]

# 図 66. CONFIG4 Register

15	14	13	12	11	10	9	8
Reserved	AccelRangeSel	StAccel2[2]	StAccel2[1]	StAccel2[0]	StAccel[2]	StAccel[1]	StAccel[0]
R-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0
7	6	5	4	3	2	1	0
Op2ClsThr[4]	Op2ClsThr[3]	Op2ClsThr[2]	Op2ClsThr[1]	Op2ClsThr[0]	AlignTime[2]	AlignTime[1]	AlignTime[0]
R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0

DRV10987 JAJSE49B – AUGUST 2017 – REVISED FEBRUARY 2018

# NSTRUMENTS

www.tij.co.jp

Texas

Bit	Field	Туре	Reset	Description
15	Reserved	R	0	Do not access this bit
14	AccelRangeSel	R/W	0	Acceleration range selection 0: Fast 1: Slow
13:11	StAccel2[2:0]	R/W	000	Open-loop start-up acceleration (second-order acceleration coefficient) AccelRangeSel = 0; 000: 57 Hz/s <sup>2</sup> AccelRangeSel = 0; 001 = 29 Hz/s <sup>2</sup> AccelRangeSel = 0; 010 = 14 Hz/s <sup>2</sup> AccelRangeSel = 0; 011 = 6.9 Hz/s <sup>2</sup> AccelRangeSel = 0; 100 = 3.3 Hz/s <sup>2</sup> AccelRangeSel = 0; 101 = 1.6 Hz/s <sup>2</sup> AccelRangeSel = 0; 111 = 0.66 Hz/s <sup>2</sup> AccelRangeSel = 0; 111 = 0 Hz/s <sup>2</sup> AccelRangeSel = 0; 111 = 0 Hz/s <sup>2</sup> AccelRangeSel = 1; 000 = 0.22 Hz/s <sup>2</sup> AccelRangeSel = 1; 001 = 0.11 Hz/s <sup>2</sup> AccelRangeSel = 1; 011 = 0.055 Hz/s <sup>2</sup> AccelRangeSel = 1; 011 = 0.027 Hz/s <sup>2</sup> AccelRangeSel = 1; 101 = 0.003 Hz/s <sup>2</sup> AccelRangeSel = 1; 111 = 0 Hz/s <sup>2</sup>
10:8	StAccel[2:0]	R/W	0	Open-loop start-up acceleration (first-order acceleration coefficient) AccelRangeSel = 0; 000 = 76 Hz/s AccelRangeSel = 0; 001 = 38 Hz/s AccelRangeSel = 0; 010 = 19 Hz/s AccelRangeSel = 0; 011 = 9.2 Hz/s AccelRangeSel = 0; 100 = 4.5 Hz/s AccelRangeSel = 0; 101 = 2.1 Hz/s AccelRangeSel = 0; 110 = 0.9 Hz/s AccelRangeSel = 0; 111 = 0.3 Hz/s AccelRangeSel = 1; 000 = 4.8 Hz/s AccelRangeSel = 1; 001 = 2.4 Hz/s AccelRangeSel = 1; 001 = 1.2 Hz/s AccelRangeSel = 1; 010 = 1.2 Hz/s AccelRangeSel = 1; 011 = 0.58 Hz/s AccelRangeSel = 1; 101 = 0.13 Hz/s AccelRangeSel = 1; 101 = 0.13 Hz/s AccelRangeSel = 1; 111 = 0.019 Hz/s
7:3	Op2ClsThr[4:0]	R/W	0	Open- to closed-loop threshold 0 xxxx = Range 0: n × 0.8 Hz 0 0000 = N/A 0 0001 = 0.8 Hz 0 0111 = 5.6 Hz 0 1111 = 12 Hz 1 xxxx = Range 1: (n + 1) × 12.8 Hz 1 0000 = 12.8 Hz 1 0001 = 25.6 Hz  1 0111 = 192 Hz 1 1111 = 204.8 Hz
2:0	AlignTime[2:0]	R/W	0	Align time. 000 = 5.3  s 001 = 2.7  s 010 = 1.3  s 011 = 0.67  s 100 = 0.33  s 101 = 0.16  s 110 = 0.08  s 111 = 0.04  s

# 表 31. CONFIG4 Register Field Descriptions

# 8.5.3.25 CONFIG5 Register (address = 0x94) [reset = 0x00]

15	14	13	12	11	10	9	8
OTWarning Limit[1]	OTWarning Limit[0]	LockEn5	LockEn4	LockEn3	LockEn2	LockEn1	LockEn0
R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0
7	6	5	4	3	2	1	0
SWiLimitThr [3]	SWiLimitThr [2]	SWiLimitThr [1]	SWiLimitThr [0]	HWiLimitThr [2]	HWiLimitThr [1]	HWiLimitThr [0]	<b>IPDasHwILimit</b>
R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0

表 32. CONFIG5 Register Field Descriptions

# 図 67. CONFIG5 Register

Bit	Field	Туре	Reset	Description
15:14	OTWarningLimit[1:0]	R/W	00	Overtemperature warning current limit 00: No temperature-based current-limit function, uses SWILimitThr 01: Limit current to 1 A when overtemperature warning reached 10: Limit current to 1.6 A when overtemperature warning reached 11: Limit current to 2 A when overtemperature warning reached
13	LockEn5	R/W	0	Stuck in closed loop (no zero cross detected). Enabled when high
12	LockEn4	R/W	0	Open loop stuck (no zero cross detected). Enabled when high
11	LockEn3	R/W	0	No motor fault. Enabled when high
10	LockEn2	R/W	0	Abnormal Kt. Enabled when high
9	LockEn1	R/W	0	Abnormal speed. Enabled when high
8	LockEn0	R/W	0	Lock-detection current limit. Enabled when high.
7:4	SWiLimitThr[3:0]	R/W	0x0	Software current limit threshold 0000: No software current limit 0001: 0.2-A current limit 0010 to 1111: n × 0.2 A current limit
3:1	HWiLimitThr[2:0]	R/W	000	HWILimitThr: Current limit for lock detection If IPDasHwILimit = 0 then x00: 2.5 A x01: 1.9 A x10: 1.5 A x11: 0.9 A If IPDasHwILimit = 1 then 000: 0.4 A 001: 0.8 A 010: 1.2 A 011: 1.6 A 100: 2 A 101: 2.4 A 110: 2.8 A 111: 3.2 A
0	IPDasHwILimit	R/W	0	0: Range1 of current limit for lock detection 1: Range2 of current limit for lock detection

# 8.5.3.26 CONFIG6 Register (address = 0x95) [reset = 0x00]

# 図 68. CONFIG6 Register

15	14	13	12	11	10	9	8
SpdCtrlMd	PWMFreq	KtLckThr[1]	KtLckThr[0]	AVSIndEn	AVSMEn	AVSMMd	IPDRIsMd
R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0
7	6	5	4	3	2	1	0
CLoopDis	ClsLpAccel[2]	ClsLpAccel[1]	ClsLpAccel[0]	DutyCycleLimit[ 1]	DutyCycleLimit[ 0]	SlewRate[1]	SlewRate[0]
R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0

# 表 33. CONFIG6 Register Field Descriptions

Bit	Field	Туре	Reset	Description					
15	SpdCtrlMd	R/W	0	Speed input mode 0: Analog input expected at SPEED pin 1: PWM input expected at SPEED pin					
14	PWMFreq	R/W	0	PWM Frequency Control 0: PWM frequency = 25 kHz 1: PWM frequency = 50 kHz					
13:12	KtLckThr[1:0]	R/W	0	Abnormal Kt lock detect threshold 00: Kt_high = $3/2$ Kt. Kt_low = $3/4$ Kt 01: Kt_high = 2Kt. Kt_low = $3/4$ Kt 10: Kt_high = $3/2$ Kt. Kt_low = $1/2$ Kt 11: Kt_high = 2Kt. Kt_low = $1/2$ Kt					
11	AVSIndEn	R/W	0	Inductive AVS enable. Enabled when high					
10	AVSMEn	R/W	0	Mechanical AVS enable. Enabled when high					
9	AVSMMd	R/W	0	Mechanical AVS mode 0: AVS to V <sub>CC</sub> 1: AVS to 24 V					
8	IPDRIsMd	R/W	0	IPD release mode 0: Brake when inductive release 1: Hi-z when inductive release					
7	CLoopDis	R/W	0	0: Transfer to closed loop at Op2CIsThr speed 1: No transfer to closed loop. Keep in open loop					
6:4	ClsLpAccel[2:0]	R/W	0	Closed-loop accelerate 000: Immediate change 001: 48 $V_{CC}/s$ 010: 48 $V_{CC}/s$ 011: 0.77 $V_{CC}/s$ 100: 0.37 $V_{CC}/s$ 101: 0.19 $V_{CC}/s$ 110: 0.091 $V_{CC}/s$ 111: 0.045 $V_{CC}/s$					
3:2	DutyCycleLimit[1:0]	R/W	0	<ul> <li>Minimum duty-cycle limit</li> <li>00: Linear down to 5%, then holds at 5% until duty command is</li> <li>1.5%; 0% for duty command below 1.5%.</li> <li>01: Linear down to 10%, then holds at 10% until duty command is</li> <li>1.5%; 0% for duty command below 1.5%.</li> <li>10: Linear down to 5%, then holds at 5% until duty command is</li> <li>1.5%; 100% for duty command below 1.5%.</li> <li>11: Linear down to 10%, then holds at 10% until duty command is</li> <li>1.5%; 100% for duty command below 1.5%.</li> </ul>					
1:0	SlewRate[1:0]	R/W	0	Slew-rate control for phase node 00: Typical slew rate for V <sub>CC</sub> at 12 V = 35 V/ $\mu$ s 01: Typical slew rate for V <sub>CC</sub> at 12 V = 50 V/ $\mu$ s 10: Typical slew rate for V <sub>CC</sub> at 12 V = 80 V/ $\mu$ s 11: Typical slew rate for V <sub>CC</sub> at 12 V = 120 V/ $\mu$ s					

# 8.5.3.27 CONFIG7 Register (address = 0x96) [reset = 0x00]

15	14	13	12	11	10	9	8
IPDAdvcAg[1]	IPDAdvcAg[0]	IPDCurrThr[3]	IPDCurrThr[2]	IPDCurrThr[1]	IPDCurrThr[0]	IPDClk[1]	IPDClk[0]
R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0
7	6	5	4	3	2	1	0
Reserved	CtrlCoef[1]	CtrlCoef[0]	DeadTime[4]	DeadTime[3]	DeadTime[2]	DeadTime[1]	DeadTime[0]
R-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0

#### 図 69. CONFIG7 Register

# 表 34. CONFIG7 Register Field Descriptions

Bit	Field	Туре	Reset	Description
15:14	IPDAdvcAg[1:0]	R/W	00	Advance angle after inductive sense. 00: 30 degrees 01: 60 degrees 10: 90 degrees 11: 120 degrees
13:10	IPDCurrThr[3:0]	R/W	0x0	IPD (inductive sense) current threshold 0000: No IPD function. Align and go 0001: 0.4-A current threshold. 0010 to 1111: 0.2 A × (n + 1) current threshold.
9:8	IPDClk[1:0]	R/W	00	Inductive sense clock 00: IPD clock 12 Hz; IPD measurement resolution = 2.56 $\mu$ s 01: IPD clock = 24 Hz; IPD measurement resolution = 1.28 $\mu$ s 10: IPD clock = 47 Hz; IPD measurement resolution = 0.64 $\mu$ s 11: IPD clock = 95 Hz; IPD measurement resolution = 0.32 $\mu$ s
7	Reserved	R	0	Do not access this bit.
6:5	CtrlCoef[1:0]	R/W	00	SCORE control constant 00: 0.25 01: 0.5 10: 0.75 11: 1
4:0	DeadTime[4:0]	R/W	0x0	Driver dead time (n + 1) × 40 ns 40 ns to 1.28 $\mu$ s



## 9 Application and Implementation

#### 注

Information in the following applications sections is not part of the TI component specification, and TI does not warrant its accuracy or completeness. TI's customers are responsible for determining suitability of components for their purposes. Customers should validate and test their design implementation to confirm system functionality.

#### 9.1 Application Information

The DRV10987 device is used in sensorless 3-phase BLDC motor control. The driver provides a high-performance, high-reliability, flexible, and simple solution for appliance, fan, pump, and HVAC applications. The following design shows a common application of the DRV10987 device.

### 9.2 Typical Application

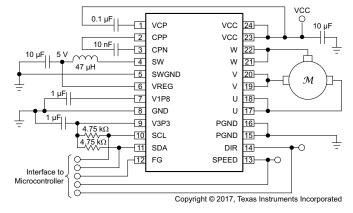


図 70. Typical Application Schematic

### 9.2.1 Design Requirements

表 35 provides design input parameters and motor parameters for system design.



## **Typical Application (continued)**

		MIN	TYP	MAX	UNIT
Motor voltage		6.2	12	28	V
BEMF constant	Phase to phase, measured while motor is coasting	0.001		1.8	V/Hz
Motor phase resistance	1 phase, measured ph-ph and divided by 2	0.3		19	Ω
Motor electrical constant	1 phase; inductance divided by resistance, measured ph-ph is equal to 1 ph	100		5000	μs
Operating closed loop speed	Electrical frequency	1		1000	Hz
Motor winding current (RMS)		0.1		2	А
Absolute maximum current	During start-up or locked condition			3	А

#### 表 35. Recommended Application Range

#### 表 36. External Components

COMPONENT	PIN 1	PIN 2	RECOMMENDED
C <sub>VCC</sub>	V <sub>CC</sub>	GND	10- $\mu$ F ceramic capacitor rated for V <sub>CC</sub>
C <sub>VCP</sub>	VCP	V <sub>CC</sub>	0.1-µF ceramic capacitor rated for 10 V
C <sub>CP</sub>	CPP	CPN	10-nF ceramic capacitor rated for $V_{CC} \times 2$
L <sub>SW-VREG</sub>	SW	VREG	47-µH ferrite inductor with 1.15-A current rating, 1.15-A saturation current, and DC resistance < 1 $\Omega$ (buck mode)
R <sub>SW-VREG</sub>	SW	VREG	39- $\Omega$ series resistor rated for ½ W (linear mode)
C <sub>VREG</sub>	VREG	GND	10-μF ceramic capacitor rated for 10 V
C <sub>V1P8</sub>	V1P8	GND	1-µF ceramic capacitor rated for 5 V
C <sub>V3P3</sub>	V3P3	GND	1-µF ceramic capacitor rated for 5 V
R <sub>SCL</sub>	SCL	V3P3	4.75-kΩ pullup to V3P3
R <sub>SDA</sub>	SDA	V3P3	4.75-kΩ pullup to V3P3
R <sub>FG</sub>	FG	V3P3	4.75-kΩ pullup to V3P3

#### 9.2.2 Detailed Design Procedure

- 1. See the *Design Requirements* section and make sure your system meets the recommended application range.
- 2. See the DRV10983-Q1 Tuning Guide and measure the motor parameters.
- 3. See the *DRV10983-Q1 Tuning Guide*. Configure the parameters using the DRV10987 GUI, and optimize the motor operation. The *Tuning Guide* takes the user through all the configurations step by step, including: start-up operation, closed-loop operation, current control, initial positioning, lock detection, and anti-voltage surge.
- 4. Build the hardware based on Layout Guidelines .
- 5. Connect the device into a system and validate your system solution.


DRV10987

JAJSE49B-AUGUST 2017-REVISED FEBRUARY 2018



www.tij.co.jp

# 9.2.3 Application Curves

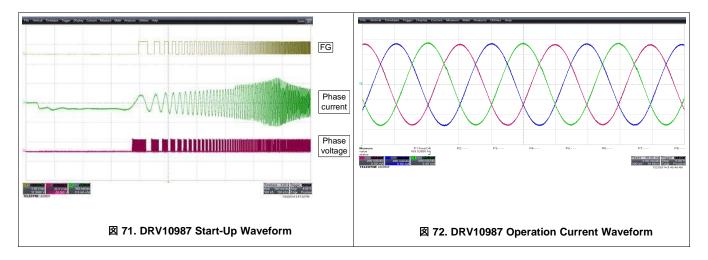



## **10** Power Supply Recommendations

The DRV10987 device is designed to operate from an input voltage supply, V<sub>CC</sub>, in a range between 8 V and 28 V. The user must place a 10- $\mu$ F ceramic capacitor rated for V<sub>CC</sub> as close as possible to the V<sub>CC</sub> and GND pins.

If the power supply ripple is more than 200 mV, in addition to the local decoupling capacitors, a bulk capacitance is required and must be sized according to the application requirements. If the bulk capacitance is implemented in the application, the user can reduce the value of the local ceramic capacitor to 1  $\mu$ F.

# 11 Layout

### 11.1 Layout Guidelines

- Place the V<sub>CC</sub>, GND, U, V, and W pins with thick traces because high current passes through these traces.
- Place the 10- $\mu$ F capacitor between V<sub>CC</sub> and GND, and as close to the V<sub>CC</sub> and GND pins as possible.
- Place the capacitor between CPP and CPN, and as close to the CPP and CPN pins as possible.
- Place the capacitor between V1P8 and GND, and as close to the V1P8 pin as possible.
- Connect GND, PGND, and SWGND under the thermal pad.
- Keep the thermal pad connection as large as possible, on both the bottom side and top sides. It should be one piece of copper without any gaps.

## 11.2 Layout Example

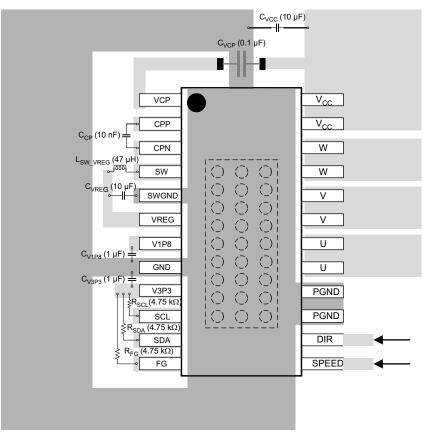


図 73. Layout Diagram

TEXAS INSTRUMENTS

www.tij.co.jp

# 12 デバイスおよびドキュメントのサポート

# 12.1 商標

PowerPAD, E2E are trademarks of Texas Instruments. is a trademark of ~other.

## 12.2 静電気放電に関する注意事項



これらのデバイスは、限定的なESD(静電破壊)保護機能を内 蔵しています。保存時または取り扱い時は、MOSゲートに対す る静電破壊を防 ↓ 止するために、リード線同士をショートさせておくか、デバイスを導電フォームに入れる必要があります。

# 12.3 ドキュメントの更新通知を受け取る方法

ドキュメントの更新についての通知を受け取るには、ti.comのデバイス製品フォルダを開いてください。右上の隅にある「通 知を受け取る」をクリックして登録すると、変更されたすべての製品情報に関するダイジェストを毎週受け取れます。変更の 詳細については、修正されたドキュメントに含まれている改訂履歴をご覧ください。

# 12.4 コミュニティ・リソース

The following links connect to TI community resources. Linked contents are provided "AS IS" by the respective contributors. They do not constitute TI specifications and do not necessarily reflect TI's views; see TI's Terms of Use.

TI E2E™オンライン・コミュニティ TIのE2E(Engineer-to-Engineer)コミュニティ。エンジニア間の共同作 業を促進するために開設されたものです。e2e.ti.comでは、他のエンジニアに質問し、知識を共有 し、アイディアを検討して、問題解決に役立てることができます。

設計サポート *TIの設計サポート* 役に立つE2Eフォーラムや、設計サポート・ツールをすばやく見つけることが できます。技術サポート用の連絡先情報も参照できます。

## 12.5 Glossary

SLYZ022 — TI Glossary.

This glossary lists and explains terms, acronyms, and definitions.

# 13 メカニカル、パッケージ、および注文情報

以降のページには、メカニカル、パッケージ、および注文に関する情報が記載されています。これらの情報は、指定のデバ イスに対して提供されている最新のデータです。このデータは予告なく変更されることがあり、ドキュメントが改訂される場合 もあります。本データシートのブラウザ版を使用されている場合は、画面左側の説明をご覧ください。



## **PACKAGING INFORMATION**

Orderable part number	Status	Material type	Package   Pins	Package qty   Carrier	RoHS	Lead finish/	MSL rating/	Op temp (°C)	Part marking
	(1)	(2)			(3)	Ball material	Peak reflow		(6)
						(4)	(5)		
DRV10987DPWPR	Active	Production	HTSSOP (PWP)   24	2000   LARGE T&R	Yes	NIPDAU	Level-3-260C-168 HR	-40 to 125	10987D
DRV10987DPWPR.A	Active	Production	HTSSOP (PWP)   24	2000   LARGE T&R	Yes	NIPDAU	Level-3-260C-168 HR	-40 to 125	10987D
DRV10987SPWPR	Active	Production	HTSSOP (PWP)   24	2000   LARGE T&R	Yes	NIPDAU	Level-3-260C-168 HR	-40 to 125	10987S
DRV10987SPWPR.A	Active	Production	HTSSOP (PWP)   24	2000   LARGE T&R	Yes	NIPDAU	Level-3-260C-168 HR	-40 to 125	10987S

<sup>(1)</sup> **Status:** For more details on status, see our product life cycle.

(2) Material type: When designated, preproduction parts are prototypes/experimental devices, and are not yet approved or released for full production. Testing and final process, including without limitation quality assurance, reliability performance testing, and/or process qualification, may not yet be complete, and this item is subject to further changes or possible discontinuation. If available for ordering, purchases will be subject to an additional waiver at checkout, and are intended for early internal evaluation purposes only. These items are sold without warranties of any kind.

<sup>(3)</sup> RoHS values: Yes, No, RoHS Exempt. See the TI RoHS Statement for additional information and value definition.

<sup>(4)</sup> Lead finish/Ball material: Parts may have multiple material finish options. Finish options are separated by a vertical ruled line. Lead finish/Ball material values may wrap to two lines if the finish value exceeds the maximum column width.

<sup>(5)</sup> MSL rating/Peak reflow: The moisture sensitivity level ratings and peak solder (reflow) temperatures. In the event that a part has multiple moisture sensitivity ratings, only the lowest level per JEDEC standards is shown. Refer to the shipping label for the actual reflow temperature that will be used to mount the part to the printed circuit board.

<sup>(6)</sup> Part marking: There may be an additional marking, which relates to the logo, the lot trace code information, or the environmental category of the part.

Multiple part markings will be inside parentheses. Only one part marking contained in parentheses and separated by a "~" will appear on a part. If a line is indented then it is a continuation of the previous line and the two combined represent the entire part marking for that device.

Important Information and Disclaimer: The information provided on this page represents TI's knowledge and belief as of the date that it is provided. TI bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. TI has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. TI and TI suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

In no event shall TI's liability arising out of such information exceed the total purchase price of the TI part(s) at issue in this document sold by TI to Customer on an annual basis.




Texas

STRUMENTS

# TAPE AND REEL INFORMATION



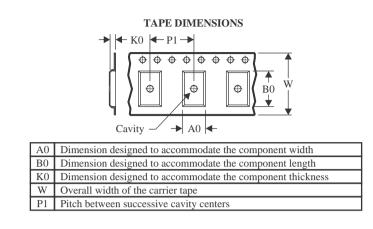

#### QUADRANT ASSIGNMENTS FOR PIN 1 ORIENTATION IN TAPE



*All dimensions are nominal												
Device	0	Package Drawing		SPQ	Reel Diameter (mm)	Reel Width W1 (mm)	A0 (mm)	B0 (mm)	K0 (mm)	P1 (mm)	W (mm)	Pin1 Quadrant
DRV10987DPWPR	HTSSOP	PWP	24	2000	330.0	16.4	6.95	8.3	1.6	8.0	16.0	Q1
DRV10987SPWPR	HTSSOP	PWP	24	2000	330.0	16.4	6.95	8.3	1.6	8.0	16.0	Q1



www.ti.com

# PACKAGE MATERIALS INFORMATION

5-Dec-2023



\*All dimensions are nominal

Device	Package Type	Package Drawing	Pins	SPQ	Length (mm)	Width (mm)	Height (mm)
DRV10987DPWPR	HTSSOP	PWP	24	2000	350.0	350.0	43.0
DRV10987SPWPR	HTSSOP	PWP	24	2000	350.0	350.0	43.0

# **PWP 24**


# **GENERIC PACKAGE VIEW**

PLASTIC SMALL OUTLINE

# PowerPAD<sup>™</sup> TSSOP - 1.2 mm max height

4.4 x 7.6, 0.65 mm pitch

This image is a representation of the package family, actual package may vary. Refer to the product data sheet for package details.

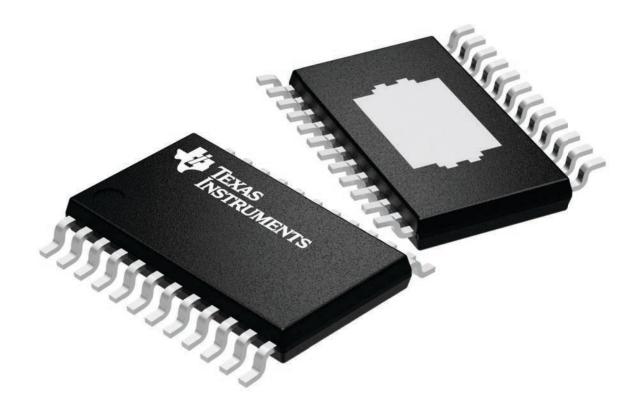




# **PWP0024J**



# **PACKAGE OUTLINE**

# **PowerPAD<sup>™</sup> TSSOP - 1.2 mm max height**

SMALL OUTLINE PACKAGE

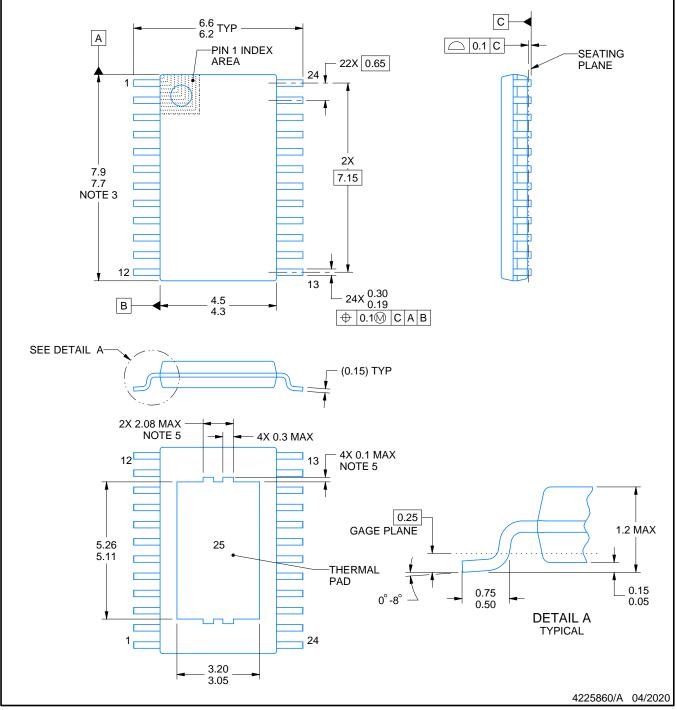

NOTES:

PowerPAD is a trademark of Texas Instruments.

- 1. All linear dimensions are in millimeters. Any dimensions in parenthesis are for reference only. Dimensioning and tolerancing per ASME Y14.5M. 2. This drawing is subject to change without notice. 3. This dimension does not include mold flash, protrusions, or gate burrs. Mold flash, protrusions, or gate burrs shall not

- exceed 0.15 mm per side. 4. Reference JEDEC registration MO-153.
- 5. Features may differ or may not be present.




# **PWP0024J**

# **EXAMPLE BOARD LAYOUT**

# PowerPAD<sup>™</sup> TSSOP - 1.2 mm max height

SMALL OUTLINE PACKAGE

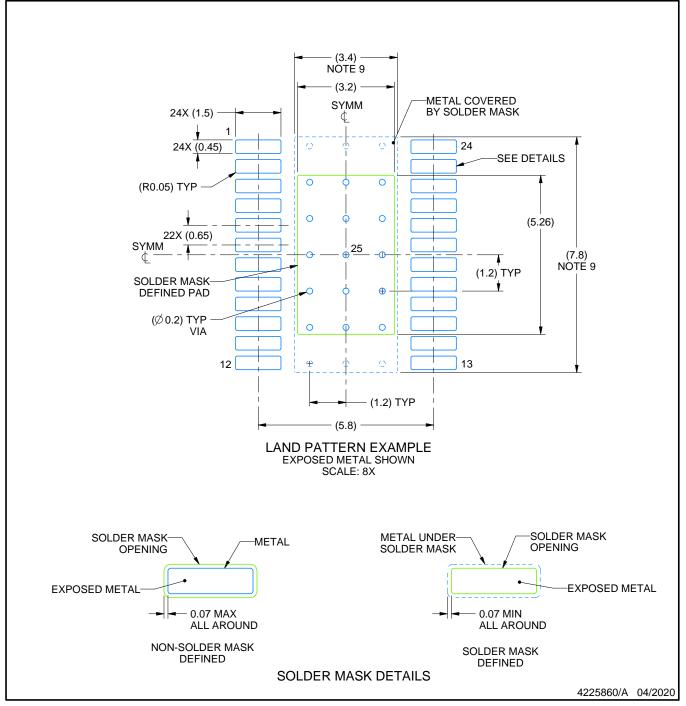

NOTES: (continued)

- 6. Publication IPC-7351 may have alternate designs.
- 7. Solder mask tolerances between and around signal pads can vary based on board fabrication site.
- 8. This package is designed to be soldered to a thermal pad on the board. For more information, see Texas Instruments literature numbers SLMA002 (www.ti.com/lit/slma002) and SLMA004 (www.ti.com/lit/slma004).
- 9. Size of metal pad may vary due to creepage requirement.
- 10. Vias are optional depending on application, refer to device data sheet. It is recommended that vias under paste be filled, plugged or tented.




# **PWP0024J**

# **EXAMPLE STENCIL DESIGN**

# PowerPAD<sup>™</sup> TSSOP - 1.2 mm max height

SMALL OUTLINE PACKAGE

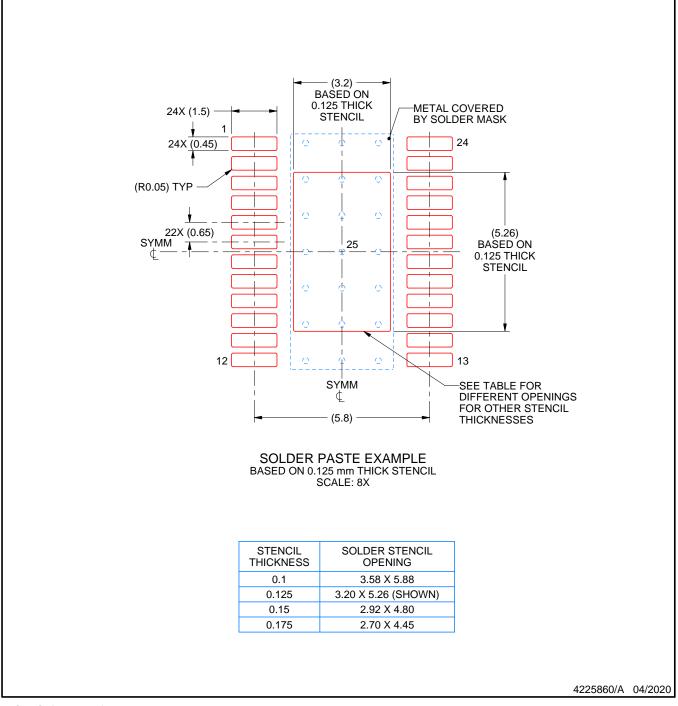

NOTES: (continued)

11. Laser cutting apertures with trapezoidal walls and rounded corners may offer better paste release. IPC-7525 may have alternate design recommendations.

12. Board assembly site may have different recommendations for stencil design.



#### 重要なお知らせと免責事項

テキサス・インスツルメンツは、技術データと信頼性データ (データシートを含みます)、設計リソース (リファレンス デザインを含みま す)、アプリケーションや設計に関する各種アドバイス、Web ツール、安全性情報、その他のリソースを、欠陥が存在する可能性のある 「現状のまま」提供しており、商品性および特定目的に対する適合性の黙示保証、第三者の知的財産権の非侵害保証を含むいかなる保証 も、明示的または黙示的にかかわらず拒否します。

これらのリソースは、 テキサス・インスツルメンツ製品を使用する設計の経験を積んだ開発者への提供を意図したものです。(1) お客様 のアプリケーションに適した テキサス・インスツルメンツ製品の選定、(2) お客様のアプリケーションの設計、検証、試験、(3) お客様の アプリケーションに該当する各種規格や、その他のあらゆる安全性、セキュリティ、規制、または他の要件への確実な適合に関する責任 を、お客様のみが単独で負うものとします。

上記の各種リソースは、予告なく変更される可能性があります。これらのリソースは、リソースで説明されている テキサス・インスツル メンツ製品を使用するアプリケーションの開発の目的でのみ、 テキサス・インスツルメンツはその使用をお客様に許諾します。これらの リソースに関して、他の目的で複製することや掲載することは禁止されています。 テキサス・インスツルメンツや第三者の知的財産権の ライセンスが付与されている訳ではありません。お客様は、これらのリソースを自身で使用した結果発生するあらゆる申し立て、損害、 費用、損失、責任について、 テキサス・インスツルメンツおよびその代理人を完全に補償するものとし、 テキサス・インスツルメンツは 一切の責任を拒否します。

テキサス・インスツルメンツの製品は、 <del>テキサス・インスツルメンツの販売条件</del>、または ti.com やかかる テキサス・インスツルメンツ 製品の関連資料などのいずれかを通じて提供する適用可能な条項の下で提供されています。 テキサス・インスツルメンツがこれらのリソ ースを提供することは、適用される テキサス・インスツルメンツの保証または他の保証の放棄の拡大や変更を意味するものではありませ ん。

お客様がいかなる追加条項または代替条項を提案した場合でも、 テキサス・インスツルメンツはそれらに異議を唱え、拒否します。

郵送先住所:Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2025, Texas Instruments Incorporated