LM5168PEVM EVM User's Guide



ABSTRACT

The LM5168PEVM is a 115-V DC/DC buck regulator that employs synchronous rectification to achieve high conversion efficiency in a small footprint. The EVM operates over a wide input voltage range of 20 V to 115 V (120-V absolute maximum) to provide a regulated 12-V output at up to 0.3 A with a 500-kHz switching frequency. The output voltage has better than 1.5% set-point accuracy and is adjustable using an external resistor divider. The module design uses the LM5168P synchronous buck converter with wide input voltage range, wide duty-cycle range, integrated high-side and low-side power MOSFETs, advanced over-current protection, and precision enable. The LM5168P is rated to operate over a junction temperature range of –40°C to +150°C.

Table 1-1. EVM Configuration

EVM	CONVERTER IC	PACKAGE	
LM5168PEVM	LM5168P	8-pin SO package with PowerPAD™ integrated circuit package (4.89 mm × 3.90 mm)	



Table of Contents

1 General TI High Voltage Evaluation User Safety Guidelines	3
2 EVM Characteristics	5
3 LM5168PEVM Evaluation Module	6
3.1 Quick Start Procedure	6
3.2 Detailed Descriptions	7
4 Schematic	8
5 PCB Lavout	Ç
6 Bill of Materials	11
7 Performance Curves	12
List of Figures	
Figure 3-1. LM5168PEVM Top View	6
Figure 4-1 LM5168PEVM Schematic	

	INSTRUMENT
ademarks	www.ti.co

Figure 5-1. Top Layer	9
Figure 5-2. Mid-Layer 1 Ground Plane	9
Figure 5-3. Mid-Layer 2 Routing	
Figure 5-4. Bottom Layer	10
Figure 7-1. Efficiency	
Figure 7-2. Output Voltage Regulation	
Figure 7-3. Typical Switching Waveform	12
Figure 7-4. Typical Switching Waveform	12
Figure 7-5. Load Transient	12
Figure 7-6. Load Transient	12
List of Tables	
Table 1-1. EVM Configuration	1
Table 2-1. LM5168PEVM Electrical Performance Characteristics	5
Table 6-1 I M5168PEVM Bill of Materials	

Trademarks

PowerPAD™ is a trademark of Texas Instruments.
All trademarks are the property of their respective owners.



1 General TI High Voltage Evaluation User Safety Guidelines



Always follow TI's set-up and application instructions, including use of all interface components within their recommended electrical rated voltage and power limits. Always use electrical safety precautions to help ensure your personal safety and the safety of those working around you. Contact TI's Product Information Center http://support.ti.com for further information.

Save all warnings and instructions for future reference.

Failure to follow warnings and instructions may result in personal injury, property damage, or death due to electrical shock and/or burn hazards.

The term TI HV EVM refers to an electronic device typically provided as an open-framed, unenclosed printed-circuit board assembly. It is intended strictly for use in development laboratory environments, solely for qualified professional users having training, expertise, and knowledge of electrical safety risks in development and application of high-voltage electrical circuits. Any other use and/or application are strictly prohibited by Texas Instruments. If you are not suitably qualified, you should immediately stop from further use of the HV EVM.

Work Area Safety:

- Maintain a clean and orderly work area.
- A qualified observer or observers must be present any time circuits are energized.
- Effective barriers and signage must be present in the area where the TI HV EVM and its interface electronics are energized, indicating operation of accessible high voltages can be present, for the purpose of protecting inadvertent access.
- All interface circuits, power supplies, evaluation modules, instruments, meters, scopes, and other related apparatus used in a development environment exceeding 50 V_{RMS}/75 VDC must be electrically located within a protected Emergency Power Off (EPO) protected power strip.
- Use a stable and non-conductive work surface.
- Use adequately insulated clamps and wires to attach measurement probes and instruments. No freehand testing whenever possible.

Electrical Safety:

As a precautionary measure, it is always a good engineering practice to assume that the entire EVM can have fully accessible and active high voltages.

- De-energize the TI HV EVM and all its inputs, outputs, and electrical loads before performing any electrical or other diagnostic measurements. Confirm that TI HV EVM power has been safely deenergized.
- With the EVM confirmed de-energized, proceed with required electrical circuit configurations, wiring, measurement equipment hook-ups, and other application needs, while still assuming the EVM circuit and measuring instruments are electrically live.
- When EVM readiness is complete, energize the EVM as intended.

WARNING

WARNING: While the EVM is energized, never touch the EVM or its electrical circuits as they could be at high voltages capable of causing electrical shock hazard.



Personal Safety:

 Wear personal protective equipment, for example, latex gloves, safety glasses with side shields, or both, or protect EVM in an adequate lucent plastic box with interlocks from accidental touch.

Limitation for Safe Use:

EVMs are not to be used as all or part of a production unit.

Safety and Precautions

The EVM is designed for professionals who have received the appropriate technical training, and is designed to operate from an AC power supply or a high-voltage DC supply. Please read this user's guide and the safety-related documents that come with the EVM package before operating this EVM.

CAUTION



Do not leave the EVM powered when unattended.

WARNING



Hot surface! Contact may cause burns. Do not touch!

WARNING



High Voltage! Electric shock is possible when connecting board to live wire. Board should be handled with care by a professional.

For safety, use of isolated test equipment with overvoltage and overcurrent protection is highly recommended.

www.ti.com ______ EVM Characteristics

2 EVM Characteristics

Unless otherwise specified, the following conditions apply: $T_A = 25$ °C, $V_{IN} = 24$ V.

Table 2-1. LM5168PEVM Electrical Performance Characteristics

PARAMETER	TEST COND	ITIONS	MIN	TYP	MAX	UNITS
INPUT CHARACTERISTICS		,				
Input voltage range, V _{VIN}	, V _{VIN} EVM input voltage operating range		20	48	115	V
Input voltage turn-on, V _{IN(ON)}				6.0		V
Input voltage turn-off, V _{IN(OFF)}	Adjusted by EN/UVLO resistors		5.6		V	
Input voltage hysteresis, V _{IN(HYS)}			0.4			V
Input current, no load, I _{IN(NL)}	I _{OUT} = 0 A	I _{OUT} = 0 A		29		μA
Input current, disabled, I _{IN(OFF)}	$V_{EN/UVLO}$ = 0 V, no EN V_{IN} = 24 V divider		4		μA	
OUTPUT CHARACTERISTICS		,				
Output voltage, V _{OUT}	V _{IN} = 24 V, I _{OUT} = 0A		12.11		V	
	V _{IN} = 24 V, I _{OUT} = 0.3 A		12.18		V	
Output voltage regulation, ΔV _{OUT}	Load regulation, V _{IN} = 24 V	Load regulation, V _{IN} = 24 V I _{OUT} = 0 A to 0.05 A		70		mV
Output voltage regulation, ΔV _{OUT}	Load regulation, V _{IN} = 24 V	I _{OUT} = 0.05 A to 0.3 A	A 10			
Output voltage regulation, ΔV _{OUT}	Line regulation, I _{OUT} = 0 A	V _{IN} = 24 V to 115 V	7			
Output voltage regulation, ΔV _{OUT}	Line regulation, I _{OUT} = 0.3 A	V _{IN} = 24 V to 115 V	100]	
Maximum output current V_{IN} = 24 V		0.38		А		
Soft-start time, t _{SS}		3.5		ms		
SYSTEM CHARACTERISTICS						
Switching frequency	V _{IN} = 24 V, I _{OUT1} = 0.3 A		505		kHz	
Half-load efficiency	I _{OUT} = 0.15 A	I _{OUT} = 0.15 A		92%		
Full load efficiency		V _{IN} = 24 V		93%		
ruii load ellicielicy	I _{OUT} = 0.3 A	V _{IN} = 60 V		86%		



3 LM5168PEVM Evaluation Module

The LM5168PEVM is configured to deliver a regulated 12-V output, 0.3 A at 500-kHz switching frequency. The LM5168 uses a COT control architecture, with input voltage feed-forward to provide a constant frequency regulator with tightly regulated output voltage. This type of control requires adequate voltage ripple at the FB input to achieve stable regulation. The LM5168PEVM is set up with type III ripple injection to minimize the output voltage ripple while ensuring a stable regulator. The LM5168PEVM also provides the option to use type I or type II ripple injection. See the LM516x-Q1 0.65/0.3-A, 120-V Step-Down Converter W/ Fly-Buck Converter Capability Data Sheet for more information. Figure 3-1 and Figure 4-1 show an overall view of the LM516PEVM and the schematic, respectively.

3.1 Quick Start Procedure

- 1. Connect the input voltage supply to the VIN connector (+ and –).
- 2. Connect the load to the VOUT connector (+ and -).
- 3. Set the input supply voltage to an appropriate level between 20 V to 115 V.
- 4. Turn on the power supply. The EVM powers up and provides V_{OUT} = 12 V.

See Figure 3-1 for the location of the connectors.






Figure 3-1. LM5168PEVM Top View



3.2 Detailed Descriptions

This section describes the connectors and the test points on the EVM and how to properly connect, set up, and use the LM5168PEVM EVM. See Figure 3-1 for location of connectors and jumpers.

VOUT Output voltage of the converter

VOUT screw terminal connector. Apply load to this connector (+ and –). The VOUT test point is

used to monitor output voltage.

GND Ground of the converter

GND and GNDS test points. Used as ground test points for the EVM.

VIN Input voltage to the converter

VIN screw terminal connector. Apply input voltage to this connector (+ and -). The VIN test point is

used to monitor input voltage.

VINEMI Input voltage to input filter of the converter

If there is desire to use the built-in EMI filter on the EVM, then connect the input supply to the

VINEMI screw terminal connector (+ and -).

Input Filter EMI mitigation

An input EMI filter is provided on the EVM. Note L2 and C18 are not populated and must be installed for the EMI filter to operate. Also, note that the maximum input voltage to the filter is 100

 V_{DC} .

EN/UVLO Set EN/UVLO pin options

Use this jumper to enable, disable the EVM. The resistors connected to this pin set the input UVLO thresholds. Input UVLO thresholds are set to approximately 6 V and 5.6 V. These levels can be changed by changing the values of R5 and R7. For external control of the device, these resistors must be removed and the control signal applied to the center pin of the header. Note that for accurate shutdown current measurement, these resistors must also be removed and the EN input (center pin) grounded.

- 1. Jumper open (default setup): Device starts up and shuts down with UVLO.
- 2. Center pin connected to ON: Device starts up and shuts down without UVLO.
- 3. Center pin connected to OFF: Device is off.

PGOOD

Jumper

The PGOOD header used as a test point to monitor the power-good indicator. This flag indicates whether the output voltage has reached its regulation level. PGOOD is an open-drain output that is tied to V_{OUT} through a 100-k Ω , resistor R_{10} .



4 Schematic

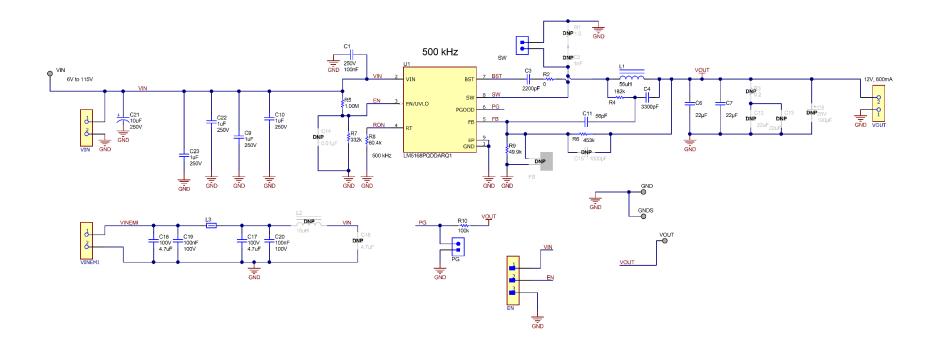


Figure 4-1. LM5168PEVM Schematic



www.ti.com PCB Layout

5 PCB Layout

Figure 5-1 through Figure 5-4 show the board layout for the LM5168PEVM.

The 8-pin SO PowerPAD inegrated circuit package offers an exposed thermal pad, which must be soldered to the copper landing on the PCB for optimal thermal performance. The PCB consists of a 4-layer design. There are 2-oz copper planes on the top and bottom and 1-oz copper mid-layer planes to dissipate heat with an array of thermal vias under the thermal pad to connect to all four layers.

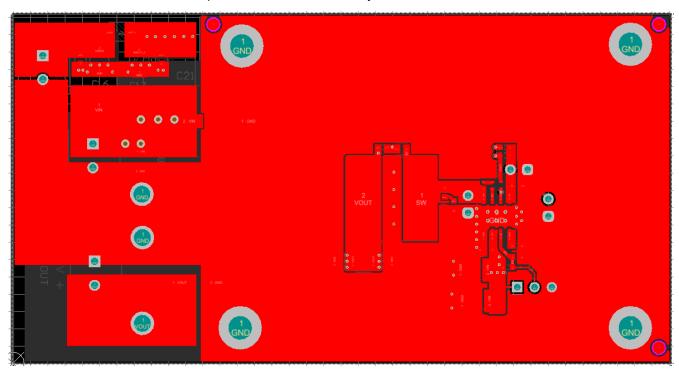


Figure 5-1. Top Layer

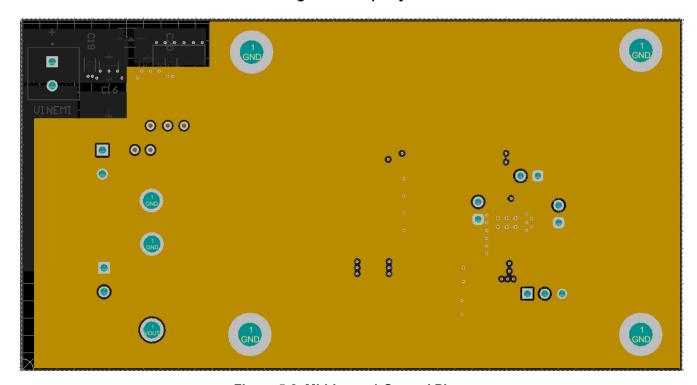


Figure 5-2. Mid-Layer 1 Ground Plane



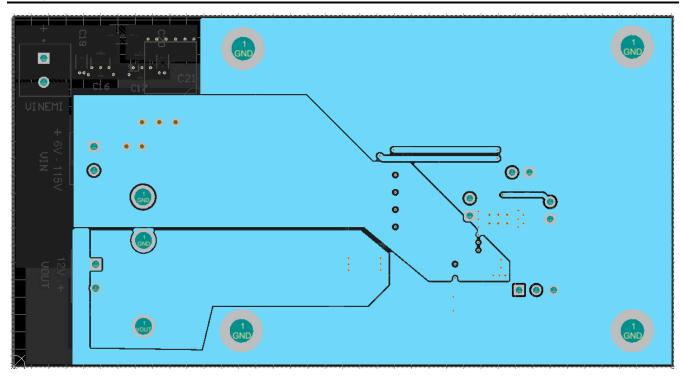


Figure 5-3. Mid-Layer 2 Routing

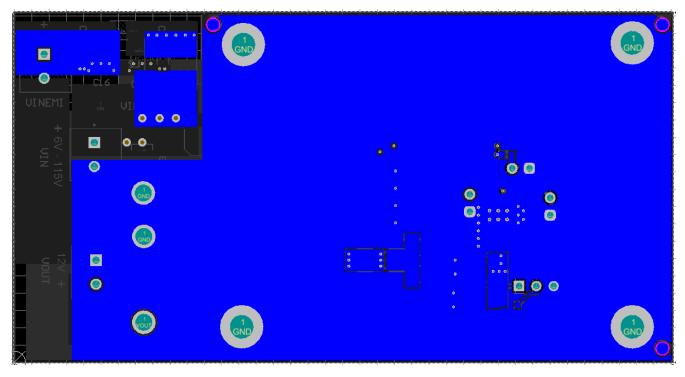


Figure 5-4. Bottom Layer

www.ti.com Bill of Materials

6 Bill of Materials


Table 6-1. LM5168PEVM Bill of Materials

DESIGNATOR	QUANTITY	DESCRIPTION	PART NUMBER	MANUFACTURER
C1	1	0.1 μF ±10% 250V Ceramic Capacitor X7T 0805 (2012 Metric)	C2012X7T2E104K125AE	TDK
C3	1	CAP, CERM, 2200 pF, 50 V, +/- 10%, X7R, AEC- Q200 Grade 1, 0402	GCM155R71H222KA37D	MuRata
C4	1	CAP, CERM, 3300 pF, 100 V, +/- 10%, X7R, AEC- Q200 Grade 1, 0603	CGA3E2X7R2A332K080AA	TDK
C6, C7	2	CAP, CERM, 22 µF, 25 V,+/- 10%, X5R, AEC-Q200 Grade 3, 1210	GRT32ER61E226KE13L	MuRata
C9, C10, C22, C23	4	1 µF ±10% 250V Ceramic Capacitor X7R 1812 (4532 Metric)	1812Y2500105KXTWS2	Knowles Syfer
C11	1	CAP, CERM, 56 pF, 50 V, +/- 5%, C0G/NP0, 0603	C0603C560J5GACTU	Kemet
C16, C17	2	4.7 μF ±10% 100V Ceramic Capacitor X7R 1210 (3225 Metric)	CNC6P1X7R2A475K250AE	TDK
C19, C20	2	Cap Ceramic 100nF 100V X7R ±10% Pad SMD 0603 +125°C T/R	CL10B104KC8NNNC	Samsung
C21	1	10 μF 250 V Aluminum Electrolytic Capacitors Radial, Can - SMD - 4000 Hrs @ 105°C	EEV-EB2E100Q	Panasonic
J1, J6	2	Header, 100mil, 2x1, Gold, TH	TSW-102-07-G-S	Samtec
J2, J3, J7	3		1776112-2	TE Connectivity
J4	1		68001-203HLF	Amphenol ICC
L1	1	Inductor, Shielded Drum Core, Ferrite, 56 uH, 2.01 A, 0.13 ohm, SMD	MSS1246T-563MLB	Coilcraft
L3	1	Ferrite Bead, 2000 ohm @ 100 MHz, 1.2 A, 1210	FBMH3225HM202NT	Taiyo Yuden
R2	1	RES, 0, 5%, 0.063 W, AEC-Q200 Grade 0, 0402	CRCW04020000Z0ED	Vishay-Dale
R4	1	RES Thick Film SMD 182kΩ 1% 1/10W 0603 100ppm/°C	RMCF0603FT182K	Stackpole
R5	1	RES, 1.00 M, 1%, 0.1 W, 0603	RC0603FR-071ML	Yageo
R6	1	CRCW Thick Film Commodity Chip Resistor 0603 Size 453K Ohm 1% 0.1 W 100 ppm/K 2-Pin SMD Paper T/R	CRCW0603453KFKEAC	Vishay
R7	1	RES, 332 k, 1%, 0.1 W, 0603	RC0603FR-07332KL	Yageo
R8	1	RES, 60.4 k, 1%, 0.1 W, 0603	RC0603FR-0760K4L	Yageo
R9	1	RES, 49.9 k, 0.1%, 0.1 W, 0603	RG1608P-4992-B-T5	Susumu Co Ltd
R10	1	RES, 100 k, 1%, 0.1 W, 0402	ERJ-2RKF1003X	Panasonic
TP1	1	Test Lead clips and hooks, SMT	S1751-46	Harwin
TP2, TP3, TP4	3	Terminal, Turret, TH, Triple	1598-2	Keystone
U1	1	0.3-A,120-V, Step-Down Converter with Fly-buck Capability	LM5168PQDDARQ1	Texas Instruments
C2	0	CAP, CERM, 1000 pF, 200 V,+/- 10%, X7R, 0603	GRM188R72D102KW07D	MuRata
C5	0	CAP, AL, 100 µF, 25 V, +/- 20%, SMD	UWT1E101MCL1GS	Nichicon
C12, C13	0	CAP, CERM, 22 uF, 25 V, +/- 10%, X7R, AEC-Q200 Grade 1, 1210	TMK325B7226KMHT	Taiyo Yuden
C14	0	CAP, CERM, 0.01 µF, 100 V,+/- 10%, X8R, AEC- Q200 Grade 0, 0603	CGA3E2X8R2A103K080AD	TDK
C15	0	CAP, CERM, 1000 pF, 50 V, +/- 5%, X7R, AEC- Q200 Grade 1, 0603	C0603C102J5RACAUTO	Kemet
C18	0	CAP, CERM, 4.7 uF, 100 V, +/- 10%, X7S, AEC- Q200 Grade 1, 1210	CGA6M3X7S2A475K200AB	TDK
J5	0	Header, 100mil, 2x1, Gold, TH	TSW-102-07-G-S	Samtec
L2	0	Inductor, Shielded Drum Core, Ferrite, 15 uH, 1.8 A, 0.05 ohm, AEC-Q200 Grade 1, SMD	MSS7341T-153MLB	Coilcraft
R1	0	RES, 1.0, 5%, 0.1 W, AEC-Q200 Grade 0, 0603	CRCW06031R00JNEA	Vishay-Dale
R3	0	RES, 0.2, 1%, 1 W, 2010	CSRN2010FKR200	Stackpole Electronics Inc



7 Performance Curves

Unless otherwise specified the following condition apply: $T_A = 25$ °C, $V_{IN} = 24$ V.

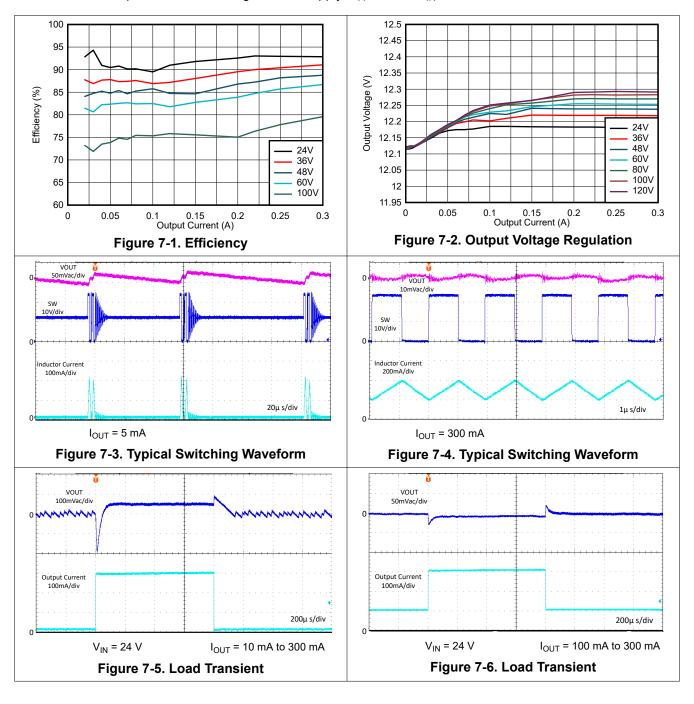

IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATA SHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to TI's Terms of Sale or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

TI objects to and rejects any additional or different terms you may have proposed.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2022, Texas Instruments Incorporated