## User's Guide

# TPS565208 Buck Converter Evaluation Module User's Guide



#### **ABSTRACT**

This user's guide contains information for the TPS565208 as well as support documentation for the TPS565208EVM-858 evaluation module. Included are the performance specifications, schematic, and the bill of materials of the TPS565208EVM-858.

## **Table of Contents**

1 Introduction	2
2 Performance Specification Summary	
3 Modifications	
3.1 Output Voltage Setpoint	
4 Test Setup and Results	
4.1 Input/Output Connections	
4.2 Start-Up Procedure	
4.3 Efficiency	
4.4 Load Regulation	
4.5 Line Regulation	
4.6 Load Transient Response	
4.7 Output Voltage Ripple	
4.8 Input Voltage Ripple	
4.9 Start-Up	
4.10 Shut-Down	
5 Board Layout	11
5.1 Layout	
6 Schematic, Bill of Materials, and Reference	
6.1 Schematic.	
6.2 Bill of Materials	14
6.3 Reference	
7 Revision History	15

#### **Trademarks**

D-CAP2<sup>™</sup> is a trademark of Texas Instruments.

All trademarks are the property of their respective owners.



Introduction www.ti.com

### 1 Introduction

The TPS565208 is a single, adaptive on-time, D-CAP2<sup>™</sup> mode, synchronous buck converter requiring a very low external component count. The D-CAP2 control circuit is optimized for low-ESR output capacitors such as POSCAP, SP-CAP, or ceramic types and features fast transient response with no external compensation. The switching frequency is internally set at a nominal 550 kHz. The high-side and low-side switching MOSFETs are incorporated inside the TPS565208 package along with the gate-drive circuitry. The low drain-to-source on resistance of the MOSFETs allows the TPS565208 to achieve high efficiencies and helps keep the junction temperature low at high output currents. The TPS565208 dc/dc synchronous converter is designed to provide up to a 5-A output from an input voltage source of 4.5 V to 17 V. The output voltage range is from 0.760 V to 7 V. Rated input voltage and output current ranges for the evaluation module are given in Table 1-1.

The TPS565208EVM-858 evaluation module (EVM) is a single, synchronous buck converter providing 1.05 V at 5 A from 4.5-V to 17-V input. This user's guide describes the TPS565208EVM-858 performance.

**Table 1-1. Input Voltage and Output Current Summary** 

EVM	Input Voltage (V <sub>IN</sub> ) Range	Output Current (I <sub>OUT</sub> ) Range		
TPS565208EVM-858	4.5 V to 17 V	0 A to 5 A		



# **2 Performance Specification Summary**

A summary of the TPS565208EVM-858 performance specifications is provided in Table 2-1. Specifications are given for an input voltage of 12 V and an output voltage of 1.05 V, unless otherwise noted. The ambient temperature is 25°C for all measurement, unless otherwise noted.

Table 2-1. TPS565208EVM-858 Performance Specifications Summary

	Specifications	Test Conditions	MIN	TYP	MAX	Unit
V <sub>IN</sub>	Input voltage		4.5	12	17	V
	Output voltage			1.05		V
CH1	Operating frequency	V <sub>IN</sub> = 12 V, I <sub>OUT</sub> = 5 A		550		kHz
	Output current range		0		5	Α
	Overcurrent limit	V <sub>IN</sub> = 12 V, L <sub>OUT</sub> = 2.2 μH		6.8		Α
	Output ripple voltage	V <sub>IN</sub> = 12 V, I <sub>OUT</sub> = 5 A		10		$mV_{PP}$

### 3 Modifications

These evaluation modules are designed to provide access to the features of the TPS565208. Some modifications can be made to this module.

## 3.1 Output Voltage Setpoint

To change the output voltage of the EVMs, it is necessary to change the value of resistor R1. Changing the value of R1 can change the output voltage above 0.760 V. The value of R1 for a specific output voltage can be calculated using Equation 1.

$$R1 = \frac{R2 \times (V_{OUT} - 0.760 \text{ V})}{0.760 \text{ V}}$$
(1)

Table 3-1 lists the R5 values for some common output voltages. Note that the values given in Table 3-1 are standard values and not the exact value calculated using Table 3-1.

Table 3-1. TPS565208EVM-858 Output Voltages

iable o ii ii oooozoozoozoiii ooo oalpat voltagoo							
Output Voltage	R1	R2	L1 (μH)			C5 + C6 +C7 (μF)	
(V)	(kΩ) (kΩ) MIN		MIN	TYP MAX			
1.0	3.09	10.0	1.5	2.2	4.7	20 - 68	
1.05	3.74	10.0	1.5	2.2	4.7	20 - 68	
1.2	5.76	10.0	1.5	2.2	4.7	20 - 68	
1.5	9.53	10.0	1.5	2.2	4.7	20 - 68	
1.8	13.7	10.0	1.5	2.2	4.7	20 - 68	
2.5	22.6	10.0	2.2	2.2	4.7	20 - 68	
3.3	33.2	10.0	2.2	2.2	4.7	20 - 68	
5.0	54.9	10.0	3.3	3.3	4.7	20 - 68	
6.5	75.0	10.0	3.3	3.3	4.7	20 - 68	

www.ti.com Test Setup and Results

## 4 Test Setup and Results

This section describes how to properly connect, set up, and use the TPS565208EVM-858. The section also includes test results typical for the evaluation modules and efficiency, output load regulation, output line regulation, load transient response, output voltage ripple, input voltage ripple, start-up, and switching frequency.

#### 4.1 Input/Output Connections

The TPS565208EVM-858 is provided with input/output connectors and test points as shown in Table 4-1. A power supply capable of supplying 5 A must be connected to J1 through a pair of 20-AWG wires. The load must be connected to J2 through a pair of 20-AWG wires. The maximum load current capability is 5 A. Wire lengths must be minimized to reduce losses in the wires. Test point TP1 provides a place to monitor the  $V_{IN}$  input voltages with TP2 providing a convenient ground reference. TP6 is used to monitor the output voltage with TP7 as the ground reference.

Reference Designator	Function
J1	V <sub>IN</sub> (see Table 1-1 for V <sub>IN</sub> range)
J2	V <sub>OUT</sub> , 1.05 V at 5-A maximum
JP1	EN control. Shunt EN to GND to disable, shunt EN to V <sub>IN</sub> to enable.
TP1	V <sub>IN</sub> positive monitor point
TP2	GND monitor test point
TP3	EN test point
TP4	Switch node test point
TP5	Test point for loop response measurements
TP6	V <sub>OUT</sub> positive monitor point
TP7	GND monitor test point
TP8	GND monitor test point

Table 4-1. Connection and Test Points

## 4.2 Start-Up Procedure

- 1. Ensure that the jumper at JP1 (Enable control) pins 1 and 2 are covered to shunt EN to GND, disabling the output.
- 2. Apply appropriate input voltage to VIN (J1-1) and GND (J1-2).
- 3. Move the jumper at JP1 (Enable control) from pins 1 and 2 (EN and GND), to pins 2 and 3 (EN and  $V_{IN}$ ) enabling the output.

#### 4.3 Efficiency

Figure 4-1 shows the efficiency for the TPS565208EVM-858 at an ambient temperature of 25°C.

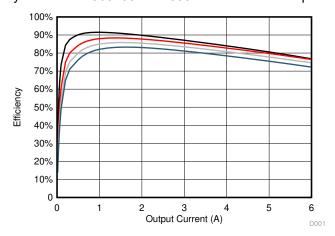


Figure 4-1. Efficiency

Test Setup and Results www.ti.com

## 4.4 Load Regulation

The load regulation for the TPS565208EVM-858 is shown in Figure 4-2.

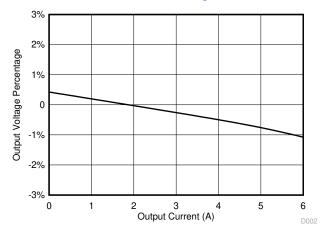


Figure 4-2. Load Regulation

# 4.5 Line Regulation

The line regulation for the TPS565208EVM-858 is shown in Figure 4-3.

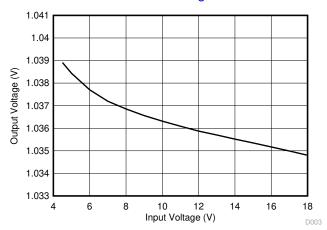


Figure 4-3. Line Regulation

www.ti.com Test Setup and Results

## 4.6 Load Transient Response

The TPS565208EVM-858 response to load transient is shown in Figure 4-4. The current steps and slew rates are indicated in the figures. Total peak-to-peak voltage variation is as shown.

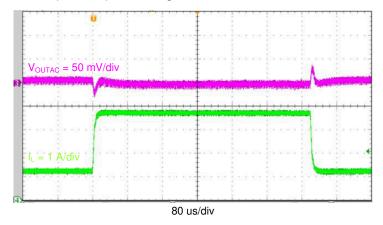


Figure 4-4. TPS565208 Transient Response, 1.25 A to 3.75 A

Test Setup and Results www.ti.com

## 4.7 Output Voltage Ripple

The TPS565208EVM-858 output voltage ripple is shown in Figure 4-5, Figure 4-6, and Figure 4-7. The output currents are as indicated.

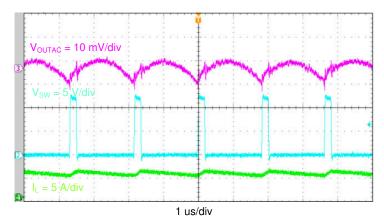


Figure 4-5. TPS565208 Output Voltage Ripple, V<sub>OUT</sub> = 5 A

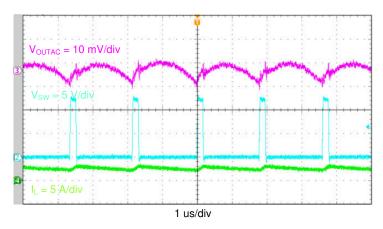


Figure 4-6. TPS565208 Output Voltage Ripple,  $I_{OUT}$  = 2.5 A

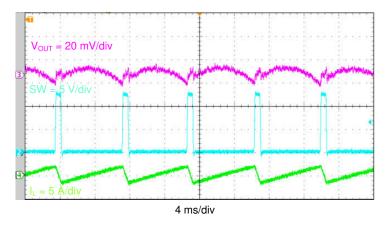


Figure 4-7. TPS565208 Output Voltage Ripple, No Load

## 4.8 Input Voltage Ripple

The TPS565208EVM-858 input voltage ripple is shown in Figure 4-8. The output current is as indicated.

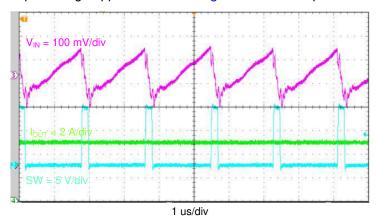


Figure 4-8. TPS565208 Input Voltage Ripple

## 4.9 Start-Up

The TPS565208EVM-858 start-up waveform relative to  $V_{IN}$  is shown in Figure 4-9. Load = 1  $\Omega$  resistive.

The TPS565208EVM-858 start-up waveform relative to enable (EN) is shown in Figure 4-10. Load = 1  $\Omega$  resistive.

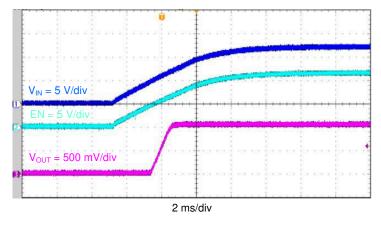


Figure 4-9. Start-Up Relative to  $V_{\text{IN}}$ 

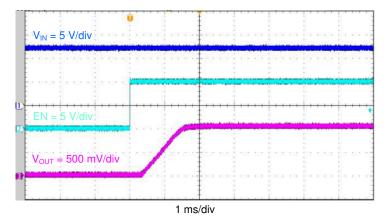


Figure 4-10. TPS565208 Start-Up Relative to EN

Test Setup and Results www.ti.com

#### 4.10 Shut-Down

The TPS565208EVM-858 shut-down waveform relative to  $V_{IN}$  is shown in Figure 4-11. Load = 1  $\Omega$  resistive. The TPS565208EVM-858 shut-down waveform relative to EN is shown in Figure 4-12. Load = 1  $\Omega$  resistive.

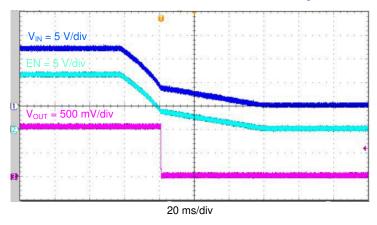


Figure 4-11. TPS565208 Shut-Down Relative to VIN

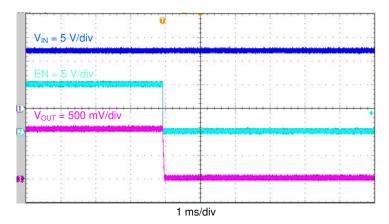


Figure 4-12. TPS565208 Shut-Down Relative to EN

www.ti.com Board Layout

### 5 Board Layout

This section provides a description of the TPS565208EVM-858, board layout, and layer illustrations.

#### 5.1 Layout

The board layout for the TPS565208EVM-858 is shown in Figure 5-1, Figure 5-2, and Figure 5-3. The top layer contains the main power traces for VIN, VOUT, and ground. Also on the top layer are connections for the pins of the TPS565208 and a large area filled with ground. Most of the signal traces are also located on the top side. The input decoupling capacitors, C1, C2, and C3 are located as close to the IC as possible. The input and output connectors, test points, and all of the components are located on the top side. The bottom layer is a ground plane along with the switching node copper fill, signal ground copper fill and the feed back trace from the point of regulation to the top of the resistor divider network.

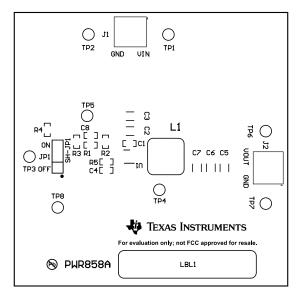


Figure 5-1. Top Assembly

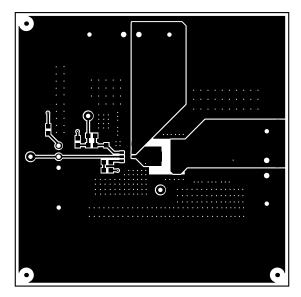


Figure 5-2. Top Layer



Board Layout

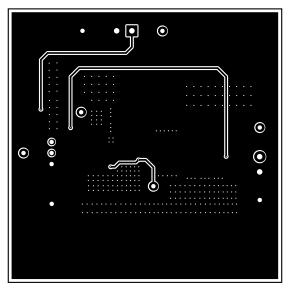


Figure 5-3. Bottom Layer



# 6 Schematic, Bill of Materials, and Reference

This section contains the EVM schematic diagram, the BOM, and links to reference materials.

#### 6.1 Schematic

Figure 6-1 is the schematic for the TPS565208EVM-858.

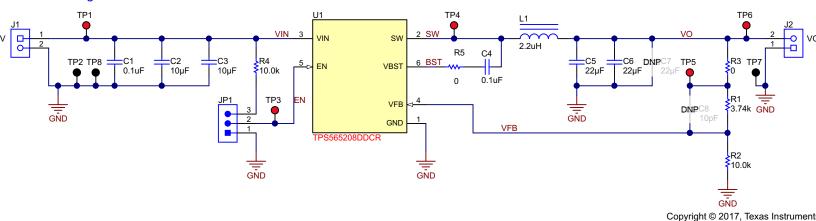


Figure 6-1. TPS565208EVM-858 Schematic Diagram



#### 6.2 Bill of Materials

Table 6-1 lists the EVM bill of materials.

#### Table 6-1. Bill of Materials<sup>(1)</sup>

Designator	Qty	Value	Description	Package Reference	Part Number	Manufacturer	Alternate Part Number	Alternate Manufacturer
!PCB1	1		Printed Circuit Board		PWR858A	Any	-	-
C1, C4	2	0.1uF	CAP, CERM, 0.1uF, 25V, ±10%, X5R, 0603	0603	GRM188R61E104KA01D	MuRata		
C2, C3	2	10uF	CAP, CERM, 10 μF, 25 V,±10%, X5R, 1206	1206	GRM31CR61E106KA12L	MuRata		
C5, C6	2	22uF	CAP, CERM, 22 μF, 10 V,±10%, X7R, 1206	1206	GRM31CR71A226KE15L	MuRata		
J1, J2	2		Terminal Block, 3.5mm Pitch, 2x1, TH	7.0x8.2x6.5mm	ED555/2DS	On-Shore Technology		
JP1	1		Header, 100mil, 3x1, Tin, TH	Header, 3 PIN, 100mil, Tin	PEC03SAAN	Sullins Connector Solutions		
L1	1	2.2uH	Inductor, Shielded Drum Core, Superflux, 2.2 uH, 9 A, 0.0115 ohm, SMD	WE-HC4	744311220	Wurth Elektronik eiSos		
LBL1	1		Thermal Transfer Printable Labels, 1.250" W x 0.250" H - 10,000 per roll	PCB Label 1.25"H x 0.250"W	THT-13-457-10	Brady		
R1	1	3.74k	RES, 3.74k ohm, 1%, 0.1W, 0603	0603	CRCW06033K74FKEA	Vishay-Dale		
R2, R4	2	10.0k	RES, 10.0k ohm, 1%, 0.1W, 0603	0603	CRCW060310K0FKEA	Vishay-Dale		
R3, R5	2	0	RES, 0 ohm, 5%, 0.1W, 0603	0603	ERJ-3GEY0R00V	Panasonic		
SH-JP1	1	1x2	Shunt, 100mil, Gold plated, Black	Shunt	969102-0000-DA	ЗМ	SNT-100-BK-G	Samtec
TP1, TP3, TP4, TP5, TP6	5		Test Point, Miniature, Red, TH	Red Miniature Testpoint	5000	Keystone		
TP2, TP7, TP8	3		Test Point, Miniature, Black, TH	Black Miniature Testpoint	5001	Keystone		
U1	1		4.5V to 17 V Input, 5-A Synchronous Step-Down Voltage Regulator, DDC0006A (SOT-23-T-6)	DDC0006A	TPS565208DDCR	Texas Instruments	TPS565208DDCT	Texas Instruments
C7	0	22uF	CAP, CERM, 22 μF, 10 V,±10%, X7R, 1206	1206	GRM31CR71A226KE15L	MuRata		
C8	0	10pF	CAP, CERM, 10 pF, 100 V, ±5%, C0G/NP0, 0603	0603	GRM1885C2A100JA01D	MuRata		
FID1, FID2, FID3	0		Fiducial mark. There is nothing to buy or mount.	Fiducial	N/A	N/A		

<sup>(1)</sup> Unless otherwise noted in the Alternate Part Number or Alternate Manufacturer columns, all parts may be substituted with equivalents.



## 6.3 Reference

1. TPS565208 4.5-V to 17-V Input, 5-A Synchronous Step-Down Voltage Regulator data sheet (SLVSE72)

## **7 Revision History**

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

C	hanges from Revision * (August 2017) to Revision A (June 2021)	Page
•	Updated the numbering format for tables, figures, and cross-references throughout the document	<mark>2</mark>
•	Updated user's guide title	2

## IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATA SHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to TI's Terms of Sale or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

TI objects to and rejects any additional or different terms you may have proposed.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2022, Texas Instruments Incorporated