

KeyStone Architecture Multichannel Buffered Serial Port (McBSP)

User's Guide



Literature Number: SPRUHH0
May 2012

Preface	8
1 Introduction	10
1.1 Purpose of the Peripheral	11
1.2 Features	11
1.3 Functional Block Diagram	12
1.4 Industry Standard Compliance Statement	12
2 Architecture	13
2.1 Clock Control.....	14
2.2 Signal Descriptions.....	14
2.3 Pin Multiplexing.....	14
2.4 Endianness Considerations.....	14
2.5 Clock, Frames, and Data	14
2.5.1 Frame and Clock Operation	15
2.5.2 Sample Rate Generator Clocking and Framing	16
2.5.3 Data Clock Generation	17
2.5.3.1 Input Clock Source Mode: CLKSM and SCLKME	17
2.5.3.2 Sample Rate Generator Data Bit Clock Rate: CLKGDV	18
2.5.3.3 Bit Clock Polarity: CLKSP.....	18
2.5.3.4 Bit Clock and Frame Synchronization	19
2.5.3.5 Digital Loopback Mode: DLB	20
2.5.3.6 Receive Clock Selection: DLB, CLKRM	21
2.5.3.7 Transmit Clock Selection: CLKXM.....	21
2.5.3.8 Stopping Clocks	21
2.5.4 Frame Sync Generation	22
2.5.4.1 Frame Period (FPER) and Frame Width (FWID)	22
2.5.4.2 Receive Frame Synchronization Selection: DLB and FSRM.....	23
2.5.4.3 Transmit Frame Synchronization Selection: FSXM and FSGM.....	23
2.5.4.4 Frame Detection	24
2.5.5 Data and Frames	24
2.5.5.1 Frame Synchronization Phases	24
2.5.5.2 Frame Length: RFRLN1/2 and XFRLN1/2	25
2.5.5.3 Element Length: RWDLEN1/2 and XWDLEN1/2	25
2.5.5.4 Data Packing Using Frame Length and Element Length	26
2.5.5.5 Data Delay: RDATDLY and XDATDLY	27
2.5.5.6 Receive Data Justification and Sign Extension: RJUST	28
2.5.5.7 32-Bit Reversal: RWDREVRS, XWDREVRS.....	28
2.6 McBSP Buffer FIFO (BFIFO)	28
2.7 McBSP Standard Operation	28
2.7.1 Receive Operation	29
2.7.2 Transmit Operation.....	30
2.7.3 Maximum Frame Frequency	30
2.7.4 Frame Synchronization Ignore.....	31
2.7.4.1 Frame Sync Ignore and Unexpected Frame Sync Pulses.....	31
2.7.4.2 Data Packing using Frame Sync Ignore Bits	32
2.7.5 Serial Port Exception Conditions	33

2.7.5.1	Receive Overrun: RFULL	33
2.7.5.2	Unexpected Receive Frame Synchronization: RSYNCERR	35
2.7.5.3	Transmit With Data Overwrite	36
2.7.5.4	Transmit Empty: XEMPTY	36
2.7.5.5	Unexpected Transmit Frame Synchronization: XSYNCERR.....	37
2.7.6	McBSP Buffer FIFO (BFIFO)	39
2.7.6.1	BFIFO Data Transmission	40
2.7.6.2	BFIFO Data Reception	40
2.7.6.3	Arbitration Between Transmit and Receive DMA Requests.....	41
2.8	μ -Law/A-Law Companding Hardware Operation	41
2.8.1	Companding Internal Data	42
2.8.2	Bit Ordering	42
2.9	Multichannel Selection Modes	43
2.9.1	Channels, Blocks, and Partitions	43
2.9.2	Multichannel Selection	43
2.9.3	Configuring a Frame for Multichannel Selection	43
2.9.4	DX Enabler: DXENA	44
2.9.5	Using Two Partitions	44
2.9.5.1	Assigning Blocks to Partitions A and B	45
2.9.5.2	Reassigning Blocks During Reception/Transmission	46
2.9.6	Using Eight Partitions	47
2.9.7	Receive Multichannel Selection Mode.....	48
2.9.8	Transmit Multichannel Selection Mode	48
2.9.8.1	Disabling/Enabling Versus Masking/Unmasking.....	49
2.9.8.2	Activity on McBSP Pins for Different Values of XMCM	49
2.9.9	Using Interrupts Between Block Transfers	49
2.10	SPI Operation Using the Clock Stop Mode	51
2.11	Resetting the Serial Port: RRST, XRST, GRST, and RESET	51
2.11.1	Software Reset Considerations	51
2.11.2	Hardware Reset Considerations	52
2.12	McBSP Initialization Procedure.....	52
2.12.1	General Initialization Procedure	53
2.12.1.1	General Initialization	53
2.12.2	Special Case: External Device is the Transmit Frame Master	54
2.12.2.1	How to Detect First Frame Sync	54
2.12.2.2	Initialization Procedure When External Device is Frame Sync Master	55
2.13	Interrupt Support	56
2.13.1	Interrupt Events and Requests	56
2.13.1.1	Interrupt Events: RINT and XINT	56
2.13.1.2	Receive Ready Status: RINT and RRDY	56
2.13.1.3	Transmit Ready Status: XINT and XRDY.....	57
2.13.2	Interrupt Multiplexing.....	57
2.14	EDMA Event Support	57
2.14.1	Receive Ready Status: REVT and RRDY	57
2.14.2	Transmit Ready Status: XEVT and XRDY	58
2.15	Power Management.....	59
2.15.1	Clearing the Serial Port Control Register (SPCR)	59
2.16	Emulation Considerations	60
3	Registers	61
3.1	Register Summary	62
3.2	Data Receive Register (DRR)	63
3.3	Data Transmit Register (DXR).....	64
3.4	Serial Port Control Register (SPCR).....	65

3.5	Receive Control Register (RCR)	67
3.6	Transmit Control Register (XCR).....	69
3.7	Sample Rate Generator Register (SRGR)	71
3.8	Multichannel Control Register (MCR).....	72
3.9	Enhanced Receive Channel Enable Registers (RCERE0-RCERE3)	75
3.9.1	RCEREn Used in the Receive Multichannel Selection Mode	76
3.10	Enhanced Transmit Channel Enable Registers (XCERE0-XCERE3)	77
3.10.1	XCERE n Used in the Transmit Multichannel Selection Mode	78
3.11	Pin Control Register (PCR)	79
3.12	BFIFO Revision Identification Register (BFIFOREV).....	81
3.13	Write FIFO Control Register (WFIFOCTL).....	82
3.14	Write FIFO Status Register (WFIFOSTS).....	83
3.15	Read FIFO Control Register (RFIFOCTL)	84
3.16	Read FIFO Status Register (RFIFOSTS)	85

List of Figures

1-1.	McBSP Block Diagram	12
2-1.	Clock and Frame Generation	15
2-2.	Transmit Data Clocking.....	16
2-3.	Receive Data Clocking	16
2-4.	Sample Rate Generator Block Diagram.....	17
2-5.	CLKG Synchronization and FSG Generation When GSYNC = 1 and CLKGDV = 1.....	19
2-6.	CLKG Synchronization and FSG Generation When GSYNC = 1 and CLKGDV = 3.....	20
2-7.	Digital Loopback Mode	20
2-8.	Programmable Frame Period and Width.....	22
2-9.	Dual-Phase Frame Example.....	24
2-10.	Single-Phase Frame of Four 8-Bit Elements	26
2-11.	Single-Phase Frame of One 32-Bit Element.....	26
2-12.	Data Delay	27
2-13.	2-Bit Data Delay Used to Discard Framing Bit	27
2-14.	McBSP Standard Operation	29
2-15.	Receive Operation	29
2-16.	Transmit Operation.....	30
2-17.	Maximum Frame Frequency for Transmit and Receive.....	30
2-18.	Unexpected Frame Synchronization With (R/X)FIG = 0	31
2-19.	Unexpected Frame Synchronization With (R/X)FIG = 1	32
2-20.	Maximum Frame Frequency Operation With 8-Bit Data	32
2-21.	Data Packing at Maximum Frame Frequency With (R/X)FIG = 1	33
2-22.	Serial Port Receive Overrun	34
2-23.	Serial Port Receive Overrun Avoided	34
2-24.	Decision Tree Response to Receive Frame Synchronization Pulse	35
2-25.	Unexpected Receive Frame Synchronization Pulse.....	36
2-26.	Transmit with Data Overwrite.....	36
2-27.	Transmit Empty.....	37
2-28.	Transmit Empty Avoided	37
2-29.	Decision Tree Response to Transmit Frame Synchronization Pulse.....	38
2-30.	Unexpected Transmit Frame Synchronization Pulse	39
2-31.	McBSP Buffer FIFO (BFIFO) Block Diagram	39
2-32.	Companding Flow	41
2-33.	Companding Flow	42
2-34.	Transmit Data Companding Format in DXR	42
2-35.	Companding of Internal Data	42
2-36.	DX Timing for Multichannel Operation.....	44
2-37.	Alternating Between the Channels of Partition A and the Channels of Partition B	46
2-38.	Reassigning Channel Blocks Throughout a McBSP Data Transfer	46
2-39.	McBSP Data Transfer in the 8-Partition Mode	47
2-40.	Activity on McBSP Pins for the Possible Values of XMCM.....	50
3-1.	Data Receive Register.....	63
3-2.	Data Transmit Register.....	64
3-3.	Serial Port Control Register (SPCR).....	65
3-4.	Receive Control Register (RCR)	67
3-5.	Transmit Control Register (XCR).....	69
3-6.	Sample Rate Generator Register (SRGR).....	71

3-7.	Multichannel Control Registers (MCR)	72
3-8.	Enhanced Receive Channel Enable Register n (RCERE n)	75
3-9.	Enhanced Transmit Channel Enable Register n (XCERE n)	77
3-10.	Pin Control Register (PCR)	79
3-11.	BFIFO Revision Identification Register (BFIFOREV)	81
3-12.	Write FIFO Control Register (WFIFOCTL)	82
3-13.	Write FIFO Status Register (WFIFOSTS)	83
3-14.	Read FIFO Control Register (RFIFOCTL)	84
3-15.	Read FIFO Status Register (RFIFOSTS)	85

List of Tables

2-1.	McBSP Interface Signals	14
2-2.	Choosing an Input Clock for the Sample Rate Generator with the SCLKME and CLKSM Bits	17
2-3.	Receive Clock Selection.....	21
2-4.	Transmit Clock Selection	21
2-5.	Receive Frame Synchronization Selection.....	23
2-6.	Transmit Frame Synchronization Selection	23
2-7.	RCR/XCR Fields Controlling Elements per Frame and Bits per Element	24
2-8.	Receive/Transmit Frame Length Configuration	25
2-9.	Receive/Transmit Element Length Configuration	25
2-10.	Effect of RJUST Bit Values With 12-Bit Example Data ABCCh.....	28
2-11.	Effect of RJUST Bit Values With 20-Bit Example Data ABCDEh.....	28
2-12.	Justification of Expanded Data in DRR.....	42
2-13.	Receive Channel Assignment and Control When Two Receive Partitions are Used	45
2-14.	Transmit Channel Assignment and Control When Two Transmit Partitions are Used.....	45
2-15.	Receive Channel Assignment and Control When Eight Receive Partitions are Used	47
2-16.	Transmit Channel Assignment and Control When Eight Transmit Partitions are Used.....	47
2-17.	Selecting a Transmit Multichannel Selection Mode With the XMCM Bits	48
2-18.	Reset State of McBSP Pins.....	51
2-19.	Receiver Clock and Frame Configurations	52
2-20.	Transmitter Clock and Frame Configurations	52
2-21.	McBSP Emulation Modes Selectable With the FREE and SOFT Bits of SPCR	60
3-1.	McBSP Registers.....	62
3-2.	Data Receive Register (DRR) Field Descriptions	63
3-3.	Data Transmit Register (DXR) Field Descriptions	64
3-4.	Serial Port Control Register (SPCR) Field Descriptions	65
3-5.	Receive Control Register (RCR) Field Descriptions	67
3-6.	Transmit Control Register (XCR) Field Descriptions	69
3-7.	Sample Rate Generator Register (SRGR) Field Descriptions.....	71
3-8.	Multichannel Control Register (MCR) Field Descriptions	72
3-9.	Enhanced Receive Channel Enable Register n (RCERE n) Field Descriptions	75
3-10.	Use of the Receive Channel Enable Registers.....	76
3-11.	Enhanced Transmit Channel Enable Register n (XCERE n) Field Descriptions.....	77
3-12.	Use of the Transmit Channel Enable Registers.....	78
3-13.	Pin Control Register (PCR) Field Descriptions	79
3-14.	BFIFO Revision Identification Register (BFIFOREV) Field Descriptions	81
3-15.	Write FIFO Control Register (WFIFOCTL) Field Descriptions	82
3-16.	Write FIFO Status Register (WFIFOSTS) Field Descriptions	83
3-17.	Read FIFO Control Register (RFIFOCTL) Field Descriptions	84
3-18.	Read FIFO Status Register (RFIFOSTS) Field Descriptions.....	85

Preface

About This Manual

This book describes the multichannel buffered serial port (McBSP). See your device-specific data manual to determine how many McBSPs are available on your device.

NOTE: The information in this document should be used in conjunction with information in the device-specific Keystone Architecture data manual that applies to the part number of your device.

⁽¹⁾⁽²⁾Notational Conventions

This document uses the following conventions:

- Commands and keywords are in **boldface** font.
- Arguments for which you supply values are in *italic* font.
- Terminal sessions and information the system displays are in screen font.
- Information you must enter is in **boldface screen font**.
- Elements in square brackets ([]) are optional.

Notes use the following conventions:

NOTE: Means reader take note. Notes contain helpful suggestions or references to material not covered in the publication.

The information in a caution or a warning is provided for your protection. Please read each caution and warning carefully.

CAUTION

Indicates the possibility of service interruption if precautions are not taken.

WARNING

Indicates the possibility of damage to equipment if precautions are not taken.

⁽¹⁾ C6000 is a trademark of Texas Instruments Incorporated.

⁽²⁾ All other trademarks are the property of their respective owners.

Related Documentation from Texas Instruments

The following documents describe the TMS320C66x Digital Signal Processors (DSPs). Copies of these documents are available on the Internet at www.ti.com.

Tip: Enter the literature number in the search box provided at www.ti.com.

<i>C66x CorePac User Guide</i>	SPRUGW0
<i>C66x CPU and Instruction Set Reference Guide</i>	SPRUGH7

Introduction

This book describes the multichannel buffered serial port (McBSP). See your device-specific data manual to determine how many McBSPs are available on your device.

NOTE: The information in this document should be used in conjunction with information in the device-specific Keystone Architecture data manual that applies to the part number of your device.

Topic	Page
1.1 Purpose of the Peripheral.....	11
1.2 Features.....	11
1.3 Functional Block Diagram	12
1.4 Industry Standard Compliance Statement	12

1.1 Purpose of the Peripheral

The multichannel buffered serial port (McBSP) allows direct interface to other TI DSPs, codecs, and other devices in a system. The primary use for the McBSP is for audio interface purposes. The primary audio modes that are supported are the AC97 and IIS modes. In addition to the primary audio modes, the McBSP can be programmed to support other serial formats but is not intended to be used as a high-speed interface.

The McBSP consists of a data path and a control path that connect to external devices. Separate pins for transmission and reception communicate data to these external devices. The CPU communicates to the McBSP using 32-bit-wide control registers accessible via the internal peripheral bus.

1.2 Features

The McBSP provides the following functions:

- Full-duplex communication
- Double-buffered data registers, which allow a continuous data stream
- Independent framing and clocking for receive and transmit
- Direct interface to industry-standard codecs, analog interface chips (AICs), and other serially connected analog-to-digital (A/D) and digital-to-analog (D/A) devices
- External shift clock or an internal, programmable frequency shift clock for data transfer


In addition, the McBSP has the following capabilities:

- Direct interface to:
 - T1/E1 framers
 - MVIP switching compatible and ST-BUS compliant devices including:
 - MVIP framers
 - H.100 framers
 - SCSA framers
 - IOM-2 compliant devices
 - AC97 compliant devices (the necessary multiphase frame synchronization capability is provided)
 - IIS compliant devices
- Multichannel transmit and receive of up to 128 channels
- A wide selection of data sizes, including 8, 12, 16, 20, 24, and 32 bits
- μ -Law and A-Law companding
- 8-bit data transfers with the option of LSB or MSB first
- Programmable polarity for both frame synchronization and data clocks
- Highly programmable internal clock and frame generation
- Additional McBSP Buffer FIFO (BFIFO):
 - Provides additional data buffering
 - Provides added tolerance to variations in host/DMA controller response times
 - May be used as a DMA event pacer
 - Independent Read FIFO and Write FIFO
 - 256 bytes of RAM for each FIFO (read and write)
 - Option to bypass Write FIFO and/or Read FIFO, independently

1.3 Functional Block Diagram

The McBSP consists of a data path and control path, as shown in Figure 1-1.

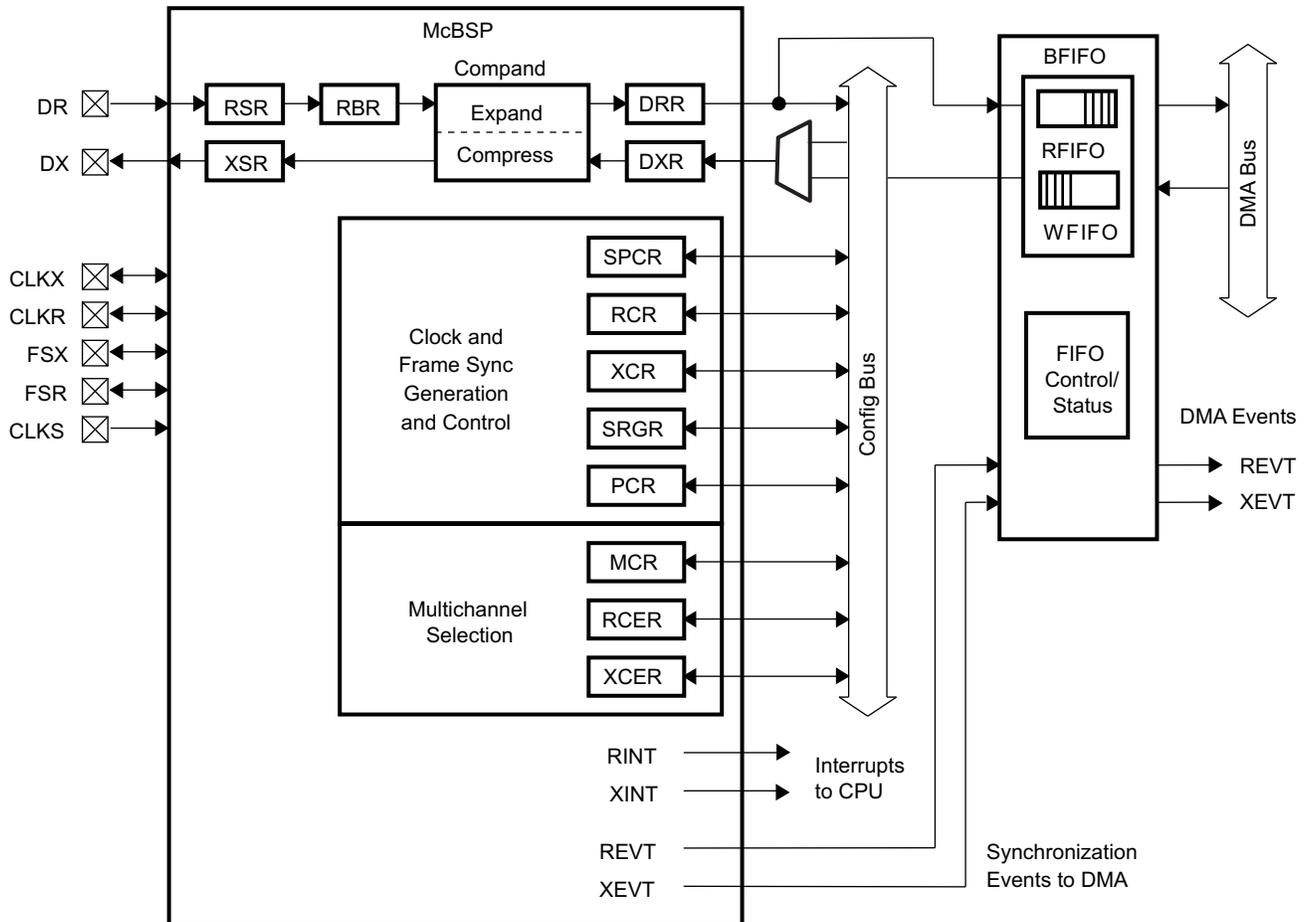Figure 1-1. McBSP Block Diagram



1.4 Industry Standard Compliance Statement

The McBSP supports the following industry standard interfaces:

AC97— The AC97 standard specifies a 5-wire digital serial link between an audio codec device and its digital controller.

IIS— IIS is a protocol for transmitting two channels of digital audio data over a single serial connection. The IIS bus is an industry standard three-wire interface for streaming stereo audio between devices, typically between a CPU/DSP and a DAC/ADC.

Architecture

This section describes the architecture of the McBSP.

Topic	Page
2.1 Clock Control	14
2.2 Signal Descriptions	14
2.3 Pin Multiplexing	14
2.4 Endianness Considerations	14
2.5 Clock, Frames, and Data	14
2.6 McBSP Buffer FIFO (BFIFO).....	28
2.7 McBSP Standard Operation	28
2.8 μ -Law/A-Law Companding Hardware Operation	41
2.9 Multichannel Selection Modes	43
2.10 SPI Operation Using the Clock Stop Mode	51
2.11 Resetting the Serial Port: RRST, XRST, GRST, and RESET	51
2.12 McBSP Initialization Procedure	52
2.13 Interrupt Support.....	56
2.14 EDMA Event Support	57
2.15 Power Management	59
2.16 Emulation Considerations	60

2.1 Clock Control

The McBSP can use an internal or external clock source. Either clock source can be divided-down inside the McBSP to generate the actual interface bit clock frequency. For detailed timing information, see the device-specific data manual. Detailed information about how the interface clock and frame synchronization signals are generated is provided in [Section 2.5](#).

2.2 Signal Descriptions

The signals used on the serial interface are listed in [Table 2-1](#). Refer to the device-specific data manual for the exact signal names.

Table 2-1. McBSP Interface Signals

Pin	I/O/Z	Description
CLKR	I/O/Z	Receive clock -supplies or receives a reference clock for the receiver; or supplies a reference clock to the sample rate generator
CLKS	I	Supplies the input clock of the sample rate generator. Refer to the device --specific data manual for the pin availability
CLKX	I/O/Z	Transmit clock -supplies or receives a reference clock for the transmitter; or supplies a reference clock to the sample rate generator
DR	I	Received serial data
DX	O/Z	Transmitted serial data
FSR	I/O/Z	Receive frame synchronization -control signal to synchronize the start of received data
FSX	I/O/Z	Transmit frame synchronization -control signal to synchronize the start of transmitted data

2.3 Pin Multiplexing

Extensive pin multiplexing is used to accommodate the largest number of peripheral functions in the smallest possible package. Pin multiplexing is controlled using a combination of hardware configuration at device reset and software programmable register settings. Refer to the device-specific data manual to determine how pin multiplexing affects the McBSP.


2.4 Endianness Considerations

There are no endianness considerations for the McBSP.

2.5 Clock, Frames, and Data

The McBSP has several ways of selecting clocking and framing for both the receiver and transmitter. Clocking and framing can be sent to both portions by the sample rate generator. Each portion can select external clocking and/or framing independently. [Figure 2-1](#) is a block diagram of the clock and frame selection circuitry.

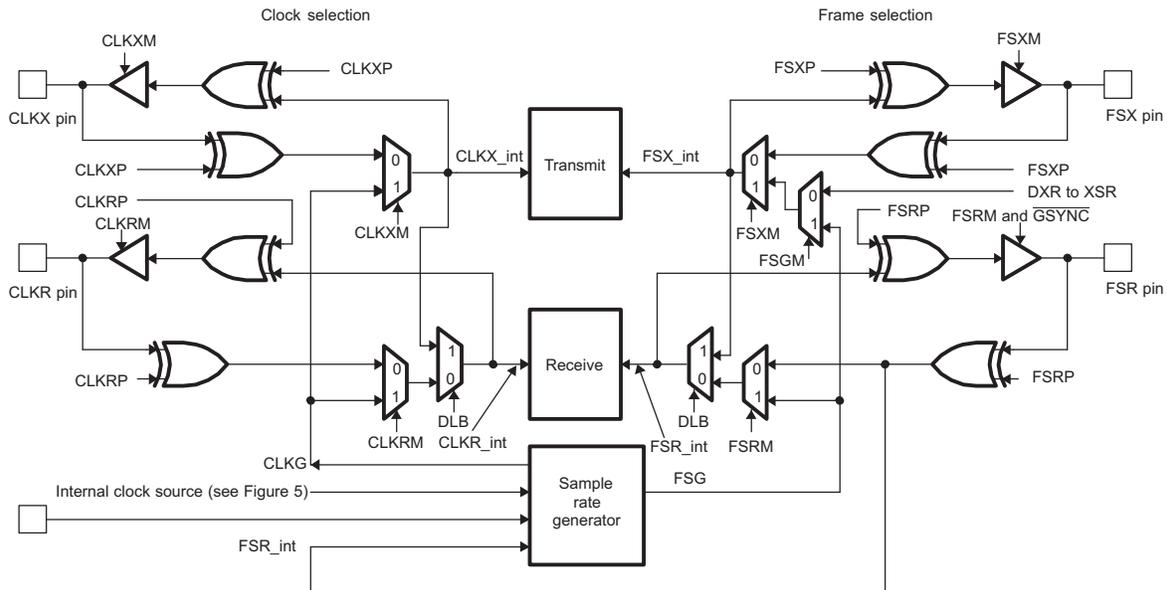Figure 2-1. Clock and Frame Generation



2.5.1 Frame and Clock Operation

Receive and transmit frame sync pulses (FSR/X), and clocks (CLKR/X), can either be generated internally by the sample rate generator (see Section 2.5.2) or be driven by an external source. The source of frame sync and clock is selected by programming the mode bits, FS(R/X)M and CLK(R/X)M respectively, in the pin control register (PCR). FSR is also affected by the GSYNC bit in the sample rate generator register (SRGR), see Section 2.5.4.2 for details.

When FSR and FSX are inputs (FSXM = FSRM = 0), the McBSP detects them on the internal falling edge of clock, CLKR_int and CLKX_int, respectively (see Figure 2-1). The receive data arriving at the DR pin is also sampled on the falling edge of CLKR_int. These internal clock signals are either derived from an external source via the CLK(R/X) pins or driven by the sample rate generator clock (CLKG) internal to the McBSP.



When FSR and FSX are outputs driven by the sample rate generator, they are generated (transition to their active state) on the rising edge of the internal clock, CLK(R/X)_int. Similarly, data on DX is output on the rising edge of CLKX_int.

The FSRP, FSXP, CLKRP, and CLKXP bits in PCR configure the polarities of FSR, FSX, CLKR, and CLKX. All frame sync signals (FSR_int and FSX_int) internal to the serial port are active high. If the serial port is configured for external frame synchronization (FSR/FSX are inputs to the McBSP) and FSRP = FSXP = 1, the external active (low) frame sync signals are inverted before being sent to the receiver signal (FSR_int) and transmitter signal (FSX_int). Similarly, if internal synchronization is selected (FSR/FSX are outputs and GSYNC = 0), the internal active (high) sync signals are inverted if the polarity bit FS(R/X)P = 1, before being sent to the FS(R/X) pin. Figure 2-1 shows this inversion using XOR gates.

On the transmit side, the transmit clock polarity bit, CLKXP, sets the edge used to shift and clock out transmit data. Data is always transmitted on the rising edge of CLKX_int (see Figure 2-2). If CLKXP = 1 and external clocking is selected (CLKXM = 0 and CLKX is an input), the external falling-edge-triggered input clock on CLKX is inverted to a rising-edge-triggered clock before being sent to the transmitter. If CLKXP = 1 and internal clocking is selected (CLKXM = 1 and CLKX is an output pin), the internal (rising-edge-triggered) clock, CLKX_int, is inverted before being sent out on the CLKX pin.

Similarly, the receiver can reliably sample data that is clocked (by the transmitter) with a rising-edge clock. The receive clock polarity bit, CLKRP, sets the edge used to sample received data. The receive data is always sampled on the falling edge of CLKR_int (see [Figure 2-3](#)). Therefore, if CLKRP = 1 and external clocking is selected (CLKRM = 0 and CLKR is an input pin), the external rising-edge triggered input clock on CLKR is inverted to a falling-edge clock before being sent to the receiver. If CLKRP = 1 and internal clocking is selected (CLKRM = 1), the internal falling-edge-triggered clock is inverted to a rising edge before being sent out on the CLKR pin.

In a system where the same clock (internal or external) is used to clock the receiver and transmitter, CLKRP = CLKXP. The receiver uses the opposite edge as the transmitter to ensure valid setup and hold times of data around this edge. [Figure 2-3](#) shows how data clocked by an external serial device using a rising-edge clock can be sampled by the McBSP receiver with the falling edge of the same clock.

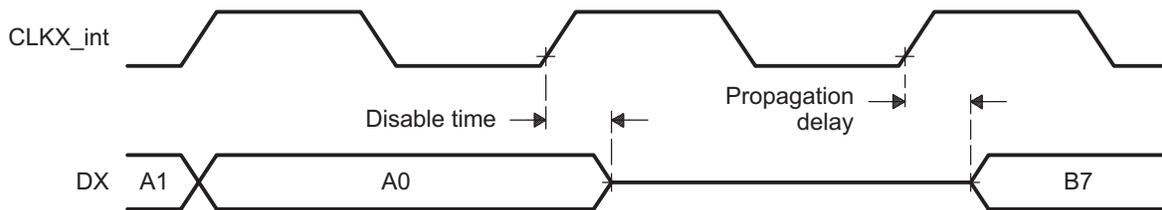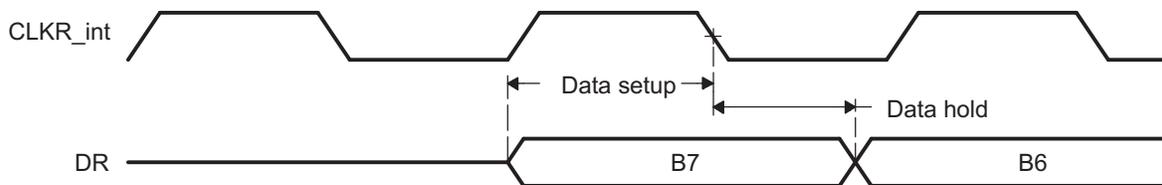Figure 2-2. Transmit Data Clocking

Figure 2-3. Receive Data Clocking


2.5.2 Sample Rate Generator Clocking and Framing


The sample rate generator is composed of a 3-stage clock divider that provides a programmable data clock (CLKG) and framing signal (FSG), as shown in [Figure 2-4](#). CLKG and FSG are McBSP internal signals that can be programmed to drive receive and/or transmit clocking, CLK(R/X), and framing, FS(R/X). The sample rate generator can be programmed to be driven by an internal clock source or an internal clock derived from an external clock source.

The sample rate generator is not used when CLKX, FSX, CLKR, and FSR are driven by an external source. Therefore, the GRST bit in the serial port control register (SPCR) does not need to be enabled (GRST = 1) for this setup. The three stages of the sample rate generator circuit compute:

- Clock divide-down (CLKGDV): The number of input clocks per data bit clock
- Frame period (FPER): The frame period in data bit clocks
- Frame width (FWID): The width of an active frame pulse in data bit clocks

In addition, a frame pulse detection and clock synchronization module allows synchronization of the clock divide-down with an incoming frame pulse. The operation of the sample rate generator during device reset is described in [Section 2.11](#).

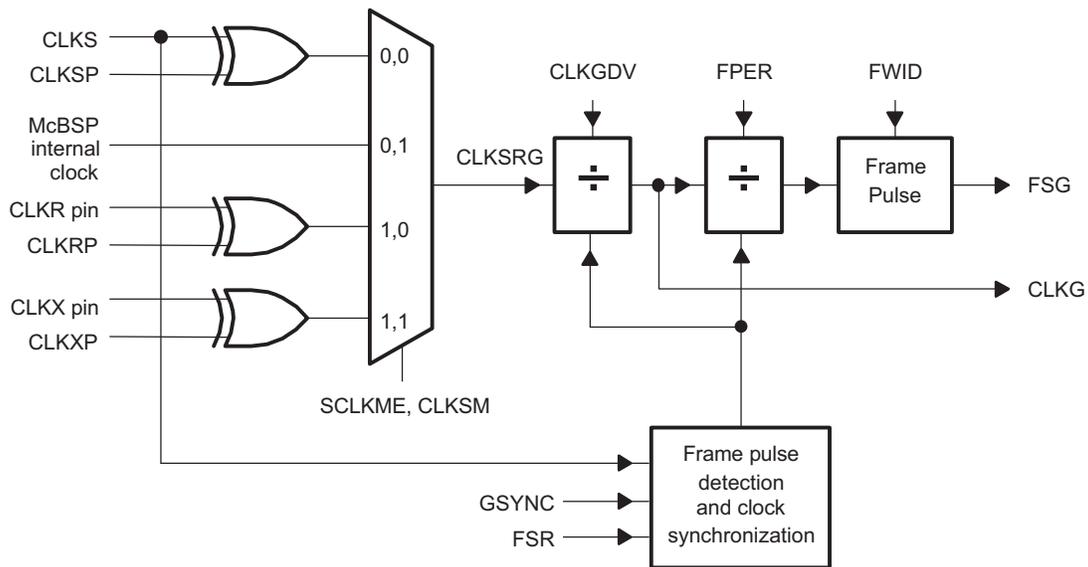Figure 2-4. Sample Rate Generator Block Diagram



2.5.3 Data Clock Generation

When the receive/transmit clock mode is set to 1 (CLK(R/X)M = 1 in the pin control register (PCR)), the data clocks (CLK(R/X)) are driven by the internal sample rate generator output clock, CLKG. You can select for the receiver and transmitter from a variety of data bit clocks including:

- The input clock to the sample rate generator, which can be either the internal clock source or a dedicated external clock source via the CLKX, CLKR, or CLKS pins. Internally, the McBSP clock is selected to be either PLL0_SYSCLK2 or PLL1_SYSCLK2 by configuring the ASYNC3_CLKSRC bit in the chip configuration 3 register (CFGCHIP3) of the System Configuration Module. See [Section 2.5.3.1](#) for details on the source of the McBSP internal clock.
- The input clock source (internal clock source or external clock CLKX/CLKR/CLKS) to the sample rate generator can be divided-down by a programmable value (CLKGDV bit in the sample rate generator register (SRGR)) to drive CLKG.

Regardless of the source to the sample rate generator, the rising edge of CLKSRG (see [Figure 2-4](#)) generates CLKG and FSG.

2.5.3.1 Input Clock Source Mode: CLKSM and SCLKME

The sample rate generator input clock signal can be driven from one of four sources selectable with the SCLKME bit in the pin control register (PCR) and the CLKSM bit in the sample rate generator register (SRGR), see [Table 2-2](#).

Table 2-2. Choosing an Input Clock for the Sample Rate Generator with the SCLKME and CLKSM Bits

SCLKME Bit in PCR	CLKSM Bit in SRGR	Input Clock for Sample Rate Generator
0	0	Signal on CLKS pin
0	1	McBSP internal input clock
1	0	Signal on CLKR pin
1	1	Signal on CLKX pin

2.5.3.2 Sample Rate Generator Data Bit Clock Rate: CLKGDV

The first divider stage generates the serial data bit clock from the input clock. This divider stage uses a counter that is preloaded by the CLKGDV bit in the sample rate generator register (SRGR) and that contains the divide ratio value. The output of this stage is the data bit clock that is output on the sample rate generator output, CLKG, and that serves as the input for the second and third divider stages.

CLKG has a frequency equal to $1/(\text{CLKGDV} + 1)$ of the sample rate generator input clock. Thus, the sample rate generator input clock frequency is divided by a value between 1 to 256. The CLKGDV value chosen must result in a clock that meets the timing requirements/limitations specified in the device-specific data manual.

When CLKGDV is an odd value or equal to 0, the CLKG duty cycle is 50%. Note that an odd CLKGDV value means an even divide down of the source clock and an even CLKGDV value means an odd divide down of the source clock. When CLKGDV is an even value ($2p$), the high state duration is $p + 1$ cycles and the low state duration is p cycles. This is illustrated in [Example 2-1](#), [Example 2-2](#), and [Example 2-3](#).

In the following examples:

$$S_{IN} = \text{sample generator input clock period} \quad (1)$$

$$f_{IN} = \text{sample generator input clock frequency} \quad (2)$$

$$S_G = \text{CLKG period} \quad (3)$$

$$f_G = \text{CLKG frequency} \quad (4)$$

The following equation is given above:

$$f_G = f_{IN} / (\text{CLKGDV} + 1); \text{ therefore, } S_G = (\text{CLKGDV} + 1) \times S_{IN}. \quad (5)$$

Example 2-1. CLKGDV = 0

$$\text{CLKGDV} = 0 \quad (6)$$

$$S_G = (\text{CLKGDV} + 1) \times S_{IN} = (0 + 1) \times S_{IN} = S_{IN} \quad (7)$$

$$\text{Pulse width high} = S_{IN} \times (\text{CLKGDV} + 1) / 2 = S_{IN} \times (0 + 1) / 2 = 0.5 \times S_{IN} \quad (8)$$

$$\text{Pulse width low} = S_{IN} \times (\text{CLKGDV} + 1) / 2 = S_{IN} \times (0 + 1) / 2 = 0.5 \times S_{IN} \quad (9)$$

Example 2-2. CLKGDV = 1

$$\text{CLKGDV} = 1 \quad (10)$$

$$S_G = (\text{CLKGDV} + 1) \times S_{IN} = (1 + 1) \times S_{IN} = 2 \times S_{IN} \quad (11)$$

$$\text{Pulse width high} = S_{IN} \times (\text{CLKGDV} + 1) / 2 = S_{IN} \times (1 + 1) / 2 = S_{IN} \quad (12)$$

$$\text{Pulse width low} = S_{IN} \times (\text{CLKGDV} + 1) / 2 = S_{IN} \times (1 + 1) / 2 = S_{IN} \quad (13)$$

Example 2-3. CLKGDV = 2

$$\text{CLKGDV} = 2 \quad (14)$$

$$S_G = (\text{CLKGDV} + 1) \times S_{IN} = (2 + 1) \times S_{IN} = 3 \times S_{IN} \quad (15)$$

$$\text{Pulse width high} = S_{IN} \times (\text{CLKGDV} / 2 + 1) / 2 = S_{IN} \times (2 / 2 + 1) / 2 = 2 \times S_{IN} \quad (16)$$

$$\text{Pulse width low} = S_{IN} \times \text{CLKGDV} / 2 = S_{IN} \times 2 / 2 = 1 \times S_{IN} \quad (17)$$

2.5.3.3 Bit Clock Polarity: CLKSP

The external clock (CLKS) is selected to drive the sample rate generator clock divider by selecting CLKSM = 0 in the sample rate generator register (SRGR) and SCLKME = 0 in the pin control register (PCR). In this case, the CLKSP bit in SRGR selects the edge of CLKS on which sample rate generator data bit clock (CLKG) and frame sync signal (FSG) are generated. Since the rising edge of CLKSRG generates CLKG and FSG, the rising edge of CLKS when CLKSP = 0 or the falling edge of CLKS when CLKSP = 1 causes the transition on CLKG and FSG.

2.5.3.4 Bit Clock and Frame Synchronization

When the external clock (CLKS) is selected to drive the sample rate generator (CLKSM = 0 in SRGR and SCLKME = 0 in PCR), the GSYNC bit in SRGR can be used to configure the timing of CLKG relative to CLKS. GSYNC = 1 ensures that the McBSP and the external device to which it is communicating are dividing down the CLKS with the same phase relationship. If GSYNC = 0, this feature is disabled and CLKG runs freely and is not resynchronized. If GSYNC = 1, an inactive-to-active transition on FSR triggers a resynchronization of CLKG and the generation of FSG. CLKG always begins at a high state after synchronization. Also, FSR is always detected at the same edge of CLKS that generates CLKG, regardless of the length of the FSR pulse. Although an external FSR is provided, FSG can still drive internal receive frame synchronization when GSYNC = 1. When GSYNC = 1, FPER does not matter, because the frame period is determined by the arrival of the external frame sync pulse.

Figure 2-5 and Figure 2-6 show this operation with various polarities of CLKS and FSR. These figures assume that FWID is 0, for a FSG = 1 CLKG wide.

These figures show what happens to CLKG when it is initially in sync and GSYNC = 1, as well as when it is not in sync with the frame synchronization and GSYNC = 1.

Figure 2-5. CLKG Synchronization and FSG Generation When GSYNC = 1 and CLKGDV = 1

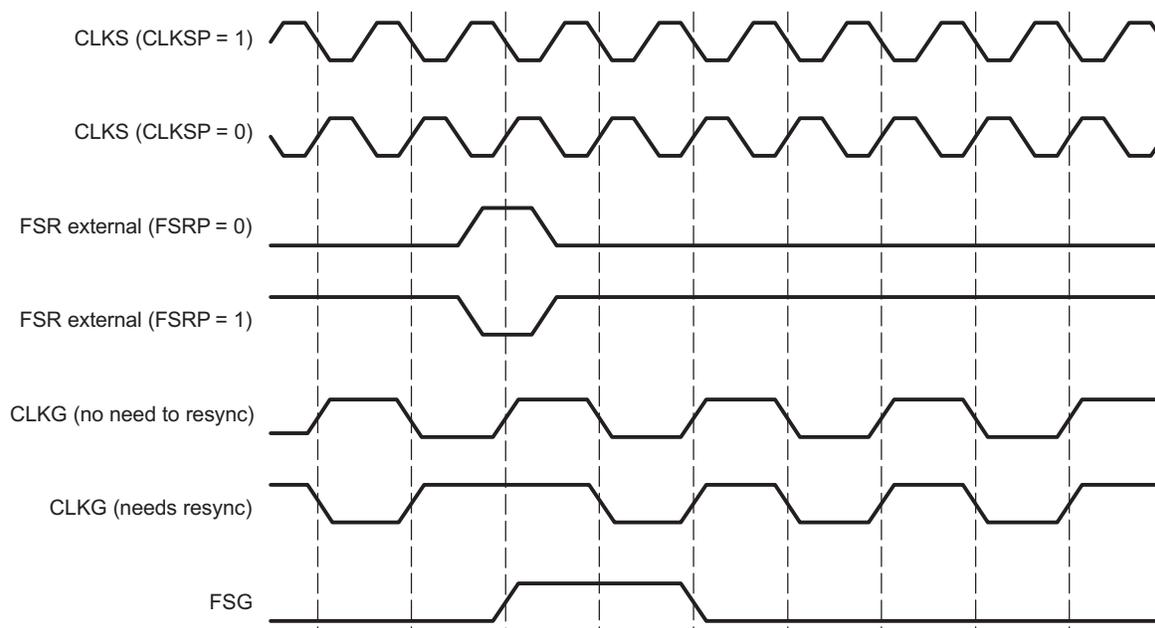
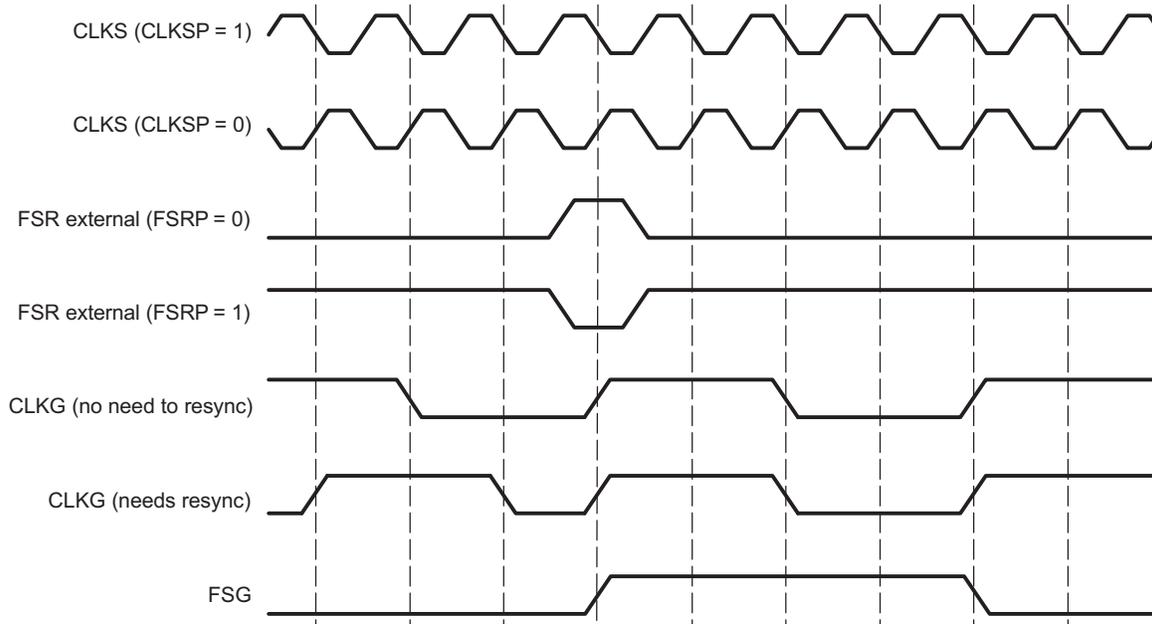



Figure 2-6. CLKG Synchronization and FSG Generation When GSYNC = 1 and CLKGDV = 3


When $GSYNC = 1$, the transmitter can operate synchronously with the receiver, provided that the following conditions are met:

- FSX is programmed to be driven by the sample rate generator frame sync, FSG ($FSGM = 1$ in $SRGR$ and $FSXM = 1$ in PCR).
- The sample-rate generator clock should drive the transmit and receive bit clock ($CLK(R/X)M = 1$ in $SPCR$). Therefore, the $CLK(R/X)$ pin should not be driven by any other source.

2.5.3.5 Digital Loopback Mode: DLB

The DLB mode cannot be used when the McBSP is in clock stop mode ($CLKSTP = 2h$ or $3h$ in the serial port control register ($SPCR$)). Setting $DLB = 1$ in $SPCR$ enables digital loopback mode. In DLB mode, DR , FSR , and $CLKR$ are internally connected through multiplexers to DX , FSX , and $CLKX$, respectively, as shown in [Figure 2-1](#) and [Figure 2-35](#). DLB mode allows testing of serial port code without using the external interface of the McBSP. $CLKX$ and FSX must be enabled as outputs ($CLKXM = FSXM = 1$) in DLB mode.

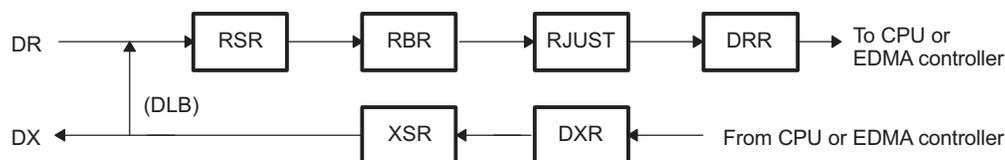Figure 2-7. Digital Loopback Mode


2.5.3.6 Receive Clock Selection: DLB, CLKRM

Table 2-3 shows how the digital loopback bit (DLB) in the serial port control register (SPCR) and the CLKRM bit in the pin control register (PCR) select the receiver clock. In digital loopback mode (DLB = 1), the transmitter clock drives the receiver. CLKRM determines whether the CLKR pin is an input or an output.

Table 2-3. Receive Clock Selection

DLB Bit in SPCR	CLKRM Bit in PCR	Source of Receive Clock	CLKR Function
0	0	CLKR acts as an input driven by the external clock and inverted as determined by CLKRP before being used.	Input.
0	1	The sample rate generator clock (CLKG) drives CLKR.	Output. CLKG inverted as determined by CLKRP before being driven out on CLKR.
1	0	CLKX_int drives the receive clock CLKR_int as selected and is inverted.	High impedance.
1	1	CLKX_int drives CLKR_int as selected and is inverted.	Output. CLKR (same as CLKX) is inverted as determined by CLKRP before being driven out.

2.5.3.7 Transmit Clock Selection: CLKXM

Table 2-4 shows how the CLKXM bit in the pin control register (PCR) selects the transmit clock and whether the CLKX pin is an input or output.

Table 2-4. Transmit Clock Selection

CLKXM Bit in PCR	Source of Transmit Clock	CLKX Function
0	The external clock drives the CLKX input pin. CLKX is inverted as determined by CLKXP before being used.	Input.
1	The sample rate generator clock (CLKG) drives the transmit clock.	Output. CLKG is inverted as determined by CLKXP before being driven out on CLKX.

2.5.3.8 Stopping Clocks

Two methods can be used to stop serial clocks between data transfers:

- The SPI CLKSTP mode where clocks are stopped between single-element transfers. This mode is not supported on this device.
- The clocks are inputs to the McBSP (CLKXM or CLKRM = 0 in the pin control register (PCR)) and the McBSP operates in non-SPI mode (the clocks can be stopped between data transfers). If the external device stops the serial clock between data transfers, the McBSP interprets it as a slowed-down serial clock. Ensure that there are no glitches on the CLK(R/X) lines as the McBSP may interpret them as clock-edge transitions. Restarting the serial clock is equivalent to a normal clock transition after a slow CLK(R/X) cycle. Note that just as in normal operations, transmit under flow (XEMPTY) may occur if the DXR is not properly serviced at least three CLKX cycles before the next frame sync. Therefore, if the serial clock is stopped before DXR is properly serviced, the external device needs to restart the clock at least three CLKX cycles before the next frame sync to allow the DXR write to be properly synchronized. See Figure 2-28 for a graphical explanation on when DXR needs to be written to avoid underflow.

2.5.4 Frame Sync Generation

Data frame synchronization is independently programmable for the receiver and the transmitter for all data delay values. When the FRST bit in the serial port control register (SPCR) is set to 1 the frame generation logic is activated to generate frame sync signals, provided that FSGM = 1 in the sample rate generator register (SRGR). The frame sync programming options are:

- A frame pulse with a programmable period between sync pulses and a programmable active width specified in SRGR.
- The transmitter can trigger its own frame sync signal that is generated by a DXR-to-XSR copy. This causes a frame sync to occur on every DXR-to-XSR copy. The data delays can be programmed as required. However, maximum packet frequency cannot be achieved in this method for data delays of 1 and 2.
- Both the receiver and transmitter can independently select an external frame synchronization on the FSR and FSX pins, respectively.

2.5.4.1 Frame Period (FPER) and Frame Width (FWID)


The FPER bits in the sample rate generator register (SRGR) are a 12-bit down-counter that can count down the generated data clocks from 4095 to 0. FPER controls the period of active frame sync pulses. The FWID bits in SRGR are an 8-bit down-counter. FWID controls the active width of the frame sync pulse.

When the sample rate generator comes out of reset, FSG is in an inactive (low) state. After this, when FRST = 1 in SPCR and FSGM = 1 in SRGR, frame sync signals are generated. The frame width value (FWID + 1) is counted down on every CLKG cycle until it reaches 0 when FSG goes low. Thus, the value of FWID + 1 determines an active frame pulse width ranging from 1 to 256 data bit clocks.

At the same time, the frame period value (FPER + 1) is also counting down, and when this value reaches 0, FSG goes high again indicating a new frame is beginning. Thus, the value of FPER + 1 determines a frame length from 1 to 4096 data bits. When GSYNC = 1 in SRGR, the value of FPER does not matter. [Figure 2-8](#) shows a frame of 16 CLKG periods (FPER = 15 or 0000 1111b).

It is recommended that FWID be programmed to a value less than (R/X)WDLEN1/2.

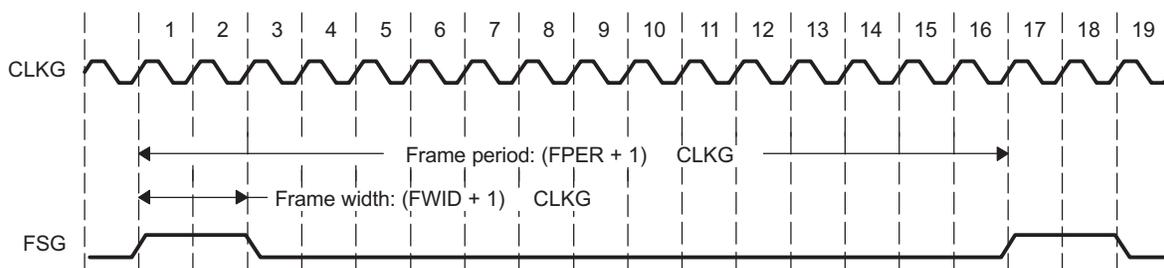Figure 2-8. Programmable Frame Period and Width



2.5.4.2 Receive Frame Synchronization Selection: DLB and FSRM

Table 2-5 shows how you can select various sources to provide the receive frame synchronization signal. Note that in digital loopback mode (DLB = 1 in the serial port control register (SPCR)), the transmit frame sync signal is used as the receive frame sync signal and that DR is internally connected to DX.

NOTE: FSR_int and FSX_int are shown in Figure 2-1.

Table 2-5. Receive Frame Synchronization Selection

DLB Bit in SPCR	FSRM Bit in PCR	GSYNC Bit in SRGR	Source of Receive Frame Synchronization	FSR Pin Function
0	0	X	External frame sync signal drives the FSR input pin, whose signal is then inverted as determined by FSRP before being used as FSR_int.	Input.
0	1	0	Sample rate generator frame sync signal (FSG) drives FSR_int, FRST = 1.	Output. FSG is inverted as determined by FSRP before being driven out on the FSR pin.
0	1	1	Sample rate generator frame sync signal (FSG) drives FSR_int, FRST = 1.	Input. The external frame sync input on FSR is used to synchronize CLKG and generate FSG.
1	0	0	FSX_int drives FSR_int. FSX is selected as shown in Table 2-6.	High impedance.
1	X	1	FSX_int drives FSR_int and is selected as shown in Table 2-6.	Input. External FSR is not used for frame synchronization but is used to synchronize CLKG and generate FSG since GSYNC = 1.
1	1	0	FSX_int drives FSR_int and is selected as shown in Table 2-6.	Output. Receive (same as transmit) frame synchronization is inverted as determined by FSRP before being driven out.

2.5.4.3 Transmit Frame Synchronization Selection: FSXM and FSGM

Table 2-6 shows how you can select the source of the transmit frame synchronization signal. The three choices are:

- External frame sync input
- The sample rate generator frame sync signal, FSG
- A signal that indicates a DXR-to-XSR copy has been made

NOTE: FSR_int and FSX_int are shown in Figure 2-1.

Table 2-6. Transmit Frame Synchronization Selection

FSXM Bit in PCR	FSGM Bit in SRGR	Source of Transmit Frame Synchronization	FSX Pin Function
0	X	External frame sync input on the FSX pin. This is inverted by FSXP before being used as FSX_int.	Input
1	1	Sample rate generator frame sync signal (FSG) drives FSX_int. FRST = 1.	Output. FSG is inverted by FSXP before being driven out on FSX.
1	0	A DXR-to-XSR copy activates transmit frame sync signal.	Output. 1-bit-clock-wide signal inverted as determined by FSXP before being driven out on FSX.

2.5.4.4 Frame Detection

To facilitate detection of frame synchronization, the receive and transmit CPU interrupts (RINT and XINT) can be programmed to detect frame synchronization by setting the RINTM and XINTM bits in the serial port control register (SPCR) to 10b. The associated portion (receiver/transmitter) of the McBSP must be out of reset.

2.5.5 Data and Frames

All data transfers require a valid frame synchronization.

2.5.5.1 Frame Synchronization Phases

Frame synchronization indicates the beginning of a transfer on the McBSP. The data stream following frame synchronization can have up to two phases: phase 1 and phase 2. The number of phases can be selected by the phase bit, (R/X)PHASE, in RCR and XCR. The number of elements per frame and bits per element can be independently selected for each phase via (R/X)FRLen1/2 and (R/X)WDLEN1/2, respectively.

Figure 2-9 shows a frame in which the first phase consists of two elements of 12 bits, each followed by a second phase of three elements of 8 bits each. The entire bit stream in the frame is contiguous; no gaps exist either between elements or phases. Table 2-7 shows the fields in the receive/transmit control registers (RCR/XCR) that control the frame length and element length for each phase for both the receiver and the transmitter. The maximum number of elements per frame is 128 for a single-phase frame and 256 elements in a dual-phase frame. The number of bits per element can be 8, 12, 16, 20, 24, or 32.

NOTE: For a dual-phase frame with internally generated frame synchronization, the maximum number of elements per phase depends on the word length. This is because the frame period, FPER, is only 12-bits wide and, therefore, provides 4096 bits per frame. Hence, the maximum number of 256 elements per dual-phase frame applies only when the WDLEN is 16 bits. However, any combination of element numbers and element size (defined by the FRLen and WDLEN bits, respectively) is valid as long as their product is less than or equal to 4096 bits. This limitation does not apply for dual-phase with external frame sync.

Figure 2-9. Dual-Phase Frame Example

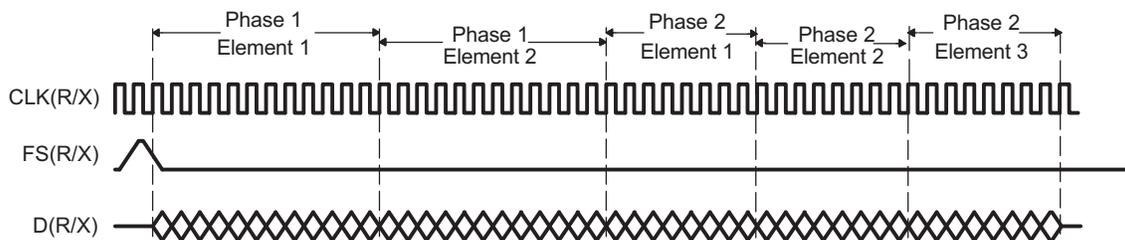


Table 2-7. RCR/XCR Fields Controlling Elements per Frame and Bits per Element

Serial Port	Frame Phase	RCR/XCR Field Control	
		Elements per Frame	Bits per Element
Receive	1	RFRLEN1	RWDLEN1
Receive	2	RFRLEN2	RWDLEN2
Transmit	1	XFRLEN1	XWDLEN1
Transmit	2	XFRLEN2	XWDLEN2

2.5.5.2 Frame Length: RFRLLEN1/2 and XFRLLEN1/2

Frame length specifies the maximum number of serial elements or logical time slots or channels that are available for transfer per frame synchronization signal. In multichannel selection mode, the frame length value is independent of, and possibly different from, the actual number of channels that the device is programmed to receive or transmit per frame via the MCR, RCEREn, and XCEREn registers. See [Section 2.9](#) for details on multichannel selection mode operation.

The 7-bit (R/X)FRLLEN1/2 bits in (R/X)CR support up to 128 elements per phase in a frame, as shown in [Table 2-8](#). (R/X)PHASE = 0 selects a single-phase data frame, and (R/X)PHASE = 1 selects a dual-phase frame for the data stream. For a single-phase frame, the value of (R/X)FRLLEN2 does not matter. Program the frame length fields with (w minus 1), where w represents the number of elements per frame. For [Figure 2-9](#), (R/X)FRLLEN1 = 1 or 000 0001b and (R/X)FRLLEN2 = 2 or 000 0010b.

Table 2-8. Receive/Transmit Frame Length Configuration

(R/X)PHASE	(R/X)FRLLEN1	(R/X)FRLLEN2	Frame Length
0	$0 \leq n \leq 127$	x	Single-phase frame; (n + 1) elements per frame
1	$0 \leq n \leq 127$	$0 \leq m \leq 127$	Dual-phase frame; (n + 1) plus (m + 1) elements per frame

2.5.5.3 Element Length: RWDLEN1/2 and XWDLEN1/2

The (R/X)WDLEN1/2 fields in the receive/transmit control register (RCR and XCR) determine the element length in bits per element for the receiver and the transmitter for each phase of the frame, as indicated in [Table 2-7](#). [Table 2-9](#) shows how the value of these fields selects particular element lengths in bits. For the example in [Figure 2-9](#), (R/X)WDLEN1 = 001b and (R/X)WDLEN2 = 000b. If (R/X)PHASE = 0, indicating a single-phase frame, then (R/X)WDLEN2 is not used by the McBSP and its value does not matter.

Table 2-9. Receive/Transmit Element Length Configuration

(R/X)WDLEN1/2	Element Length (Bits)
000	8
001	12
010	16
011	20
100	24
101	32
110	Reserved
111	Reserved


2.5.5.4 Data Packing Using Frame Length and Element Length

The frame length and element length can be manipulated to effectively pack data. For example, consider a situation in which four 8-bit elements are transferred in a single-phase frame, as shown in [Figure 2-10](#). In this case:

- (R/X)PHASE = 0, indicating a single-phase frame
- (R/X)FRLLEN1 = 000 0011b, indicating a 4-element frame
- (R/X)WDLEN1 = 000b, indicating 8-bit elements

In [Figure 2-10](#) four 8-bit data elements are transferred to and from the McBSP by the CPU or the EDMA controller. Four reads of DRR and four writes of DXR are necessary for each frame.

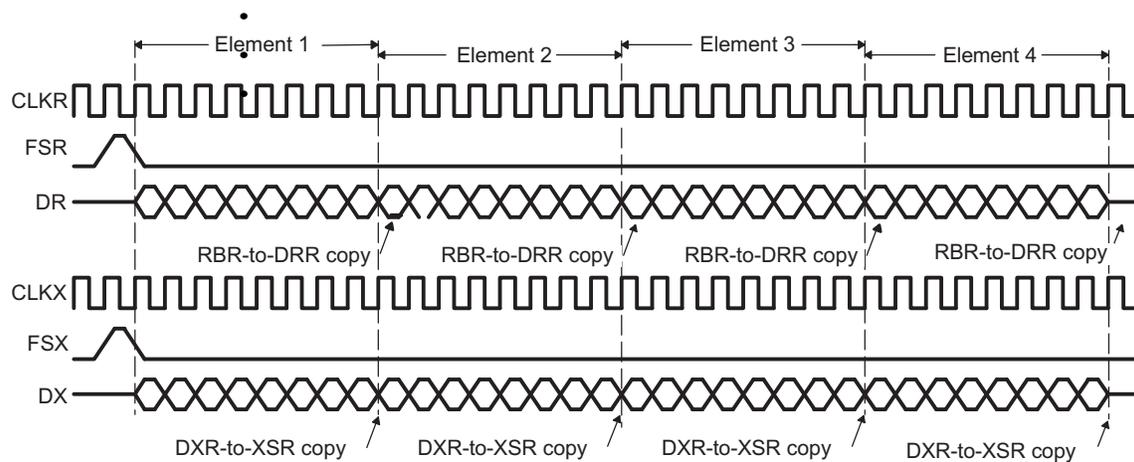Figure 2-10. Single-Phase Frame of Four 8-Bit Elements




The example in [Figure 2-10](#) can also be viewed as a data stream of a single-phase frame of one 32-bit data element, as shown in [Figure 2-11](#). In this case:

- (R/X)PHASE = 0, indicating a single phase frame
- (R/X)FRLLEN1 = 0, indicating a 1-element frame
- (R/X)WDLEN1 = 101b, indicating 32-bit elements

In [Figure 2-11](#), one 32-bit data element is transferred to and from the McBSP by the CPU or the EDMA controller. Thus, one read of DRR and one write of DXR is necessary for each frame. As a result, the number of transfers is one-fourth that of the previous example ([Figure 2-10](#)). This manipulation reduces the percentage of bus time required for serial port data movement.

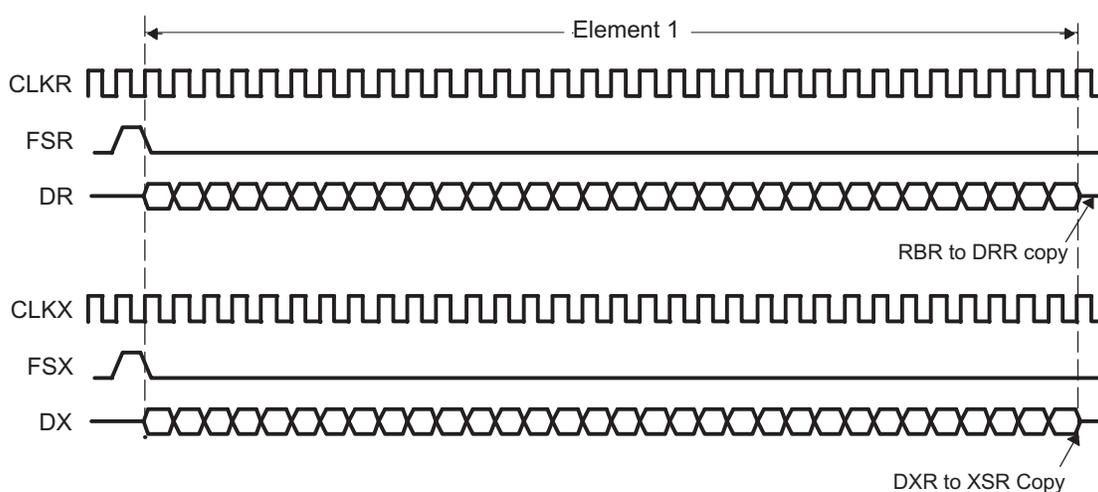
Figure 2-11. Single-Phase Frame of One 32-Bit Element



2.5.5.5 Data Delay: RDATELY and XDATDLY

The start of a frame is defined by the first clock cycle in which frame synchronization is active. The beginning of actual data reception or transmission with respect to the start of the frame can be delayed if required. This delay is called data delay. RDATELY (in RCR) and XDATDLY (in XCR) specify the data delay for reception and transmission, respectively. The range of programmable data delay is zero to two bit clocks ((R/X)DATDLY = 00b to 10b), as shown in Figure 2-12. Typically, a 1-bit delay is selected because data often follows a 1-cycle active frame sync pulse.

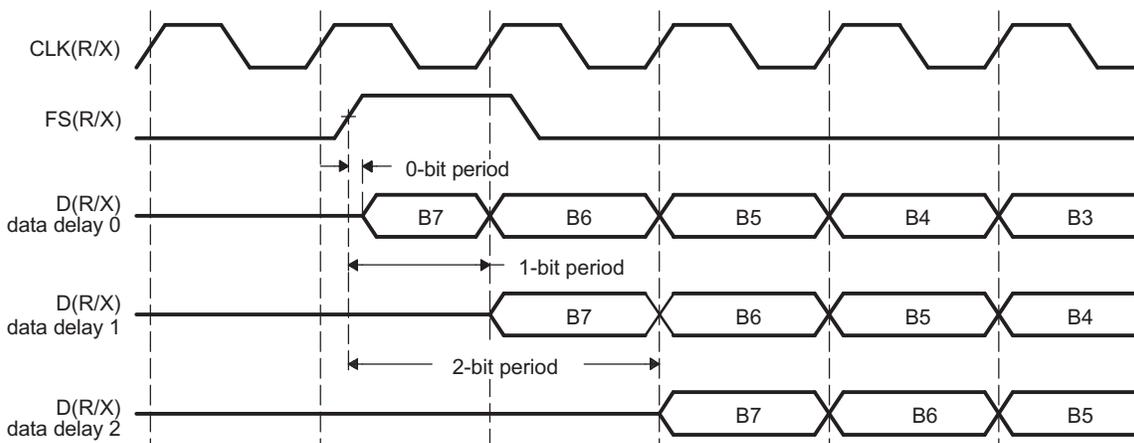Figure 2-12. Data Delay




Normally, a frame sync pulse is detected or sampled with respect to an edge of serial clock CLK(R/X). Thus, on a subsequent cycle (depending on data delay value), data can be received or transmitted. However, in the case of a 0-bit data delay, the data must be ready for reception and/or transmission on the same serial clock cycle. For reception, this problem is solved by receive data being sampled on the first falling edge of CLKR when an active (high) FSR is detected.

However, data transmission must begin on the rising edge of CLKX that generated the frame synchronization. Therefore, the first data bit is assumed to be in the XSR and DX. The transmitter then asynchronously detects the frame synchronization, FSX goes active, and it immediately starts driving the first bit to be transmitted on the DX pin.

Another common operation uses a data delay of 2. This configuration allows the serial port to interface to different types of T1 framing devices in which the data stream is preceded by a framing bit. During the reception of such a stream with a data delay of two bits, the framing bit appears after a 1-bit delay and data appears after a 2-bit delay).

The serial port essentially discards the framing bit from the data stream, as shown in Figure 2-13. In transmission, by delaying the first transfer bit, the serial port essentially inserts a blank period (high-impedance period) in place of the framing bit. Here, it is expected that the framing device inserts its own framing bit or that the framing bit is generated by another device. Alternatively, you may pull up or pull down DX to achieve the desired value.

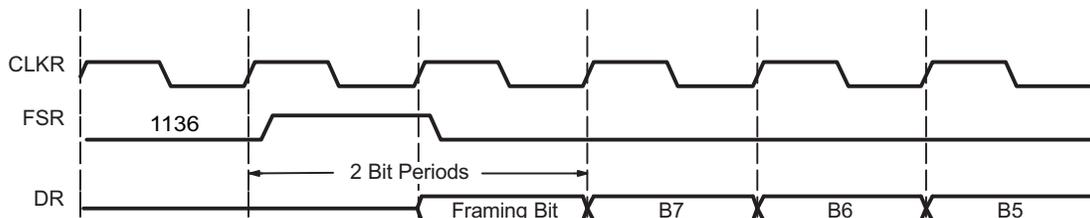Figure 2-13. 2-Bit Data Delay Used to Discard Framing Bit



2.5.5.6 Receive Data Justification and Sign Extension: RJUST

The RJUST bit in the serial port control register (SPCR) selects whether data in RBR is right-or left-justified (with respect to the MSB) in the DRR. If right justification is selected, RJUST further selects whether the data is sign-extended or zero-filled. [Table 2-10](#) and [Table 2-11](#) summarize the effect that various values of RJUST have on example receive data.

Table 2-10. Effect of RJUST Bit Values With 12-Bit Example Data ABCh

RJUST Bit in SPCR	Justification	Extension	Value in DRR
00	Right	Zero-fill MSBs	0000 0ABCh
01	Right	Sign-extend MSBs	FFFF FABCh
10	Left	Zero-fill LSBs	ABC0 0000h
11	Reserved	Reserved	Reserved

Table 2-11. Effect of RJUST Bit Values With 20-Bit Example Data ABCDEh

RJUST Bit in SPCR	Justification	Extension	Value in DRR
00	Right	Zero-fill MSBs	000A BCDEh
01	Right	Sign-extend MSBs	FFFA BCDEh
10	Left	Zero-fill LSBs	ABCD E000h
11	Reserved	Reserved	Reserved

2.5.5.7 32-Bit Reversal: RWDREVRs, XWDREVRs

Normally all transfers are sent and received with the MSB first; however, you can reverse the receive/transmit bit ordering of a 32-bit element (LSB first) using the 32-bit reversal feature of the McBSP by setting all of the following:

- (R/X)WDREVRs = 1 in the receive/transmit control register (RCR/XCR).
- (R/X)COMPAND = 01b in RCR/XCR.
- (R/X)WDLEN(1/2) = 101b in RCR/XCR to indicate 32-bit elements.

When you set the register fields as above, the bit ordering of the 32-bit element is reversed before being received by or sent from the serial port. If the (R/W)WDREVRs and (R/X)COMPAND fields are set as above, but the element size is not set to 32-bit, operation is undefined.

2.6 McBSP Buffer FIFO (BFIFO)

The McBSP Buffer FIFO (BFIFO) provides additional data buffering for the McBSP. The time it takes the host CPU or DMA controller to respond to DMA requests from the McBSP may vary; the additional buffering provided by the BFIFO allows greater tolerance to such variations. For convenience, the BFIFO is pictured as a block between the McBSP and the host/DMA controller (see [Figure 1-1](#)). Details for configuring the BFIFO are in [Section 2.7.6](#).


2.7 McBSP Standard Operation

During a serial transfer, there are typically periods of serial port inactivity between packets or transfers. The receive and transmit frame synchronization pulse occurs for every serial transfer. When the McBSP is not in the reset state and has been configured for the desired operation, a serial transfer can be initiated by programming (R/X)PHASE = 0 for a single-phase frame with the required number of elements programmed in (R/X)FRLLEN1. The number of elements can range from 1 to 128 ((R/X)FRLLEN1 = 00h to 7Fh). The required serial element length is set in the (R/X)WDLEN1 field in the (R/X)CR. If a dual-phase frame is required for the transfer, RPHASE = 1 and each (R/X)FRLLEN1/2 can be set to any value between 0h and 7Fh.

Figure 2-14 shows a single-phase data frame of one 8-bit element. Since the transfer is configured for a 1-bit data delay, the data on the DX and DR pins are available one bit clock after FS(R/X) goes active. This figure, as well as all others in this section, use the following assumptions:

- (R/X)PHASE = 0, specifying a single-phase frame
- (R/X)FRLLEN1 = 0b, specifying one element per frame
- (R/X)WDLEN1 = 000b, specifying eight bits per element
- (R/X)FRLLEN2 = (R/X)WDLEN2 = Value is ignored
- CLK(R/X)P = 0, specifying that the receive data is clocked on the falling edge and that transmit data is clocked on the rising edge
- FS(R/X)P = 0, specifying that active (high) frame sync signals are used
- (R/X)DATDLY = 01b, specifying a 1-bit data delay

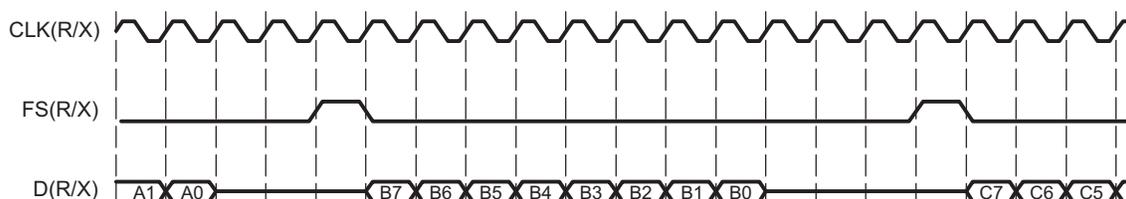
Figure 2-14. McBSP Standard Operation



2.7.1 Receive Operation

Figure 2-15 shows serial reception. Once the receive frame synchronization signal (FSR) transitions to its active state, it is detected on the first falling edge of the receiver's CLKR. The data on the DR pin is then shifted into the receive shift register (RSR) after the appropriate data delay as set by the RDATDLY bit in the receive control register (RCR). The contents of RSR is copied to RBR at the end of every element on the rising edge of the clock, provided RBR is not full with the previous data. Then, an RBR-to-DRR copy activates the RRDY status bit in the serial port control register (SPCR) to 1 on the following falling edge of CLKR. This indicates that the receive data register (DRR) is ready with the data to be read by the CPU or the EDMA controller. RRDY is deactivated when the DRR is read by the CPU or the EDMA controller. See also Section 2.13.1.2 and Section 2.14.1.

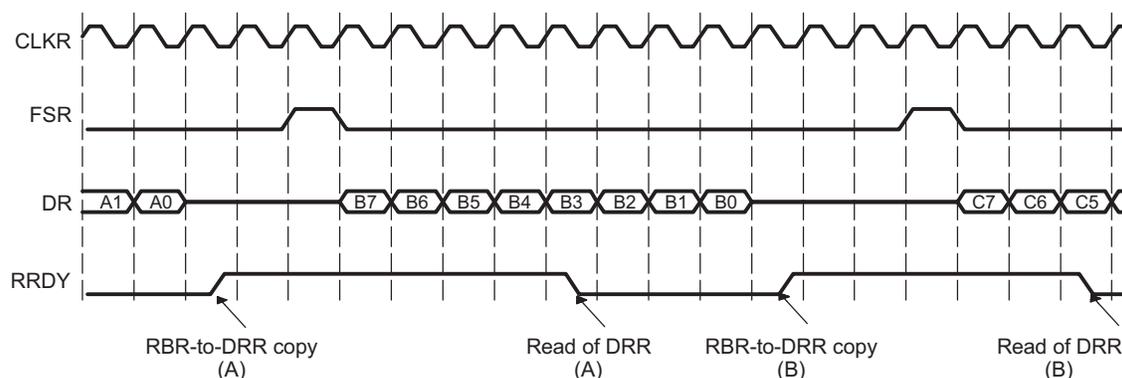Figure 2-15. Receive Operation




2.7.2 Transmit Operation

Once transmit frame synchronization occurs, the value in the transmit shift register (XSR) is shifted out and driven on the DX pin after the appropriate data delay as set by the XDATDLY bit in the transmit control register (XCR). The XRDY bit in the serial port control register (SPCR) is activated after every DXR-to-XSR copy on the following falling edge of CLKX, indicating that the data transmit register (DXR) can be written with the next data to be transmitted. XRDY is deactivated when the DXR is written by the CPU or the EDMA controller.

Figure 2-16 illustrates serial transmission. See Section 2.7.5.4 for information on transmit operation when the transmitter is pulled out of reset (XRST = 1). See also Section 2.13.1.3 and Section 2.14.2.

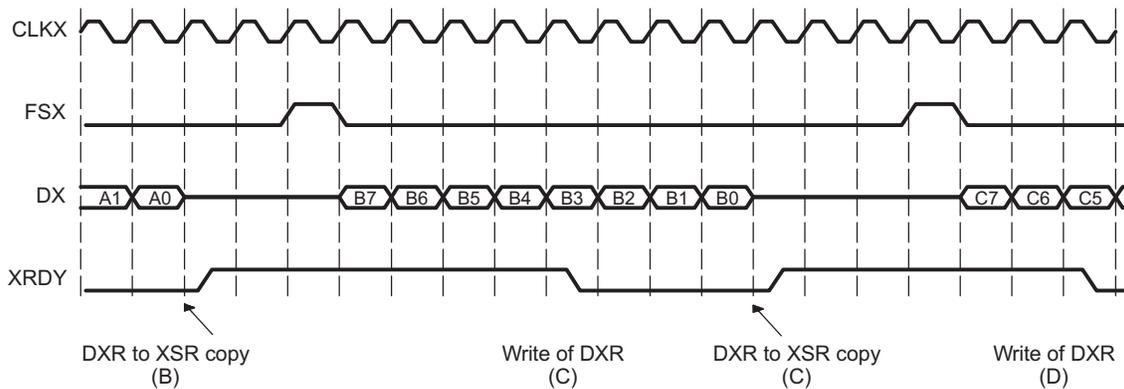Figure 2-16. Transmit Operation



2.7.3 Maximum Frame Frequency

The frame frequency is determined by the following equation, which calculates the period between frame synchronization signals:


$$\text{Frame frequency} = \frac{\text{Bit-clock frequency}}{\text{Number of bit clocks between frame sync signals}} \tag{18}$$

The frame frequency may be increased by decreasing the time between frame synchronization signals in bit clocks (which is limited only by the number of bits per frame). As the frame transmit frequency is increased, the inactivity period between the data frames for adjacent transfers decreases to 0. The minimum time between frame synchronization pulses is the number of bits transferred per frame. This time also defines the maximum frame frequency, which is calculated by the following equation:

$$\text{Maximum frame frequency} = \frac{\text{Bit-clock frequency}}{\text{Number of bits per frame}} \tag{19}$$

Figure 2-17 shows the McBSP operating at maximum frame frequency. The data bits in consecutive frames are transmitted continuously with no inactivity between bits. If there is a 1-bit data delay, as shown, the frame synchronization pulse overlaps the last bit transmitted in the previous frame.

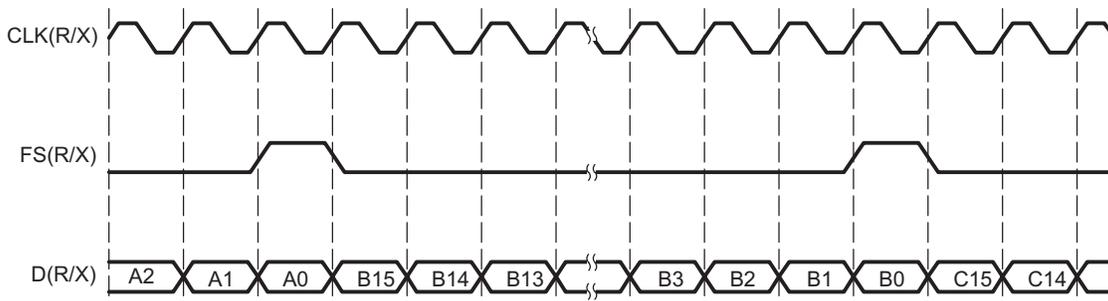Figure 2-17. Maximum Frame Frequency for Transmit and Receive



NOTE: For (R/X)DATDLY = 0, the first bit of data transmitted is asynchronous to CLKX, as shown in Figure 2-12.

Maximum frame frequency may not be possible when the word length is 8-bits, depending on the clock divide value CLKGDV. The CPU or EDMA may not be able to service serial port requests that occur as frequently as every 8-bit clocks. This situation can be resolved by allowing additional space between words or choosing a slower bit clock (larger CLKGDV value).

2.7.4 Frame Synchronization Ignore

The McBSP can be configured to ignore transmit and receive frame synchronization pulses. The (R/X)FIG bit in (R/X)CR can be cleared to 0 to recognize frame sync pulses, or it can be set to 1 to ignore frame sync pulses. In this way, you can use (R/X)FIG either to pack data, if operating at maximum frame frequency, or to ignore unexpected frame sync pulses.

2.7.4.1 Frame Sync Ignore and Unexpected Frame Sync Pulses

RFIG and XFIG are used to ignore unexpected internal or external frame sync pulses. Any frame sync pulse is considered unexpected if it occurs one or more bit clocks earlier than the programmed data delay from the end of the previous frame specified by ((R/X)DATDLY). Setting the frame ignore bits to 1 causes the serial port to ignore these unexpected frame sync signals.

In reception, if not ignored (RFIG = 0), an unexpected FSR pulse discards the contents of RSR in favor of the incoming data. Therefore, if RFIG = 0, an unexpected frame synchronization pulse aborts the current data transfer, sets RSYNCERR in SPCR to 1, and begins the reception of a new data element. When RFIG = 1, the unexpected frame sync pulses are ignored.

In transmission, if not ignored (XFIG = 0), an unexpected FSX pulse aborts the ongoing transmission, sets the XSYNCERR bit in SPCR to 1, and reinitiates transmission of the current element that was aborted. When XFIG = 1, unexpected frame sync signals are ignored.

Figure 2-18 shows that element B is interrupted by an unexpected frame sync pulse when (R/X)FIG = 0. The reception of B is aborted (B is lost), and a new data element (C) is received after the appropriate data delay. This condition causes a receive synchronization error and thus sets the RSYNCERR bit. However, for transmission, the transmission of B is aborted and the same data (B) is retransmitted after the appropriate data delay. This condition is a transmit synchronization error and thus sets the XSYNCERR bit. Synchronization errors are discussed in Section 2.7.5.2 and Section 2.7.5.5.

Figure 2-18. Unexpected Frame Synchronization With (R/X)FIG = 0


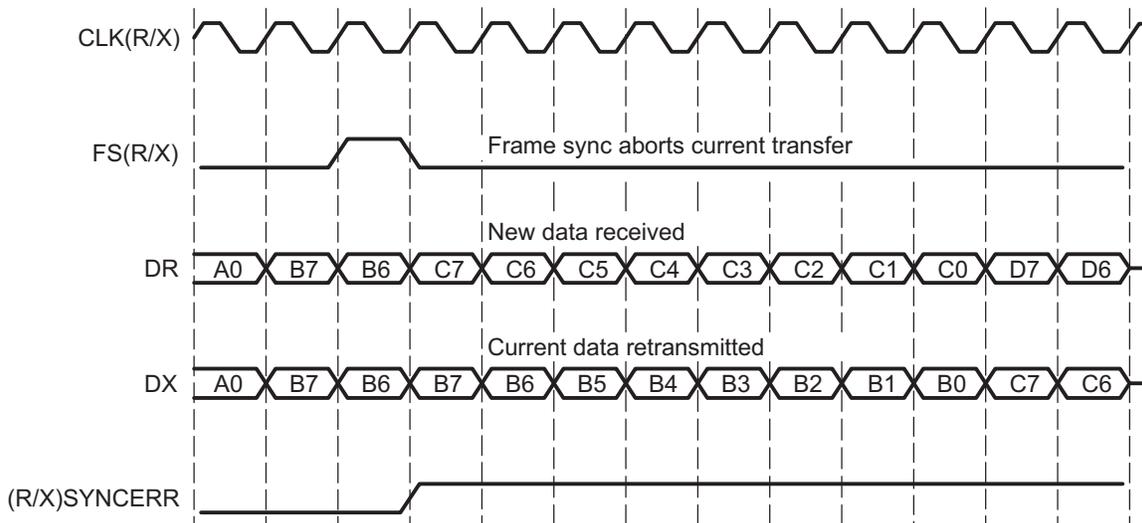


Figure 2-19 shows McBSP operation when unexpected internal or external frame synchronization signals are ignored by setting (R/X)FIG = 1. Here, the transfer of element B is not affected by an unexpected frame synchronization.

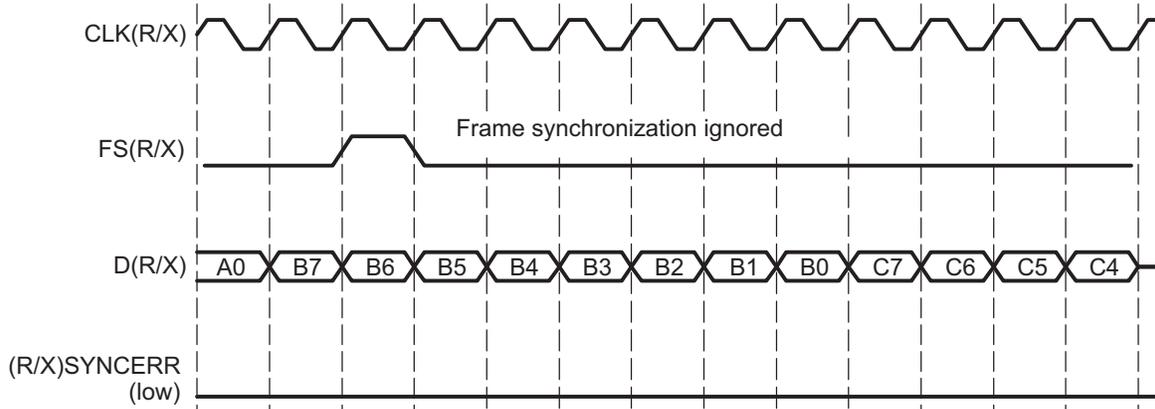Figure 2-19. Unexpected Frame Synchronization With (R/X)FIG = 1



2.7.4.2 Data Packing using Frame Sync Ignore Bits

Section 2.5.5.4 describes one method of changing the element length and frame length to simulate 32-bit serial element transfers, thus requiring much less bus bandwidth than four 8-bit transfers require. This example works when there are multiple elements per frame.

Now consider the case of the McBSP operating at maximum packet frequency, as shown in Figure 2-20. Here, each frame has only a single 8-bit element. This stream takes one read transfer and one write transfer for each 8-bit element. Figure 2-21 shows the McBSP configured to treat this stream as a continuous stream of 32-bit elements.

In this example, (R/X)FIG is set to 1 to ignore unexpected subsequent frames. Only one read transfer and one write transfer is needed every 32 bits. This configuration effectively reduces the required bus bandwidth to one-fourth of the bandwidth needed to transfer four 8-bit blocks.

Figure 2-20. Maximum Frame Frequency Operation With 8-Bit Data


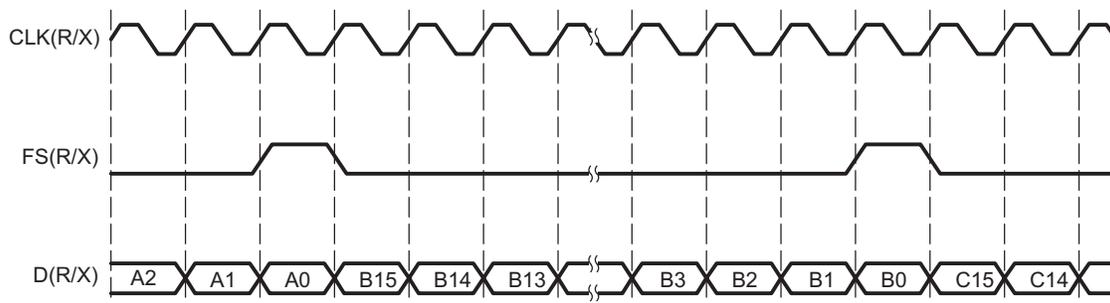


Figure 2-21. Data Packing at Maximum Frame Frequency With (R/X)FIG = 1

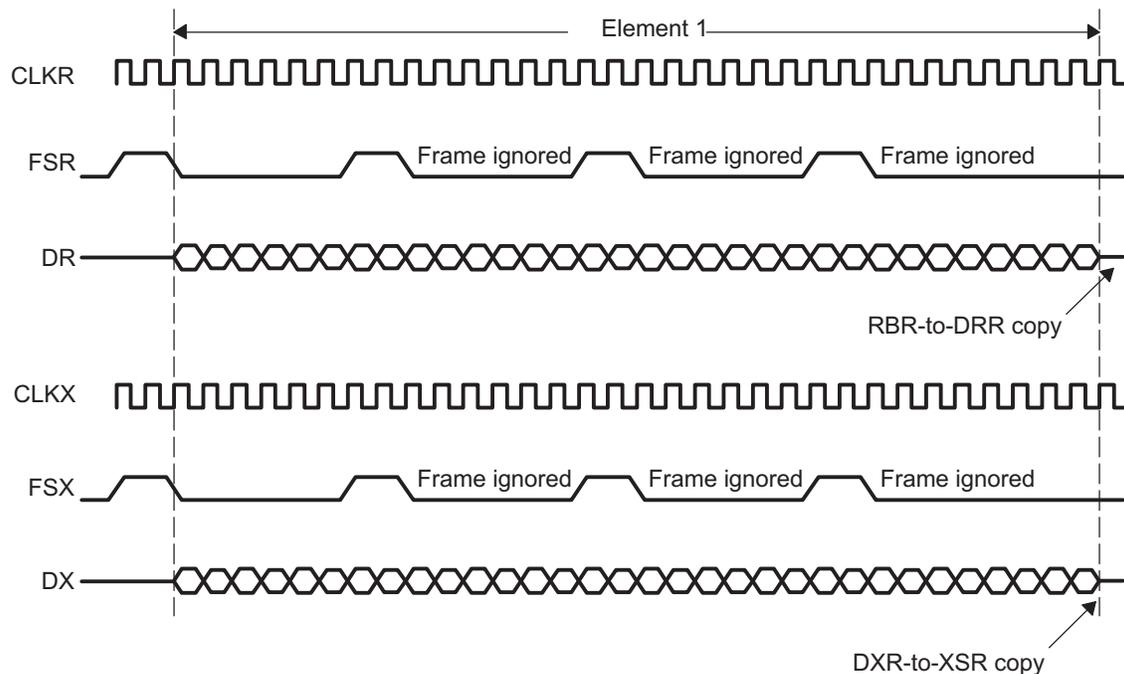

2.7.5 Serial Port Exception Conditions

There are five serial port events that can constitute a system error:

- Receive overrun (RFULL = 1 in SPCR)
- Unexpected receive frame synchronization (RSYNCERR = 1 in SPCR)
- Transmit data overwrite
- Transmit empty (XEMPTY = 0 in SPCR)
- Unexpected transmit frame synchronization (XSYNCERR = 1 in SPCR)

2.7.5.1 Receive Overrun: RFULL

RFULL = 1 in the serial port control register (SPCR) indicates that the receiver has experienced overrun and is in an error condition. RFULL is set when the following conditions are met:

- DRR has not been read since the last RBR-to-DRR transfer.
- RBR is full and an RBR-to-DRR copy has not occurred.
- RSR is full and an RSR-to-RBR transfer has not occurred.

The data arriving on DR is continuously shifted into RSR (Figure 2-22). Once a complete element is shifted into RSR, an RSR-to-RBR transfer can occur only if an RBR-to-DRR copy is complete. Therefore, if DRR has not been read by the CPU or the EDMA controller since the last RBR-to-DRR transfer (RRDY = 1), an RBR-to-DRR copy does not take place until RRDY = 0. This prevents an RSR-to-RBR copy.

New data arriving on the DR pin is shifted into RSR, and the previous contents of RSR are lost. After the receiver starts running from reset, a minimum of three elements must be received before RFULL can be set, because there was no last RBR-to-DRR transfer before the first element.

This data loss can be avoided if DRR is read no later than two and a half CLKR cycles before the end of the third element (data C) in RSR, as shown in Figure 2-23.

Either of the following events clears the RFULL bit to 0 and allows subsequent transfers to be read properly:

- Reading DRR
- Resetting the receiver (RRST = 0) or the device

Another frame synchronization is required to restart the receiver.

Figure 2-22 shows the receive overrun condition. Because element A is not read before the reception of element B is complete, B is not transferred to DRR yet. Another element, C, arrives and fills RSR. DRR is finally read, but not earlier than two and one half cycles before the end of element C. New data D overwrites the previous element C in RSR. If RFULL is still set after the DRR is read, the next element can overwrite D if DRR is not read in time.

Figure 2-23 shows the case in which RFULL is set but the overrun condition is averted by reading the contents of DRR at least two and a half cycles before the next element, C, is completely shifted into RSR. This ensures that a RBR-to-DRR copy of data B occurs before the next element is transferred from RSR to RBR.

Figure 2-22. Serial Port Receive Overrun


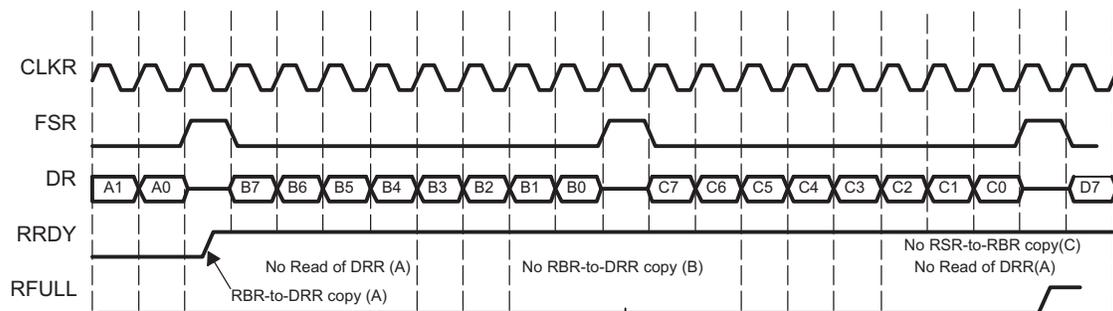


Figure 2-23. Serial Port Receive Overrun Avoided

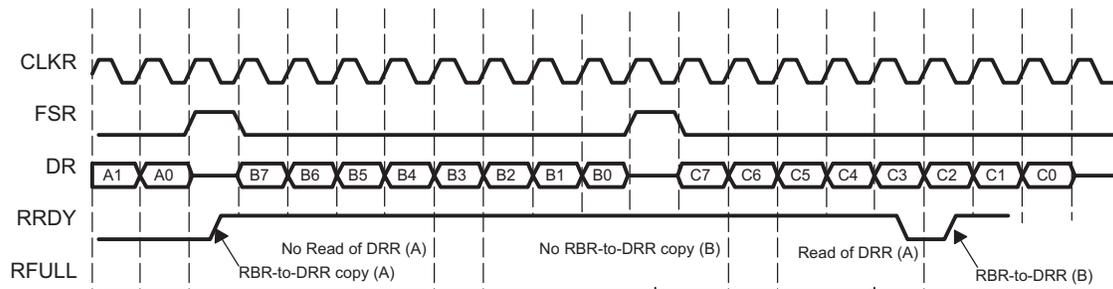

2.7.5.2 Unexpected Receive Frame Synchronization: RSYNCERR

Figure 2-24 shows the decision tree that the receiver uses to handle all incoming frame synchronization pulses. The diagram assumes that the receiver has been activated (RRST = 1). Unexpected frame sync pulses can originate from an external source or from the internal sample rate generator. An unexpected frame sync pulse is defined as a sync pulse which occurs RDATDLY bit clocks earlier than the last transmitted bit of the previous frame. Any one of three cases can occur:

- Case 1: Unexpected FSR pulses with RFIG = 1. This case is discussed in Section 2.7.4.1 and shown in Figure 2-19. Here, receive frame sync pulses are ignored and the reception continues.
- Case 2: Normal serial port reception. There are three reasons for a receive not to be in progress:
 - This FSR is the first after RRST = 1.
 - This FSR is the first after DRR has been read clearing an RFULL condition.
 - The serial port is in the inter-packet intervals. The programmed data delay (RDATDLY) for reception may start during these inter-packet intervals for the first bit of the next element to be received. Thus, at maximum frame frequency, frame synchronization can still be received RDATDLY bit clocks before the first bit of the associated element.
 - For this case, reception continues normally, because these are not unexpected frame sync pulses.
- Case 3: Unexpected receive frame synchronization with RFIG = 0 (unexpected frame not ignored). This case was shown in Figure 2-18 for maximum packet frequency. Figure 2-25 shows this case during normal operation of the serial port with time intervals between packets. Unexpected frame sync pulses are detected when they occur the value in RDATDLY bit clocks before the last bit of the previous element is received on DR. In both cases, RSYNCERR in SPCR is set. RSYNCERR can be cleared only by receiver reset or by writing a 0 to this bit in SPCR. If RINTM = 11b in SPCR, RSYNCERR drives the receive interrupt (RINT) to the CPU.

NOTE: Note that the RSYNCERR bit in SPCR is a read/write bit, so writing a 1 to it sets the error condition. Typically, writing a 0 is expected.

Figure 2-24. Decision Tree Response to Receive Frame Synchronization Pulse


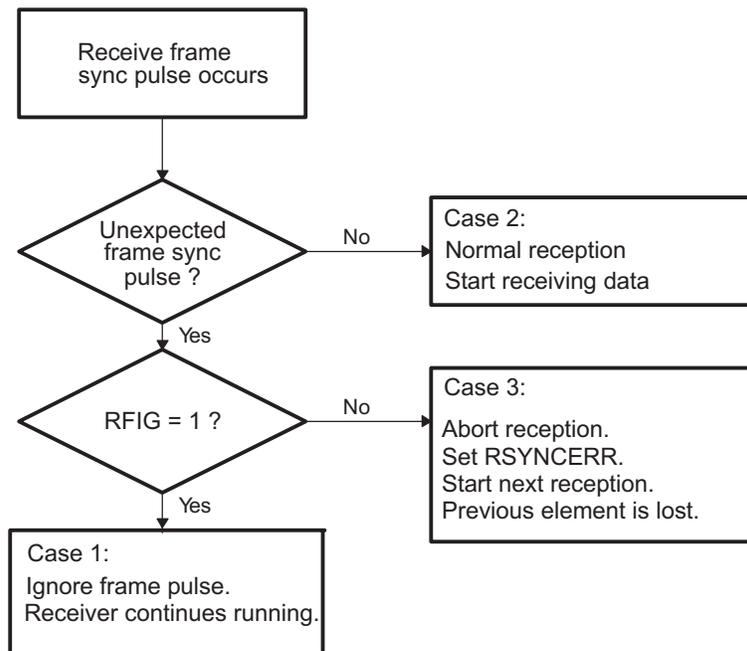



Figure 2-25. Unexpected Receive Frame Synchronization Pulse

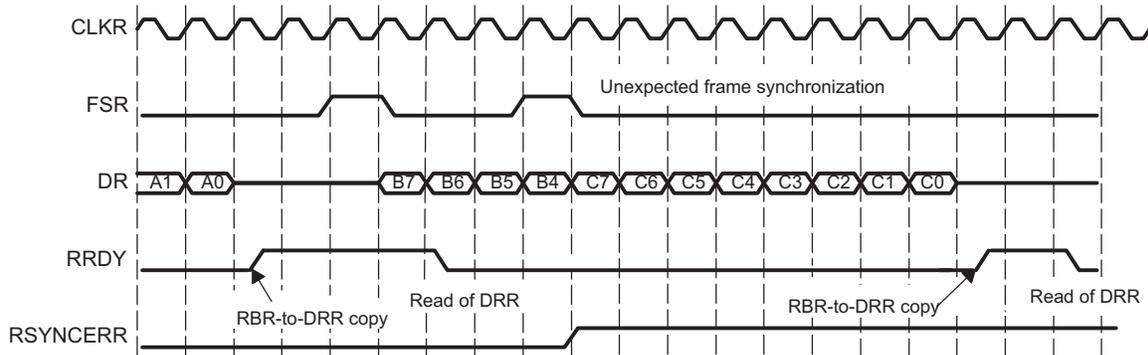

2.7.5.3 Transmit With Data Overwrite

Figure 2-26 shows what happens if the data in DXR is overwritten before it is transmitted. Suppose you load the DXR with data C. A subsequent write to the DXR overwrites C with D before C is copied to the XSR. Thus, C is never transmitted on DX. The CPU can avoid overwriting data by polling XRDY before writing to DXR or by waiting for a programmed XINT to be triggered by XRDY (XINTM = 00b). The EDMA controller can avoid overwriting by synchronizing data writes with XEVT. See also Section 2.13.1.3.

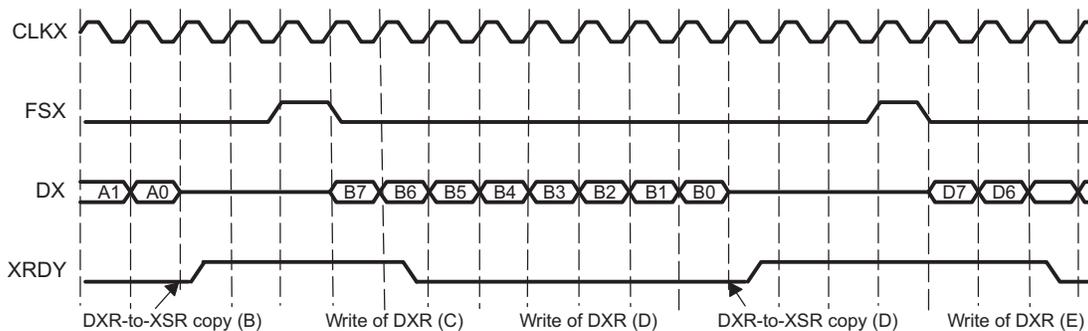Figure 2-26. Transmit with Data Overwrite



2.7.5.4 Transmit Empty: XEMPTY

XEMPTY indicates whether the transmitter has experienced underflow. Either of the following conditions causes XEMPTY to become active (XEMPTY = 0):

- During transmission, DXR has not been loaded since the last DXR-to-XSR copy, and all bits of the data element in XSR have been shifted out on DX.
- The transmitter is reset (XRST = 0 or the device is reset), and then restarted.

During an underflow condition, the transmitter continues to transmit the old data in DXR for every new frame sync signal FSX (generated by an external device, or by the internal sample rate generator) until a new element is loaded into DXR by the CPU or the EDMA controller. XEMPTY is deactivated (XEMPTY = 1) when this new element in DXR is transferred to XSR. In the case when the FSX is generated by a DXR-to-XSR copy (FSXM = 1 in PCR and FSGM = 0 in SRGR), the McBSP does not generate any new frame sync until new data is written to the DXR and a DXR-to-XSR copy occurs.

When the transmitter is taken out of reset (XRST = 1), it is in a transmit ready (XRDY = 1) and transmit empty (XEMPTY = 0) condition. If DXR is loaded by the CPU or the EDMA controller before FSX goes active, a valid DXR-to-XSR transfer occurs. This allows for the first element of the first frame to be valid even before the transmit frame sync is generated or detected. Alternatively, if a transmit frame sync is detected before DXR is loaded, 0s are output on DX.

Figure 2-27 shows a transmit underflow condition. After B is transmitted, B is retransmitted on DX if you fail to reload the DXR before the subsequent frame synchronization. Figure 2-28 shows the case of writing to DXR just before a transmit underflow condition that would otherwise occur. After B is transmitted, C is written to DXR before the next transmit frame sync pulse occurs.

Figure 2-27. Transmit Empty


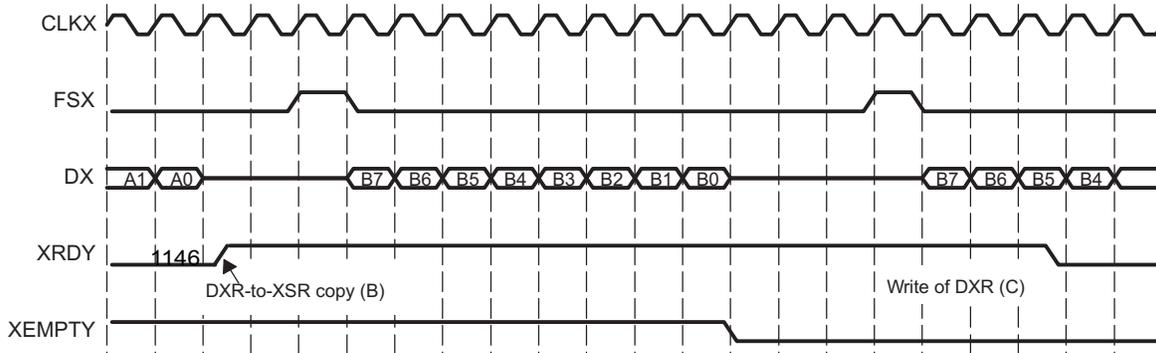


Figure 2-28. Transmit Empty Avoided

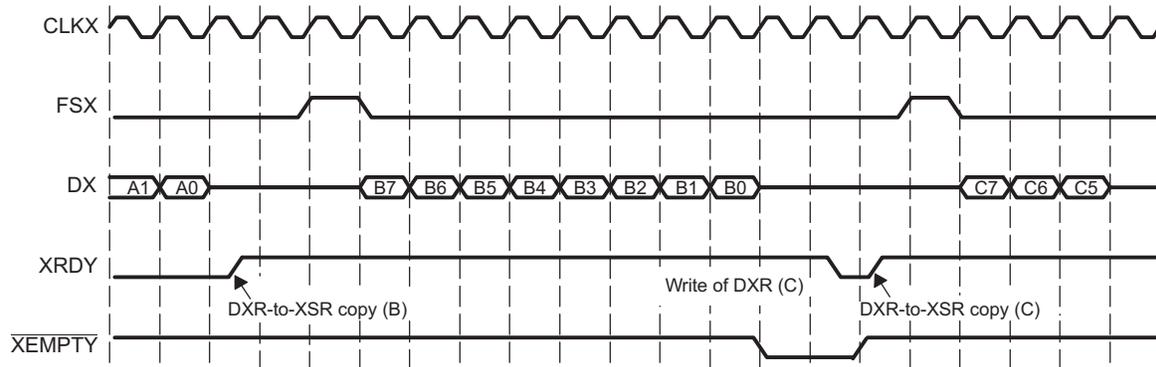

2.7.5.5 Unexpected Transmit Frame Synchronization: XSYNCERR

A transmit frame sync error (XSYNCERR) may occur the first time the transmitter is enabled (XRST = 1) after a device reset. To avoid this, after enabling the transmitter for the first time, the following procedure must be followed:

1. Wait for two CLKG cycles. The unexpected frame sync error (XSYNCERR), if any, occurs within this time period.
2. Disable the transmitter (XRST = 0). This clears any XSYNCERR.
3. Re-enable the transmitter (XRST = 1).

See also [Section 2.12](#) for details on initialization procedure.

Figure 2-29 shows the decision tree that the transmitter uses to handle all incoming frame synchronization signals. The diagram assumes that the transmitter has been started (XRST = 1). An unexpected transmit frame sync pulse is defined as a sync pulse that occurs XDATDLY bit clocks earlier than the last transmitted bit of the previous frame. Any one of three cases can occur:

- Case 1: Unexpected FSX pulses with XFIG = 1. This case is discussed in Section 2.7.4.1 and shown in Figure 2-19. In this case, unexpected FSX pulses are ignored and the transmission continues.
- Case 2: FSX pulses with normal serial port transmission. This case is discussed in Section 2.7.2. There are two possible reasons for a transmit not to be in progress:
 - This FSX pulse is the first one to occur after XRST = 1.
 - The serial port is in the interpacket intervals. The programmed data delay (XDATDLY) may start during these interpacket intervals before the first bit of the next element is transmitted. Therefore, if operating at maximum packet frequency, frame synchronization can still be received XDATDLY bit clocks before the first bit of the associated element.
- Case 3: Unexpected transmit frame synchronization with XFIG = 0. The case was shown in Figure 2-18 for frame synchronization with XFIG = 0 at maximum packet frequency. Figure 2-30 shows the case for normal operation of the serial port with interpacket intervals. In both cases, XSYNCERR in SPCR is set. XSYNCERR can be cleared only by transmitter reset or by writing a 0 to this bit in SPCR. If XINTM = 11b in SPCR, XSYNCERR drives the receive interrupt (XINT) to the CPU.

NOTE: The XSYNCERR bit in SPCR is a read/write bit, so writing a 1 to it sets the error condition. Typically, writing a 0 is expected.

Figure 2-29. Decision Tree Response to Transmit Frame Synchronization Pulse


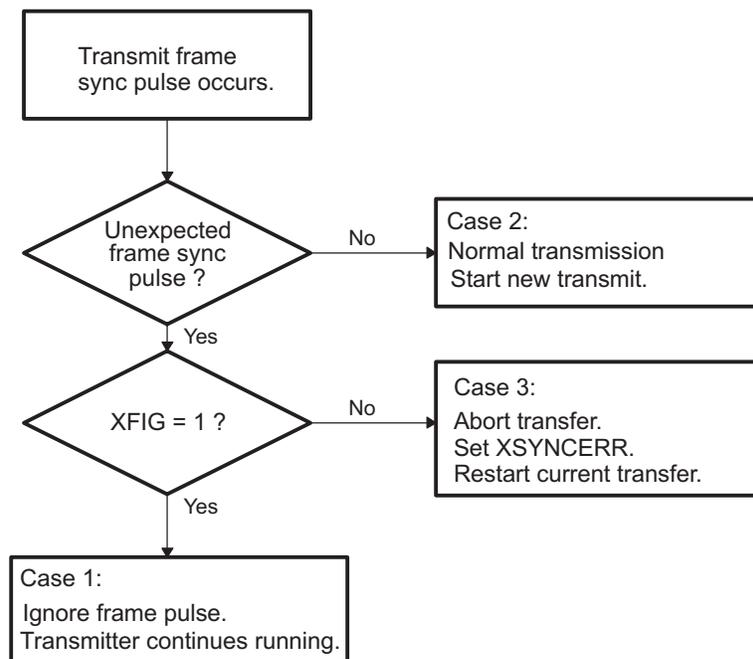


Figure 2-30. Unexpected Transmit Frame Synchronization Pulse

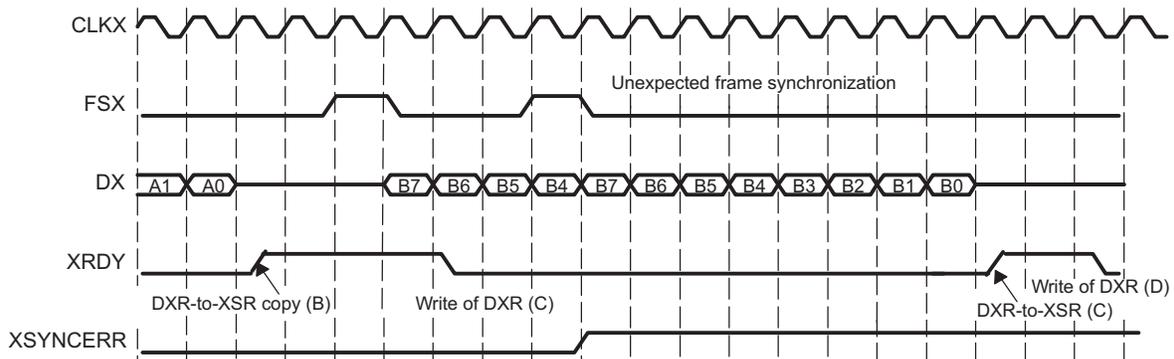


2.7.6 McBSP Buffer FIFO (BFIFO)

The BFIFO contains two FIFOs: one Read FIFO (RFIFO) and one Write FIFO (WFIFO). RFIFO and WFIFO are also referred to as Receive Buffer (RBUF) and Transmit Buffer (XBUF) in the device data manual. To ensure backward compatibility with existing software, both the Read and Write FIFOs are disabled by default. See Figure 2-31 for a high-level block diagram of the BFIFO.

The BFIFO can be enabled/disabled and configured using the Write FIFO control register (WFIFOCTL) and the Read FIFO control register (RFIFOCTL). Note that if the Read or Write FIFO is to be enabled, it must be enabled before initializing the receive/transmit section of the McBSP (see Section 2.12 for details).

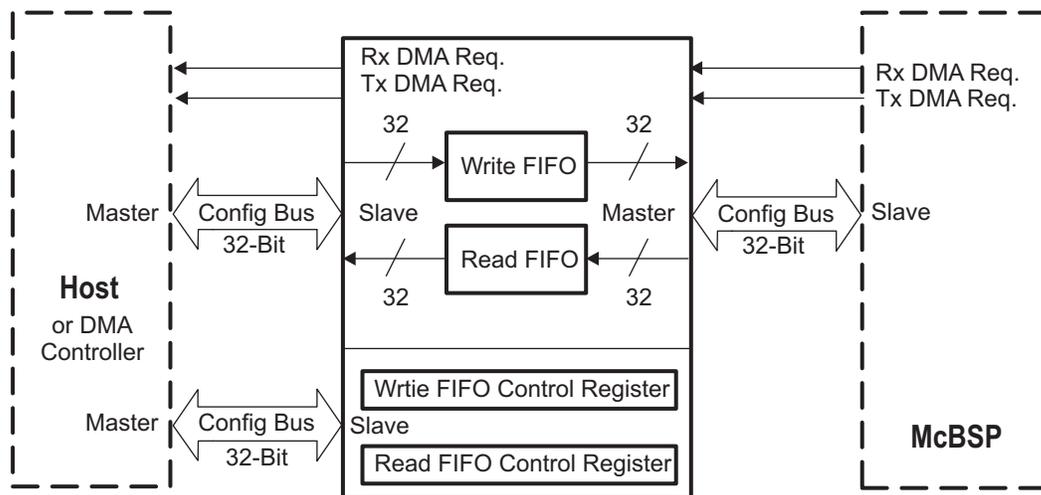Figure 2-31. McBSP Buffer FIFO (BFIFO) Block Diagram



Note that the McBSP Buffer FIFO (BFIFO) has a different memory-map (see your device-specific data manual) than the McBSP memory-mapped registers (MMRs); hence, the BFIFO is accessible by way of a different Configuration Bus.

The McBSP Buffer FIFO (BFIFO) has a different memory-map (see your device-specific data manual) than the McBSP memory-mapped registers (MMRs); therefore, the BFIFO is accessible by way of a different Configuration Bus.

2.7.6.1 BFIFO Data Transmission

When the Write FIFO is disabled, transmit DMA requests pass directly from the McBSP to the host/DMA controller. Whether the WFIFO is enabled or disabled, the McBSP generates transmit DMA requests as needed; the BFIFO is invisible to the McBSP.

When the Write FIFO is enabled, transmit DMA requests from the McBSP are sent to the BFIFO, which then generates transmit DMA requests to the host/DMA controller.

If the Write FIFO is enabled during a transmit DMA request from the McBSP, the WFIFO writes *WNUMDMA* 32-bit words to the McBSP, if and when there are at least two *WNUMDMA* words in the Write FIFO. If there are not, the WFIFO waits until this condition has been satisfied; at this point, it writes *WNUMDMA* words to the McBSP.

If the host CPU writes to the Write FIFO, independent of a transmit DMA request, the WFIFO accepts host writes until full. Beyond this point, excess data is discarded.

Note that when the WFIFO is first enabled, it immediately issues a transmit DMA request to the host. This is because it begins in an empty state and is therefore ready to accept data.

2.7.6.1.1 Transmit DMA Event Pacer

The BFIFO may be configured to delay making a transmit DMA request to the host until the Write FIFO has enough space for a specified number of words. In this situation, the number of transmit DMA requests to the host or DMA controller is reduced.

If the Write FIFO has space to accept *WNUMEVT* 32-bit words, it generates a transmit DMA request to the host and waits for a response. As soon as *WNUMEVT* words have been written to the WFIFO, the WFIFO checks again to see if there is space for *WNUMEVT* 32-bit words. If there is space, it generates another transmit DMA request to the host, and so on. In this fashion, the Write FIFO attempts to stay filled.

If transmit DMA event pacing is desired, the *WNUMEVT* bits in *WFIFOCTL* should be set to a non-zero integer multiple of the value in the *WNUMDMA* bits. If transmit DMA event pacing is not desired, the value in the *WNUMEVT* bits should be set equal to the value in the *WNUMDMA* bits.

2.7.6.2 BFIFO Data Reception

When the Read FIFO is disabled, receive DMA requests pass directly from McBSP to the host/DMA controller. Whether the RFIFO is enabled or disabled, the McBSP generates receive DMA requests as needed; the BFIFO is invisible to the McBSP.

When the Read FIFO is enabled, receive DMA requests from the McBSP are sent to the BFIFO, which then generates receive DMA requests to the host/DMA controller.

If the Read FIFO is enabled and the McBSP makes a receive DMA request, the RFIFO reads *RNUMDMA* 32-bit words from the McBSP, if and when the RFIFO has space for *RNUMDMA* words. If the RFIFO does not have space, the RFIFO waits until this condition has been satisfied; at this point, it reads *RNUMDMA* words from the McBSP.

If the host CPU reads the Read FIFO independent of a receive DMA request and the RFIFO currently contains no *RNUMEVT* words, those words will be read correctly, emptying the RFIFO.

2.7.6.2.1 Receive DMA Event Pacer

The BFIFO may be configured to delay making a receive DMA request to the host until the Read FIFO contains a specified number of words. In this situation, the number of receive DMA requests to the host or DMA controller is reduced.

If the Read FIFO contains at least *RNUMEVT* 32-bit words, it generates a receive DMA request to the host and then waits for a response. As soon as *RNUMEVT* 32-bit words have been read from the RFIFO, the RFIFO checks again to see if it contains at least another *RNUMEVT* words. If it does, it generates another receive DMA request to the host, and so on. In this fashion, the Read FIFO attempts to stay empty.

If receive DMA event pacing is desired, the *RNUMEVT* bits in *RFIFOCTL* should be set to a non-zero integer multiple of the value in *RNUMDMA* bits. If receive DMA event pacing is not desired, then the value in the *RNUMEVT* bits should be set equal to the value in the *RNUMDMA* bits.

2.7.6.3 Arbitration Between Transmit and Receive DMA Requests

If both the WFIFO and the RFIFO are enabled and a transmit DMA request and receive DMA request occur simultaneously, priority is given to the transmit DMA request. Once a transfer is in progress, it is allowed to complete.

If only the WFIFO is enabled and a transmit DMA request and receive DMA request occur simultaneously, priority is given to the transmit DMA request. Once a transfer is in progress, it is allowed to complete.

If only the RFIFO is enabled and a transmit DMA request and receive DMA request occur simultaneously, priority is given to the receive DMA request. Once a transfer is in progress, it is allowed to complete.

2.8 μ-Law/A-Law Companding Hardware Operation

Companding (compressing and expanding) hardware allows compression and expansion of data in either μ-law or A-law format. The specification for μ-law and A-law log PCM is part of the CCITT G.711 recommendation. The companding standard employed in the United States and Japan is μ-law and allows 14 bits of dynamic range. The European companding standard is A-law and allows 13 bits of dynamic range. Any values outside these ranges are set to the most positive or most negative value. Thus, for companding to work best, the data transferred to and from the McBSP via the CPU or the EDMA controller must be at least 16 bits wide.

The μ-law and A-law formats encode data into 8-bit code elements. Companded data is always 8 bits wide, so the appropriate (R/X)WDLEN1/2 must be cleared to 0, indicating an 8-bit serial data stream. If companding is enabled and either phase of the frame does not have an 8-bit element length, companding continues as if the element length is eight bits.

When companding is used, transmit data is encoded according to the specified companding law, and receive data is decoded to 2s-complement format. Companding is enabled and the desired format is selected by appropriately setting (R/X)COMPAND in the (R/X)CR. Compression occurs during the process of copying data from DXR to XSR and expansion occurs from RBR to DRR, as shown in [Figure 2-32](#).

For transmit data to be compressed, it should be 16-bit, left-justified data, such as LAW16, as shown in [Figure 2-33](#). The value can be either 13 or 14 bits wide, depending on the companding law. This 16-bit data is aligned in DXR, as shown in [Figure 2-34](#).

For reception, the 8-bit compressed data in RBR is expanded to a left-justified 16-bit data, LAW16. This can be further justified to 32-bit data by programming the RJUST bits in the serial port control register (SPCR), as shown in [Table 2-12](#).

Figure 2-32. Companding Flow

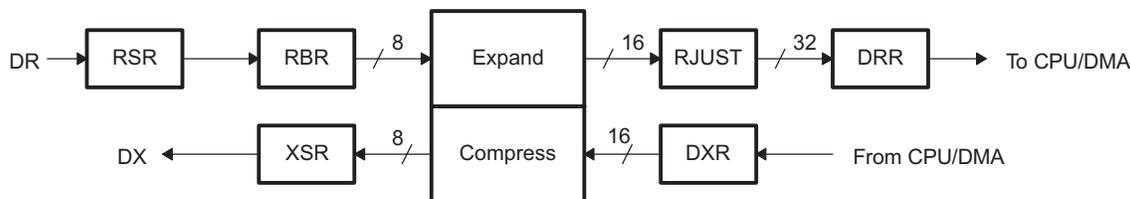


Figure 2-33. Companding Flow

LAW16	15	2	1	0
μ-Law	Value		0	0
LAW16	15	3	2	1
A-Law	Value		0	0

Figure 2-34. Transmit Data Companding Format in DXR

31	16	15	0
Don't care		LAW16	

Table 2-12. Justification of Expanded Data in DRR

RJUST Bit in SPCR	DRR Bits			
	31	16	15	0
00	0		LAW16	
01	sign		LAW16	
10	LAW16		0	
11	Reserved			


2.8.1 Companding Internal Data

If the McBSP is unused, the companding hardware can compand internal data. This hardware can be used to:

- Convert linear data to the appropriate μ-law or A-law format.
- Convert μ-law or A-law data to the linear format.
- Observe the quantization effects in companding by transmitting linear data and compressing and re-expanding this data. This is useful only if both XCOMPAND and RCOMPAND enable the same companding format.

Figure 2-35 shows the method by which the McBSP can compand internal data. The data path is indicated by the (DLB) arrow. The McBSP is enabled in digital loopback (DLB) mode with companding appropriately enabled by the RCOMPAND and XCOMPAND bits. Receive and transmit interrupts (RINT when RINTM = 0 and XINT when XINTM = 0) or synchronization events (REVT and XEVT) allow synchronization of the CPU or the EDMA controller to these conversions, respectively. The time for this companding depends on the serial bit rate selected.

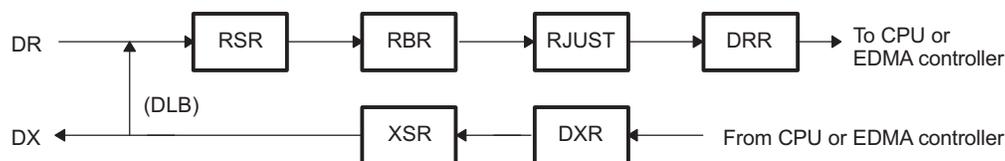Figure 2-35. Companding of Internal Data



2.8.2 Bit Ordering

Normally, all transfers on the McBSP are sent and received with the MSB first. However, certain 8-bit data protocols (that do not use companded data) require the LSB to be transferred first. By setting the (R/X)COMPAND = 01b in (R/X)CR, the bit ordering of 8-bit elements is reversed (LSB first) before being sent to the serial port. Like the companding feature, this feature is enabled only if the appropriate (R/X)WDLEN1/2 bit is cleared to 0, indicating that 8-bit elements are to be serially transferred. A 32-bit reversal feature is also available, as shown in [Section 2.5.5.7](#).

2.9 Multichannel Selection Modes

This section defines the functions and related information concerning the multichannel selection modes.

2.9.1 Channels, Blocks, and Partitions

A McBSP channel is a time slot for shifting in/out the bits of one serial word. Each McBSP supports up to 128 channels for reception and 128 channels for transmission. In the receiver and in the transmitter, the 128 available channels are divided into eight blocks that each contain 16 contiguous channels:

- Block 0: Channels 0 through 15
- Block 1: Channels 16 through 31
- Block 2: Channels 32 through 47
- Block 3: Channels 48 through 63
- Block 4: Channels 64 through 79
- Block 5: Channels 80 through 95
- Block 6: Channels 96 through 111
- Block 7: Channels 112 through 127

The blocks are assigned to partitions according to the selected partition mode. In the 2-partition mode, you assign one even-numbered block (0, 2, 4, or 6) to partition A and one odd-numbered block (1, 3, 5, or 7) to partition B. In the 8-partition mode, blocks 0 through 7 are automatically assigned to partitions, A through H, respectively.

The number of partitions for reception and the number of partitions for transmission are independent. For example, it is possible to use 2 receive partitions (A and B) and 8 transmit partitions (A through H).

2.9.2 Multichannel Selection

When McBSP uses a time-division multiplexed (TDM) data stream while communicating with other McBSPs or serial devices, the McBSP may need to receive and/or transmit on only a few channels. To save memory and bus bandwidth, you can use a multichannel selection mode to prevent data flow in some of the channels. The McBSP has one receive multichannel selection mode and three transmit multichannel selection modes.

Each channel partition has a dedicated channel enable register. If the appropriate multichannel selection mode is on, each bit in the register controls whether data flow is allowed or prevented in one of the channels that is assigned to that partition.

2.9.3 Configuring a Frame for Multichannel Selection

Before you enable a multichannel selection mode, make sure you properly configure the data frame:

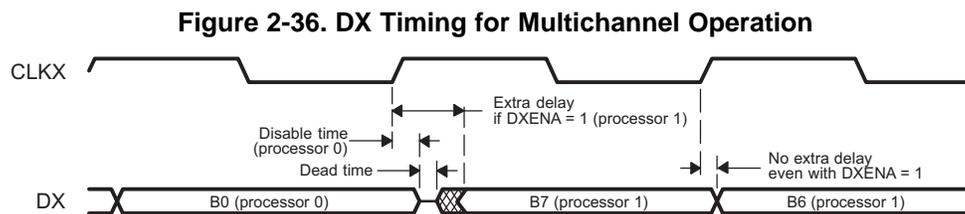
- Select a single-phase frame (RPHASE/XPHASE = 0). Each frame represents a TDM data stream.
- Set a frame length (RFRLN1/XFRLN1) that includes the highest-numbered channel that is to be used. For example, if you plan to use channels 0, 15, and 39 for reception, the receive frame length must be at least 40 (RFRLN1 = 39). If XFRLN1 = 39 in this case, the receiver creates 40 time slots per frame but only receives data during time slots 0, 15, and 39 of each frame.

NOTE: The frame-sync pulse can be generated internally by the sample rate generator or it can be supplied externally by another source. In a multichannel mode configuration with external frame-sync generation, the McBSP transmitter will ignore the first frame-sync pulse after it is taken out of reset. The transmitter will transmit only on the second frame-sync pulse. The receiver will shift in data on the first frame-sync pulse, regardless of whether it is generated internally or externally.

2.9.4 DX Enabler: DXENA

The DXENA bit in the serial port control register (SPCR) controls the high-impedance enable on the DX pin. When DXENA = 1, the McBSP enables extra delay for the DX pin turn-on time. This feature is useful for McBSP multichannel operations, such as in a time-division multiplexed (TDM) system. The McBSP supports up to 128 channels in a multichannel operation. These channels can be driven by different devices in a TDM data communication line, such as the T1/E1 line.

In any multichannel operation where multiple devices transmit over the same DX line, you need to ensure that no two devices transmit data simultaneously, which results in bus contention. Enough dead time should exist between the transmission of the first data bit of the current device and the transmission of the last data bit of the previous device. In other words, the last data bit of the previous device needs to be disabled to a high-impedance state before the next device begins transmitting data to the same data line, as shown in [Section 2.9.5](#).



When two McBSPs are used to transmit data over the same TDM line, bus contention occurs if DXENA = 0. The first McBSP turns off the transmission of the last data bit (changes DX from valid to a high-impedance state) after a disable time specified in the data manual. As shown in [Section 2.9.5](#), this disable time is measured from the CLKX active clock edge.

The next McBSP turns on its DX pin (changes from a high-impedance state to valid) after a delay time. Again, this delay time is measured from the CLKX active clock edge. Bus contention occurs because the dead time between the two devices is not enough. You need to apply alternative software or hardware methods to ensure proper multichannel operation in this case.

If you set DXENA = 1 in the second McBSP, the second McBSP turns on its DX pin after some extra delay time. This ensures that the previous McBSP on the same DX line is disabled before the second McBSP starts driving out data. The DX enabler controls only the high-impedance enable on the DX pin, not the data itself. Data is shifted out to the DX pin at the same time as in the case when DXENA = 0. The only difference is that with DXENA = 1, the DX pin is masked to a high-impedance state for some extra CPU cycles before the data is seen on the TDM data line. Therefore, only the first bit of data is delayed. Refer to the specific device datasheet for the exact amount of delay.

2.9.5 Using Two Partitions

For multichannel selection operation in the receiver and/or the transmitter, you can use two partitions or eight partitions. If you choose the 2-partition mode (RMCME = 0 for reception, XMCME = 0 for transmission), McBSP channels are activated using an alternating scheme. In response to a frame-sync pulse, the receiver or transmitter begins with the channels in partition A and then alternates between partitions B and A until the complete frame has been transferred. When the next frame-sync pulse occurs, the next frame is transferred, beginning with the channels in partition A.

2.9.5.1 Assigning Blocks to Partitions A and B

For reception, any two of the eight receive-channel blocks can be assigned to receive partitions A and B (see [Table 2-13](#)), which means up to 32 receive channels can be enabled at any given point in time. Similarly, any two of the eight transmit-channel blocks (up to 32 enabled transmit channels) can be assigned to transmit partitions A and B (see [Table 2-14](#)). You can dynamically change which blocks of channels are assigned to the partitions, see [Section 2.9.5.2](#).

For reception:

- Assign an even-numbered channel block (0, 2, 4, or 6) to receive partition A by writing to the RPABLK bit in the multichannel control register (MCR). In the receive multichannel selection mode, the channels in this partition are controlled by the enhanced receive channel enable register partition A/B (RCERE0).
- Assign an odd-numbered block (1, 3, 5, or 7) to receive partition B with the RPBBLK bit in MCR. In the receive multichannel selection mode, the channels in this partition are controlled by the enhanced receive channel enable register partition A/B (RCERE0).

For transmission:

- Assign an even-numbered channel block (0, 2, 4, or 6) to transmit partition A by writing to the XPABLK bit in the multichannel control register (MCR). In one of the transmit multichannel selection modes, the channels in this partition are controlled by the enhanced transmit channel enable register partition A/B (XCERE0).
- Assign an odd-numbered block (1, 3, 5, or 7) to transmit partition B with the XPBBLK bit in MCR. In one of the transmit multichannel selection modes, the channels in this partition are controlled by the enhanced transmit channel enable register partition A/B (XCERE0).

Table 2-13. Receive Channel Assignment and Control When Two Receive Partitions are Used


Receive Partition	Assigned Block of Receive Channels	RPABLK Bit in MCR	RPBBLK Bit in MCR	RCERE0 Bits
A	Block 0: channels 0 through 15	0	–	RCE0-RCE15
A	Block 2: channels 32 through 47	1h	–	RCE0-RCE15
A	Block 4: channels 64 through 79	2h	–	RCE0-RCE15
A	Block 6: channels 96 through 111	3h	–	RCE0-RCE15
B	Block 1: channels 16 through 31	–	0	RCE16-RCE31
B	Block 3: channels 48 through 63	–	1h	RCE16-RCE31
B	Block 5: channels 80 through 95	–	2h	RCE16-RCE31
B	Block 7: channels 112 through 127	–	3h	RCE16-RCE31

Table 2-14. Transmit Channel Assignment and Control When Two Transmit Partitions are Used

Transmit Partition	Assigned Block of Transmit Channels	XPABLK Bit in MCR	XPBBLK Bit in MCR	XCERE0 Bits
A	Block 0: channels 0 through 15	0	–	XCE0-XCE15
A	Block 2: channels 32 through 47	1h	–	XCE0-XCE15
A	Block 4: channels 64 through 79	2h	–	XCE0-XCE15
A	Block 6: channels 96 through 111	3h	–	XCE0-XCE15
B	Block 1: channels 16 through 31	–	0	XCE16-XCE31
B	Block 3: channels 48 through 63	–	1h	XCE16-XCE31
B	Block 5: channels 80 through 95	–	2h	XCE16-XCE31
B	Block 7: channels 112 through 127	–	3h	XCE16-XCE31

Figure 2-37 shows an example of alternating between the channels of partition A and the channels of partition B. Channels 0-15 have been assigned to partition A, and channels 16-31 have been assigned to partition B. In response to a frame-sync pulse, the McBSP begins a frame transfer with partition A and then alternates between partitions B and A until the complete frame is transferred.

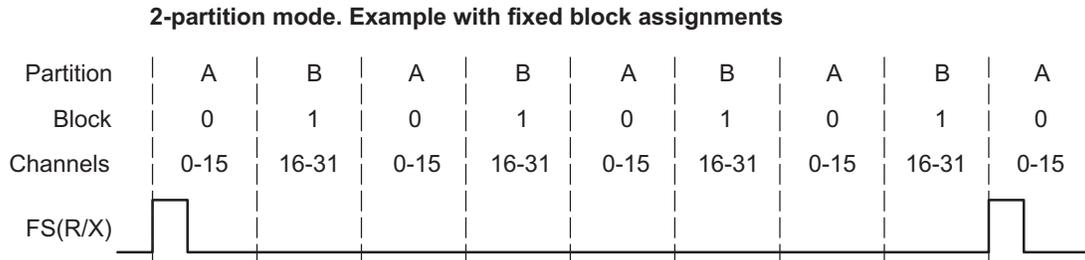Figure 2-37. Alternating Between the Channels of Partition A and the Channels of Partition B




2.9.5.2 Reassigning Blocks During Reception/Transmission

If you want to use more than 32 channels, you can change which channel blocks are assigned to partitions A and B during the course of a data transfer. However, these changes must be carefully timed. While a partition is being transferred, the associated block assignment bits cannot be modified, and its associated channel enable register cannot be modified. For example, if block 3 is being transferred and block 3 is assigned to partition A, you cannot modify (R/X)PABLK to assign different channels to partition A, and you cannot modify (R/X)CERE0 to change the channel configuration for partition A. Several features of the McBSP help to time the reassignment:

- The block of channels currently involved in reception/transmission (the current block) is reflected in the RCBLK/XCBLK bits. Your program can poll these bits to determine which partition is active. When a partition is not active, it is safe to change its block assignment and channel configuration.
- At the end of every block (at the boundary of two partitions), an interrupt can be sent to the CPU. In response to the interrupt, the CPU can then check the RCBLK/XCBLK bits and update the inactive partition.

Figure 2-38 shows an example of reassigning channels throughout a data transfer. In response to a frame-sync pulse, the McBSP alternates between partitions A and B. Whenever partition B is active, the CPU changes the block assignment for partition A. Whenever partition A is active, the CPU changes the block assignment for partition B.

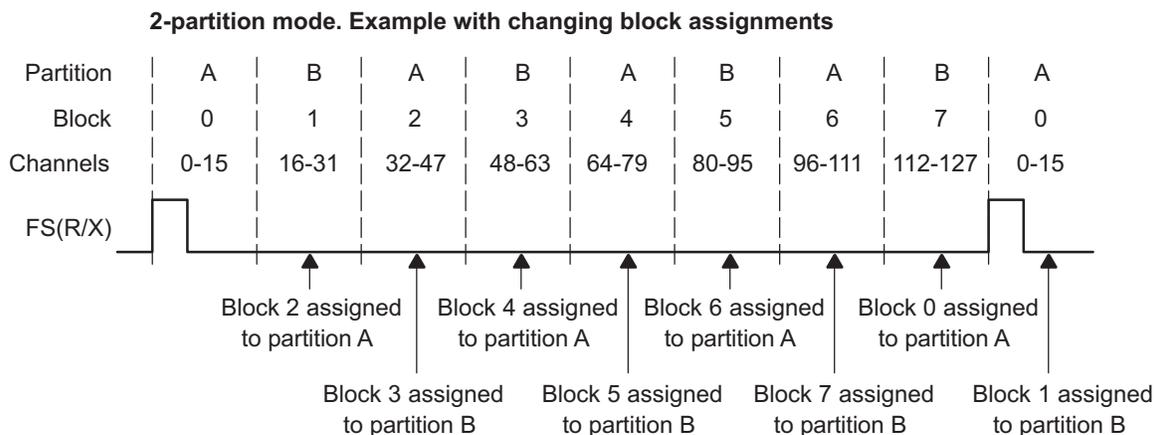Figure 2-38. Reassigning Channel Blocks Throughout a McBSP Data Transfer



2.9.6 Using Eight Partitions

For multichannel selection operation in the receiver and/or the transmitter, you can use eight partitions or two partitions. If you choose the 8-partition mode (RMCME = 1 for reception, XMCME = 1 for transmission), McBSP partitions are activated in the following order: A, B, C, D, E, F, G, H. In response to a frame-sync pulse, the receiver or transmitter begins with the channels in partition A and then continues with the other partitions in order until the complete frame has been transferred. When the next frame-sync pulse occurs, the next frame is transferred, beginning with the channels in partition A. In the 8-partition mode, the (R/X)PABLK and (R/X)PBBLK bits are ignored and the 16-channel blocks are assigned to the partitions as shown in Table 2-15 and Table 2-16. These assignments cannot be changed. Table 2-15 and Table 2-16 also show the registers used to control the channels in the partitions.

Table 2-15. Receive Channel Assignment and Control When Eight Receive Partitions are Used


Receive Partition	Assigned Block of Receive Channels	Register Used For Channel Control
A	Block 0: channels 0 through 15	RCERE0
B	Block 1: channels 16 through 31	RCERE0
C	Block 2: channels 32 through 47	RCERE1
D	Block 3: channels 48 through 63	RCERE1
E	Block 4: channels 64 through 79	RCERE2
F	Block 5: channels 80 through 95	RCERE2
G	Block 6: channels 96 through 111	RCERE3
H	Block 7: channels 112 through 127	RCERE3

Table 2-16. Transmit Channel Assignment and Control When Eight Transmit Partitions are Used

Transmit Partition	Assigned Block of Transmit Channels	Register Used For Channel Control
A	Block 0: channels 0 through 15	XCERE0
B	Block 1: channels 16 through 31	XCERE0
C	Block 2: channels 32 through 47	XCERE1
D	Block 3: channels 48 through 63	XCERE1
E	Block 4: channels 64 through 79	XCERE2
F	Block 5: channels 80 through 95	XCERE2
G	Block 6: channels 96 through 111	XCERE3
H	Block 7: channels 112 through 127	XCERE3

Figure 2-39 shows an example of the McBSP using the 8-partition mode. In response to a frame-sync pulse, the McBSP begins a frame transfer with partition A and then activates B, C, D, E, F, G, and H to complete a 128-word frame.

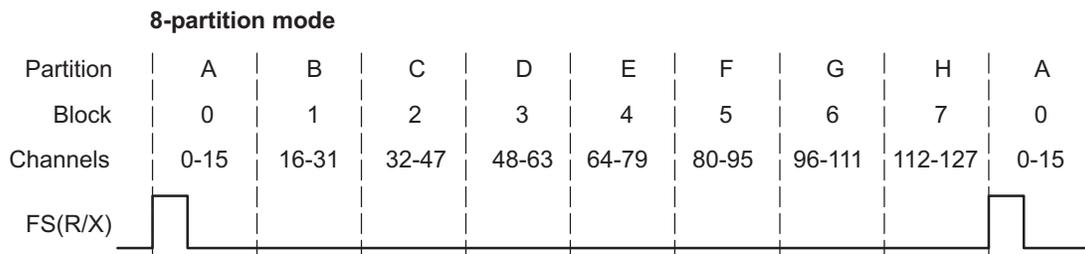Figure 2-39. McBSP Data Transfer in the 8-Partition Mode



2.9.7 Receive Multichannel Selection Mode

The RMCM bit in the multichannel control register (MCR) determines whether all channels or only selected channels are enabled for reception. When RMCM = 0, all 128 receive channels are enabled and cannot be disabled. When RMCM = 1, the receive multichannel selection mode is enabled. In this mode:

- Channels can be individually enabled or disabled. The only channels enabled are those selected in the appropriate enhanced receive channel enable register (RCEREn). The way channels are assigned to the RCEREn depends on the number of receive channel partitions (2 or 8), as defined by the RMCME bit in MCR.
- If a receive channel is disabled, any bits received in that channel are passed only as far as the receive buffer register (RBR). The receiver does not copy the content of the RBR to the DRR, and as a result, does not set the receiver ready bit (RRDY). Therefore, no DMA synchronization event (REVT) is generated, and if the receiver interrupt mode depends on RRDY (RINTM = 0), no interrupt is generated.

As an example of how the McBSP behaves in the receive multichannel selection mode, suppose you enable only channels 0, 15, and 39 and that the frame length is 40. The McBSP:

1. Accepts bits shifted in from the DR pin in channel 0.
2. Ignores bits received in channels 1-14.
3. Accepts bits shifted in from the DR pin in channel 15.
4. Ignores bits received in channels 16-38.
5. Accepts bits shifted in from the DR pin in channel 39.

2.9.8 Transmit Multichannel Selection Mode

The XMCM bit in the multichannel control register (MCR) determines whether all channels or only selected channels are enabled and unmasked for transmission. The McBSP has three transmit multichannel selection modes (XMCM = 1, XMCM = 2h, and XMCM = 3h), which are described in [Table 2-17](#).

Table 2-17. Selecting a Transmit Multichannel Selection Mode With the XMCM Bits

XMCM Bit in MCR	Transmit Multichannel Selection Mode
0	No transmit multichannel selection mode is on. All channels are enabled and unmasked. No channels can be disabled or masked.
1h	All channels are disabled unless they are selected in the appropriate enhanced transmit channel enable register (XCERE <i>n</i>). If enabled, a channel in this mode is also unmasked. The XMCME bit in MCR determines whether 32 channels or 128 channels are selectable in XCERE <i>n</i> .
2h	All channels are enabled, but they are masked unless they are selected in the appropriate enhanced transmit channel enable register (XCERE <i>n</i>). The XMCME bit in MCR determines whether 32 channels or 128 channels are selectable in XCERE <i>n</i> .
3h	This mode is used for symmetric transmission and reception. All channels are disabled for transmission unless they are enabled for reception in the appropriate enhanced receive channel enable register (RCERE <i>n</i>). Once enabled, they are masked unless they are also selected in the appropriate enhanced transmit channel enable register (XCERE <i>n</i>). The XMCME bit in MCR determines whether 32 channels or 128 channels are selectable in RCERE <i>n</i> and XCERE <i>n</i> .

As an example of how the McBSP behaves in a transmit multichannel selection mode, suppose that XMCM = 1 (all channels disabled unless individually enabled) and that you have enabled only channels 0, 15, and 39. Suppose also that the frame length is 40. The McBSP:

1. Shifts data to the DX pin in channel 0.
2. Places the DX pin in the high-impedance state in channels 1–14.
3. Shifts data to the DX pin in channel 15.
4. Places the DX pin in the high-impedance state in channels 16–38.
5. Shifts data to the DX pin in channel 39.

2.9.8.1 Disabling/Enabling Versus Masking/Unmasking

For transmission, a channel can be:

- Enabled and unmasked (transmission can begin and can be completed)
- Enabled but masked (transmission can begin but cannot be completed)
- Disabled (transmission cannot occur)

The following definitions explain the channel control options:

Enabled channel — A channel that can begin transmission by passing data from the data transmit register (DXR) to the transmit shift register (XSR).

Masked channel — A channel that cannot complete transmission. The DX pin is held in the high-impedance state; data cannot be shifted out on the DX pin.

In systems where symmetric transmit and receive provides software benefits, this feature allows transmit channels to be disabled on a shared serial bus. A similar feature is not needed for reception because multiple receptions cannot cause serial bus contention.

Disabled channel — A channel that is not enabled. A disabled channel is also masked.

Because no DXR-to-XSR copy occurs, the XRDY bit in SPCR is not set. Therefore, no DMA synchronization event (XEVT) is generated, and if the transmit interrupt mode depends on XRDY (XINTM = 0 in SPCR), no interrupt is generated.

The XEMPTY bit in SPCR is not affected.

Unmasked channel — A channel that is not masked. Data in the XSR is shifted out on the DX pin.

2.9.8.2 Activity on McBSP Pins for Different Values of XMCM

Figure 2-40 shows the activity on the McBSP pins for the various XMCM values. In all cases, the transmit frame is configured as follows:

- In transmit control register (XCR):
 - XPHASE = 0: Single-phase frame (required for multichannel selection modes)
 - XFRLEN1 = 3h: 4 words per frame
 - XWDLEN1 = 0: 8 bits per word
- In multichannel control register (MCR):
 - XMCME = 0: 2-partition mode (only partitions A and B used)

In the case where XMCM = 3h, transmission and reception are symmetric, which means the corresponding bits for the receiver (RPHASE, RFRLEN1, RWDLEN1, and RMCME) must have the same values as XPHASE, XFRLEN1, and XWDLEN1, respectively.

In Figure 2-40, the arrows showing where the various events occur are only sample indications. Wherever possible, there is a time window in which these events can occur.

2.9.9 Using Interrupts Between Block Transfers


When a multichannel selection mode is used, an interrupt request can be sent to the CPU at the end of every 16-channel block (at the boundary between partitions and at the end of the frame). In the receive multichannel selection mode, a receive interrupt (RINT) request is generated at the end of each block transfer if the RINTM bit in the serial port control register (SPCR) is set to 1. In any of the transmit multichannel selection modes, a transmit interrupt (XINT) request is generated at the end of each block transfer if the XINTM bit in SPCR is set to 1. When RINTM/XINTM = 1, no interrupt is generated unless a multichannel selection mode is on.

These interrupt pulses are active high and last for two McBSP internal input clock cycles.


This type of interrupt is especially helpful if you are using the two-partition mode and you want to know when you can assign a different block of channels to partition A or B.

Figure 2-40. Activity on McBSP Pins for the Possible Values of XMCM

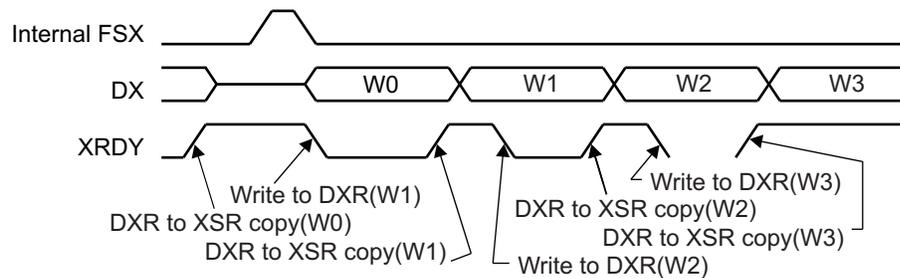
(a) XMCM = 0: All channels enabled and unmasked



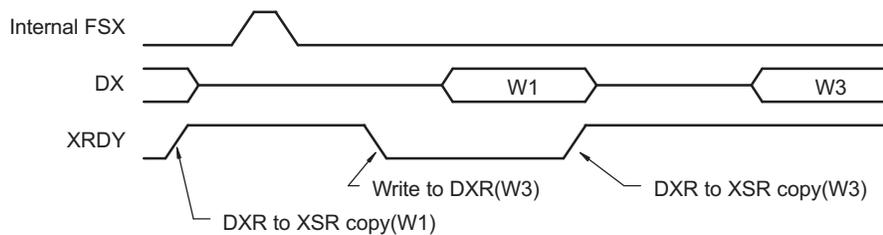
(b) XMCM = 1h, XPABLK = 0, XCERE0 = 0000 000Ah: Only channels 1 and 3 enabled and unmasked



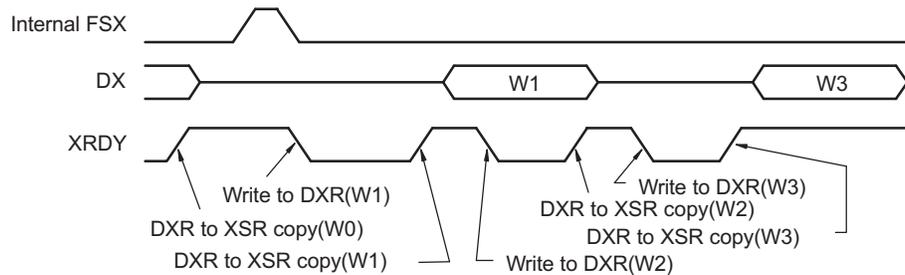(c) XMCM = 2h, XPABLK = 0, XCERE0 = 0000 000Ah: All channels enabled, only 1 and 3 unmasked



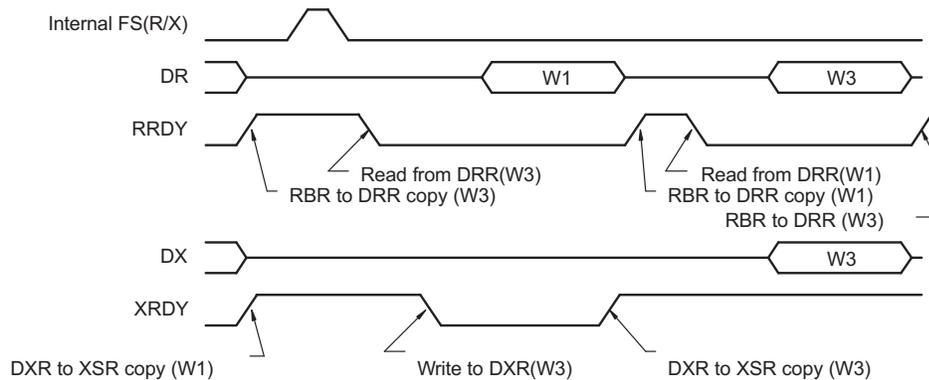(d) XMCM = 3h, RPABLK = 0, XPABLK = x, RCERE0 = 0000 0008h, XCERE0 = 0000 000Ah: Receive channels: 1 and 3 enabled; transmit channels: 1 and 3 enabled, but only 3 unmasked



2.10 SPI Operation Using the Clock Stop Mode

The McBSP on this device does not support the SPI protocol.

2.11 Resetting the Serial Port: RRST, XRST, GRST, and RESET

Device reset or McBSP reset: When the McBSP is reset by device reset or McBSP reset, the state machine is reset to its initial state. All counters and status bits are reset. This includes the receive status bits RFULL, RRDY, and RSYNCERR, and the transmit status bits XEMPTY, XRDY, and XSYNCERR in the serial port control register (SPCR).

The serial port can be reset in the following two ways:

- Device reset (RESET pin is low) places the receiver, the transmitter, and the sample rate generator in reset. When the device reset is removed (RESET = 1), FRST = GRST = RRST = XRST = 0 in SPCR, keeping the entire serial port in the reset state.
- The serial port transmitter and receiver can be independently reset by the XRST and RRST bits in SPCR. The sample rate generator is reset by the GRST bit in SPCR.

Table 2-18 shows the state of the McBSP pins when the serial port is reset by these methods.

Table 2-18. Reset State of McBSP Pins

Pin	Direction	Device Reset (RESET = 0)	McBSP Reset
DR	I	Input	Receiver Reset (RRST = 0 and GRST = 1)
			Input
CLKR	I/O/Z	Input	Known state if input; CLKR if output
FSR	I/O/Z	Input	Known state if input; FSRP (inactive state) if output
CLKS	I	Input	Input
DX	O/Z	High impedance	Transmitter Reset (XRST = 0 and GRST = 1)
			High impedance
CLKX	I/O/Z	Input	Known state if input; CLKX if output
FSX	I/O/Z	Input	Known state if input; FSXP (inactive state) if output
CLKS	I	Input	Input

2.11.1 Software Reset Considerations

McBSP reset: When the receiver and transmitter reset bits, RRST and XRST in SPCR, are written with 0, the respective portions of the McBSP are reset and activity in the corresponding section stops. All input-only pins, such as DR, and all other pins that are configured as inputs are in a known state. FS(R/X) is driven to its inactive state (same as its polarity bit, FS(R/X)P) if it is an output. If CLK(R/X) are programmed as outputs, they are driven by CLKG, provided that GRST = 1. The DX pin is in the high-impedance state when the transmitter is reset.

During normal operation, the sample rate generator can be reset by writing a 0 to GRST. The sample rate generator should only be reset when not being used by the transmitter or the receiver. In this case, the internal sample rate generator clock CLKG, and its frame sync signal (FSG) is driven inactive (low). When the sample rate generator is not in the reset state (GRST = 1), FSR and FSX are in an inactive state when RRST = 0 and XRST = 0, respectively, even if they are outputs driven by FSG. This ensures that when only one portion of the McBSP is in reset, the other portion can continue operation when FRST = 1 and frame sync is driven by FSG.

Sample-rate generator reset: As mentioned previously, the sample rate generator is reset when the device is reset or when its reset bit, GRST in SPCR, is written with 0.

Emulator software reset: In the event of an emulator software reset initiated from the DSP, the McBSP register values are reset to their default values.

2.11.2 Hardware Reset Considerations

When the McBSP is reset due to device reset, the entire serial port (including the transmitter, receiver, and the sample rate generator) is reset. All input-only pins and 3-state pins should be in a known state. The output-only pin, DX, is in the high-impedance state. When the device is pulled out of reset, the serial port remains in the reset condition (RRST = XRST = FRST = GRST = 0 in SPCR).

2.12 McBSP Initialization Procedure

The McBSP initialization procedure varies depending on the specific system setup. [Section 2.12.1](#) provides a general initialization sequence.

The transmitter and the receiver of the McBSP can operate independently from each other. Therefore, they can be placed in or taken out of reset individually by modifying only the desired bit in the registers without disrupting the other portion. The steps in the following sections discuss the initialization procedure for taking both the transmitter and the receiver out of reset. To initialize only one portion, configure only the portion desired.

The McBSP internal sample rate generator and internal frame sync generator are shared between the transmitter and the receiver. [Table 2-19](#) and [Table 2-20](#) describe their usage based upon the clock and frame sync configurations of the receiver and transmitter, respectively.

Table 2-19. Receiver Clock and Frame Configurations

CLKR Source	FSR Source	Comment on Configuration
Internal	Internal	The McBSP internal sample rate generator and internal frame sync generator are used by the receiver.
External	Internal	The McBSP internal sample rate generator and internal frame sync generator are used by the receiver.
Internal	External	The McBSP internal sample rate generator is used but the internal frame sync generator is not used by the receiver.
External	External	The McBSP internal sample rate generator and internal frame sync generator are not used by the receiver.

Table 2-20. Transmitter Clock and Frame Configurations

CLKX Source	FSX Source	Comment on Configuration
Internal	Internal	The McBSP internal sample rate generator is used by the transmitter. The transmitter can generate frame sync FSX in one of two ways. First, it can generate FSX by using the internal frame sync generator (FSGM = 1). Alternatively, it can generate FSX upon each DXR-to-XSR copy (FSGM = 0). In this case, the internal frame sync generator can be kept in reset (FRST = 0) if it is not used by the receiver. You can follow the general initialization sequence in Section 2.12.1 .
External	Internal	The McBSP internal sample rate generator and internal frame sync generator are not used by the transmitter. This configuration is only valid with FSGM = 0 where the McBSP transmitter generates FSX upon each DXR-to-XSR copy. You can follow the general initialization sequence in Section 2.12.1 .
Internal	External	The McBSP internal sample rate generator is used by the transmitter but the internal frame sync generator is not.
External	External	The McBSP internal sample rate generator and internal frame sync generator are not used by the transmitter.

2.12.1 General Initialization Procedure

This section provides the general initialization procedure.

2.12.1.1 General Initialization

- Step 1. With the McBSP still in reset and the Power and Sleep Controller (PSC) in the default state:
 - a. Program the PSC registers to put the McBSP in the enable state if required (see the *Power and Sleep Controller (PSC) User Guide* and the device-specific data manual).
 - b. Perform the necessary device pin multiplexing setup (see your device-specific data manual).
- Step 2. Ensure that no portion of the McBSP is using the internal sample rate generator signal CLKG and the internal frame sync generator signal FSG (GRST = FRST = 0 in SPCR). The respective portion of the McBSP must be in reset (XRST = 0 and/or RRST = 0 in SPCR).
- Step 3. Program the control registers as required. Ensure the internal sample rate generator and the internal frame sync generator are still in reset (GRST = FRST = 0). Also ensure the respective portion of the McBSP is still in reset in this step (XRST = 0 and/or RRST = 0).
- Step 4. Wait for internal synchronization. If the external device provides the bit clock, wait for two CLKR or CLKX cycles. If the McBSP generates the bit clock as a clock master, wait for two CLKSRG cycles. In this case, the clock source to the sample rate generator (CLKSRG) is selected by the CLKSM bit in SRGR and the SCLKME bit in PCR.
- Step 5. Skip this step if the bit clock is provided by the external device. This step applies only if the McBSP is the bit clock master and the internal sample rate generator is used.
 - a. Start the sample rate generator by setting the GRST bit to 1. Wait two CLKG bit cycles for synchronization. CLKG is the output of the sample rate generator.
 - b. On the next rising edge of CLKSRG, CLKG transitions to 1 and starts clocking with a frequency equal to $1/(\text{CLKGDV} + 1)$ of the sample rate generator source clock CLKSRG.
- Step 6. Skip this step if the transmitter is not used. If the transmitter is used, a transmit sync error (XSYNCERR) may occur when it is enabled for the first time after device reset. The purpose of this step is to clear any potential XSYNCERR that occurs on the transmitter at this time:
 - a. Set the XRST bit to 1 to enable the transmitter.
 - b. Wait for any unexpected frame sync error to occur. If the external device provides the bit clock, wait for two CLKR or CLKX cycles. If the McBSP generates the bit clock as a clock master, wait for two CLKG cycles. The unexpected frame sync error (XSYNCERR), if any, occurs within this time period.
 - c. Disable the transmitter (XRST = 0). This clears any outstanding XSYNCERR.
- Step 7. Setup data acquisition as required:
 - a. If the EDMA is used to service the McBSP, setup data acquisition as desired and start the EDMA in this step, before the McBSP is taken out of reset.
 - b. If CPU interrupt is used to service the McBSP, enable the transmit and/or receive interrupt as required.
 - c. If CPU polling is used to service the McBSP, no action is required in this step.
- Step 8. Set the XRST bit and/or the RRST bit to 1 to enable the corresponding section of the McBSP. The McBSP is now ready to transmit and/or receive.
 - a. If the EDMA is used to service the McBSP, it services the McBSP automatically upon receiving the XEVT and/or REVT.
 - b. If CPU interrupt is used to service the McBSP, the interrupt service routine is automatically entered upon receiving the XINT and/or RINT.
 - c. If CPU polling is used to service the McBSP, it can do so now by polling the XRDY and/or RRDY bit.

- Step 9. If the internal frame sync generator is used (FSGM = 1), proceed to the additional steps to turn on the internal frame sync generator. Initialization is complete if any one of the following is true:
- The external device generates frame sync FSX and/or FSR. The McBSP is now ready to transmit and/or receive upon receiving external frame sync.
 - The McBSP generates transmit frame sync FSX upon each DXR-to-XSR copy. The internal frame sync generator is not used (FSGM = 0).
- The following additional steps to turn on the internal frame sync generator apply only if FSGM = 1:
- Step 10. Skip this step if the transmitter is not used. If the transmitter is used, ensure that DXR is serviced before you start the internal frame sync generator. You can do so by checking XEMPTY = 1 (XSR is not empty) in SPCR.
- Step 11. Set the FRST bit to 1 to start the internal frame sync generator. The internal frame sync signal FSG is generated on a CLKG active edge after 7 to 8 CLKG clocks have elapsed.

2.12.2 Special Case: External Device is the Transmit Frame Master

Care must be taken if the transmitter expects a frame sync from an external device. After the transmitter comes out of reset (XRST = 1), it waits for a frame sync from the external device. If the first frame sync arrives very shortly after the transmitter is enabled, the CPU or EDMA controller may not have a chance to service the data transmit register (DXR). In this case, the transmitter shifts out the default data in the transmit shift register (XSR) instead of the desired value, which has not yet arrived in DXR. This causes problems in some applications, as the first data element in the frame is invalid. The data stream appears element-shifted (the first data word may appear in the second channel instead of the first).

To ensure proper operation when the external device is the frame master, you must assure that DXR is already serviced with the first word when a frame sync occurs. To do so, you can keep the transmitter in reset until the first frame sync is detected. Software is set up such that it will only take the transmitter out of reset (XRST = 1) promptly after detecting the first frame sync. This assures that the transmitter does not begin data transfers at the data pin during the first frame sync period. This also provides almost an entire frame period for the DSP to service DXR with the first word before the second frame sync occurs. The transmitter only begins data transfers upon receiving the second frame sync. At this point, DXR is already serviced with the first word.

2.12.2.1 How to Detect First Frame Sync

Although the McBSP is capable of generating an interrupt to the CPU upon the detection of frame synchronization (XINTM = 2h and/or RINTM = 2h in the serial port control register (SPCR)), the McBSP requires the associated portion (receiver/transmitter) of the McBSP to be out of reset in order for the interrupt to be generated. Therefore, instead of directly using the McBSP interrupt to detect the first frame sync, you can use the GPIO peripheral. This can be achieved by connecting the frame sync signal to a GPIO pin. Software can either poll the GPIO pin to detect the first frame sync or program the GPIO peripheral to generate an interrupt to the CPU upon detecting the first frame sync edge. For more information on the GPIO peripheral, see the General-Purpose Input/Output (GPIO) User Guide.

The following are some recommended GPIO pin(s) on the device that you can use to detect the first McBSP external frame sync:

- **GPIO pin located near the McBSP pins.** Connect the external frame sync to both the McBSP FSX/FSR pin(s) and the dedicated GPIO pin.
- **GPIO pin multiplexed with the McBSP FSX signal.** Note that on the device, the GPIO pins (of the GPIO peripheral) are multiplexed with the McBSP pins. Software can program the device's pin multiplexing register (PINMUX) to default these pins to the GPIO function, and only switch them to the McBSP function upon detecting the first frame sync. This method is only recommended if the external device is both the frame sync and clock master; that is, the external device drives both the FSX and CLKX signals. This method is not recommended if the McBSP is the clock master (driving CLKX and/or CLKR), as the "on-the-fly" pin multiplexed switching can cause a glitch on the CLKX/CLKR pin. For more details on pin multiplexing, see the device-specific data manual.

2.12.2.2 Initialization Procedure When External Device is Frame Sync Master

The initialization procedure assumes the following:

- Using a GPIO pin multiplexed with the McBSP FSX signal. If a dedicated GPIO pin is used instead, skip step 1 and step 8b.
- Software polls the GPIO pin to detect the first frame sync. If the GPIO interrupt is used instead to detect the first frame sync, step 8 can be performed within an interrupt service routine (ISR).

2.12.2.2.1 Initialization When External Device is Frame Sync Master

- Step 1. The GPIO and McBSP signals are multiplexed together on the device. Start by programming the pin multiplexing register (PINMUX) to select the GPIO function on the GPIO/McBSP multiplexed pins. Program the GPIO peripheral so that these pins function as GPIO inputs.
- Step 2. Ensure that no portion of the McBSP is using the internal sample rate generator signal CLKG and the internal frame sync generator signal FSG (GRST = FRST = 0 in SPCR). The respective portion of the McBSP needs to be in reset (XRST = 0 and/or RRST = 0 in SPCR).
- Step 3. Program the sample rate generator register (SRGR) and other control registers as required. Ensure the internal sample rate generator and the internal frame sync generator are still in reset (GRST = FRST = 0 in SPCR). Also ensure the respective portion of the McBSP is still in reset in this step (XRST = 0 and/or RRST = 0 in SPCR).
- Step 4. Wait for proper McBSP internal synchronization:
 - a. If the external device provides the bit clock, wait for two CLKR or CLKX cycles. Skip step 5.
 - b. If the McBSP generates the bit clock as a clock master, wait for two CLKSRG cycles. In this case, the clock source to the sample rate generator (CLKSRG) is selected by the CLKSM bit in SRGR.
- Step 5. Skip this step if the bit clock is provided by the external device. This step only applies if the McBSP is the bit clock master and the internal sample rate generator is used.
 - a. Start the sample rate generator by setting the GRST bit in SPCR to 1. Wait two CLKG bit clocks for synchronization. CLKG is the output of the sample rate generator.
 - b. On the next rising edge of CLKSRG, CLKG transitions to 1 and starts clocking with a frequency equal to $1/(\text{CLKGDV} + 1)$ of the sample rate generator source clock CLKSRG.
- Step 6. A transmit sync error (XSYNCERR) may occur when it is enabled for the first time after device reset. The purpose of this step is to clear any potential XSYNCERR that occurs on the transmitter at this time:
 - a. Set the XRST bit in SPCR to 1 to enable the transmitter.
 - b. Wait for any unexpected frame sync error to occur. If the external device provides the bit clock, wait for two CLKR or CLKX cycles. If the McBSP generates the bit clock as a clock master, wait for two CLKG cycles. The unexpected frame sync error (XSYNCERR), if any, occurs within this time period.
 - c. Disable the transmitter (XRST = 0). This clears any outstanding XSYNCERR.
- Step 7. Setup data acquisition as required:
 - a. If the EDMA controller is used to service the McBSP, setup data acquisition as desired and start the EDMA controller in this step, before the McBSP is taken out of reset.
 - b. If the CPU interrupt is used to service the McBSP, no action is required in this step.
 - c. If CPU polling is used to service the McBSP, no action is required in this step.
- Step 8. Poll the GPIO pin (through reading the appropriate registers in the GPIO peripheral) to detect the first transmit frame sync from the external device. Upon detection of the first frame sync, perform the following in this order:
 - a. Set the XRST bit and/or the RRST bit to 1 to enable the respective portion of the McBSP. The McBSP is now ready to transmit and/or receive.
 - b. Program PINMUX to switch the GPIO/McBSP multiplexed pins to the McBSP function.

- Step 9. Service the McBSP:
- If CPU polling is used to service the McBSP in normal operations, it can do so upon exit from the ISR.
 - If the CPU interrupt is used to service the McBSP in normal operations, upon XRDY interrupt service routine is entered. The ISR should be setup to verify that XRDY = 1 and service the McBSP accordingly.
 - If the EDMA controller is used to service the McBSP in normal operations, it services the McBSP automatically upon receiving the XEVT and/or REVT.
- Step 10. Upon detection of the second frame sync, DXR is already serviced and the transmitter is ready to transmit the valid data. The receiver is also serviced properly by the DSP.

2.13 Interrupt Support

The McBSP can send both receive and transmit interrupts to the DSP controller. For more details on the Interrupt Controller, see the *Interrupt Controller (INTC) for KeyStone Devices User Guide (SPRUGW4)*.

2.13.1 Interrupt Events and Requests

The RRDY and XRDY bits in the serial port control register (SPCR) indicate the ready state of the McBSP receiver and transmitter, respectively. Writes and reads from the serial port can be synchronized by any of the following methods:

- Polling RRDY and XRDY bits in SPCR
- Using the events sent to the EDMA controller (REVT and XEVT)
- Using the interrupts to the CPU (RINT and XINT) that the events generate

Reading DRR and writing to DXR affects RRDY and XRDY, respectively.

2.13.1.1 Interrupt Events: RINT and XINT

The receive interrupt (RINT) and transmit interrupt (XINT) signals inform the DSP of changes to the serial port status. Three options exist for configuring these interrupts. These options are set by the receive/transmit interrupt mode bits (RINTM and XINTM) in SPCR. The possible values of the mode, and the configurations they represent, are:

- (R/X)INTM = 00b: Interrupt on every serial element by tracking the (R/X)RDY bits in SPCR.
- (R/X)INTM = 01b: Interrupt at the end of a subframe (16 elements or less) within a frame. See [Section 2.9.9](#) for more details.
- (R/X)INTM = 10b: Interrupt on detection of frame synchronization pulses. The associated portion (receiver/transmitter) of the McBSP must be out of reset.
- (R/X)INTM = 11b: Interrupt on frame synchronization error. Note that if any of the other interrupt modes are selected, (R/X)SYNCERR may be read when servicing the interrupts to detect this condition. See [Section 2.7.5.2](#) and [Section 2.7.5.5](#) for more details on synchronization error.

2.13.1.2 Receive Ready Status: RINT and RRDY

RRDY = 1 indicates that the RBR contents have been copied to DRR and that the data can now be read by either the CPU or the EDMA controller. Once that data has been read by either the CPU, RRDY is cleared to 0. Also, at device reset or serial port receiver reset (RRST = 0), the RRDY bit is cleared to 0 to indicate that no data has been received and loaded into DRR. RRDY directly drives the McBSP receive interrupt (RINT) to the CPU if RINTM = 00b (default value) in SPCR.

2.13.1.3 Transmit Ready Status: XINT and XRDY

XRDY = 1 indicates that the DXR contents have been copied to XSR and that DXR is ready to be loaded with a new data word. When the transmitter transitions from reset to non-reset (XRST transitions from 0 to 1), XRDY also transitions from 0 to 1 indicating that DXR is ready for new data. Once new data is loaded by the CPU, the XRDY bit is cleared to 0. However, once this data is copied from DXR to XSR, the XRDY bit transitions again from 0 to 1. The CPU can write to DXR although XSR has not yet been shifted out on DX. XRDY directly drives the McBSP transmit interrupt (XINT) to the CPU if XINTM = 00b (default value) in SPCR.

NOTE: If the polling method is used to service the transmitter, the CPU should wait for one McBSP bit clock (CLKX) before polling again to write the next element in DXR. This is because XRDY transitions occur based on bit clock and not CPU clock. The CPU clock is much faster and can cause false XRDY status, leading to data errors due to overwrites.

2.13.2 Interrupt Multiplexing

The RINT and XINT interrupts generated by the McBSP peripheral to the CPU are multiplexed with other interrupt sources. Refer to the device-specific data manual to determine how pin multiplexing affects the McBSP.

2.14 EDMA Event Support

There are two types of events supported: transmit and receive.

2.14.1 Receive Ready Status: REVT and RRDY

RRDY = 1 in the serial port control register (SPCR) indicates that the RBR contents have been copied to DRR and that the data can now be read by the EDMA controller. Once that data has been read by the EDMA controller, RRDY is cleared to 0. Also, at device reset or serial port receiver reset (RRST = 0 in SPCR), the RRDY bit is cleared to 0 to indicate that no data has been received and loaded into DRR. RRDY directly drives the McBSP receive event to the EDMA controller (via REVT).

For detailed information on using the EDMA to read or write to the McBSP, see the Enhanced Direct Memory Access (EDMA3) Controller chapter.

2.14.2 Transmit Ready Status: XEVT and XRDY

XRDY = 1 in the serial port control register (SPCR) indicates that the DXR contents have been copied to XSR and that DXR is ready to be loaded with a new data word. When the transmitter transitions from reset to non-reset (XRST transitions from 0 to 1 in SPCR), XRDY also transitions from 0 to 1 indicating that DXR is ready for new data. Once new data is loaded by the EDMA controller, the XRDY bit is cleared to 0.

However, once this data is copied from DXR to XSR, the XRDY bit transitions again from 0 to 1. The EDMA controller can write to DXR although XSR has not yet been shifted out on DX. XRDY directly drives the transmit synchronization event to the EDMA controller (via XEVT).

For detailed information on using the EDMA to read or write to the McBSP, see the *Enhanced Direct Memory Access 3 (EDMA3) for KeyStone Devices User Guide* ([SPRUGS5](#)) for more information.

NOTE: If the polling method is used to service the transmitter, the CPU should wait for one McBSP bit clock (CLKX) before polling again to write the next element in DXR. This is because XRDY transitions occur based on bit clock and not CPU clock. The CPU clock is much faster and can cause false XRDY status, leading to data errors due to overwrites.

2.15 Power Management

The McBSP can be placed in reduced power modes to conserve power during periods of low activity. The power management of the peripheral is controlled by the processor Power and Sleep Controller (PSC). The PSC acts as a master controller for power management for all of the peripherals on the device.

In order for the McBSP to be placed in power-down mode by the PSC, ensure that the XRDY and RRDY flags in the serial port control register (SPCR) are cleared by performing the following steps:

2.15.1 Clearing the Serial Port Control Register (SPCR)

Step 1. Place the McBSP in reset by clearing the XRST, RRST, FRST, and GRST bits to 0 in SPCR. If EDMA is being used to service the transmitter and/or the receiver, disable the associated EDMA channels.

For detailed information on using the EDMA to read or write to the McBSP, see the *Enhanced Direct Memory Access 3 (EDMA3) for KeyStone Devices User Guide (SPRUGS5)*.

Step 2. Switch the McBSP clocks and frames to internal clock source:

- a. Set the CLKSM and FSGM bits to 1 in the sample rate generator register (SRGR).
- b. Set the CLKXM, CLKRM, FSXM, and FSRM bits to 1 in the pin control register (PCR).
- c. Clear the SCLKME bit to 0 in PCR.

Step 3. Bring the McBSP out of reset by setting the XRST, RRST, and GRST bits to 1 in SPCR.

Step 4. Wait for two CLKSRG cycles for proper internal synchronization.

Step 5. Write a dummy data value to the data transmit register (DXR) in order to clear the first XRDY flag.

Step 6. Wait for at least one McBSP bit clock, since once the first dummy data value is internally copied from DXR to XSR, the XRDY flag transitions again from 0 to 1.

Step 7. Write a second dummy data value to DXR in order to clear the second XRDY flag.

Step 8. Check the RRDY flag in SPCR and if set to 1, read the data receive register (DRR) and discard the data to clear the RRDY flag.

Step 9. If required, place the McBSP in power-down mode by issuing the proper PSC commands. For detailed information on power management procedures using the PSC, see the *Power Sleep Controller (PSC) for KeyStone Devices User Guide (SPRUGV4)*.

NOTE: After waking up the McBSP from a power-down mode using the proper PSC commands, remember to reconfigure the SPCR, SRGR, and PCR registers to the clock and frame combination that they were in before entering the power-down sequence and discard the two dummy data values that were used to clear the XRDY flags. If EDMA is used, re-enable the corresponding EDMA channels.

2.16 Emulation Considerations

The FREE and SOFT bits are special emulation bits in the serial port control register (SPCR) that determine the state of the McBSP when an emulation suspend event occurs in the emulator. An emulation suspend event corresponds to any type of emulator access to the DSP, such as a hardware or software breakpoint, a probe point, or a printf instruction.

[Table 2-21](#) shows the effects of the FREE and SOFT bits on the response of the McBSP to emulation suspend events.

Table 2-21. McBSP Emulation Modes Selectable With the FREE and SOFT Bits of SPCR

FREE Bit in SPCR	SOFT Bit in SPCR	McBSP Emulation Mode
0	0	Immediate stop mode (reset condition). The transmitter and receiver stop immediately in response to an emulation suspend event.
0	1	Soft stop mode. When an emulation suspend event occurs, the transmitter stops after completion of the current word. The receiver is not affected.
1	0 or 1	Free run mode. The transmitter and receiver continue to run when an emulation suspend event occurs.

Registers

Topic	Page
3.1 Register Summary	62
3.2 Data Receive Register (DRR)	63
3.3 Data Transmit Register (DXR)	64
3.4 Serial Port Control Register (SPCR).....	65
3.5 Receive Control Register (RCR)	67
3.6 Transmit Control Register (XCR)	69
3.7 Sample Rate Generator Register (SRGR).....	71
3.8 Multichannel Control Register (MCR).....	72
3.9 Enhanced Receive Channel Enable Registers (RCERE0-RCERE3)	75
3.10 Enhanced Transmit Channel Enable Registers (XCERE0-XCERE3)	77
3.11 Pin Control Register (PCR)	79
3.12 BFIFO Revision Identification Register (BFIFOREV)	81
3.13 Write FIFO Control Register (WFIFOCTL)	82
3.14 Write FIFO Status Register (WFIFOSTS).....	83
3.15 Read FIFO Control Register (RFIFOCTL)	84
3.16 Read FIFO Status Register (RFIFOSTS).....	85

3.1 Register Summary

Table 3-1 lists the memory-mapped registers for the McBSP. See the device-specific data manual for the memory address of these registers.

NOTE: All other register offset addresses not listed in **Table 3-1** should be considered as reserved locations and the register contents should not be modified.

The McBSP control registers are accessible by the DSP CPU. You should halt the McBSP before making changes to the serial port control register (SPCR), receive control register (RCR), transmit control register (XCR), and pin control register (PCR). Changes made to these registers without halting the McBSP could result in an undefined state.

Table 3-1. McBSP Registers

Offset	Acronym	Register Name	Section
-	RBR ⁽¹⁾	Receive buffer register	—
-	RSR ⁽¹⁾	Receive shift register	—
-	XSR ⁽¹⁾	Transmit shift register	—
0h	DRR ⁽²⁾⁽³⁾	Data receive register	Section 3.2
4h	DXR ⁽³⁾	Data transmit register	Section 3.3
8h	SPCR	Serial port control register	Section 3.4
Ch	RCR	Receive control register	Section 3.5
10h	XCR	Transmit control register	Section 3.6
14h	SRGR	Sample rate generator register	Section 3.7
18h	MCR	Multichannel control register	Section 3.8
1Ch	RCERE0	Enhanced receive channel enable register partition A/B	Section 3.9
20h	XCERE0	Enhanced transmit channel enable register partition A/B	Section 3.10
24h	PCR	Pin control register	Section 3.11
28h	RCERE1	Enhanced receive channel enable register partition C/D	Section 3.9
2Ch	XCERE1	Enhanced transmit channel enable register partition C/D	Section 3.10
30h	RCERE2	Enhanced receive channel enable register partition E/F	Section 3.9
34h	XCERE2	Enhanced transmit channel enable register partition E/F	Section 3.10
38h	RCERE3	Enhanced receive channel enable register partition G/H	Section 3.9
3Ch	XCERE3	Enhanced transmit channel enable register partition G/H	Section 3.10
0h	BFIFOREV ⁽⁴⁾	BFIFO Revision Identification Register	Section 3.12
10h	WFIFOCTL ⁽⁴⁾	Write FIFO Control Register	Section 3.13
14h	WFIFOSTS ⁽⁴⁾	Write FIFO Status Register	Section 3.14
18h	RFIFOCTL ⁽⁴⁾	Read FIFO Control Register	Section 3.15
1Ch	RFIFOSTS ⁽⁴⁾	Read FIFO Status Register	Section 3.16

⁽¹⁾ The RBR, RSR, and XSR are not directly accessible via the CPUs or the EDMA controller.

⁽²⁾ The CPUs and EDMA controller can only read this register; they cannot write to it.

⁽³⁾ The DRR and DXR are accessible via the CPUs or the EDMA controller.


⁽⁴⁾ The McBSP Buffer FIFO (BFIFO) has a different memory-map (see your device-specific data manual) than the McBSP memory-mapped registers (MMRs); hence, the BFIFO is accessible by way of a different Configuration Bus.

3.2 Data Receive Register (DRR)

The data receive register (DRR) contains the value to be written to the data bus. The DRR is shown in [Figure 3-1](#) and described in [Table 3-2](#).

See the device-specific data manual for the memory address of these registers. Both the CPUs and the EDMA can access DRR in all the memory-mapped locations. An access to any EDMA bus location is equivalent to an access to DRR of the corresponding McBSP.

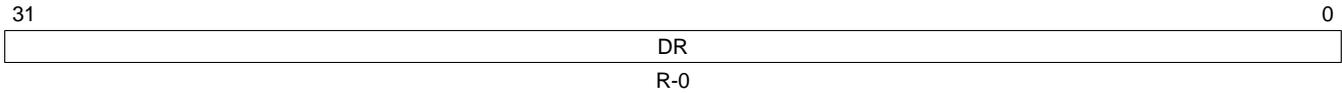Figure 3-1. Data Receive Register



LEGEND: R = Read only; -n = value after reset

Table 3-2. Data Receive Register (DRR) Field Descriptions


Bit	Field	Description
31-0	DR	Data receive register value to be written to the data bus. Value is 0-FFFF FFFFh

3.3 Data Transmit Register (DXR)

The data transmit register (DXR) contains the value to be loaded into the data transmit shift register (XSR). The DXR is shown in [Figure 3-2](#) and described in [Table 3-3](#).

See the device-specific data manual for the memory address of these registers. DXR is accessible via the peripheral bus and via the EDMA bus. Both the CPUs and the EDMA can access DXR in all the memory-mapped locations.

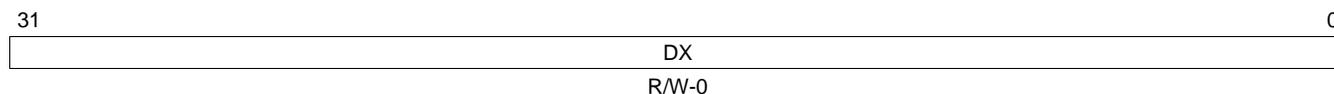Figure 3-2. Data Transmit Register



LEGEND: R = Read only; -n = value after reset

Table 3-3. Data Transmit Register (DXR) Field Descriptions

Bit	Field	Description
31-0	DX	Data transmit register value to be loaded into the data transmit shift register (XSR). Value is 0-FFFF FFFFh.

3.4 Serial Port Control Register (SPCR)

The serial port is configured via the serial port control register (SPCR) and the pin control register (PCR). The SPCR contains McBSP status control bits. The SPCR is shown in [Figure 3-3](#) and described in [Table 3-4](#).

Figure 3-3. Serial Port Control Register (SPCR)

31										26		25	24
Reserved										FREE	SOFT		
R-0										R/W-0	R/W-0		
23		22		21		20		19		18	17	16	
FRST	GRST	XINTM			XSYNCERR		XEMPTY	XRDY	XRST				
R/W-0	R/W-0	R/W-0			R/W-0		R-0	R-0	R/W-0				
15		14	13 12			11 10		8					
DLB	RJUST			CLKSTP			Reserved						
R/W-0	R/W-0			R-0			R-0						
7	6	5	4	3	2	1	0						
DXENA	Reserved	RINTM			RSYNCERR	RFUL	RRDY	RRST					
R/W-0	R-0	R/W-0			R/W-0	R-0	R-0	R/W-0					

LEGEND: R = Read only; R/W = Read/Write; -n = value after reset

Table 3-4. Serial Port Control Register (SPCR) Field Descriptions

Bit	Field	Description
31-26	Reserved	Reserved. The reserved bit location is always read as 0. A value written to this field has no effect.
25	FREE	Free-running enable mode bit. This bit is used in conjunction with SOFT bit to determine state of serial port clock during emulation halt. <ul style="list-style-type: none"> 0 = Free-running mode is disabled. During emulation halt, SOFT bit determines operation of McBSP. 1 = Free-running mode is enabled. During emulation halt, serial clocks continue to run.
24	SOFT	Soft bit enable mode bit. This bit is used in conjunction with FREE bit to determine state of serial port clock during emulation halt. This bit has no effect if FREE = 1. <ul style="list-style-type: none"> 0 = Soft mode is disabled. Serial port clock stops immediately during emulation halt, thus aborting any transmissions. 1 = Soft mode is enabled. During emulation halt, serial port clock stops after completion of current transmission.
23	FRST	Frame-sync generator reset bit. <ul style="list-style-type: none"> 0 = Frame-synchronization logic is reset. Frame-sync signal (FSG) is not generated by the sample-rate generator. 1 = Frame-sync signal (FSG) is generated after (FPER + 1) number of CLKG clocks; that is, all frame counters are loaded with their programmed values.
22	GRST	Sample-rate generator reset bit. <ul style="list-style-type: none"> 0 = Sample-rate generator is reset. 1 = Sample-rate generator is taken out of reset. CLKG is driven as per programmed value in sample-rate generator register (SRGR).
21-20	XINTM	Transmit interrupt (XINT) mode bit. <ul style="list-style-type: none"> 0 = XINT is driven by XRDY (end-of-word). 1h = Reserved 2h = XINT is generated by a new frame synchronization. 3h = XINT is generated by XSYNCERR.
19	XSYNCERR	Transmit synchronization error bit. Writing a 1 to XSYNCERR sets the error condition when the transmitter is enabled (XRST = 1). Thus, it is used mainly for testing purposes or if this operation is desired. <ul style="list-style-type: none"> 0 = No synchronization error is detected. 1 = Synchronization error is detected.
18	XEMPTY	Transmit shift register empty bit. <ul style="list-style-type: none"> 0 = XSR is empty. 1 = XSR is not empty.

Table 3-4. Serial Port Control Register (SPCR) Field Descriptions (continued)

Bit	Field	Description
17	XRDY	Transmitter ready bit. <ul style="list-style-type: none"> 0 = Transmitter is not ready. 1 = Transmitter is ready for new data in DXR.
16	XRST	Transmitter reset bit resets or enables the transmitter. <ul style="list-style-type: none"> 0 = Serial port transmitter is disabled and in reset state. 1 = Serial port transmitter is enabled.
15	DLB	Digital loop back mode enable bit. <ul style="list-style-type: none"> 0 = Digital loop back mode is disabled. 1 = Digital loop back mode is enabled.
14-13	RJUST	Receive sign-extension and justification mode bit. <ul style="list-style-type: none"> 0 = Right-justify and zero-fill MSBs in DRR. 1h = Right-justify and sign-extend MSBs in DRR. 2h = Left-justify and zero-fill LSBs in DRR. 3h = Reserved
12-11	CLKSTP	Clock stop mode bit. <ul style="list-style-type: none"> 0 = Clock stop mode is disabled. Normal clocking for non-SPI mode. 1h-3h = Reserved
10-8	Reserved	Reserved. The reserved bit location is always read as 0. A value written to this field has no effect.
7	DXENA	DX enabler bit. See Section 2.9.4 for details on the DX enabler bit. <ul style="list-style-type: none"> 0 = DX enabler is off. 1 = DX enabler is on.
6	Reserved	Reserved. The reserved bit location is always read as 0. A value written to this field has no effect.
5-4	RINTM	Receive interrupt (RINT) mode bit. <ul style="list-style-type: none"> 0 = RINT is driven by RRDY (end-of-word). 1h = Reserved 2h = RINT is generated by a new frame synchronization. 3h = RINT is generated by RSYNCERR.
3	RSYNCERR	Receive synchronization error bit. Writing a 1 to RSYNCERR sets the error condition when the receiver is enabled (RRST = 1). Thus, it is used mainly for testing purposes or if this operation is desired. <ul style="list-style-type: none"> 0 = No synchronization error is detected. 1 = Synchronization error is detected.
2	RFULL	Receive shift register full bit. <ul style="list-style-type: none"> 0 = RBR is not in overrun condition. 1 = DRR is not read, RBR is full, and RSR is also full with new word.
1	RRDY	Receiver ready bit. <ul style="list-style-type: none"> 0 = Receiver is not ready. 1 = Receiver is ready with data to be read from DRR.
0	RRST	Receiver reset bit resets or enables the receiver. <ul style="list-style-type: none"> 0 = The serial port receiver is disabled and in reset state. 1 = The serial port receiver is enabled.

3.5 Receive Control Register (RCR)

The receive control register (RCR) configures parameters of the receive operations. The RCR is shown in [Figure 3-4](#) and described in [Table 3-5](#).

Figure 3-4. Receive Control Register (RCR)

31	30	24	23	21	20	19	18	17	16
RPHASE	RFRLLEN2	RWDLEN2	RWDLEN2	RCOMPAND	RCOMPAND	RFIG	RFIG	RDATDLY	RDATDLY
R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0
15	14	8	7	5	4	3	3	0	0
Reserved	RFRLLEN1	RWDLEN1	RWDLEN1	RWDREVRS	RWDREVRS	Reserved	Reserved	Reserved	Reserved
R-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R-0	R-0	R-0	R-0

LEGEND: R = Read only; R/W = Read/Write; -n = value after reset

Table 3-5. Receive Control Register (RCR) Field Descriptions

Bit	Field	Description
31	RPHASE	Receive phases bit. <ul style="list-style-type: none"> 0 = Single-phase frame 1 = Dual-phase frame
30-24	RFRLLEN2	Specifies the receive frame length (number of words) in phase 2. <ul style="list-style-type: none"> 0 = 1 word in phase 2 1h = 2 words in phase 2 2h = 3 words in phase 2 ... 7Fh = 128 words in phase 2
23-21	RWDLEN2	Specifies the receive word length (number of bits) in phase 2. <ul style="list-style-type: none"> 0 = Receive word length is 8 bits. 1h = Receive word length is 12 bits. 2h = Receive word length is 16 bits. 3h = Receive word length is 20 bits. 4h = Receive word length is 24 bits. 5h = Receive word length is 32 bits. 6h-7h = Reserved
20-19	RCOMPAND	Receive companding mode bit. Modes other than 00 are only enabled when RWDLEN1/2 bit is 000 (indicating 8-bit data). <ul style="list-style-type: none"> 0 = No companding, data transfer starts with MSB first. 1h = No companding, 8-bit data transfer starts with LSB first. 2h = Compand using i-law for receive data. 3h = Compand using A-law for receive data.
18	RFIG	Receive frame ignore bit. <ul style="list-style-type: none"> 0 = Receive frame-synchronization pulses after the first pulse restarts the transfer. 1 = Receive frame-synchronization pulses after the first pulse are ignored.
17-16	RDATDLY	Receive data delay bit. <ul style="list-style-type: none"> 0 = 0-bit data delay 1h = 1-bit data delay 2h = 2-bit data delay 3h = Reserved
15	Reserved	Reserved. The reserved bit location is always read as 0. A value written to this field has no effect.
14-8	RFRLLEN1	Specifies the receive frame length (number of words) in phase 1. <ul style="list-style-type: none"> 0 = 1 word in phase 1 1h = 2 words in phase 1 2h = 3 words in phase 1 ... 7Fh = 128 words in phase 1

Table 3-5. Receive Control Register (RCR) Field Descriptions (continued)

Bit	Field	Description
7-5	RWDLEN1	Specifies the receive word length (number of bits) in phase 1. <ul style="list-style-type: none"> • 0 = Receive word length is 8 bits. • 1h = Receive word length is 12 bits. • 2h = Receive word length is 16 bits. • 3h = Receive word length is 20 bits. • 4h = Receive word length is 24 bits. • 5h = Receive word length is 32 bits. • 6h-7h = Reserved
4	RWDREVRS	Receive 32-bit reversal enable bit. <ul style="list-style-type: none"> • 0 = 32-bit reversal is disabled. • 1 = 32-bit reversal is enabled. 32-bit data is received LSB first. RWDLEN1/2 bit should be set to 5h (32-bit operation); RCOMPAND bit should be set to 1h (transfer starts with LSB first); otherwise, operation is undefined.
3-0	Reserved	Reserved. The reserved bit location is always read as 0. A value written to this field has no effect.

3.6 Transmit Control Register (XCR)

The transmit control register (XCR) configures parameters of the transmit operations. The XCR is shown in [Figure 3-5](#) and described in [Table 3-6](#).

Figure 3-5. Transmit Control Register (XCR)

31	30	24	23	21	20	19	18	17	16
XPHASE	XFRLEN2	XWDLEN2	XCOMPAND	XFIG	XDATDLY				
R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0				
15	14	8	7	5	4	3			
Reserved	XFRLEN1	XWDLEN1	XWDREVRS	Reserved					
R-0	R/W-0	R/W-0	R/W-0	R-0					

LEGEND: R = Read only; R/W = Read/Write; -n = value after reset

Table 3-6. Transmit Control Register (XCR) Field Descriptions

Bit	Field	Description
31	XPHASE	Transmit phases bit. <ul style="list-style-type: none"> 0 = Single-phase frame 1 = Dual-phase frame
30-24	XFRLEN2	Specifies the transmit frame length (number of words) in phase 2. <ul style="list-style-type: none"> 0 = 1 word in phase 2 1h = 2 words in phase 2 2h = 3 words in phase 2 ... 7Fh = 128 words in phase 2
23-21	XWDLEN2	Specifies the transmit word length (number of bits) in phase 2. <ul style="list-style-type: none"> 0 = Transmit word length is 8 bits. 1h = Transmit word length is 12 bits. 2h = Transmit word length is 16 bits. 3h = Transmit word length is 20 bits. 4h = Transmit word length is 24 bits. 5h = Transmit word length is 32 bits. 6h-7h = Reserved
20-19	XCOMPAND	Transmit companding mode bit. Modes other than 00 are only enabled when XWDLEN1/2 bit is 000 (indicating 8-bit data). <ul style="list-style-type: none"> 0 = No companding, data transfer starts with MSB first. 1h = No companding, 8-bit data transfer starts with LSB first. 2h = Compand using i-law for transmit data. 3h = Compand using A-law for transmit data.
18	XFIG	Transmit frame ignore bit. <ul style="list-style-type: none"> 0 = Transmit frame-synchronization pulses after the first pulse restarts the transfer. 1 = Transmit frame-synchronization pulses after the first pulse are ignored.
17-16	XDATDLY	Transmit data delay bit. <ul style="list-style-type: none"> 0 = 0-bit data delay 1h = 1-bit data delay 2h = 2-bit data delay 3h = Reserved
15	Reserved	Reserved. The reserved bit location is always read as 0. A value written to this field has no effect.
14-8	XFRLEN1	Specifies the transmit frame length (number of words) in phase 1. <ul style="list-style-type: none"> 0 = 1 word in phase 1 1h = 2 words in phase 1 2h = 3 words in phase 1 ... 7Fh = 128 words in phase 1

Table 3-6. Transmit Control Register (XCR) Field Descriptions (continued)

Bit	Field	Description
7-5	XWDLEN1	<p>Specifies the transmit word length (number of bits) in phase 1.</p> <ul style="list-style-type: none"> • 0 = Transmit word length is 8 bits. • 1h = Transmit word length is 12 bits. • 2h = Transmit word length is 16 bits. • 3h = Transmit word length is 20 bits. • 4h = Transmit word length is 24 bits. • 5h = Transmit word length is 32 bits. • 6h-7h = Reserved
4	XWDREVRS	<p>Transmit 32-bit reversal feature enable bit.</p> <ul style="list-style-type: none"> • 0 = 32-bit reversal is disabled. • 1 = 32-bit reversal is enabled. 32-bit data is transmitted LSB first. XWDLEN1/2 bit should be set to 5h (32-bit operation); XCOMPAND bit should be set to 1h (transfer starts with LSB first); otherwise, operation is undefined.
3-0	Reserved	Reserved. The reserved bit location is always read as 0. A value written to this field has no effect.

3.7 Sample Rate Generator Register (SRGR)

The sample rate generator register (SRGR) controls the operation of various features of the sample rate generator. The SRGR is shown in [Figure 3-6](#) and described in [Table 3-7](#).

Figure 3-6. Sample Rate Generator Register (SRGR)

31	30	29	28	27	16
GSYNC	CLKSP	CLKSM	FSGM	FPER	
R/W-0	R/W-0	R/W-1	R/W-0	R/W-0	
15	8 7			0	
FWID			CLKGDV		
R/W-0			R/W-1		

LEGEND: R = Read only; R/W = Read/Write; -n = value after reset

Table 3-7. Sample Rate Generator Register (SRGR) Field Descriptions

Bit	Field	Description																		
31	GSYNC	<p>Sample-rate generator clock synchronization bit is only used when the external clock (CLKS) drives the sample-rate generator clock (CLKSM = 0).</p> <ul style="list-style-type: none"> 0 = The sample-rate generator clock (CLKG) is free running. 1 = The sample-rate generator clock (CLKG) is running; however, CLKG is resynchronized and frame-sync signal (FSG) is generated only after detecting the receive frame-synchronization signal (FSR). Also, frame period (FPER) is a don't care because the period is dictated by the external frame-sync pulse. 																		
30	CLKSP	<p>CLKS polarity clock edge select bit is only used when the external clock (CLKS) drives the sample-rate generator clock (CLKSM = 0).</p> <ul style="list-style-type: none"> 0 = Rising edge of CLKS generates CLKG and FSG. 1 = Falling edge of CLKS generates CLKG and FSG. 																		
29	CLKSM	<p>Sample rate generator input clock mode bit. The sample rate generator can accept an input clock signal and divide it down according to CLKGDV to produce an output clock signal, CLKG. The frequency of CLKG is:</p> $CLKG \text{ frequency} = \text{Input clock frequency} / (CLKGDV + 1)$ <p>CLKSM is used in conjunction with the SCLKME bit in the pin control register (PCR) to determine the source for the input clock.</p> <p>A DSP reset selects the McBSP internal input clock as the input clock and forces the CLKG frequency to 1/2 the McBSP internal input clock frequency.</p> <ul style="list-style-type: none"> 0 = The input clock for the sample rate generator is taken from the CLKS pin or from the CLKR pin, depending on the value of the SCLKME bit in PCR: <table border="1" style="width: 100%; text-align: center;"> <thead> <tr> <th>CLKSM</th> <th>SCLKME</th> <th>Input Clock for Sample Rate Generator</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>Signal on CLKS pin</td> </tr> <tr> <td>0</td> <td>1</td> <td>Signal on CLKR pin</td> </tr> </tbody> </table> <ul style="list-style-type: none"> 1 = The input clock for the sample rate generator is taken from the McBSP internal input clock or from the CLKX pin, depending on the value of the SCLKME bit in PCR: <table border="1" style="width: 100%; text-align: center;"> <thead> <tr> <th>CLKSM</th> <th>SCLKME</th> <th>Input Clock for Sample Rate Generator</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>0</td> <td>McBSP internal input clock</td> </tr> <tr> <td>1</td> <td>1</td> <td>Signal on CLKX pin</td> </tr> </tbody> </table>	CLKSM	SCLKME	Input Clock for Sample Rate Generator	0	0	Signal on CLKS pin	0	1	Signal on CLKR pin	CLKSM	SCLKME	Input Clock for Sample Rate Generator	1	0	McBSP internal input clock	1	1	Signal on CLKX pin
CLKSM	SCLKME	Input Clock for Sample Rate Generator																		
0	0	Signal on CLKS pin																		
0	1	Signal on CLKR pin																		
CLKSM	SCLKME	Input Clock for Sample Rate Generator																		
1	0	McBSP internal input clock																		
1	1	Signal on CLKX pin																		
28	FSGM	<p>Sample-rate generator transmit frame-synchronization mode bit is only used when FSXM = 1 in PCR.</p> <ul style="list-style-type: none"> 0 = Transmit frame-sync signal (FSX) is generated on every DXR-to-XSR copy. When FSGM = 0, FWID bit and FPER bit are ignored. 1 = Transmit frame-sync signal (FSX) is driven by the sample-rate generator frame-sync signal (FSG). 																		
27-16	FPER	0-FFFh = Frame period value plus 1 specifies when the next frame-sync signal becomes active. Range is 1 to 4096 sample-rate generator clock (CLKG) periods.																		
15-8	FWID	0-FFh = Frame width value plus 1 specifies the width of the frame-sync pulse (FSG) during its active period.																		
7-0	CLKGDV	0-FFh = Sample-rate generator clock (CLKG) divider value is used as the divide-down number to generate the required sample-rate generator clock frequency.																		

3.8 Multichannel Control Register (MCR)

The multichannel control register (MCR) has control and status bits for multichannel selection operation in the receiver (with an R prefix) and the same type of bits for the transmitter (with an X prefix). The MCR is shown in Figure 3-7 and described in Table 3-8. This I/O-mapped register enables you to:

- Enable all channels or only selected channels for reception (RMCM).
- Choose which channels are enabled/disabled and masked/unmasked for transmission (XMCM).
- Specify whether two partitions (32 channels at a time) or eight partitions (128 channels at a time) can be used (RMCME for reception, XMCME for transmission).
- Assign blocks of 16 channels to partitions A and B when the 2-partition mode is selected (RPBLK and RPBBLK for reception, XPABLK and XPBBLK for transmission).
- Determine which block of 16 channels is currently involved in a data transfer (RCBLK for reception, XCBLK for transmission).

Figure 3-7. Multichannel Control Registers (MCR)

31	26	25	24	23	22	21	20	18	17	16
Reserved		XMCME	XPBBLK	XPABLK	XCBLK	XMCM				
R-0		R/W-0	R/W-0	R/W-0	R-0	R/W-0				
15	10	9	8	7	6	5	4	2	1	0
Reserved		RMCME	RPBBLK	RPABLK	RCBLK	Reserved		RMCM		
R-0		R/W-0	R/W-0	R/W-0	R-0	R-0		R/W-0		

LEGEND: R = Read only; R/W = Read/Write; -n = value after reset

Table 3-8. Multichannel Control Register (MCR) Field Descriptions

Bit	Field	Description
31-26	Reserved	Reserved.
25	XMCME	Transmit multichannel partition mode bit. XMCME is only applicable if channels can be individually disabled/enabled or masked/unmasked for transmission (XMCM is nonzero). XMCME determines whether only 32 channels or all 128 channels are to be individually selectable. 0 = 2-partition mode. Only partitions A and B are used. You can control up to 32 channels in the transmit multichannel selection mode selected with the XMCM bit. If XMCM = 1 or 2h: assign 16 channels to partition A with the XPABLK bit and assign 16 channels to partition B with the XPBBLK bit. If XMCM = 3h: (for symmetric transmission and reception), assign 16 channels to receive partition A with the RPABLK bit and assign 16 channels to receive partition B with the RPBBLK bit. 1 = 8-partition mode. All partitions (A through H) are used. You can control up to 128 channels in the transmit multichannel selection mode selected with the XMCM bit. You control the channels with the appropriate enhanced transmit channel enable register (XCEREn): XCERE0: Channels 0 through 31 XCERE1: Channels 32 through 63 XCERE2: Channels 64 through 95 XCERE3: Channels 96 through 127

Table 3-8. Multichannel Control Register (MCR) Field Descriptions (continued)

Bit	Field	Description
24-23	XPBBLK	<p>Transmit partition B block bit.</p> <p>XPBBLK is only applicable if channels can be individually disabled/enabled and masked/unmasked (XMCM is nonzero) and the 2-partition mode is selected (XMCME = 0). Under these conditions, the McBSP transmitter can transmit or withhold data in any of the 32 channels that are assigned to partitions A and B of the transmitter.</p> <p>The 128 transmit channels of the McBSP are divided equally among 8 blocks (0 through 7). When XPBBLK is applicable, use the XPBBLK bit to assign one of the odd-numbered blocks (1, 3, 5, or 7) to partition B; use the XPABLK bit to assign one of the even-numbered blocks (0, 2, 4, or 6) to partition A. If you want to use more than 32 channels, you can change block assignments dynamically. You can assign a new block to one partition while the transmitter is handling activity in the other partition. For example, while the block in partition A is active, you can change which block is assigned to partition B.</p> <p>The XCBLK bit is regularly updated to indicate which block is active.</p> <p>When XMCM = 3h (for symmetric transmission and reception), the transmitter uses the receive block bits (RPABLK and RPBBLK) rather than the transmit block bits (XPABLK and XPBBLK).</p> <ul style="list-style-type: none"> • 0 = Block 1: channels 16 through 31 • 1h = Block 3: channels 48 through 63 • 2h = Block 5: channels 80 through 95 • 3h = Block 7: channels 112 through 127
22-21	XPABLK	<p>Transmit partition A block bit.</p> <p>XPABLK is only applicable if channels can be individually disabled/enabled and masked/unmasked (XMCM is nonzero) and the 2-partition mode is selected (XMCME = 0). Under these conditions, the McBSP transmitter can transmit or withhold data in any of the 32 channels that are assigned to partitions A and B of the transmitter. See the XPBBLK bit description for more information about assigning blocks to partitions A and B.</p> <ul style="list-style-type: none"> • 0 = Block 0: channels 0 through 15 • 1h = Block 2: channels 32 through 47 • 2h = Block 4: channels 64 through 79 • 3h = Block 6: channels 96 through 111
20-18	XCBLK	<p>Transmit current block indicator. XCBLK indicates which block of 16 channels is involved in the current McBSP transmission.</p> <ul style="list-style-type: none"> • 0 = Block 0: channels 0 through 15 • 1h = Block 1: channels 16 through 31 • 2h = Block 2: channels 32 through 47 • 3h = Block 3: channels 48 through 63 • 4h = Block 4: channels 64 through 79 • 5h = Block 5: channels 80 through 95 • 6h = Block 6: channels 96 through 111 • 7h = Block 7: channels 112 through 127
17-16	XMCM	<p>Transmit multichannel selection mode bit. XMCM determines whether all channels or only selected channels are enabled and unmasked for transmission.</p> <ul style="list-style-type: none"> • 0 = Transmit multichannel selection is off. All channels are enabled and unmasked. No channels can be disabled or masked. • 1h = All channels are disabled unless they are selected in the appropriate enhanced transmit channel enable register (XCERE <i>n</i>). If enabled, a channel in this mode is also unmasked. The XMCME bit determines whether 32 channels or 128 channels are selectable in XCERE <i>n</i>. • 2h = All channels are enabled, but they are masked unless they are selected in the appropriate enhanced transmit channel enable register (XCERE <i>n</i>). The XMCME bit determines whether 32 channels or 128 channels are selectable in XCERE <i>n</i>. • 3h = This mode is used for symmetric transmission and reception. All channels are disabled for transmission unless they are enabled for reception in the appropriate enhanced receive channel enable register (RCERE <i>n</i>). Once enabled, they are masked unless they are also selected in the appropriate enhanced transmit channel enable register (XCERE <i>n</i>). The XMCME bit determines whether 32 channels or 128 channels are selectable in RCERE <i>n</i> and XCERE <i>n</i>.
15-10	Reserved	Reserved.

Table 3-8. Multichannel Control Register (MCR) Field Descriptions (continued)

Bit	Field	Description
9	RMCM	<p>Receive multichannel partition mode bit. RMCM is only applicable if channels can be individually disabled/enabled for reception (RMCM = 1). RMCM determines whether only 32 channels or all 128 channels are to be individually selectable.</p> <p>0 = 2-partition mode. Only partitions A and B are used. You can control up to 32 channels in the receive multichannel selection mode (RMCM = 1).</p> <p>Assign 16 channels to partition A with the RPBLK bit and assign 16 channels to partition B with the RPBLK bit.</p> <p>You control the channels with the enhanced receive channel enable register partition A/B (RCERE0).</p> <p>1 = You can control up to 128 channels in the receive multichannel selection mode.</p> <p>You control the channels with the appropriate enhanced receive channel enable register (RCEREn):</p> <p>RCERE0: Channels 0 through 31 RCERE1: Channels 32 through 63 RCERE2: Channels 64 through 95 RCERE3: Channels 96 through 127</p>
8-7	RPBBLK	<p>Receive partition B block bit.</p> <p>RPBBLK is only applicable if channels can be individually disabled/enabled (RMCM = 1) and the 2-partition mode is selected (RMCM = 0). Under these conditions, the McBSP receiver can accept or ignore data in any of the 32 channels that are assigned to partitions A and B of the receiver.</p> <p>The 128 receive channels of the McBSP are divided equally among 8 blocks (0 through 7). When RPBBLK is applicable, use the RPBBLK bit to assign one of the odd-numbered blocks (1, 3, 5, or 7) to partition B; use the RPBLK bit to assign one of the even-numbered blocks (0, 2, 4, or 6) to partition A.</p> <p>If you want to use more than 32 channels, you can change block assignments dynamically. You can assign a new block to one partition while the receiver is handling activity in the other partition. For example, while the block in partition A is active, you can change which block is assigned to partition B.</p> <p>The RCBLK bit is regularly updated to indicate which block is active.</p> <p>When XMCM = 3h (for symmetric transmission and reception), the transmitter uses the receive block bits (RPBLK and RPBBLK) rather than the transmit block bits (XPBLK and XPBBLK).</p> <ul style="list-style-type: none"> • 0 = Block 1: channels 16 through 31 • 1h = Block 3: channels 48 through 63 • 2h = Block 5: channels 80 through 95 • 3h = Block 7: channels 112 through 127
6-5	RPABLK	<p>Receive partition A block bit.</p> <p>RPABLK is only applicable if channels can be individually disabled/enabled (RMCM = 1) and the 2-partition mode is selected (RMCM = 0). Under these conditions, the McBSP receiver can accept or ignore data in any of the 32 channels that are assigned to partitions A and B of the receiver. See the RPBBLK bit description for more information about assigning blocks to partitions A and B.</p> <ul style="list-style-type: none"> • 0 = Block 0: channels 0 through 15 • 1h = Block 2: channels 32 through 47 • 2h = Block 4: channels 64 through 79 • 3h = Block 6: channels 96 through 111
4-2	RCBLK	<p>Receive current block indicator. RCBLK indicates which block of 16 channels is involved in the current McBSP reception.</p> <ul style="list-style-type: none"> • 0 = Block 0: channels 0 through 15 • 1h = Block 1: channels 16 through 31 • 2h = Block 2: channels 32 through 47 • 3h = Block 3: channels 48 through 63 • 4h = Block 4: channels 64 through 79 • 5h = Block 5: channels 80 through 95 • 6h = Block 6: channels 96 through 111 • 7h = Block 7: channels 112 through 127
1	Reserved	Reserved.
0	RMCM	<p>Receive multichannel selection mode bit. RMCM determines whether all channels or only selected channels are enabled for reception.</p> <ul style="list-style-type: none"> • 0 = All 128 channels are enabled. • 1 = Multichannel selection mode. Channels can be individually enabled or disabled. <p>The only channels enabled are those selected in the appropriate enhanced receive channel enable register (RCERE <i>n</i>). The way channels are assigned to RCERE <i>n</i> depends on the number of receive channel partitions (2 or 8), as defined by the RMCM bit.</p>

3.9 Enhanced Receive Channel Enable Registers (RCERE0-RCERE3)

The enhanced receive channel enable register (RCERE *n*) is shown in [Figure 3-8](#) and described in [Table 3-9](#). The RCERE *n* is used to enable any of 128 elements for receive. RCERE0 is the only register used in normal mode (up to 32 channels can be selected in partitions A and B, RMCME = XMCME = 0 in MCR). RCERE0-RCERE3 are used when in enhanced mode (up to 128 channels can be selected in all partitions, RMCME = XMCME = 1 in MCR).

The receive multichannel partition mode (RMCME) bit in the multichannel control register (MCR) is only applicable if channels can be individually disabled/enabled for reception (RMCM = 1). The RMCME bit determines whether only 32 channels or all 128 channels are to be individually selectable:

- **When RMCME = 0:** Only partitions A and B are used. RCERE0 is used to enable any of the 32 elements for a receive. Of the 32 elements, 16 channels belong to a subframe in partition A and 16 channels belong to a subframe in partition B. The RCE0-RCE15 bits enable elements within the 16-channel elements in partition A and the RCE16-RCE31 bits enable elements within the 16-channel elements in partition B. The 16 channels in partition A are assigned with the RPABLK bit in MCR and the 16 channels in partition B are assigned with the RPBBLK bit in MCR.
- **When RMCME = 1:** All partitions are used. RCERE0 is used to enable any of the 32 elements in channels 0 through 31 for a receive. Of the 32 elements, channels 0 to 15 belong to a subframe in partition A and channels 16 to 31 belong to a subframe in partition B. The RCE0-RCE15 bits enable elements within the 16-channel elements in partition A and the RCE16-RCE31 bits enable elements within the 16-channel elements in partition B.

[Section 3.9.1](#) shows the 128 channels in a multichannel data stream and their corresponding enable bits in RCEREn.

Figure 3-8. Enhanced Receive Channel Enable Register *n* (RCERE *n*)

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
RCE 31	RCE 30	RCE 29	RCE 28	RCE 27	RCE 26	RCE 25	RCE 24	RCE 23	RCE 22	RCE 21	RCE 20	RCE 19	RCE 18	RCE 17	RCE 16
R/W-0															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
RCE 15	RCE 14	RCE 13	RCE 12	RCE 11	RCE 10	RCE9	RCE8	RCE7	RCE6	RCE5	RCE4	RCE3	RCE2	RCE1	RCE0
R/W-0															

LEGEND: R/W = Read/Write; -n = value after reset

Table 3-9. Enhanced Receive Channel Enable Register *n* (RCERE *n*) Field Descriptions

Bit	Field	Description
31-0	RCERn	Receive channel enable bit. For receive multichannel selection mode (RMCM = 1 in MCR). <ul style="list-style-type: none"> • 0 = Disable the channel that is mapped to RCERE <i>n</i>. • 1 = Enable the channel that is mapped to RCERE <i>n</i>.

3.9.1 RCEREn Used in the Receive Multichannel Selection Mode

For multichannel selection operation, the assignment of channels to the enhanced receive channel enable register (RCERE n) depends on whether 32 or 128 channels are individually selectable, as defined by the RMCME bit in the multichannel control register (MCR). For each of these two cases, Table 3-10 shows which block of channels is assigned to each RCERE n used. For each RCERE n , Table 3-10 shows which channel is assigned to each of the bits.

Table 3-10. Use of the Receive Channel Enable Registers

Number of selectable channels	Block Assignments		Channel Assignments		
	RCERE n	Block assigned ⁽¹⁾	Bit in RCERE n	Channel assigned ⁽¹⁾	
32 (RMCME = 0)	RCERE0	Channels n to $(n + 15)$ The block of channels (0, 2, 4, or 6) is selected with the RPABLK bit in MCR	RCE0 RCE1 ... RCE15	Channel n Channel $(n + 1)$... Channel $(n + 15)$	
		Channels m to $(m + 15)$ The block of channels (1, 3, 5, or 7) is selected with the RPBBLK bit in MCR	RCE16 RCE17 ... RCE31	Channel m Channel $(m + 1)$... Channel $(m + 15)$	
	128 (RMCME = 1)	RCERE0	Block 0	RCE0 ... RCE15	Channel 0 ... Channel 15
			Block 1	RCE16 ... RCE31	Channel 16 ... Channel 31
Block 2			RCE0 ... RCE15	Channel 32 ... Channel 47	
RCERE1		Block 3	RCE16 ... RCE31	Channel 48 ... Channel 63	
		Block 4	RCE0 ... RCE15	Channel 64 ... Channel 79	
RCERE2		Block 5	RCE16 ... RCE31	Channel 80 ... Channel 95	
		Block 6	RCE0 ... RCE15	Channel 96 ... Channel 111	
RCERE3	Block 7	RCE16 ... RCE31	Channel 112 ... Channel 127		

⁽¹⁾ n is any even-numbered block 0, 2, 4, or 6. m is any odd-numbered block 1, 3, 5, or 7.

3.10 Enhanced Transmit Channel Enable Registers (XCERE0-XCERE3)

The enhanced transmit channel enable register (XCERE *n*) is shown in [Figure 3-9](#) and described in [Table 3-11](#). The XCERE *n* is used to enable any of 128 elements for transmit. XCERE0 is the only register used in normal mode (up to 32 channels can be selected in partitions A and B, RMCME = XMCME = 0 in MCR). XCERE0-XCERE3 are used when in enhanced mode (up to 128 channels can be selected in all partitions, RMCME = XMCME = 1 in MCR).

The transmit multichannel partition mode (XMCME) bit in the multichannel control register (MCR) is only applicable if channels can be individually disabled/enabled or masked/unmasked for transmission (XMCM is nonzero). The XMCME bit determines whether only 32 channels or all 128 channels are to be individually selectable:

- **When XMCME = 0:** Only partitions A and B are used. XCERE0 is used to enable any of the 32 elements for a transmit. Of the 32 elements, 16 channels belong to a subframe in partition A and 16 channels belong to a subframe in partition B. The XCE0-XCE15 bits enable elements within the 16-channel elements in partition A and the XCE16-XCE31 bits enable elements within the 16-channel elements in partition B. You can control up to 32 channels in the transmit multichannel selection mode selected with the XMCM bit in MCR.
- **When XMCME = 1:** All partitions are used. XCERE0 is used to enable any of the 32 elements in channels 0 through 31 for a transmit. Of the 32 elements, channels 0 to 15 belong to a subframe in partition A and channels 16 to 31 belong to a subframe in partition B. The XCE0-XCE15 bits enable elements within the 16-channel elements in partition A and the XCE16-XCE31 bits enable elements within the 16-channel elements in partition B.

[Section 3.10.1](#) shows the 128 channels in a multichannel data stream and their corresponding enable bits in XCEREn.

Figure 3-9. Enhanced Transmit Channel Enable Register *n* (XCERE *n*)

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
XCE 31	XCE 30	XCE 29	XCE 28	XCE 27	XCE 26	XCE 25	XCE 24	XCE 23	XCE 22	XCE 21	XCE 20	XCE 19	XCE 18	XCE 17	XCE 16
R/W-0															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
XCE 15	XCE 14	XCE 13	XCE 12	XCE 11	XCE 10	XCE9	XCE8	XCE7	XCE6	XCE5	XCE4	XCE3	XCE2	XCE1	XCE0
R/W-0															

LEGEND: R/W = Read/Write; -n = value after reset

Table 3-11. Enhanced Transmit Channel Enable Register *n* (XCERE *n*) Field Descriptions

Bit	Field	Description
31-0	XCEn	Transmit channel enable bit. The role of this bit depends on which transmit multichannel mode is selected with the XMCM bit in MCR <ul style="list-style-type: none"> • When XMCM = 1h (all channels disabled unless selected): <ul style="list-style-type: none"> – 0 = Disable and mask the channel that is mapped to XCE <i>n</i>. – 1 = Enable and unmask the channel that is mapped to XCE <i>n</i>. • When XMCM = 2h (all channels enabled but masked unless selected): <ul style="list-style-type: none"> – 0 = Mask the channel that is mapped to XCE <i>n</i>. – 1 = Unmask the channel that is mapped to XCE <i>n</i>. • When XMCM = 3h (all channels masked unless selected): <ul style="list-style-type: none"> – 0 = Mask the channel that is mapped to XCE <i>n</i>. Even if this channel is enabled by the corresponding enhanced receive channel enable bit, this channel's data cannot appear on the DX pin. – 1 = Unmask the channel that is mapped to XCE <i>n</i>. Even if this channel is also enabled by the corresponding enhanced receive channel enable bit, full transmission can occur.

3.10.1 XCERE *n* Used in the Transmit Multichannel Selection Mode

For multichannel selection operation, the assignment of channels to the enhanced transmit channel enable register (XCERE *n*) depends on whether 32 or 128 channels are individually selectable, as defined by the XMCME bit in the multichannel control register (MCR). For each of these two cases, Table 3-12 shows which block of channels is assigned to each XCERE *n* used. For each XCERE *n*, Table 3-12 shows which channel is assigned to each of the bits.

When XMCM = 3h (symmetric transmission and reception), the transmitter uses the enhanced receive channel enable register (RCERE *n*) to enable channels and uses XCERE *n* to unmask channels for transmission.

Table 3-12. Use of the Transmit Channel Enable Registers

Number of selectable channels	Block Assignments		Channel Assignments	
	XCERE <i>n</i>	Block assigned ⁽¹⁾	Bit in XCERE <i>n</i>	Channel assigned ⁽¹⁾
32 (XMCME = 0)	XCERE 0	Channels <i>n</i> to (<i>n</i> + 15)	XCE0	Channel <i>n</i>
		When XMCM = 1h or 2h, the block of channels (0, 2, 4, or 6) is selected with the XPABLK bit in MCR.	XCE1	Channel (<i>n</i> + 1)
		When XMCM = 3h, the block of channels (0, 2, 4, or 6) is selected with the RPABLK bit in MCR.
		Channels <i>m</i> to (<i>m</i> + 15)	XCE15	Channel (<i>n</i> + 15)
		When XMCM = 1h or 2h, the block of channels (1, 3, 5, or 7) is selected with the XPBBLK bit in MCR.	XCE16	Channel <i>m</i>
		When XMCM = 3h, the block of channels (1, 3, 5, or 7) is selected with the RPBBLK bit in MCR.	XCE17	Channel (<i>m</i> + 1)
	
128 (XMCME = 1)	XCERE0	Block 0	XCE0	Channel 0
	
		...	XCE15	Channel 15
		Block 1	XCE16	Channel 16
	
		...	XCE31	Channel 31
	XCERE1	Block 2	XCE0	Channel 32
	
		...	XCE15	Channel 47
		Block 3	XCE16	Channel 48
	
		...	XCE31	Channel 63
	XCERE2	Block 4	XCE0	Channel 64
	
		...	XCE15	Channel 79
		Block 5	XCE16	Channel 80
...		
...		XCE31	Channel 95	
XCERE3	Block 6	XCE0	Channel 96	
	
	...	XCE15	Channel 111	
	Block 7	XCE16	Channel 112	
...	
...	XCE31	Channel 127	...	

⁽¹⁾ *n* is any even-numbered block 0, 2, 4, or 6. *m* is any odd-numbered block 1, 3, 5, or 7.

3.11 Pin Control Register (PCR)

The serial port is configured via the serial port control register (SPCR) and the pin control register (PCR). The PCR contains McBSP status control bits. The PCR is shown in [Figure 3-10](#) and described in [Table 3-13](#).

Figure 3-10. Pin Control Register (PCR)

31		14	13	12	11	10	9	8
Reserved			Reserved ⁽¹⁾		FSXM	FSRM	CLKXM	CLKRM
R-0			R/W-0		R/W-0	R/W-0	R/W-0	R/W-0
7	6	5	4	3	2	1	0	
SCLKME	Reserved ¹	Reserved	FSXP	FSRP	CLKXP	CLKRP		
R/W-0	R-0	R-0	R/W-0	R/W-0	R/W-0	R/W-0	R/W-0	

LEGEND: R = Read only; R/W = Read/Write; -n = value after reset

⁽¹⁾ If writing to this field, always write the default value of 0 to ensure proper McBSP operation.

Table 3-13. Pin Control Register (PCR) Field Descriptions

Bit	Field	Description
31-14	Reserved	Reserved. The reserved bit location is always read as 0. A value written to this field has no effect.
13-12	Reserved	Reserved. The reserved bit location is always read as 0. A value written to this field has no effect. If writing to this field, always write the default value of 0 to ensure proper McBSP operation.
11	FSXM	Transmit frame-synchronization mode bit. <ul style="list-style-type: none"> 0 = Frame-synchronization signal is derived from an external source. 1 = Frame-synchronization signal is determined by FSGM bit in SRGR.
10	FSRM	Receive frame-synchronization mode bit. <ul style="list-style-type: none"> 0 = Frame-synchronization signal is derived from an external source. FSR is an input pin. 1 = Frame-synchronization signal is generated internally by the sample-rate generator. FSR is an output pin.
9	CLKXM	Transmit clock mode bit. When CLKSTP bit in SPCR is cleared to 0: <ul style="list-style-type: none"> 0 = CLKX is an input pin and is driven by an external clock. 1 = CLKX is an output pin and is driven by the internal sample-rate generator.
8	CLKRM	Receive clock mode bit. <ul style="list-style-type: none"> Digital loop back mode is disabled (DLB = 0 in SPCR): <ul style="list-style-type: none"> 0 = CLKR is an input pin and is driven by an external clock. 1 = CLKR is an output pin and is driven by the internal sample-rate generator. Digital loop back mode is enabled (DLB = 1 in SPCR): <ul style="list-style-type: none"> 0 = Receive clock (not the CLKR pin) is driven by transmit clock (CLKX) that is based on CLKXM bit. CLKR pin is in high-impedance state. 1 = CLKR is an output pin and is driven by the transmit clock. The transmit clock is based on CLKXM bit.


Table 3-13. Pin Control Register (PCR) Field Descriptions (continued)

Bit	Field	Description																		
7	SCLKME	<p>Sample rate generator input clock mode bit. The sample rate generator can produce a clock signal, CLKG. The frequency of CLKG is:</p> $CLKG \text{ frequency} = \text{Input clock frequency} / (CLKGDV + 1)$ <p>SCLKME is used in conjunction with the CLKSM bit in the sample rate generator register (SRGR) to select the input clock.</p> <p>A DSP reset selects the McBSP internal input clock as the input clock and forces the CLKG frequency to 1/2 the McBSP internal input clock frequency.</p> <p>0 = The input clock for the sample rate generator is taken from the CLKS pin or from the McBSP internal input clock, depending on the value of the CLKSM bit in SRGR:</p> <table border="1" data-bbox="406 541 1466 667"> <thead> <tr> <th>SCLKME</th> <th>CLKSM</th> <th>Input Clock for Sample Rate Generator</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>Signal on CLKS pin</td> </tr> <tr> <td>0</td> <td>1</td> <td>McBSP internal input clock</td> </tr> </tbody> </table> <p>1 = The input clock for the sample rate generator is taken from the CLKR pin or from the CLKX pin, depending on the value of the CLKSM bit in SRGR:</p> <table border="1" data-bbox="406 730 1466 856"> <thead> <tr> <th>SCLKME</th> <th>CLKSM</th> <th>Input Clock for Sample Rate Generator</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>0</td> <td>Signal on CLKR pin</td> </tr> <tr> <td>1</td> <td>1</td> <td>Signal on CLKX pin</td> </tr> </tbody> </table>	SCLKME	CLKSM	Input Clock for Sample Rate Generator	0	0	Signal on CLKS pin	0	1	McBSP internal input clock	SCLKME	CLKSM	Input Clock for Sample Rate Generator	1	0	Signal on CLKR pin	1	1	Signal on CLKX pin
SCLKME	CLKSM	Input Clock for Sample Rate Generator																		
0	0	Signal on CLKS pin																		
0	1	McBSP internal input clock																		
SCLKME	CLKSM	Input Clock for Sample Rate Generator																		
1	0	Signal on CLKR pin																		
1	1	Signal on CLKX pin																		
6	Reserved	Reserved. The reserved bit location is always read as 0. A value written to this field has no effect. If writing to this field, always write the default value of 0 to ensure proper McBSP operation.																		
5-4	Reserved	Reserved. The reserved bit location is always read as 0. A value written to this field has no effect.																		
3	FSXP	<p>Transmit frame-synchronization polarity bit.</p> <ul style="list-style-type: none"> 0 = Transmit frame-synchronization pulse is active high. 1 = Transmit frame-synchronization pulse is active low. 																		
2	FSRP	<p>Receive frame-synchronization polarity bit.</p> <ul style="list-style-type: none"> 0 = Receive frame-synchronization pulse is active high. 1 = Receive frame-synchronization pulse is active low. 																		
1	CLKXP	<p>Transmit clock polarity bit.</p> <ul style="list-style-type: none"> 0 = Transmit data driven on rising edge of CLKX. 1 = Transmit data driven on falling edge of CLKX. 																		
0	CLKRP	<p>Receive clock polarity bit.</p> <ul style="list-style-type: none"> 0 = Receive data sampled on falling edge of CLKR. 1 = Receive data sampled on rising edge of CLKR. 																		

3.12 BFIFO Revision Identification Register (BFIFOREV)

The Buffer FIFO (BFIFO) revision identification register (BFIFOREV) contains revision data for the Buffer FIFO (BFIFO). The BFIFOREV is shown in [Figure 3-11](#) and described in [Table 3-14](#).

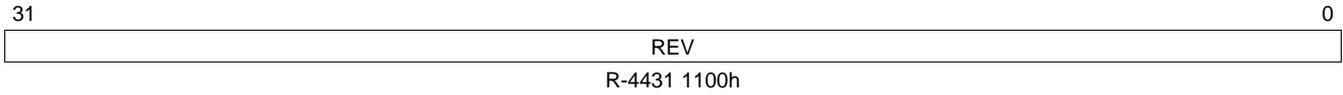Figure 3-11. BFIFO Revision Identification Register (BFIFOREV)



LEGEND: R = Read only; -n = value after reset

Table 3-14. BFIFO Revision Identification Register (BFIFOREV) Field Descriptions


Bit	Field	Description
31-0	REV	Identifies revision of Buffer FIFO.

3.13 Write FIFO Control Register (WFIFOCTL)

The Write FIFO control register (WFIFOCTL) is shown in [Figure 3-12](#) and described in [Table 3-15](#).

NOTE: The WNUMEVT and WNUMDMA values must be set prior to enabling the Write FIFO. If the Write FIFO is to be enabled, it must be enabled prior to taking the McBSP out of reset.

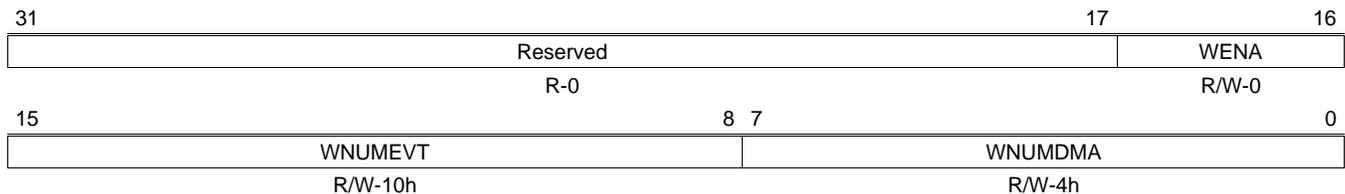Figure 3-12. Write FIFO Control Register (WFIFOCTL)



LEGEND: R = Read only; -n = value after reset


Table 3-15. Write FIFO Control Register (WFIFOCTL) Field Descriptions

Bit	Field	Description
31-17	Reserved	Reserved
16	WENA	Write FIFO enable bit. <ul style="list-style-type: none"> • 0 = Write FIFO is disabled. The WLVL bit in the Write FIFO status register (WFIFOSTS) is reset to 0 and the pointers are initialized, that is, the Write FIFO is “flushed.” • 1 = Write FIFO is enabled. If the Write FIFO is to be enabled, it must be enabled prior to taking the McBSP out of reset.
15-8	WNUMEVT	Write word count per DMA event (32-bit). When the Write FIFO has space for at least <i>WNUMEVT</i> words of data, then an XEVT (transmit DMA event) is generated to the host/DMA controller. This value must be set prior to enabling the Write FIFO. <ul style="list-style-type: none"> • 0 = 0 words • 1h = 1 word • 2h = 2 words • ... • 40h = 64 words • 41h-FFh = Reserved
7-0	WNUMDMA	Write word count per transfer (32-bit words). Upon a transmit DMA event from the McBSP, WNUMDMA words are transferred from the Write FIFO to the McBSP. This value must be set prior to enabling the Write FIFO. <ul style="list-style-type: none"> • 0 = 0 words • 1 = 1 word • 2h-FFh = Reserved

3.14 Write FIFO Status Register (WFIFOSTS)

The Write FIFO status register (WFIFOSTS) is shown in [Figure 3-13](#) and described in [Table 3-16](#).

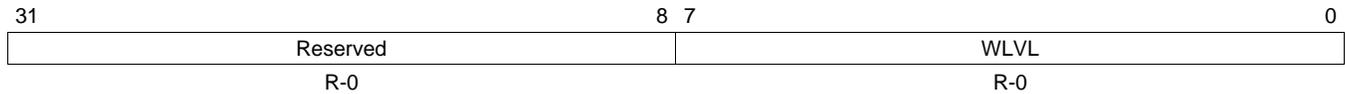Figure 3-13. Write FIFO Status Register (WFIFOSTS)



Legend: R = Read only; - n = value after reset

Table 3-16. Write FIFO Status Register (WFIFOSTS) Field Descriptions


Bit	Field	Description
31-8	Reserved	Reserved
7-0	WLVL	Write level. Number of 32-bit words currently in the Write FIFO. <ul style="list-style-type: none"> • 0 = 0 words currently in the Write FIFO. • 1h = 1 word currently in the Write FIFO. • 2h = 2 words currently in the Write FIFO. • ... • 40 = 64 words currently in the Write FIFO. • 41h-FFh = Reserved

3.15 Read FIFO Control Register (RFIFOCTL)

The Read FIFO control register (RFIFOCTL) is shown in [Figure 3-14](#) and described in [Table 3-17](#).

NOTE: The RNUMEVT and RNUMDMA values must be set prior to enabling the Read FIFO. If the Read FIFO is to be enabled, it must be enabled prior to taking the McBSP out of reset.

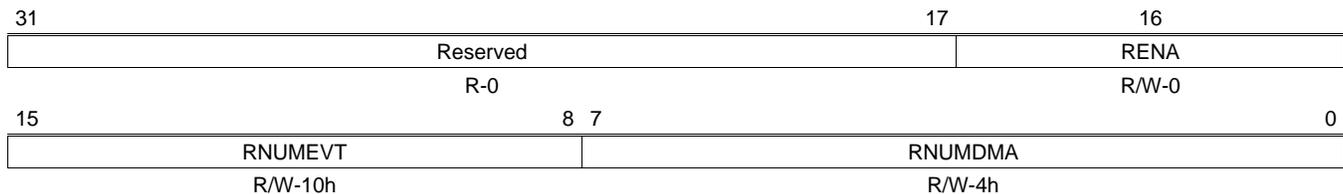Figure 3-14. Read FIFO Control Register (RFIFOCTL)



LEGEND: R = Read only; -n = value after reset


Table 3-17. Read FIFO Control Register (RFIFOCTL) Field Descriptions

Bit	Field	Description
31-17	Reserved	Reserved
16	RENA	Read FIFO enable bit. <ul style="list-style-type: none"> • 0 = Read FIFO is disabled. The RLVL bit in the Read FIFO status register (RFIFOSTS) is reset to 0 and the pointers are initialized, that is, the Read FIFO is "flushed." • 1 = Read FIFO is enabled. If the Read FIFO is to be enabled, it must be enabled prior to taking the McBSP out of reset.
15-8	RNUMEVT	Read word count per DMA event (32-bit). When the Read FIFO contains at least <i>RNUMEVT</i> words of data, then an REVT (receive DMA event) is generated to the host/DMA controller. This value must be set prior to enabling the Read FIFO. <ul style="list-style-type: none"> • 0 = 0 words • 1h = 1 word • 2h = 2 words • ... • 40h = 64 words • 41h-FFh = Reserved
7-0	RNUMDMA	Read word count per transfer (32-bit words). Upon a receive DMA event from the McBSP, the Read FIFO reads <i>RNUMDMA</i> words from the McBSP. This value must be set prior to enabling the Read FIFO. <ul style="list-style-type: none"> • 0 = 0 words • 1 = 1 word • 2h-FFh = Reserved

3.16 Read FIFO Status Register (RFIFOSTS)

The Read FIFO status register (RFIFOSTS) is shown in [Figure 3-15](#) and described in [Table 3-18](#).

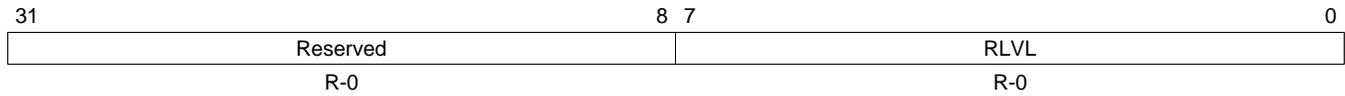Figure 3-15. Read FIFO Status Register (RFIFOSTS)



Legend: R = Read only; - n = value after reset

Table 3-18. Read FIFO Status Register (RFIFOSTS) Field Descriptions

Bit	Field	Description
31-8	Reserved	Reserved
7-0	RLVL	Read level. Number of 32-bit words currently in the Read FIFO. <ul style="list-style-type: none"> • 0 = 0 words currently in the Read FIFO. • 1h = 1 word currently in the Read FIFO. • 2h = 2 words currently in the Read FIFO. • ... • 40h = 64 words currently in the Read FIFO. • 41h-FFh = Reserved

IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to TI's Terms of Sale (www.ti.com/legal/termsofsale.html) or other applicable terms available either on ti.com or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2019, Texas Instruments Incorporated