

EVM User's Guide: LP-MSPM0L2228

MSPM0L2228 Evaluation Module



Description

The MSPM0L2228 LaunchPad™ development kit is an easy-to-use evaluation module (EVM) for the MSPM0L2228 microcontroller (MCU). The LaunchPad kit contains everything needed to start developing on the MSPM0Lx22x microcontroller platform, including an onboard debug probe for programming, debugging, and EnergyTrace™ technology. The board also features on board buttons, LEDs, an RGB LED, a 7-segment LCD panel, and a 100mF super capacitor.

Get Started


1. Order the [LP-MSPM0L2228](#) from ti.com.
2. Navigate to [dev.ti.com](#) to browse for code examples.
3. Plug LP-MSPM0L2228 into a PC with the provided USB cable.
4. Download code directly from the browser to the MSPM0L2228 with Code Composer Studio™ (CCS) Cloud.
5. Download [CCS](#) for a desktop integrated development environment.
6. Download the [MSPM0 SDK](#) for desktop stored examples, demos, and software libraries.

Features

- Onboard XDS110 debug probe
- Backchannel Universal Asynchronous Receiver/Transmitter (UART) through Universal Serial Bus (USB) to PC
- USB powered
- 40-pin BoosterPack™ headers
- Hardware user interfaces
 - Two buttons: 1 LCD Panel, 1 RGB LED, 1 Red LED
- External clock crystals
- Options for battery or super-capacitor

Applications

- [Energy infrastructure](#)
- [Industrial automation](#)
- [Appliances](#)
- [Medical and healthcare](#)
- [Test and measurement](#)

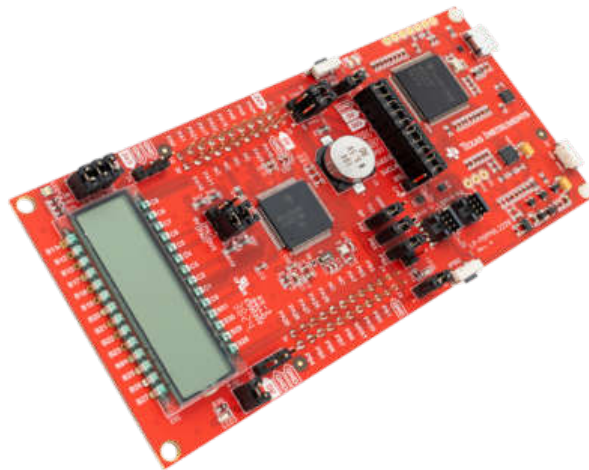

LP-MSPM0L2228

1 Evaluation Module Overview

1.1 Introduction

The MSPM0L2228 is an Arm® Cortex® 32-bit M0+ CPU with a frequency up to 32MHz. The device features 256KB of dual-bank flash with 32KB of SRAM and 32B of backup memory. The device also has internal analog such as internal ADC, voltage reference, and comparator with 8-bit DAC. The MSPM0L2228 is the first MSPM0 device that features a LCD controller, which supports 1 to 8 mux LCD panels. Lastly, the device has a VBAT island to support applications that require a separate power plane. On the VBAT island is the watchdog timer, RTC, TamperIOs, and a low-frequency oscillator or 32Khz crystal input.

The MSPM0L2228 is an Arm 32-bit Cortex-M0+ CPU with an LCD controller and enhanced security features. The device can be used in a variety of tasks from simple housekeeping MCU with the 80pins to full-application level with single-phase e-metering. The easiest way to get started with MSPM0L2228 is with the LP-MSPM0L2228 LaunchPad. The LaunchPad has all the features to load code, debug, and prototype right out of the box.

Rapid prototyping is simplified by the 40-pin BoosterPack™ plug-in module headers, which support a wide range of available BoosterPack plug-in modules. Users can quickly add features like wireless connectivity, graphical displays, environmental sensing and much more. Design your own BoosterPack plug-in module or choose among many already available from TI and third-party developers.

To make prototyping easier, TI provides the MSPM0 software development kit (SDK) which has a variety of code examples to demonstrate how to use the internal peripherals.

Free software development tools are also available, such as TI's [Code Composer Studio™ IDE](#). We also support 3rd party IDEs such as [IAR Embedded Workbench® IDE](#) and [Arm®Keil®µVision® IDE](#). Code Composer Studio IDE supports [EnergyTrace technology](#) with the MSPM0L2228 LaunchPad development kit. More information about the LaunchPad development kit, the supported BoosterPack plug-in modules, and the available resources can be found at TI's [LaunchPad development kit portal](#). To get started quickly and find available resources in the MSPM0 software development kit (SDK), visit the [TI Developer Zone](#). The MSPM0 MCUs are also supported by extensive online collateral, training with [MSPM0 Academy](#) and online support through the TI [E2E support forums](#).

1.2 Kit Contents

- LP-MSPM0L2228 LaunchPad development kit
- USB cable
- Quickstart guide

1.3 Specification

LP-MSPM0L2228 is designed to be used in conjunction with a PC, Mac®, or Linux® workstation running Code Composer Studio (CCS). CCS can run as a stand-alone on a workstation or be accessed through the web (CCS Cloud) without the need for a software installation. Alternatively, LP-MSPM0L2228 ships with an example loaded, which can be controlled by a GUI. See the out of box description below.

The device can be powered from a power supply other than the build in USB power supply. This allows the user to forgo the PC connection. Power can be applied directly either to the 3.3V rail. When using an external power supply, make sure to not exceed 3.3V. Programming can be done externally with a separate XDS110 external debugger utilizing the on board Arm 10-pin connector.

1.4 Device Information

LP-MSPM0L2228 uses the following devices from Texas Instruments.

Table 1-1. Device Information

Device Name	Description	Purpose
MSP432E401YTPDT	SimpleLink™ 32-bit ARM Cortex-M4F MCU with Ethernet™, CAN, 1MB Flash and 256kB RAM	XDS110 Host Device
MSPM0L2228SPNAR	Mixed-Signal Microcontroller with 32MHz Arm Cortex 32-bit-M0+ CPU, 256kB flash, and 32kB SRAM	Evaluation device
MSP430G2452IRSA16R	Mixed-Signal Microcontroller with 16-bit RISC CPU, 8kB Flash, and 256B SRAM	DC/DC controller for EnergyTrace Technology
TPD4E004RSER	ESD-protection array for high-speed data interfaces, 4 channels	Protect LP-MSPM0L2228 from ESD damage through USB connector
TPS73533DRBT	500mA, adjustable, low quiescent current, low-noise, high-PSRR, single-output LDO regulator	3.3V power XDS110 and MSPM0L2228
TPS2102DBVR	2.7V to 4V power mux, dual-input, single-output power switch	Switches XDS110 power

2 Hardware

2.1 Hardware Overview

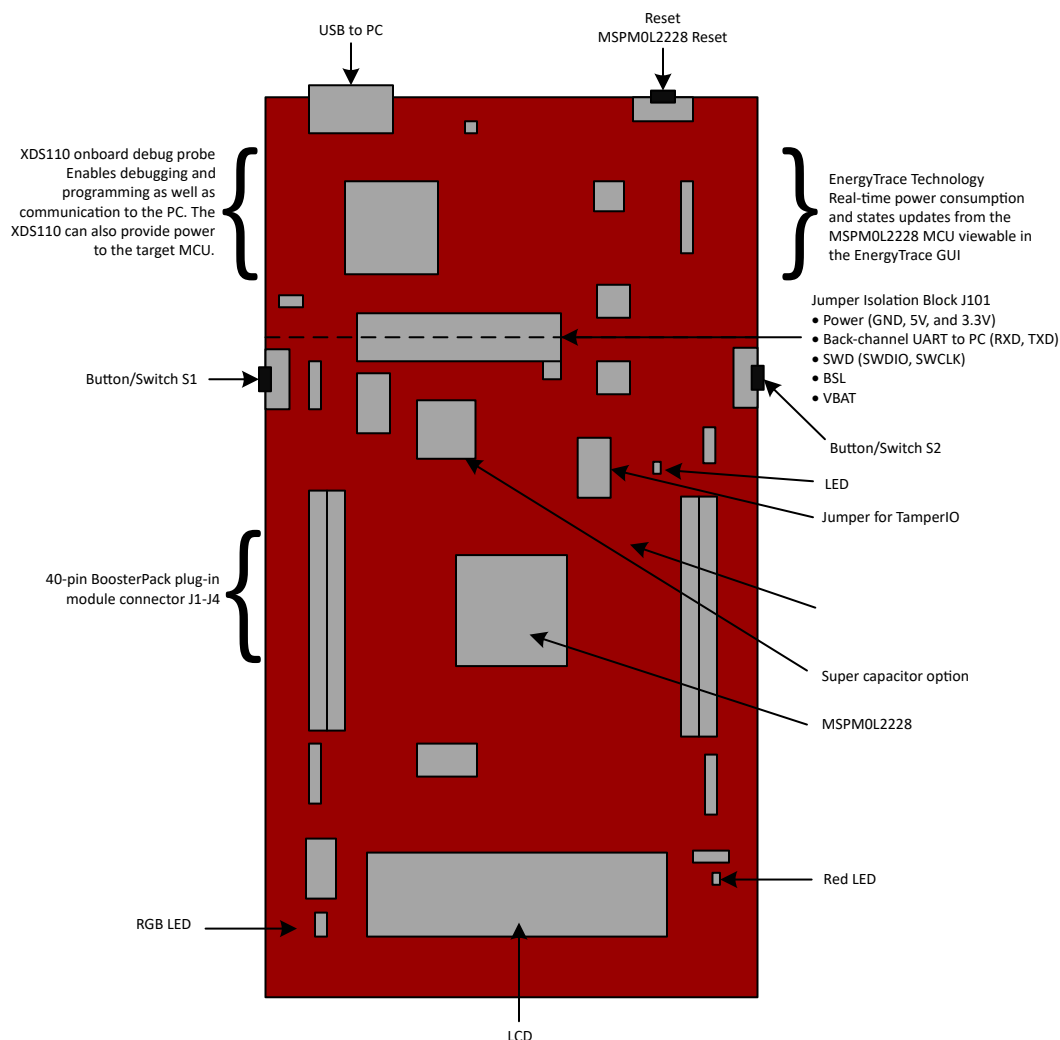


Figure 2-1. Diagram of LP-MSPM0L2228 Jumpers and Connectors

LP-MSPM0L2228 has many hardware features, which allow the user full access to the MSPM0L2228 pins, while still providing onboard connectivity for easy use. Shunt connections provide a way for the user to easily change LaunchPad configuration. The location of these shunts is shown in [Figure 2-1](#). The connection of each shunt is described in [Table 2-1](#).

Table 2-1. Jumper Information

Jumper	Description	Default Setting	Connected Signal
J7	Open Drain IO Pull-ups	Right and center connection	PA0: 4.7k pull-up resistor to 5V or 2.2k pull-up resistor to 3.3V depending on setting
J8	Open Drain IO Pull-ups	Right and center connection	PA1: 4.7k pull-up resistor to 5V or 2.2k pull-up resistor to 3.3V depending on setting
J9	Red LED Connection (LED3)	Populated	3.3V through LED and 470Ω resistor to PA0
J10	RGB Blue Connection	Populated	PA23 through 220Ω resistor and LED to ground.
J11	RGB Red Connection	Populated	PB10 through 220Ω resistor and LED to ground
J12	RGB Green Connection	Populated	PB9 through 220Ω resistor and LED to ground

Table 2-1. Jumper Information (continued)

Jumper	Description	Default Setting	Connected Signal
J13	PB3/TIO Connection	Center and bottom connection	PB3 boosterpack to PB3 pin and TamperIO
J14	PB2/TIO Connection	Center and bottom connection	PB2 boosterpack to PB2 pin and TamperIO
J15	PA7/TIO Connection	Center and bottom connection	PA7 boosterpack to PA7 pin and TamperIO
J16	Red LED connection (LED5)	Unpopulated	Through 470Ω resistor and LED to ground
J17	UART RX	Top and center connection	PA11 to XDS PA11 to PA11 boosterpack
J18	UART TX	Top and center connection	PA10 to XDS PA10 to PA10 boosterpack
J19	BSL Button	Populated	PA18: 47kΩ pull down resistor, switch pulls up to 3.3V
J20	Switch connection (S2)	Populated	PB8: switch pulls down to GND

2.2 Power Requirements

The LP-MSPM0L2228 only needs the USB plugged in and the debugger jumper block populated to power the device. With the on-board LDO, the 5V USB supply is converted to 3.3V with a supply of 500mA. The LaunchPad can also be powered via the 3.3V or 5V headers via an external supply. Do not exceed 3.3V on the 3.3V rail or 5V on the 5V rail. For operation of the Low-Frequency Subsystem Module (LFSS), the BAT jumper needs to be populated or powered with 1.65 - 3.3V.

Figure 2-2 shows the power connections on the LP-MSPM0L2228.

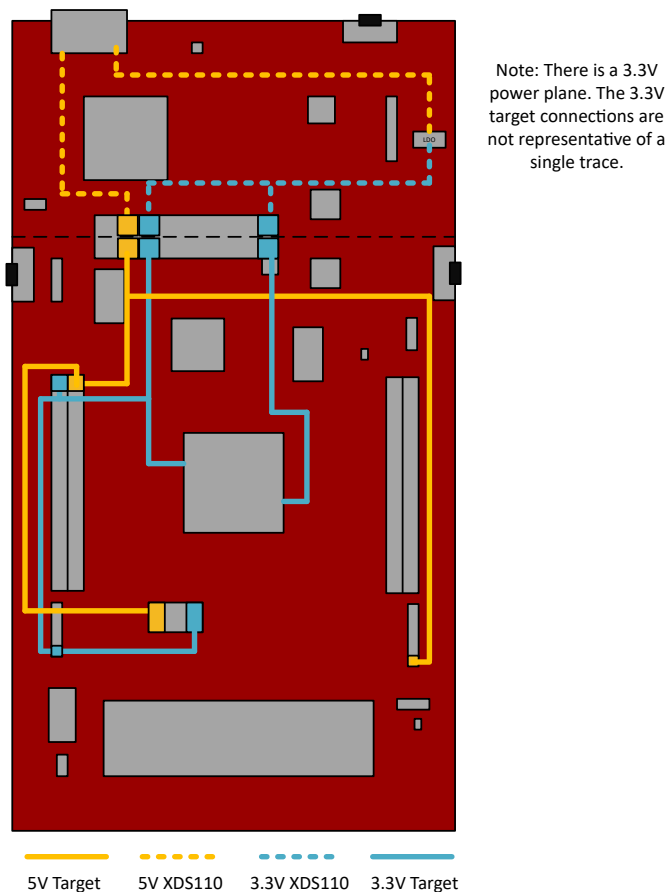


Figure 2-2. LP-MSPM0L2228 Power Connections

2.3 XDS110 Debug Probe

LP-MSPM0L2228 features an onboard debug probe to streamline prototyping. The debugger used on this LaunchPad is the XDS110 variant, which supports all MSPM0 device derivatives. The integrated XDS110 debug probe is separated from the rest of the MSPM0L2228 circuitry, which is shown by the dashed silkscreen on the LaunchPad. The XDS110 is only connected through signals that pass through J101, in addition to a common ground.

2.3.1 Isolation Jumper Block

The isolation jumper block J101 allows the user to connect or disconnect signals that cross from the XDS110 domain into the MSPM0L2228 target domain. This includes XDFS110 SWD signals, application UART signals, 3.3V and 5.5V power, reset, and a VBAT source.

Table 2-2. Isolation Jumper Block

Jumper	Description
5V	5V rail from the USB
3V3	3.3V rail from the LDO
RXD<<	Backchannel UART: The target MSPM0L2228 receives data through this signal. The arrows indicate the direction of the signal.
TXD>>	Backchannel UART: The target MSPM0L2228 sends data through this signal. The arrows indicate the direction of the signal.
NRST	Reset signal
SWDIO	Serial Wire Debug: SWDIO data signal.
SWCLK	Serial wire debug: SWCLK clock signal.
BSL	Invoke pin for bootstrap loader. Allows the XDS110 to invoke BSL.
VBAT	VBAT connection between the LDO on the XDS110 side and the MSPM0L2228's VBAT pin.
CAP	CAP connection to the SuperCap.

During normal prototyping most shunts are populated. However, there are some scenarios where a user needs to open these connections:

- To remove any and all influence from the XDS110 debug probe for high accuracy target power measurements
- To control 3.3V and 5V power flow between the XDS110 and target domains
- To expose the target MCU pins for other use than onboard debugging and application UART communication.
- To expose the programming and UART interface for the XDS110 so that the XDS110 can be used for devices other than the onboard MCU.
- To utilize other VBAT options

2.3.2 Application (Backchannel) UART

The backchannel UART allows communication with the USB host that is not part of the target application's main functionality. This is very useful during development, and also provides a communication channel to the PC host side. This can be used to create graphical user interfaces (GUIs) and other programs on the PC that communicate with the LaunchPad development kit.

On the host side, a virtual COM port for the application backchannel UART is generated when the LaunchPad development kit enumerates on the host. You can use any PC application that interfaces with COM ports, including terminal applications like HyperTerminal or Docklight, to open this port and communicate with the target application. You need to identify the COM port for the backchannel. On Windows PCs, Device Manager can assist.

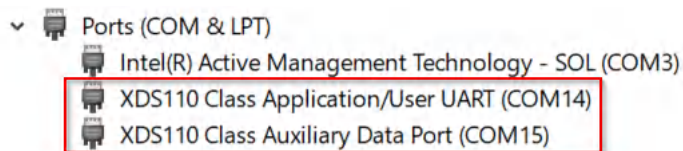


Figure 2-3. Application Backchannel UART in Device Manager

The backchannel UART is the *XDS110 Class Application/User UART* port. In this case, [Figure 2-3](#) shows COM14, but this port can vary from one host PC to the next. After identifying the correct COM port, configure the port in the host application according to documentation. The user can then open the port and begin communication from the host.

On the target MSPM0L2228 side, the backchannel UART is connected to UART0 (PA10, PA11). The XDS110 has a configurable baud rate; therefore, the PC application configuring the baud rate needs to be the same baud rate.

2.4 Measure Current Draw of the MSPM0L2228

To measure the current draw of the MSPM0L2228 MCU using a multimeter, use the 3V3 jumper on the J101 jumper isolation block. The current measured includes the target device, LaunchPad circuits, and any current drawn through the BoosterPack plug-in module headers. To measure ultra-low power, follow these steps:

- Remove the 3V3 jumper in the J101 isolation block, and attach an ammeter across this jumper.
- Consider the effect that the backchannel UART and any circuitry attached to the MSPM0L2228 can have on the current draw. Consider disconnecting these at the isolation jumper block, or at least consider the current sinking and sourcing capability in the final measurement.
- Make sure there are no floating inputs/outputs (I/Os) on the MSPM0L2228. This causes unnecessary extra current draw. Every I/O is either driven or, if the I/O is an input, is pulled or driven to a high or low level.
- Begin target execution.
- For the most accurate current measurements, place the device in Free Run mode and disconnect programming signals between the MSPM0L2228 and the debug portion of the board (header J101).
- Measure the current. Keep in mind that if the current levels are fluctuating, then getting a stable measurement can be difficult. Measuring the quiescent states is easier.

To measure the current draw of the VBAT domain:

- Remove the BAT jumper in the J101 isolation block, and attach an ammeter across the jumper.
- To isolate from other sources of current draw, TI recommends to power with a separate power source from VDD. To do this apply the voltage to the BAT pin on the MSP side of the board.
- Measure the current.

Note

For XMSPM0L2228 parts, the VBAT current draw is higher than expected. This is fixed in the released version of the part. The released version of the part does not have an X-marking on silkscreen.

2.5 Clocking

The internal SYSOSC is 32MHz as default at the accuracy of 2.5%. The MCLK is sourced by 32MHz SYSOSC at default. CPUCLK is sourced directly from MCLK in RUN mode and disabled in other modes. The low-power clock (ULPCLK) can be sourced by MCLK and active in RUN and SLEEP mode by configuration. The part also includes an internal 32kHz oscillator, LFOSC, which is the default low frequency source. Included on the LaunchPad are two clock crystal options, 1 high-frequency 32MHz crystal (HFXT) and 1 low-frequency 32.728kHz crystal (LFXT). The crystals can be selected during application programming as the clock source for the high frequency and low frequency clocks.

For more clock tree details see Section 2.3 *Clock Module (CKM)* of the [MSPM0 L-Series Microcontrollers Technical Reference Manual](#).

2.6 BoosterPack Plug-in Module Pinout

The LaunchPad development kit adheres to the 40-pin LaunchPad development kit pinout standard, where pins are available. A standard was created to aid compatibility between LaunchPad development kits and BoosterPack plug-in modules across the TI ecosystem.

While most BoosterPack plug-in modules are compliant with the standard, some are not. If the reseller or owner of the BoosterPack plug-in module does not explicitly indicate compatibility with the MSPM0L2228 LaunchPad development kit, then compare the schematic of the candidate BoosterPack plug-in module with the LaunchPad development kit to verify compatibility. Conflicts can be resolved by changing the MSPM0L2228 device pin function configuration in software.

2.7 Liquid Crystal Display (LCD)

Included in the LP-MSPM0L2228 is an on-board 7-segment LCD. This LCD is driven by the internal LCD driver of the MSPM0L2228. The LaunchPad includes passive components to support both charge pump or internal resistor ladder configurations. [Figure 2-4](#) shows the LCD segment layout and [Table 2-3](#) shows the LCD segment mapping.

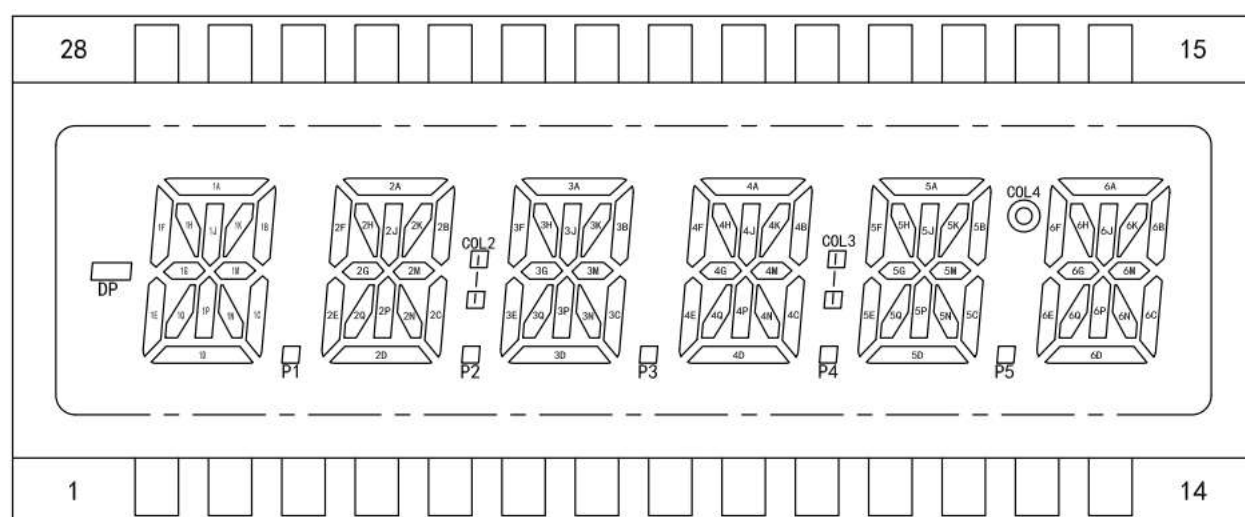


Figure 2-4. LCD Segment Layout

Table 2-3. LCD Segment Mapping

LP Pin	Pin Function	LCD Pin	COM1	COM2	COM3	COM4
PB11	LCD36	1	2D	2E	2F	-
PB12	LCD37	2	2Q	2G	2H	2A
PB13	LCD38	3	2N	2P	2J	2K
PB17	LCD18	4	P2	2C	2M	2B
PB18	LCD19	5	3D	3E	3F	COL2
PB19	LCD20	6	3Q	3G	3H	3A
PB20	LCD23	7	3N	3P	3J	3K
PB21	LCD39	8	P3	3C	3M	3B
PB22	LCD40	9	4D	4E	4F	-
PB23	LCD41	10	4Q	4G	4H	4A
PB24	LCD24	11	COM1	-	-	-
PB25	LCD42	12	-	COM2	-	-
PB26	LCD43	13	-	-	COM3	-
PB27	LCD44	14	-	-	-	COM4
PB28	LCD45	15	-	6C	6M	6B
PB29	LCD46	16	6N	6P	6J	6K

Table 2-3. LCD Segment Mapping (continued)

LP Pin	Pin Function	LCD Pin	COM1	COM2	COM3	COM4
PB30	LCD47	17	6Q	6G	6H	6A
PB31	LCD48	18	6D	6E	6F	COL4
PC0	LCD49	19	P5	5C	5M	5B
PC1	LCD50	20	5N	5P	5J	5K
PC2	LCD51	21	5Q	5G	5H	5A
PC3	LCD52	22	5D	5E	5F	COL3
PC4	LCD53	23	P4	4C	4M	4B
PC5	LCD54	24	4N	4P	4J	4K
PC6	LCD55	25	P1	1C	1M	1B
PC7	LCD56	26	1N	1P	1J	1K
PC8	LCD57	27	1Q	1G	1H	1A
PC9	LCD58	28	1D	1E	1F	DP

2.8 SuperCap

The LaunchPad is equipped with a 100mF super capacitor that can be used to supply power to VBAT. For the SuperCap to power the LFSS module, the jumper on J101 must be connected to VBAT and CAP. Enabling the [Figure 2-5](#) allows the SuperCap to charge to VDD while making sure that the circuit switches off if VDD drops below VBAT. Note that enabling this circuit connects VBAT to VDD, even if the isolation jumper is not connected.

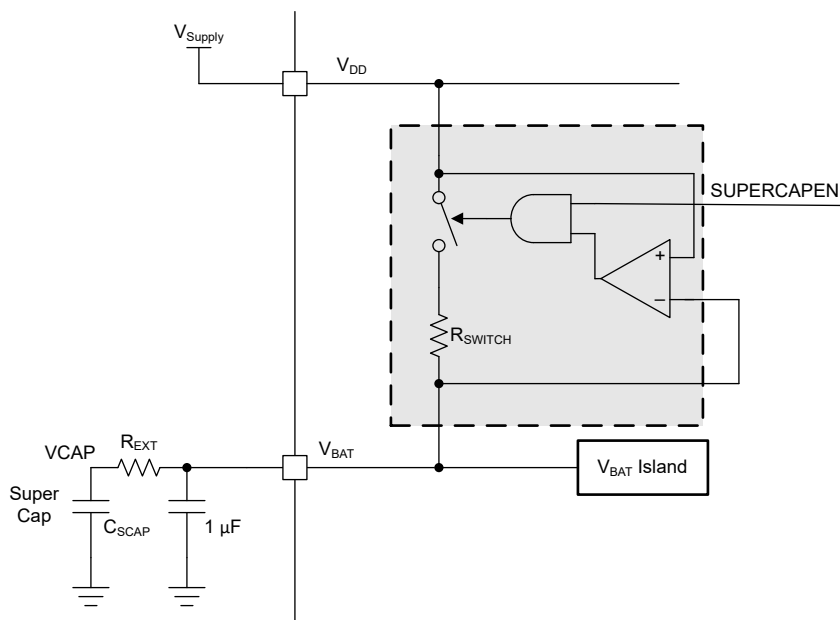


Figure 2-5. SuperCap Charging Circuit

3 Software

3.1 Software Development Options

There are multiple ways to prototype with LP-MSPM0L2228:

1. [Code Composer Studio Cloud](#) (CCS Cloud)- Choose this option to get started quickly with minimal installation.
2. [Code Composer Studio](#) (CCS) - Choose this option to work offline and have full access to debug features. See CCS Theia documentation to get started.
3. [Code Composer Studio Eclipse](#) - This option is supported but is a legacy tool and is not covered in this guide.

3.2 CCS Cloud

1. Navigate to dev.ti.com. The user can be required to install CCS Cloud Agent. If so, then follow the steps to complete this installation.
2. Plug LP-MSPM0L2228 using a micro-USB cable. TI Developer Zone automatically detects that LP-MSPM0L2228 has been plugged in.
3. Click *Browse software and examples*, which opens the MSPM0 SDK in a new window.
4. In the left bar, navigate to Arm-based microcontrollers > Embedded Software > MSPM0 SDK > Examples > Development Tools > DriverLib > gpio_toggle_output > No RTOS > TI Clang Compiler > gpio_toggle_output.
5. Click the *Import* button in the top right corner of the screen. This action imports the project into CCS Cloud and open in a new window.
6. In CCS Cloud, click the debug icon in the left bar to open the debug view.
7. Click the *play* button to deploy the code to the device and open a debug session. By default, the debugger pauses the first line of code.
8. Click the blue *play* button to start the application.
9. The RGB LED on LP-MSPM0L2228 needs to be blinking.

Now, the user is ready to begin prototyping by modifying the code or by importing a different example code.

4.1 Schematics





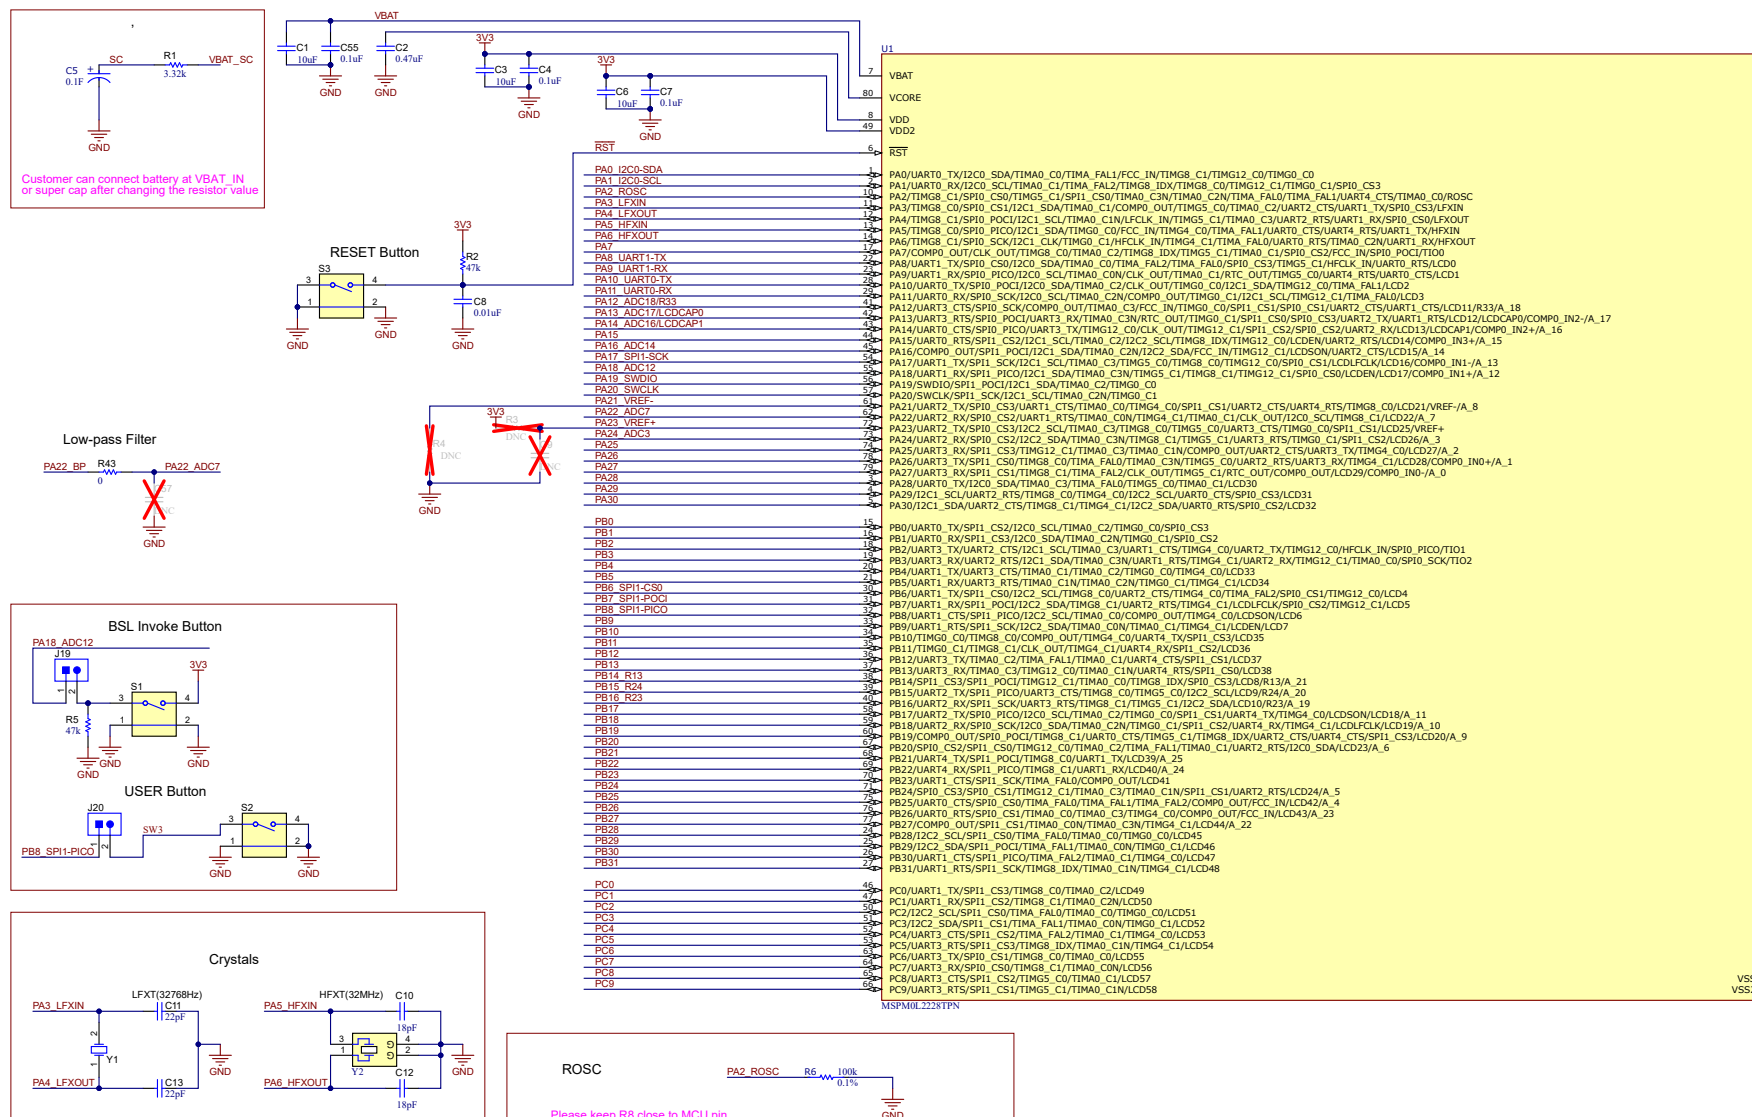




Figure 4-1. MSPM0L2228 Target Device Schematic

BoosterPack Connectors

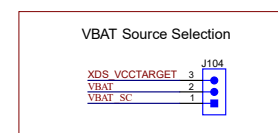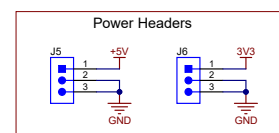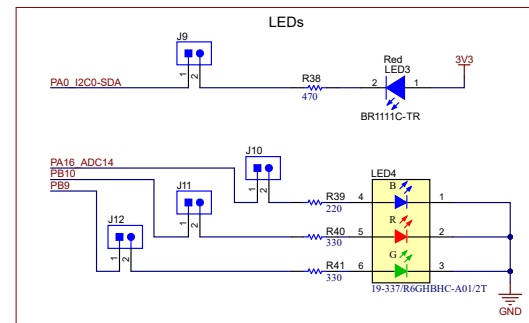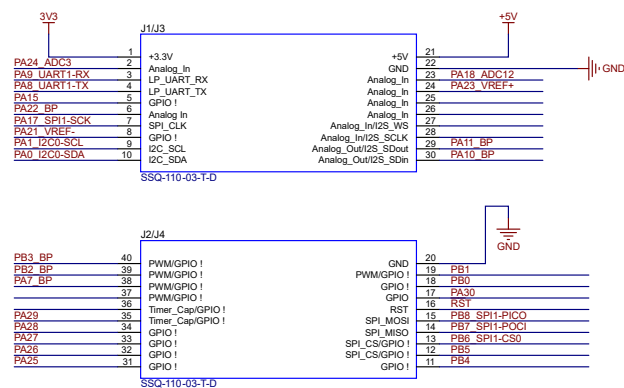

LCD setting

PA10 and PA11 Options

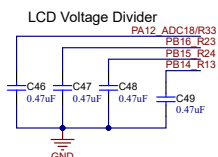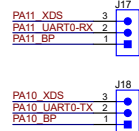

LCD Charge Pump



PC8	DS1
27	1Q/1G/1H/1A
26	1N/1P/1J/1K
25	1D/1E/1F/1P
24	1P/1C/1M/1B
23	
22	2Q/2G/2H/2A
21	2N/2P/2J/2K
20	2D/2E/2F
19	2P/2C/2M/2B
18	
17	3Q/3G/3H/3A
16	3N/3P/3J/3K
15	3D/3E/3F/3P
14	3P/3C/3M/3B
13	
12	4Q/4G/4H/4A
11	4N/4P/4J/4K
10	4D/4E/4F
9	4P/4C/4M/4B
8	
7	5Q/5G/5H/5A
6	5N/5P/5J/5K
5	5D/5E/5F/5P
4	5P/5C/5M/5B
3	
2	6Q/6G/6H/6A
1	6N/6P/6J/6K
0	6D/6E/6F/6P
	6P/6C/6M/6B
	COM1
	COM2
	COM3
	COM4
	GDH-1638WP

TamperIO Jumpers

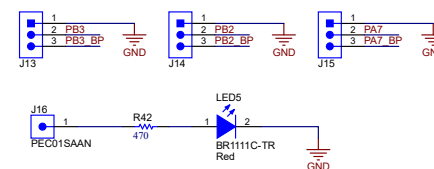


Figure 4-2. BoosterPack Connectors



Software-controlled DCDC converter

Energy measurement method protected under U.S. Patent
Application 13/329,073 and subsequent patent applications

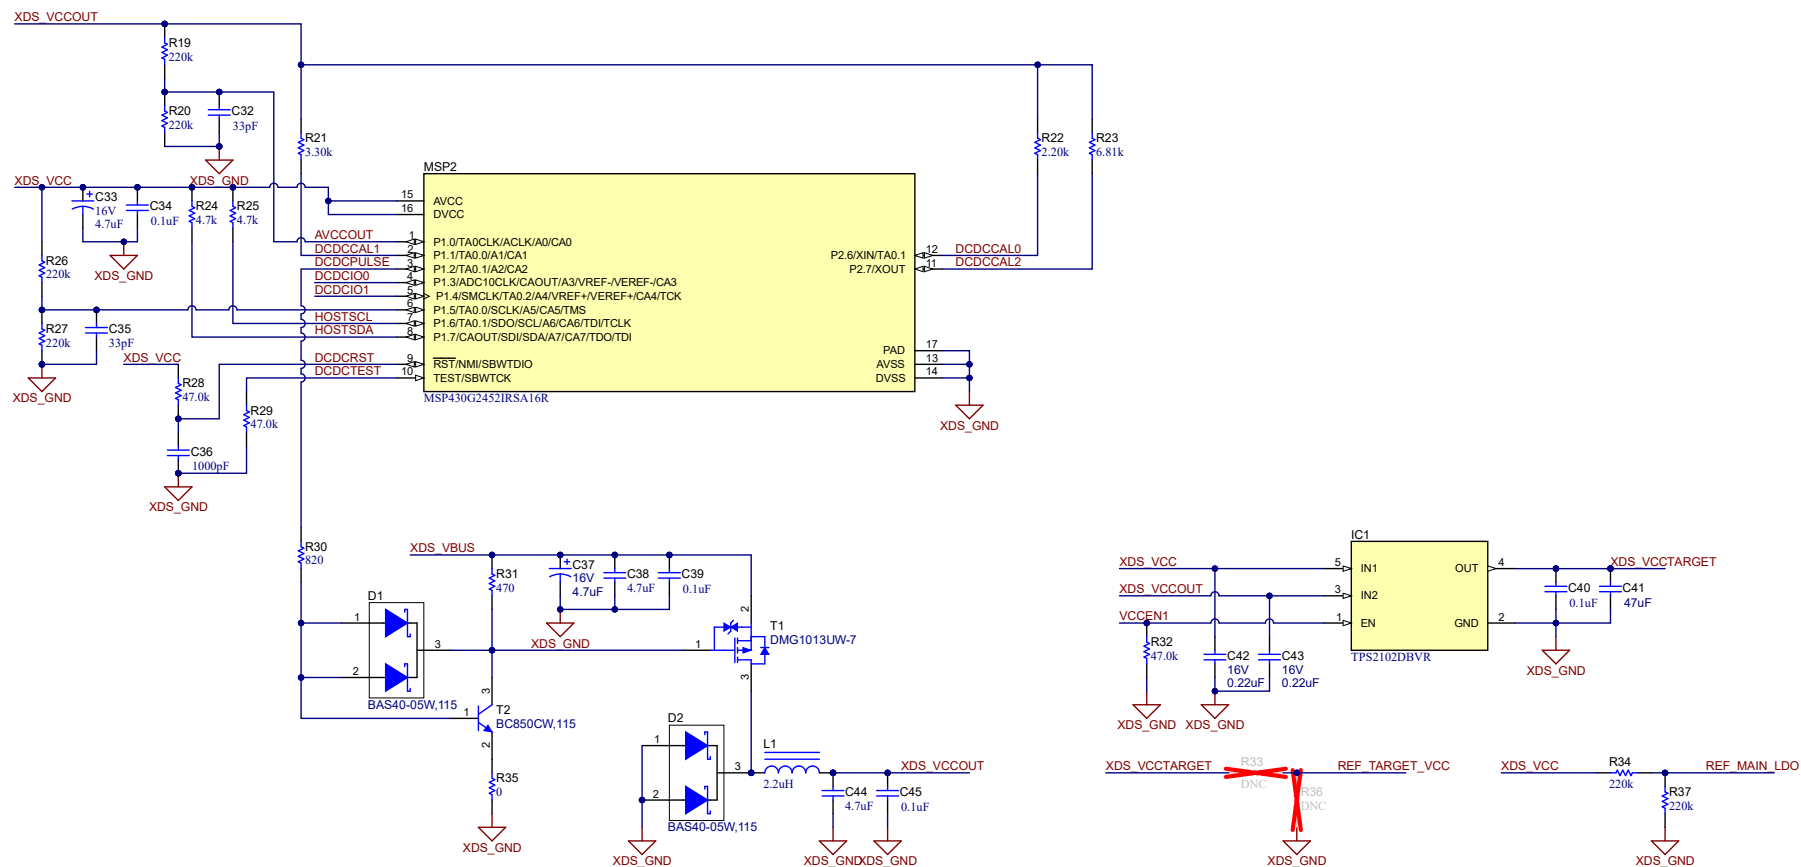
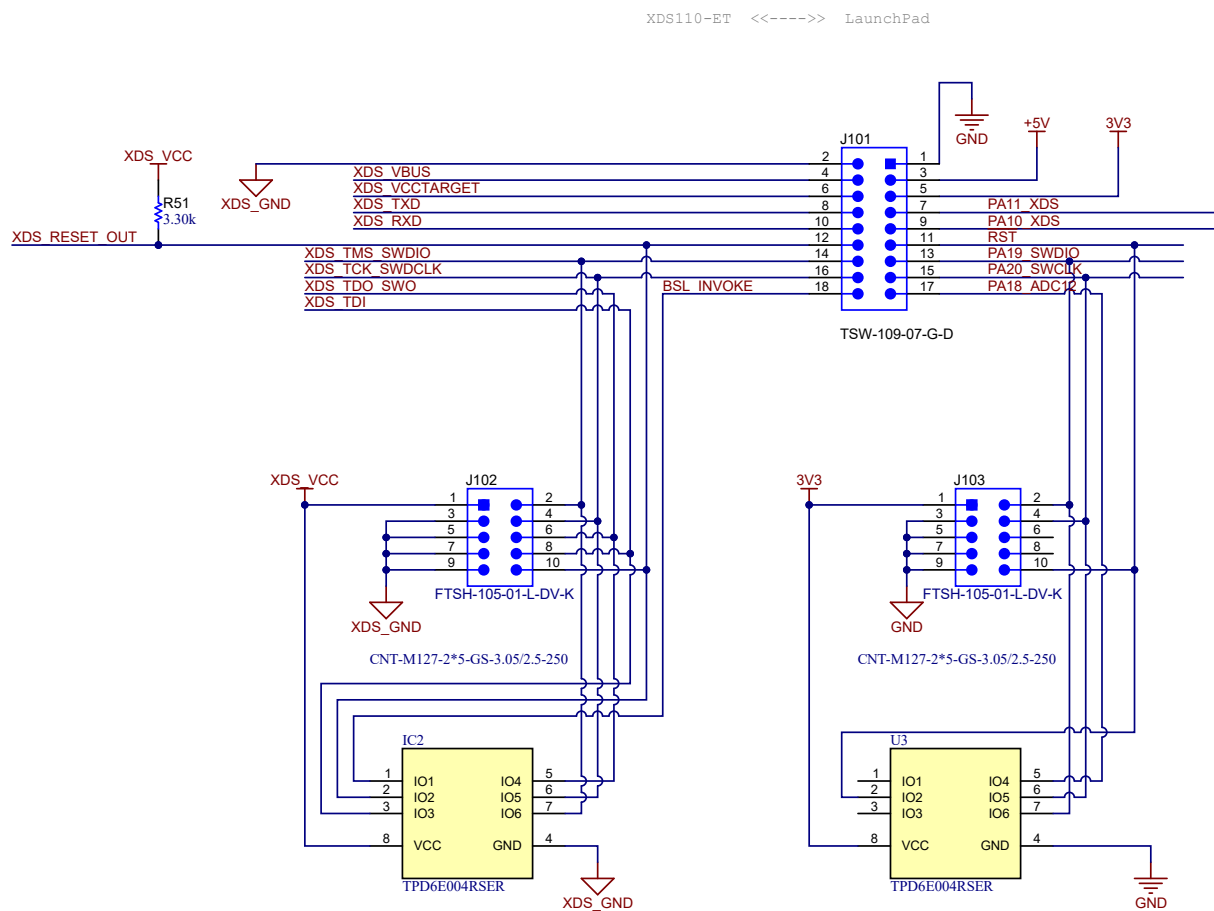


Figure 4-4. XDS110 Energy Trace Schematic



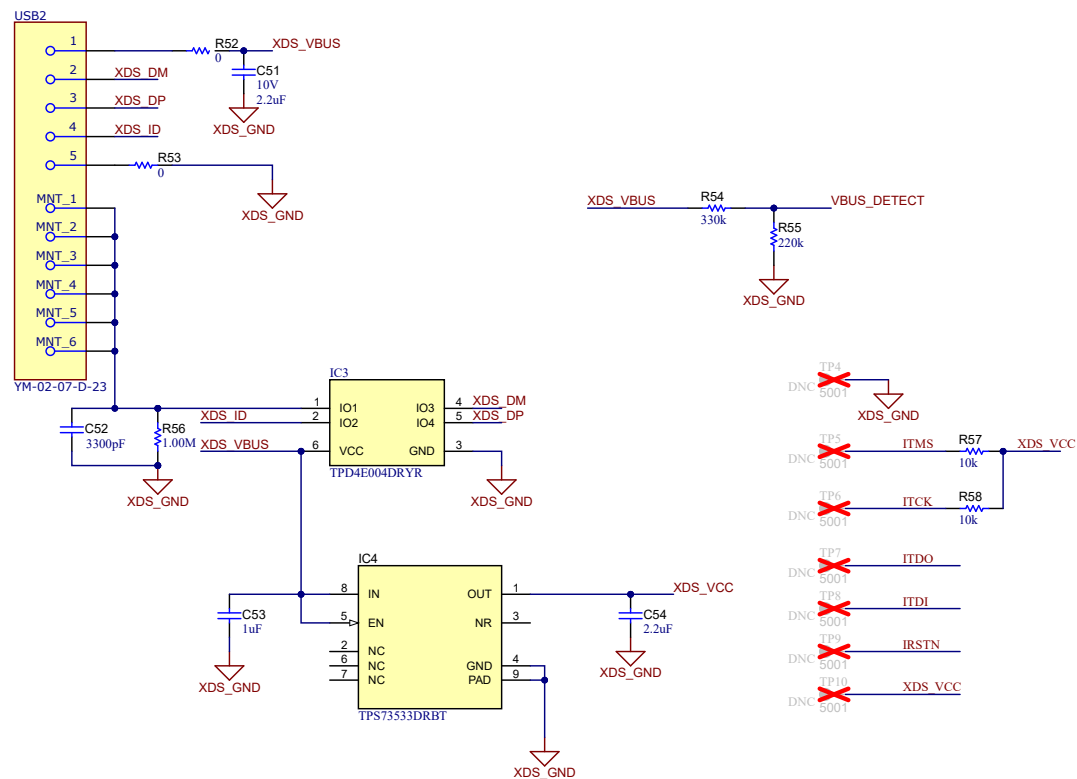


Figure 4-6. XDS110 USB Power Schematic

4.2 PCB Layers

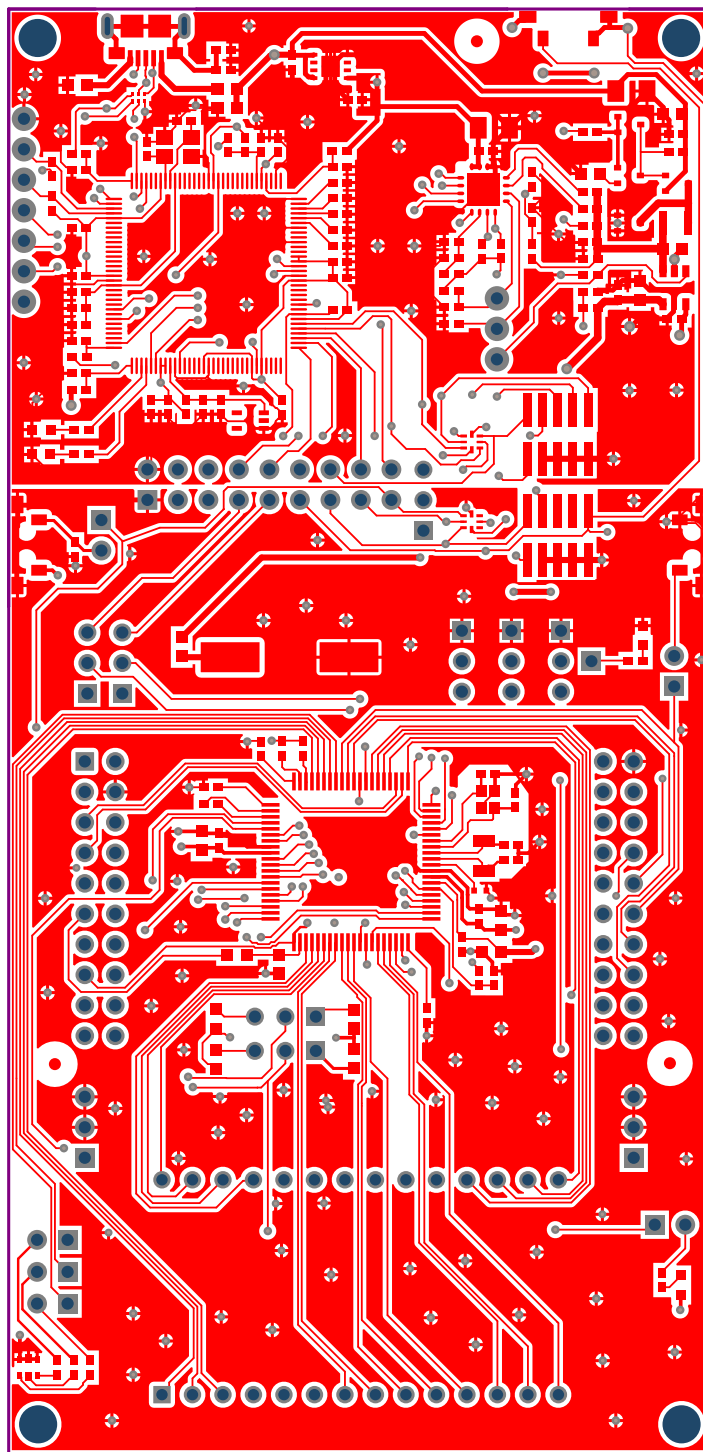


Figure 4-7. PCB Top Layer

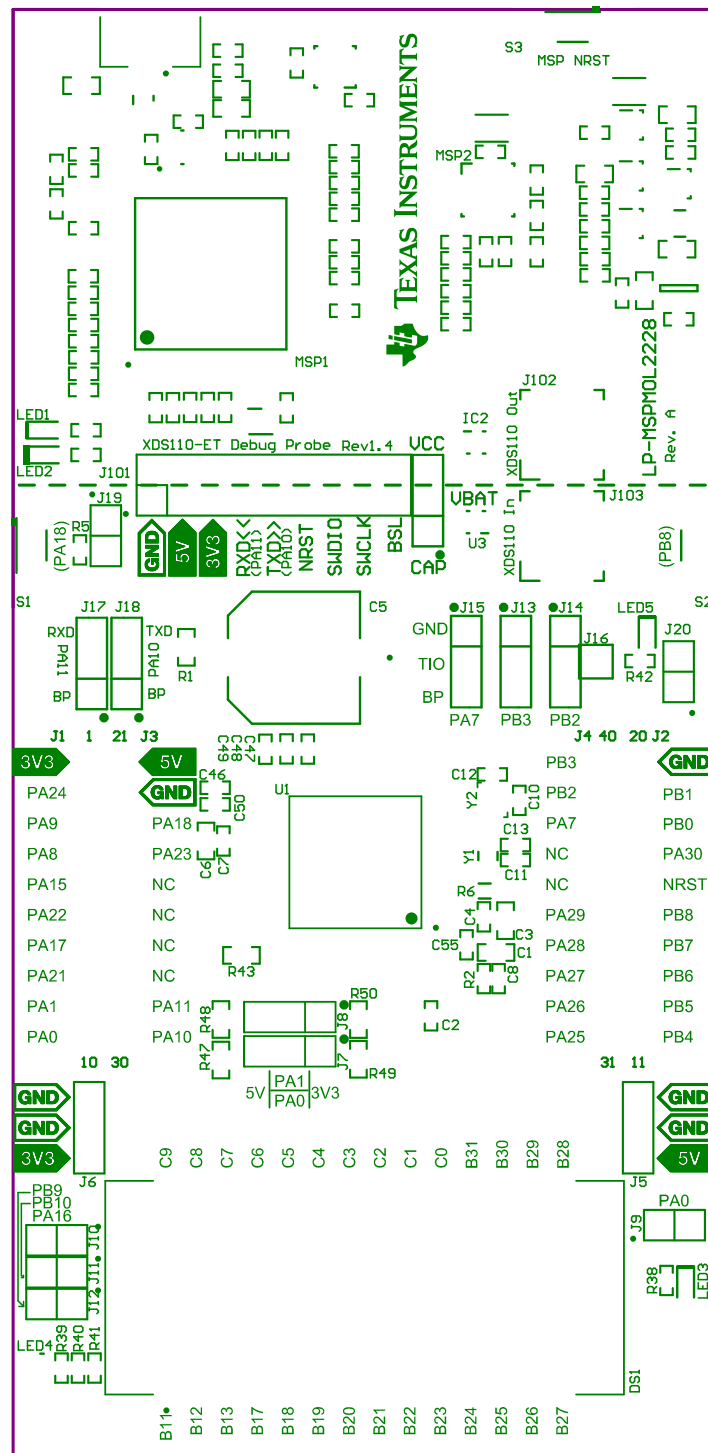


Figure 4-8. PCB Top Overlay

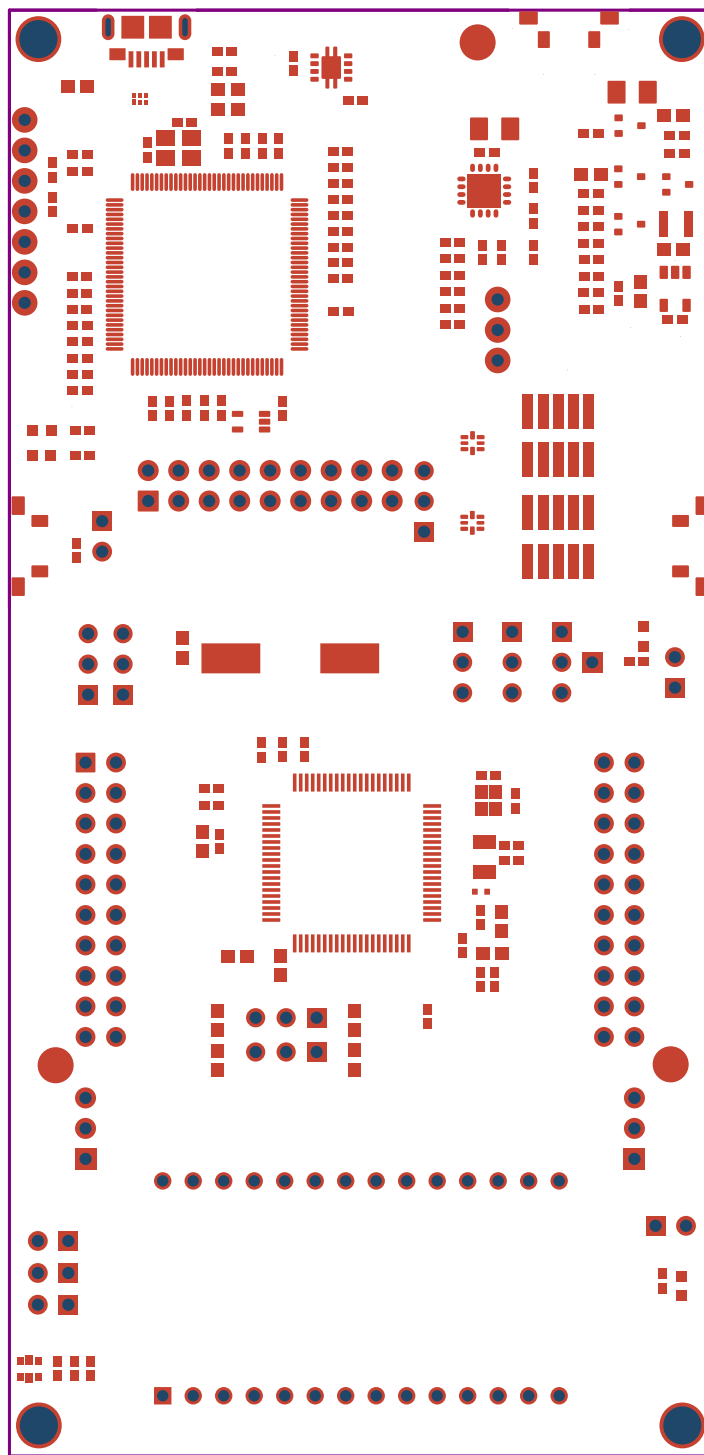


Figure 4-9. PCB Top Solder

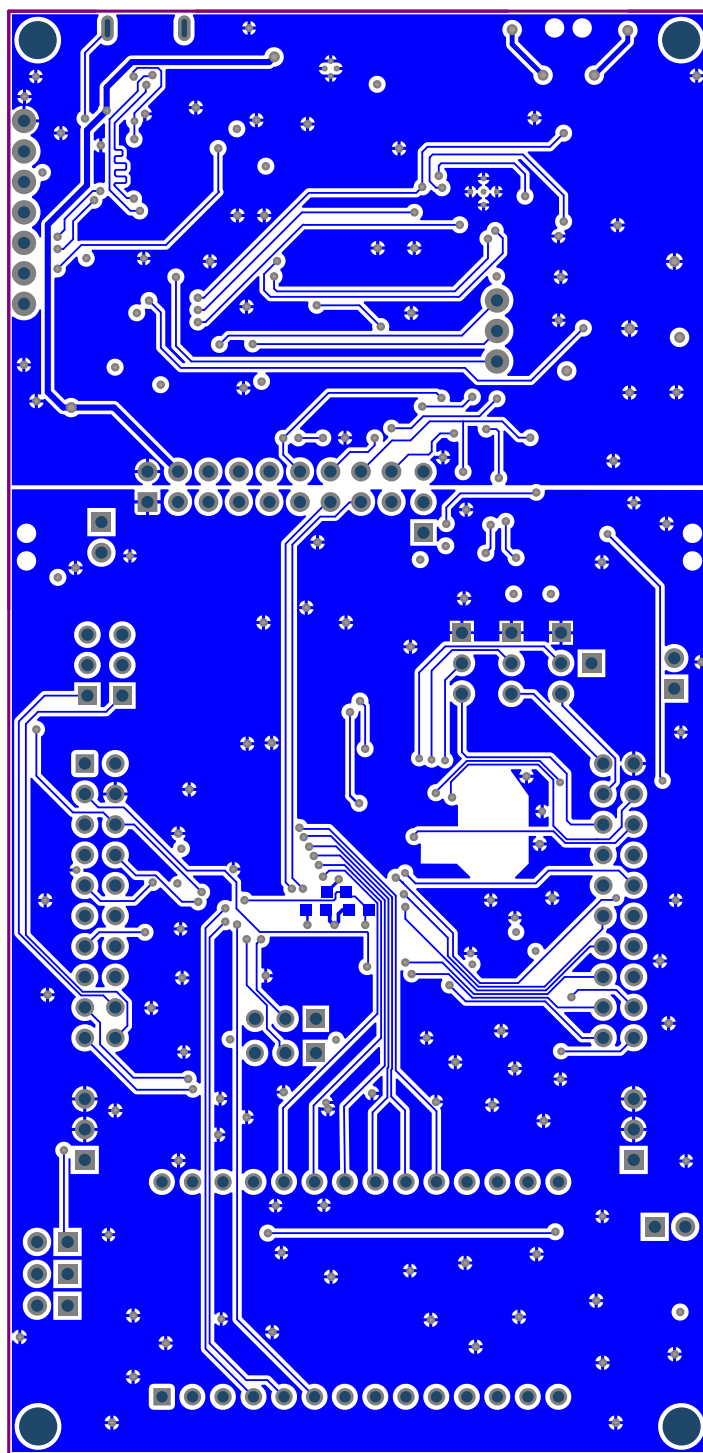


Figure 4-10. PCB Bottom Layer



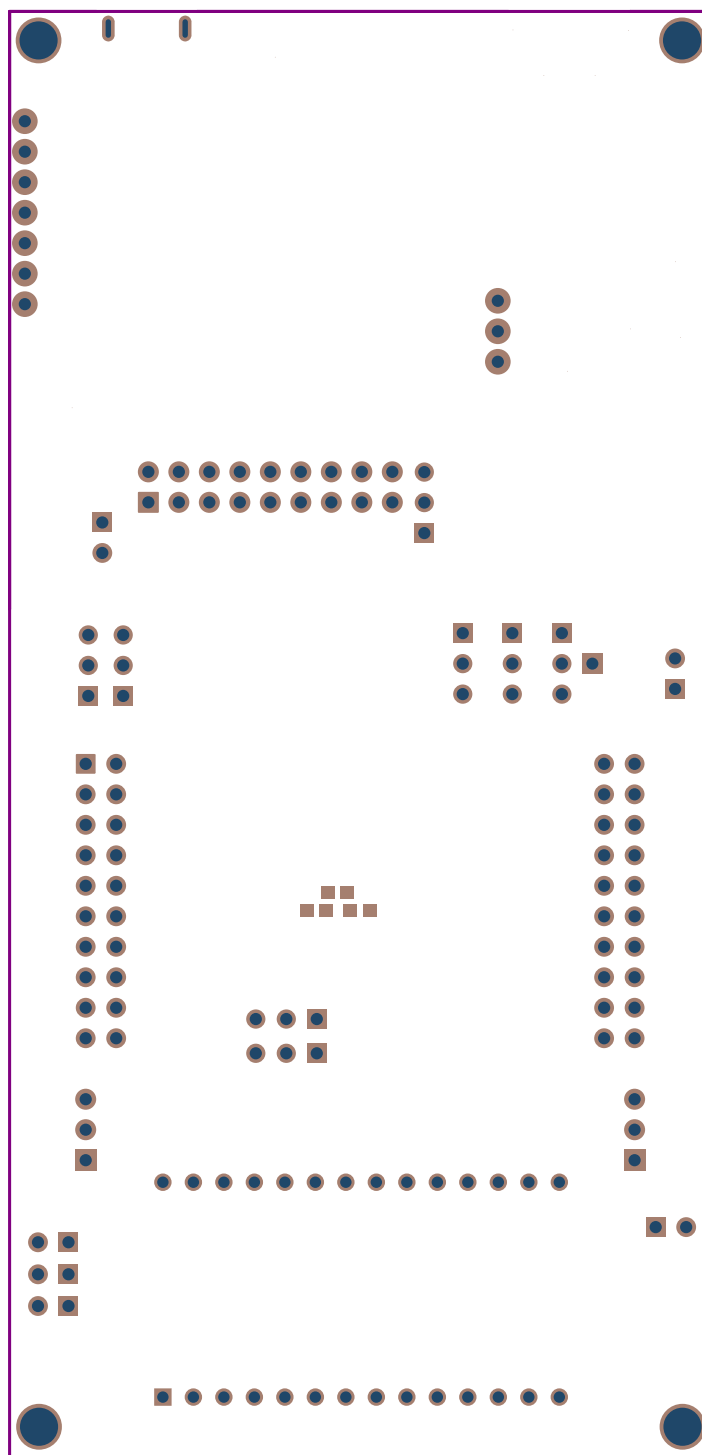


Figure 4-12. PCB Bottom Solder

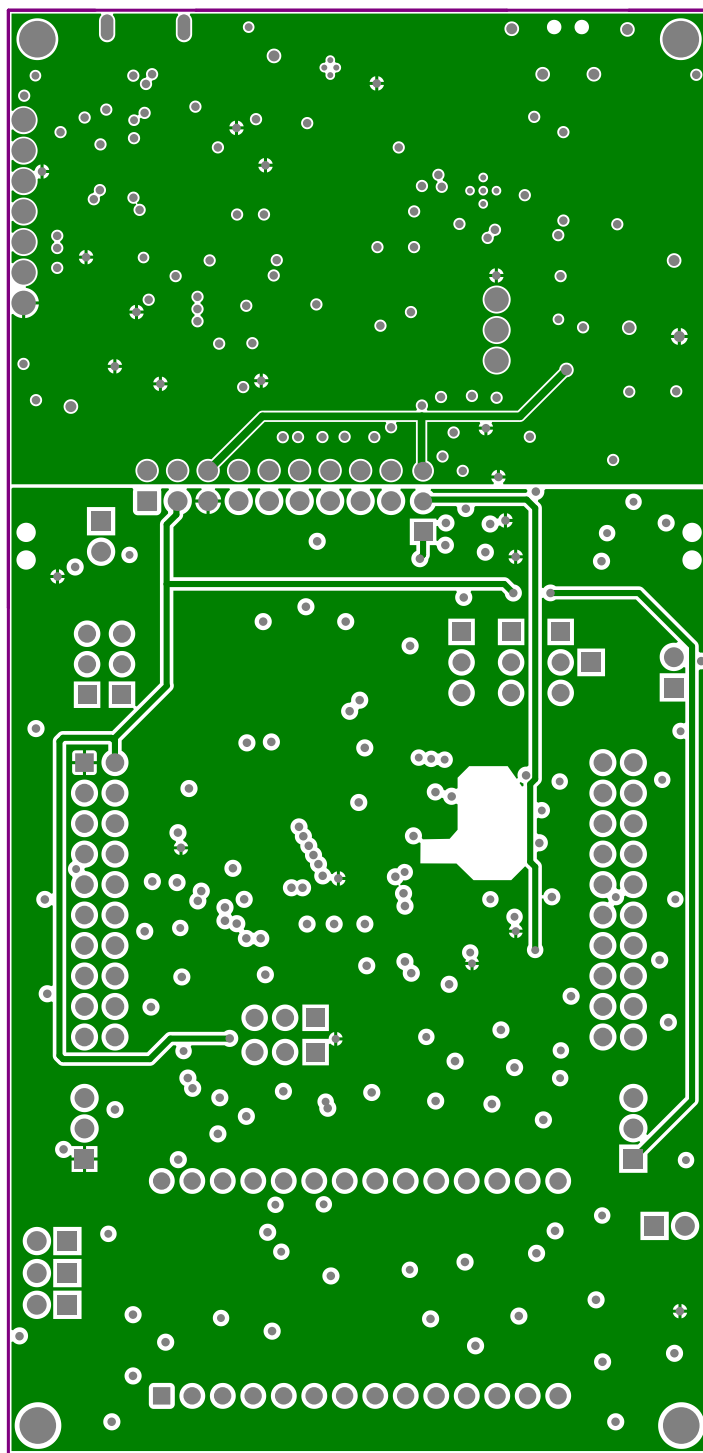


Figure 4-13. PCB VCC Plane

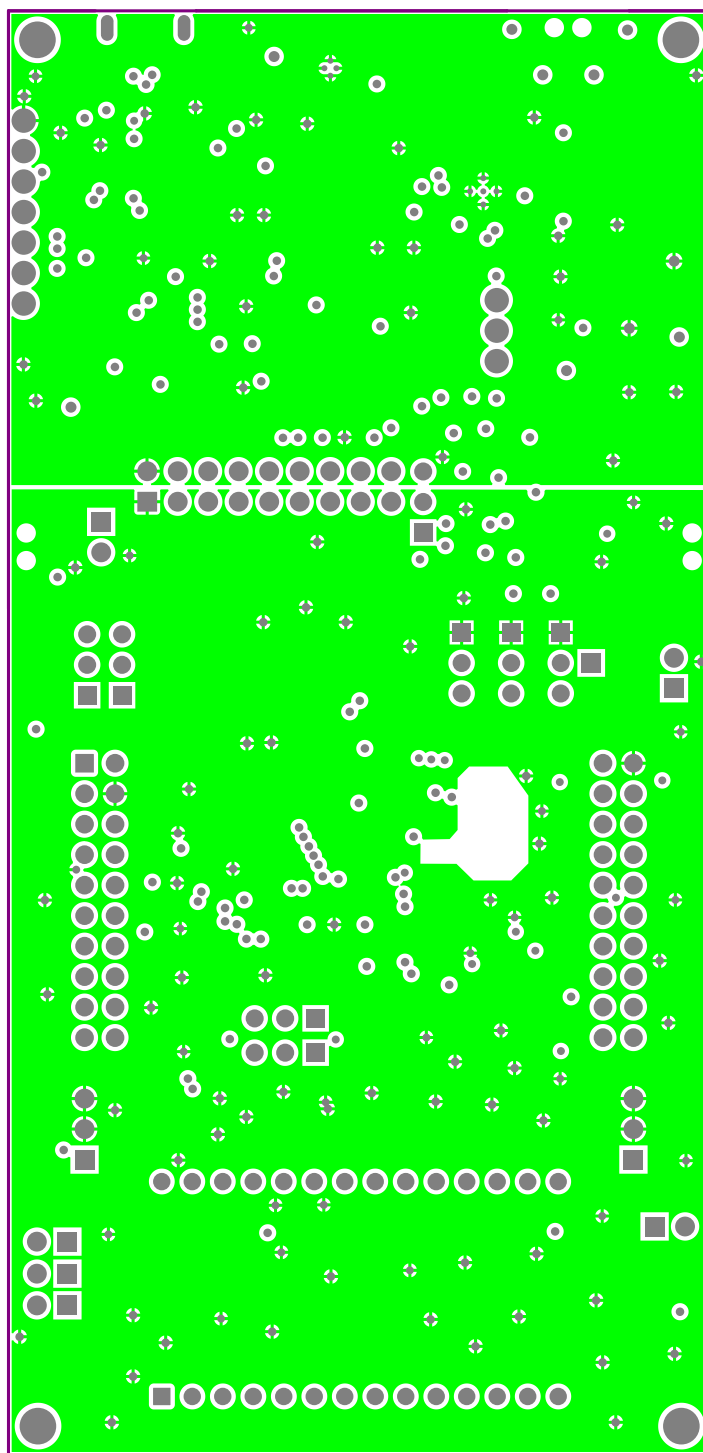


Figure 4-14. PCB GND Plane

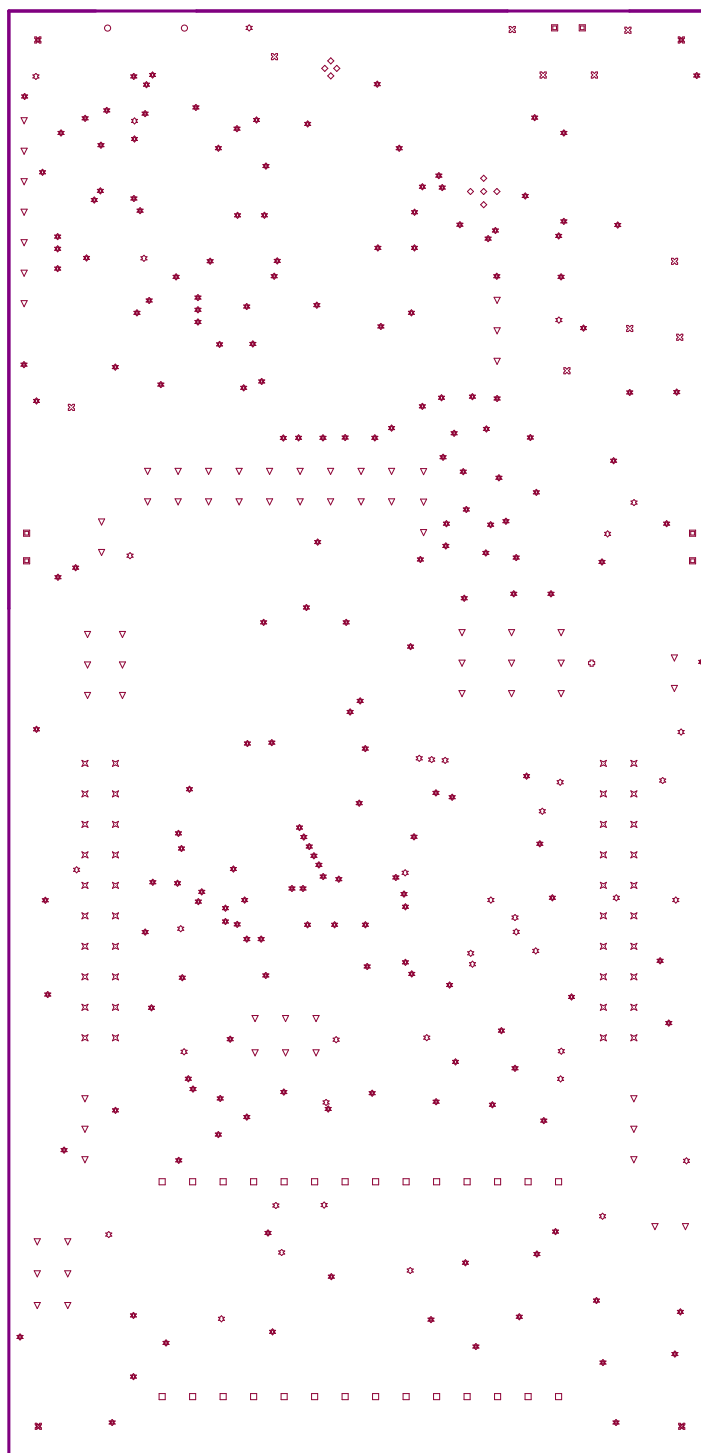


Figure 4-15. PCB Drill Drawing

4.3 Bill of Materials (BOM)

Table 4-1. Bill of Materials

Designator	Quantity	Value	Description	Part Number	Manufacturer
!PCB1	1		Printed Circuit Board		Any
C1, C3, C6	3	10 μ F	CAP, CERM, 10 μ F, 6.3V, \pm 20%, X5R, 0603	GRM188R60J106ME84	MuRata
C2, C46, C47, C48, C49, C50	6	0.47 μ F	CAP, CERM, 0.47 μ F, 6.3V, \pm 10%, X5R, 0402	GRM155R60J474KE19D	MuRata
C4, C7, C55	3	0.1 μ F	CAP, CERM, 0.1 μ F, 50V, \pm 20%, X5R, 0402	GRM155R61H104ME14D	MuRata
C5	1	100mF	100mF (EDLC) Supercapacitor 5.5V Radial, Can - SMD 25 Ω @ 1kHz	FC0H104ZFTBR24	KEMET
C8	1	0.01 μ F	CAP, CERM, 0.01 μ F, 16V, \pm 10%, X5R, 0402	GRM155R61C103KA01D	MuRata
C10, C12	2	18pF	CAP, CERM, 18 pF, 50V, \pm 5%, C0G/NP0, 0402	CL05C180JB5NNNC	Samsung Electro-Mechanics
C11, C13	2	22pF	CAP, CERM, 22 pF, 50V, \pm 5%, C0G/NP0, 0402	GRM1555C1H220JA01D	MuRata
C14, C18, C19, C21, C25, C28, C29, C34, C39, C40, C45	11	0.1 μ F	CAP, CERM, 0.1 μ F, 6.3V, \pm 10%, X7R, 0402	GRM155R70J104KA01D	MuRata
C15, C16, C17, C23, C27	5	0.01 μ F	CAP, CERM, 0.01 μ F, 25V, \pm 10%, X7R, 0402	GRM155R71E103KA01D	MuRata
C20, C22, C26, C53	4	1 μ F	CAP, CERM, 1 μ F, 25V, \pm 10%, X5R, 0402	C1005X5R1E105K050BC	TDK
C24, C54	2	2.2 μ F	CAP, CERM, 2.2 μ F, 6.3V, \pm 10%, X5R, 0402	GRM155R60J225KE95D	MuRata
C30, C31	2	12pF	CAP, CERM, 12 pF, 50V, \pm 5%, C0G/NP0, 0402	GRM1555C1H120JA01D	MuRata
C32, C35	2	33pF	CAP, CERM, 33 pF, 50V, \pm 5%, C0G/NP0, 0402	GRM1555C1H330JA01D	MuRata
C33, C37	2	4.7 μ F	CAP, TA, 4.7 μ F, 16V, \pm 10%, 4 Ω , SMD	TAJA475K016RNJ	AVX
C36	1	1000pF	CAP, CERM, 1000 pF, 50V, \pm 10%, X7R, AEC-Q200 Grade 1, 0402	GCM155R71H102KA37D	MuRata
C38, C44	2	4.7 μ F	CAP, CERM, 4.7 μ F, 16V, \pm 10%, X5R, 0603	GRM188R61C475KAAJ	MuRata
C41	1	47 μ F	CAP, CERM, 47 μ F, 6.3V, \pm 20%, X5R, 0603	GRM188R60J476ME15D	MuRata

Table 4-1. Bill of Materials (continued)

Designator	Quantity	Value	Description	Part Number	Manufacturer
C42, C43	2	0.22μF	CAP, CERM, 0.22μF, 16V, ±10%, X7R, 0402	GRM155R71C224KA12D	MuRata
C51	1	2.2μF	CAP, CERM, 2.2μF, 10V, ±10%, X5R, 0603	C0603C225K8PACTU	Kemet
C52	1	3300pF	CAP, CERM, 3300 pF, 50V, ±10%, X7R, 0402	GRM155R71H332KA01D	MuRata
D1, D2	2	40V	Diode, Schottky, 40V, 0.12 A, AEC-Q101, SOT-323	BAS40-05W,115	Nexperia
DS1	1		GDH-1638WP	GDH-1638WP	Xiamen Ocular Optics
FID1, FID2, FID3	3		Fiducial mark. There is nothing to buy or mount.	N/A	N/A
H1, H2	2		Spacer Support, Nylon 66	MAE-10	Kang Yang
IC1	1		2.7-4V Dual In/Single Out MOSFET, 0.5A Main/0.1A Aux Input, Act-Low Enable, Comm. Temp., DBV0005A (SOT-23-5)	TPS2102DBVR	Texas Instruments
IC2, U3	2		Low-Capacitance ±15 kV ESD Protection Array for High-Speed Data Interfaces, 6 Channels, -40°C to +85°C, 8-pin UQFN (RSE), Green (RoHS & no Sb/Br)	TPD6E004RSER	Texas Instruments
IC3	1		ESD-Protection Array for High-Speed Data Interfaces, 4 Channels, -40°C to +85°C, 6-pin SON (DRY), Green (RoHS & no Sb/Br)	TPD4E004DRYR	Texas Instruments
IC4	1		500mA, Adjustable, Low Quiescent Current, Low-Noise, High-PSRR, Single-Output LDO Regulator, DRB0008A (VSON-8)	TPS73533DRBT	Texas Instruments
J1/J3, J2/J4	2		Receptacle, 2.54mm, 10x2, Tin, TH	SSQ-110-03-T-D	Samtec
J5, J6, J7, J8, J13, J14, J15, J17, J18, J104	10		Header, 100mil, 3x1, Tin, TH	PEC03SAAN	Sullins Connector Solutions
J9, J10, J11, J12, J19, J20	6		Header, 100mil, 2x1, Tin, TH	90120-0122	Molex
J16	1		Header, 1x1, Tin, TH	PEC01SAAN	Sullins Connector Solutions
J101	1		Header, 100mil, 9x2, Gold, TH	TSW-109-07-G-D	Samtec
J102, J103	2		Header(Shrouded), 1.27mm, 5x2, Gold, SMT	FTSH-105-01-L-DV-K	Samtec

Table 4-1. Bill of Materials (continued)

Designator	Quantity	Value	Description	Part Number	Manufacturer
L1	1	2.2μH	Inductor, Wirewound, Ceramic, 2.2μH, 0.89A, 0.13Ω, SMD	CBC2518T2R2M	Taiyo Yuden
LED1, LED3, LED5	3	Red	LED, Red, SMD	BR1111C-TR	Stanley Electric Co., LTD
LED2	1	Green	LED, Green, SMD	LTST-C190GKT	Lite-On
LED4	1	Rgb	LED, RGB, SMD	19-337/R6GHBHC-A01/2T	Everlight
MSP1	1		MSP432E401YTPDT, PDT0128A (TQFP-128)	MSP432E401YTPDTR	Texas Instruments
MSP2	1		MSP430G2x52, MSP430G2x12 Mixed Signal Microcontroller, RSA0016B (VQFN-16)	MSP430G2452IRSA16R	Texas Instruments
R1	1	3.32k	RES, 3.32 k, 1%, 0.1 W, 0603	RC0603FR-073K32L	Yageo
R2, R5	2	47k	RES, 47 k, 5%, 0.063 W, 0402	CRCW040247K0JNED	Vishay-Dale
R6	1		Res Thin Film 0402 100KΩ 0.1% 1/16W ±25ppm/°C Molded SMD SMD Punched Carrier T/R	ERA-2AEB104X	Panasonic
R7, R8, R9, R17	4	1.0k	RES, 1.0k, 5%, 0.063W, 0402	CR	Vishay-Dale
R11	1	100	RES, 100, 5%, 0.063W, AEC-Q200 Grade 0, 0402	CRCW0402100RJNED	Vishay-Dale
R12, R13, R31, R38, R42	5	470	RES, 470, 5%, 0.063W, 0402	CRCW0402470RJNED	Vishay-Dale
R14, R57, R58	3	10k	RES, 10k, 5%, 0.063W, 0402	CRCW040210K0JNED	Vishay-Dale
R15	1	4.87k	RES, 4.87k, 1%, 0.063W, AEC-Q200 Grade 0, 0402	CRCW04024K87FKED	Vishay-Dal
R16	1	100	RES, 100, 5%, 0.063W, 0402	CRCW0402100RJNED	Vishay-Dale
R18	1	51	RES, 51, 5%, 0.063W, AEC-Q200 Grade 0, 0402	CRCW040251R0JNED	Vishay-Dale
R19, R20, R26, R27, R34, R37, R55	7	220k	RES, 220k, 1%, 0.0625W, 0402	RC0402FR-07220KL	Yageo America
R21, R51	2	3.30k	RES, 3.30k, 1%, 0.1W, AEC-Q200 Grade 0, 0402	ERJ-2RKF3301X	Panasonic
R22	1	2.20k	RES, 2.20k, 1%, 0.063W, 0402	CRCW04022K20FKED	Vishay-Dale
R23	1	6.81k	RES, 6.81k, 1%, 0.063W, 0402	CRCW04026K81FKED	Vishay-Dale
R24, R25	2	4.7k	RES, 4.7k, 5%, 0.063W, 0402	CRCW04024K70JNED	Vishay-Dale
R28, R29, R32	3	47.0k	RES, 47.0k, 1%, 0.0625W, 0402	RC0402FR-0747KL	Yageo America

Table 4-1. Bill of Materials (continued)

Designator	Quantity	Value	Description	Part Number	Manufacturer
R30	1	820	RES, 820, 1%, 0.063W, 0402	RC0402FR-07820RL	Yageo America
R35, R43, R52, R53	4	0	RES, 0, 5%, 0.1W, 0603	RC0603JR-070RL	Yageo
R39	1	220	RES, 220, 5%, 0.063W, 0402	CRCW0402220RJNED	Vishay-Dale
R40, R41	2	330	RES, 330, 5%, 0.063W, 0402	CRCW0402330RJNED	Vishay-Dale
R47, R48	2	4.7k	RES, 4.7 k, 5%, 0.1W, 0603	RC0603JR-074K7L	Yageo
R49, R50	2	2.2k	RES, 2.2k, 5%, 0.1W, 0603	RC0603JR-072K2L	Yageo
R54	1	330k	RES, 330k, 1%, 0.0625W, 0402	RC0402FR-07330KL	Yageo America
R56	1	1.00Meg	RES, 1.00M, 1%, 0.063W, 0402	CRCW04021M00FKED	Vishay-Dale
S1, S2, S3	3		Switch, SPST, 0.05A, 12VDC, SMD	1188E-1K2-V-TR	Diptronics
SH-J1	1	J101: 1-2	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
SH-J2	1	J101: 3-4	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
SH-J3	1	J101: 5-6	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
SH-J4	1	J101: 7-8	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
SH-J5	1	J101: 9-10	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
SH-J6	1	J101: 11-12	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
SH-J7	1	J101: 12-13	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
SH-J8	1	J101: 15-16	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
SH-J9	1	J101: 17-18	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
SH-J10	1	J1: 1-2	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
SH-J11	1	J2: 1-2	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
SH-J12	1	J8: 1-2	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
SH-J13	1	J15: 1-2	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec

Table 4-1. Bill of Materials (continued)

Designator	Quantity	Value	Description	Part Number	Manufacturer
SH-J14	1	J25: 1-2	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
SH-J15	1	J26: 1-2	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
SH-J16	1	J27: 1-2	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
SH-J17	1	J13: 1-2	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
SH-J18, SH-J21, SH-J22, SH-J23	4	J10: 2-3	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
SH-J19	1	J11: 2-3	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
SH-J20	1	J19: 1-2	Shunt, 100mil, Gold plated, Black	SNT-100-BK-G	Samtec
T1	1	-20V	MOSFET, P-CH, -20V, -0.82A, SOT-323	DMG1013UW-7	Diodes Inc.
T2	1	45 V	Transistor, NPN, 45V, 0.1A, SOT-323	BC850CW,115	NXP Semiconductor
U1	1		MSPM0L2228TPN	MSPM0L2228TPN	Texas Instruments
U2	1		Precision Micropower Shunt Voltage Reference, 0.5% accuracy, 2.5V, 15ppm / °C, 15mA, -40°C to 85°C, 5-pin SC70 (DCK), Green (RoHS & no Sb/Br)	LM4040C25IDCKR	Texas Instruments
USB1	1		Cable, USB-A to micro USB-B, 0.3m	AK67421-0.3	Assman WSW
USB2	1		Micro USB 5F B Type Smt	YM-02-07-D-23	Yang Ming
Y1	1		Crystal, 32.768KHz, 12.5pF, SMD	X1A0001410014	Epson
Y2	1		Crystal, 32MHz, 10pF, SMD	Q22FA1280009200	Epson
Y3	1		Crystal, 16MHz, 8pF, SMD	NX3225GA-16.000M-STD-CRG-1	NDK
R3, R4	0	DNC	RES, 0, 5%, 0.1W, 0603	RC0603JR-070RL	Yageo

5 Additional Information

5.1 Trademarks

LaunchPad™, EnergyTrace™, Code Composer Studio™, BoosterPack™, SimpleLink™ are trademarks of Texas Instruments.

Ethernet™ is a trademark of ODVA, Inc.

Arm® and Cortex® are registered trademarks of Arm Limited (or its subsidiaries) in the US and/or elsewhere.

IAR Embedded Workbench® is a registered trademark of IAR Systems AB.

Keil®, and µVision® are registered trademarks of Arm Limited.

Mac® is a registered trademark of Apple Inc.

Linux® is a registered trademark of Linus Torvalds.

All trademarks are the property of their respective owners.

6 Related Documentation

6.1 Supplemental Content

The following items are important learning materials to get started with MSPM0.

- [MSPM0 Academies](#)
- [MSPM0-SDK Code examples](#)
- [TI Precision Labs](#)

7 Revision History

NOTE: Page numbers for previous revisions may differ from page numbers in the current version.

Changes from Revision * (May 2024) to Revision A (September 2025)	Page
• Added notice of new SuperCap in the Description section.....	1
• Updated LaunchPad image.....	1
• Updated diagram and table for jumpers and connectors in Section 2.1	4
• Updated power connections diagram in Section 2.2	5
• Added SuperCap information in Section 2.8	9
• Removed out-of-box GUI option in Section 3.1	10
• Updated PCB schematics in Section 4.1	11
• Added PCB layers in Section 4.2	17
• Updated Bill of Materials in Section 4.3	26

STANDARD TERMS FOR EVALUATION MODULES

1. *Delivery:* TI delivers TI evaluation boards, kits, or modules, including any accompanying demonstration software, components, and/or documentation which may be provided together or separately (collectively, an "EVM" or "EVMs") to the User ("User") in accordance with the terms set forth herein. User's acceptance of the EVM is expressly subject to the following terms.
 - 1.1 EVMs are intended solely for product or software developers for use in a research and development setting to facilitate feasibility evaluation, experimentation, or scientific analysis of TI semiconductors products. EVMs have no direct function and are not finished products. EVMs shall not be directly or indirectly assembled as a part or subassembly in any finished product. For clarification, any software or software tools provided with the EVM ("Software") shall not be subject to the terms and conditions set forth herein but rather shall be subject to the applicable terms that accompany such Software
 - 1.2 EVMs are not intended for consumer or household use. EVMs may not be sold, sublicensed, leased, rented, loaned, assigned, or otherwise distributed for commercial purposes by Users, in whole or in part, or used in any finished product or production system.
2. *Limited Warranty and Related Remedies/Disclaimers:*
 - 2.1 These terms do not apply to Software. The warranty, if any, for Software is covered in the applicable Software License Agreement.
 - 2.2 TI warrants that the TI EVM will conform to TI's published specifications for ninety (90) days after the date TI delivers such EVM to User. Notwithstanding the foregoing, TI shall not be liable for a nonconforming EVM if (a) the nonconformity was caused by neglect, misuse or mistreatment by an entity other than TI, including improper installation or testing, or for any EVMs that have been altered or modified in any way by an entity other than TI, (b) the nonconformity resulted from User's design, specifications or instructions for such EVMs or improper system design, or (c) User has not paid on time. Testing and other quality control techniques are used to the extent TI deems necessary. TI does not test all parameters of each EVM. User's claims against TI under this Section 2 are void if User fails to notify TI of any apparent defects in the EVMs within ten (10) business days after delivery, or of any hidden defects with ten (10) business days after the defect has been detected.
 - 2.3 TI's sole liability shall be at its option to repair or replace EVMs that fail to conform to the warranty set forth above, or credit User's account for such EVM. TI's liability under this warranty shall be limited to EVMs that are returned during the warranty period to the address designated by TI and that are determined by TI not to conform to such warranty. If TI elects to repair or replace such EVM, TI shall have a reasonable time to repair such EVM or provide replacements. Repaired EVMs shall be warranted for the remainder of the original warranty period. Replaced EVMs shall be warranted for a new full ninety (90) day warranty period.

WARNING

Evaluation Kits are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems.

User shall operate the Evaluation Kit within TI's recommended guidelines and any applicable legal or environmental requirements as well as reasonable and customary safeguards. Failure to set up and/or operate the Evaluation Kit within TI's recommended guidelines may result in personal injury or death or property damage. Proper set up entails following TI's instructions for electrical ratings of interface circuits such as input, output and electrical loads.

NOTE:

EXPOSURE TO ELECTROSTATIC DISCHARGE (ESD) MAY CAUSE DEGRADATION OR FAILURE OF THE EVALUATION KIT; TI RECOMMENDS STORAGE OF THE EVALUATION KIT IN A PROTECTIVE ESD BAG.

3 Regulatory Notices:

3.1 United States

3.1.1 Notice applicable to EVMs not FCC-Approved:

FCC NOTICE: This kit is designed to allow product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and software developers to write software applications for use with the end product. This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter.

3.1.2 For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant:

CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement for Class A EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Interference Statement for Class B EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- *Reorient or relocate the receiving antenna.*
- *Increase the separation between the equipment and receiver.*
- *Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- *Consult the dealer or an experienced radio/TV technician for help.*

3.2 Canada

3.2.1 For EVMs issued with an Industry Canada Certificate of Conformance to RSS-210 or RSS-247

Concerning EVMs Including Radio Transmitters:

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Concernant les EVMs avec appareils radio:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Concerning EVMs Including Detachable Antennas:

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

3.3 Japan

3.3.1 *Notice for EVMs delivered in Japan:* Please see http://www.tij.co.jp/sds/ti_ja/general/eStore/notice_01.page 日本国内に輸入される評価用キット、ボードについては、次のところをご覧ください。

<https://www.ti.com/ja-jp/legal/notice-for-evaluation-kits-delivered-in-japan.html>

3.3.2 *Notice for Users of EVMs Considered "Radio Frequency Products" in Japan:* EVMs entering Japan may not be certified by TI as conforming to Technical Regulations of Radio Law of Japan.

If User uses EVMs in Japan, not certified to Technical Regulations of Radio Law of Japan, User is required to follow the instructions set forth by Radio Law of Japan, which includes, but is not limited to, the instructions below with respect to EVMs (which for the avoidance of doubt are stated strictly for convenience and should be verified by User):

1. Use EVMs in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
2. Use EVMs only after User obtains the license of Test Radio Station as provided in Radio Law of Japan with respect to EVMs, or
3. Use of EVMs only after User obtains the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to EVMs. Also, do not transfer EVMs, unless User gives the same notice above to the transferee. Please note that if User does not follow the instructions above, User will be subject to penalties of Radio Law of Japan.

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】 開発キットの中には技術基準適合証明を受けていないものがあります。技術適合証明を受けていないもののご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
2. 実験局の免許を取得後ご使用いただく。
3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。 日本テキサス・インスツルメンツ株式会社
東京都新宿区西新宿 6 丁目 2 4 番 1 号
西新宿三井ビル

3.3.3 *Notice for EVMs for Power Line Communication:* Please see http://www.tij.co.jp/sds/ti_ja/general/eStore/notice_02.page

電力線搬送波通信についての開発キットをお使いになる際の注意事項については、次のところをご覧ください。<https://www.ti.com/ja-jp/legal/notice-for-evaluation-kits-for-power-line-communication.html>

3.4 European Union

3.4.1 *For EVMs subject to EU Directive 2014/30/EU (Electromagnetic Compatibility Directive):*

This is a class A product intended for use in environments other than domestic environments that are connected to a low-voltage power-supply network that supplies buildings used for domestic purposes. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

4 *EVM Use Restrictions and Warnings:*

4.1 EVMS ARE NOT FOR USE IN FUNCTIONAL SAFETY AND/OR SAFETY CRITICAL EVALUATIONS, INCLUDING BUT NOT LIMITED TO EVALUATIONS OF LIFE SUPPORT APPLICATIONS.

4.2 User must read and apply the user guide and other available documentation provided by TI regarding the EVM prior to handling or using the EVM, including without limitation any warning or restriction notices. The notices contain important safety information related to, for example, temperatures and voltages.

4.3 *Safety-Related Warnings and Restrictions:*

4.3.1 User shall operate the EVM within TI's recommended specifications and environmental considerations stated in the user guide, other available documentation provided by TI, and any other applicable requirements and employ reasonable and customary safeguards. Exceeding the specified performance ratings and specifications (including but not limited to input and output voltage, current, power, and environmental ranges) for the EVM may cause personal injury or death, or property damage. If there are questions concerning performance ratings and specifications, User should contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may also result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM user guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, even with the inputs and outputs kept within the specified allowable ranges, some circuit components may have elevated case temperatures. These components include but are not limited to linear regulators, switching transistors, pass transistors, current sense resistors, and heat sinks, which can be identified using the information in the associated documentation. When working with the EVM, please be aware that the EVM may become very warm.

4.3.2 EVMs are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems. User assumes all responsibility and liability for proper and safe handling and use of the EVM by User or its employees, affiliates, contractors or designees. User assumes all responsibility and liability to ensure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard. User assumes all responsibility and liability for any improper or unsafe handling or use of the EVM by User or its employees, affiliates, contractors or designees.

4.4 User assumes all responsibility and liability to determine whether the EVM is subject to any applicable international, federal, state, or local laws and regulations related to User's handling and use of the EVM and, if applicable, User assumes all responsibility and liability for compliance in all respects with such laws and regulations. User assumes all responsibility and liability for proper disposal and recycling of the EVM consistent with all applicable international, federal, state, and local requirements.

5. *Accuracy of Information:* To the extent TI provides information on the availability and function of EVMs, TI attempts to be as accurate as possible. However, TI does not warrant the accuracy of EVM descriptions, EVM availability or other information on its websites as accurate, complete, reliable, current, or error-free.

6. *Disclaimers:*

6.1 EXCEPT AS SET FORTH ABOVE, EVMS AND ANY MATERIALS PROVIDED WITH THE EVM (INCLUDING, BUT NOT LIMITED TO, REFERENCE DESIGNS AND THE DESIGN OF THE EVM ITSELF) ARE PROVIDED "AS IS" AND "WITH ALL FAULTS." TI DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING SUCH ITEMS, INCLUDING BUT NOT LIMITED TO ANY EPIDEMIC FAILURE WARRANTY OR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADE SECRETS OR OTHER INTELLECTUAL PROPERTY RIGHTS.

6.2 EXCEPT FOR THE LIMITED RIGHT TO USE THE EVM SET FORTH HEREIN, NOTHING IN THESE TERMS SHALL BE CONSTRUED AS GRANTING OR CONFERRING ANY RIGHTS BY LICENSE, PATENT, OR ANY OTHER INDUSTRIAL OR INTELLECTUAL PROPERTY RIGHT OF TI, ITS SUPPLIERS/LICENSORS OR ANY OTHER THIRD PARTY, TO USE THE EVM IN ANY FINISHED END-USER OR READY-TO-USE FINAL PRODUCT, OR FOR ANY INVENTION, DISCOVERY OR IMPROVEMENT, REGARDLESS OF WHEN MADE, CONCEIVED OR ACQUIRED.

7. *USER'S INDEMNITY OBLIGATIONS AND REPRESENTATIONS.* USER WILL DEFEND, INDEMNIFY AND HOLD TI, ITS LICENSORS AND THEIR REPRESENTATIVES HARMLESS FROM AND AGAINST ANY AND ALL CLAIMS, DAMAGES, LOSSES, EXPENSES, COSTS AND LIABILITIES (COLLECTIVELY, "CLAIMS") ARISING OUT OF OR IN CONNECTION WITH ANY HANDLING OR USE OF THE EVM THAT IS NOT IN ACCORDANCE WITH THESE TERMS. THIS OBLIGATION SHALL APPLY WHETHER CLAIMS ARISE UNDER STATUTE, REGULATION, OR THE LAW OF TORT, CONTRACT OR ANY OTHER LEGAL THEORY, AND EVEN IF THE EVM FAILS TO PERFORM AS DESCRIBED OR EXPECTED.

8. *Limitations on Damages and Liability:*

8.1 *General Limitations.* IN NO EVENT SHALL TI BE LIABLE FOR ANY SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF THESE TERMS OR THE USE OF THE EVMS, REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCLUDED DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, COST OF REMOVAL OR REINSTALLATION, ANCILLARY COSTS TO THE PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, RETESTING, OUTSIDE COMPUTER TIME, LABOR COSTS, LOSS OF GOODWILL, LOSS OF PROFITS, LOSS OF SAVINGS, LOSS OF USE, LOSS OF DATA, OR BUSINESS INTERRUPTION. NO CLAIM, SUIT OR ACTION SHALL BE BROUGHT AGAINST TI MORE THAN TWELVE (12) MONTHS AFTER THE EVENT THAT GAVE RISE TO THE CAUSE OF ACTION HAS OCCURRED.

8.2 *Specific Limitations.* IN NO EVENT SHALL TI'S AGGREGATE LIABILITY FROM ANY USE OF AN EVM PROVIDED HEREUNDER, INCLUDING FROM ANY WARRANTY, INDEMNITY OR OTHER OBLIGATION ARISING OUT OF OR IN CONNECTION WITH THESE TERMS, EXCEED THE TOTAL AMOUNT PAID TO TI BY USER FOR THE PARTICULAR EVM(S) AT ISSUE DURING THE PRIOR TWELVE (12) MONTHS WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED. THE EXISTENCE OF MORE THAN ONE CLAIM SHALL NOT ENLARGE OR EXTEND THIS LIMIT.

9. *Return Policy.* Except as otherwise provided, TI does not offer any refunds, returns, or exchanges. Furthermore, no return of EVM(s) will be accepted if the package has been opened and no return of the EVM(s) will be accepted if they are damaged or otherwise not in a resalable condition. If User feels it has been incorrectly charged for the EVM(s) it ordered or that delivery violates the applicable order, User should contact TI. All refunds will be made in full within thirty (30) working days from the return of the components(s), excluding any postage or packaging costs.

10. *Governing Law:* These terms and conditions shall be governed by and interpreted in accordance with the laws of the State of Texas, without reference to conflict-of-laws principles. User agrees that non-exclusive jurisdiction for any dispute arising out of or relating to these terms and conditions lies within courts located in the State of Texas and consents to venue in Dallas County, Texas. Notwithstanding the foregoing, any judgment may be enforced in any United States or foreign court, and TI may seek injunctive relief in any United States or foreign court.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2023, Texas Instruments Incorporated

IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATA SHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to [TI's Terms of Sale](#) or other applicable terms available either on [ti.com](https://www.ti.com) or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

TI objects to and rejects any additional or different terms you may have proposed.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2025, Texas Instruments Incorporated