

Using the UCC24636EVM

User's Guide



Literature Number: SLUUBE7
March 2016



WARNING

Always follow TI's set-up and application instructions, including use of all interface components within their recommended electrical rated voltage and power limits. Always use electrical safety precautions to help ensure your personal safety and the safety of those working around you. Contact TI's Product Information Center <http://support/ti.com> for further information.

Save all warnings and instructions for future reference.

Failure to follow warnings and instructions may result in personal injury, property damage, or death due to electrical shock and/or burn hazards.

The term TI HV EVM refers to an electronic device typically provided as an open framed, unenclosed printed circuit board assembly. It is intended strictly for use in development laboratory environments, solely for qualified professional users having training, expertise, and knowledge of electrical safety risks in development and application of high-voltage electrical circuits. Any other use and/or application are strictly prohibited by Texas Instruments. If you are not suitably qualified, you should immediately stop from further use of the HV EVM.

1. Work Area Safety:

- (a) Keep work area clean and orderly.
- (b) Qualified observer(s) must be present anytime circuits are energized.
- (c) Effective barriers and signage must be present in the area where the TI HV EVM and its interface electronics are energized, indicating operation of accessible high voltages may be present, for the purpose of protecting inadvertent access.
- (d) All interface circuits, power supplies, evaluation modules, instruments, meters, scopes and other related apparatus used in a development environment exceeding $50 V_{RMS}/75 V_{DC}$ must be electrically located within a protected Emergency Power Off (EPO) protected power strip.
- (e) Use a stable and non-conductive work surface.
- (f) Use adequately insulated clamps and wires to attach measurement probes and instruments. No freehand testing whenever possible.

2. Electrical Safety:

- (a) De-energize the TI HV EVM and all its inputs, outputs, and electrical loads before performing any electrical or other diagnostic measurements. Revalidate that TI HV EVM power has been safely de-energized.
- (b) With the EVM confirmed de-energized, proceed with required electrical circuit configurations, wiring, measurement equipment hook-ups and other application needs, while still assuming the EVM circuit and measuring instruments are electrically live.
- (c) Once EVM readiness is complete, energize the EVM as intended.

WARNING: while the EVM is energized, never touch the EVM or its electrical circuits as they could be at high voltages capable of causing electrical shock hazard.

3. Personal Safety:

- (a) Wear personal protective equipment e.g. latex gloves and/or safety glasses with side shields or protect EVM in an adequate lucent plastic box with interlocks from accidental touch.

4. Limitation for Safe Use:

- (a) EVMs are not to be used as all or part of a production unit.

Secondary-Side Synchronous Rectifier Controller Diode- Replacement Demonstration Board

1 Introduction

The UCC24636EVM evaluation module (EVM) is used to convert the output rectifier of an off-line discontinuous mode (DCM) flyback converter from a diode to a MOSFET synchronous rectifier (SR) to investigate and evaluate the benefits of SR using volt-second balance control. This EVM senses the volt-second (V-s) product of the transformer magnetization during the primary switch on-time and controls the on-board SR MOSFET on-time to balance the V-s product during transformer demagnetization. The EVM is also compatible with transition-mode (TM) operation. SR conduction time can be maximized, regardless of $R_{DS(on)}$.

The SR-MOSFET can achieve very low conduction loss compared to that of a diode rectifier, significantly improving efficiency of the converter. Use this EVM to substitute for the diode in an existing DCM or TM flyback converter to evaluate and optimize the SR performance. It is ideally suited for converters with output voltages ranging from 5 V to 28 V at current levels up to 5 A, but may be adaptable to other conditions with special considerations. Photographs of the EVM can be seen in [Figure 1](#) and [Figure 2](#).

The UCC24636EVM is not compatible with flyback converters which can operate in continuous conduction mode (CCM) under any condition. For CCM flyback applications please refer to the [UCC24630](#) SR controller and its associated [UCC24630EVM-636](#).

Test points on the EVM provide input nodes for VDD bias voltage and ground (GND), VD and VS connections to the diode anode and cathode nodes, and an output voltage sensing node (VOUT). Two resistor positions are user programmable to scale the EVM parameters to the specific user application. These resistor values are calculated based on equations found in the [UCC24636](#) datasheet or by using the Microsoft Excel®-based [UCC24636 Calculator Tool](#). The [UCC24636](#) controller drives the on-board SR MOSFET at the correct timing to maximize the SR conduction interval, independently of $R_{DS(on)}$.

The UCC24636EVM works best when substituting for a negative-referenced diode (also known as *low-side* diode) situated in the return leg of the flyback transformer secondary winding, as shown in [Figure 3](#). In this arrangement, EVM bias voltage may be obtained directly from the converter output. It is also possible to use the EVM in a positive-referenced diode position (also known as *high-side* diode), but this arrangement requires some additional circuitry to provide bias voltage to the EVM. [Figure 25](#) and [Figure 26](#) show two methods to implement *high-side* SR with the EVM. It is not necessary to remove the diode for which the EVM will substitute; however, a comparison of SR-only losses to diode-only losses will be compromised.



Figure 1. Photograph of EVM (Top Side)



Figure 2. Photograph of EVM (Bottom Side)

2.1 Applications

The [UCC24636](#) synchronous rectifier controller is suited for use in isolated, off-line, discontinuous-conduction-mode (DCM) and transition mode (TM) flyback converters requiring high efficiency and minimal stand-by power; applications such as:

- USB-Compliant Adapters and Chargers for Consumer Electronics (such as smart phones, tablet computers, and cameras)
- Stand-By Supply for TV and Desktop
- White Goods

2.2 Features

The UCC24636EVM features include:

- Direct Connection of VDD to Converter Output Voltage Rail, 5 V to 28 V, in *Low-Side* Applications
- User-Programmable Divider Networks to Adapt the EVM to the Application
- Configured with 5.3-m Ω , 100-V SR MOSFET in SON 5 x 6 Package
- Terminal Block and Test Points for Wiring the SR MOSFET into the Application
- Available TO-252 Solder-Pad on Reverse Side for Alternate MOSFET

CAUTION

High voltage levels may be present on the evaluation module whenever it is energized, depending on the application in which it is installed. Proper precautions must be taken when working with the EVM. The voltage on VD test point TP6 and its associated connection wire may exceed 50 V while operating in the application. Power to the application must be removed and output voltage discharged before the EVM can be handled. Serious injury can occur if proper safety precautions are not followed.

High temperatures may be present on the evaluation module whenever it is energized, depending on the application in which it is installed. Proper precautions must be taken when working with the EVM. The temperature of the MOSFET case and copper heat-sink pad may exceed 50°C while operating in the application. Power to the application must be removed, output voltage discharged, and sufficient cool-down time provided before the EVM can be handled. Serious injury can occur if proper safety precautions are not followed.

3 Electrical Performance Specifications

Table 1. UCC24636EVM Electrical Specifications

| PARAMETER | | CONDITIONS | MIN | TYP | MAX | UNITS |
|-------------------------------|-------------------------------|------------------------------------------------------|-----|---------|--------------------|------------------|
| EVM CHARACTERISTICS | | | | | | |
| V_{DD} | Bias voltage range | | 4 | 5 to 24 | 28 | V_{DC} |
| | VPC voltage range | R1 value calculated for the application | 0.4 | | 2.2 | V_{DC} |
| | VSC voltage range | R4 value calculated for the application | 0.3 | | 2.2 | V_{DC} |
| | Volt-second product | At VPC input | | | 7 | V- μ s |
| | SR-MOSFET drain voltage | | | | 100 ⁽¹⁾ | V_{DC} |
| | SR-MOSFET on resistance | $T_J = 25^\circ\text{C}$, $V_{DD} \geq 12\text{ V}$ | | 5.3 | 6.4 ⁽¹⁾ | m Ω |
| SYSTEM CHARACTERISTICS | | | | | | |
| | Maximum SR current | $T_A = 25^\circ\text{C}$, $T_C < 50^\circ\text{C}$ | | | 5 ⁽¹⁾ | A_{RMS} |
| f_{SW} | Switching frequency | | | | 130 ⁽²⁾ | kHz |
| T_A | Ambient operating temperature | | | 25 | | $^\circ\text{C}$ |

⁽¹⁾ Other voltages, resistances and currents may be accommodated by removing the MOSFET at Q1 and installing a different MOSFET at Q1 or at Q2, bottom-side.

⁽²⁾ Based on [UCC24636](#) controller limitation.

4 UCC24636EVM Schematic

The UCC24636EVM schematic diagram indicates two resistor locations (R1 and R4) where the user must install 1206-size (3216 metric) surface-mount resistors. The values for these resistors are calculated using the [UCC24636 Calculator Tool](#) or from the [UCC24636](#) datasheet equations corresponding to the VPC and VSC resistor-divider networks. Take care to match the R1 and R4 resistors on the EVM to the corresponding resistors of the calculator or datasheet, which use different reference designators than those in [Figure 4](#).

The schematic diagram also indicates a position for an alternative MOSFET, located on the back side of the EVM board. If the user chooses to modify the EVM and install a MOSFET at Q2, the existing MOSFET at Q1 should be removed first.

A 0-Ω resistor, R2, connects VDD to VOUT (TP2 to TP3) so that the EVM can be biased by connecting VDD directly to the converter output voltage. To use this EVM in an application where VOUT may fall below the UVLO turn-off threshold of the [UCC24636](#) controller, remove R2, connect VDD (TP2) to a separate bias source, and connect VOUT (TP3) to the converter output.

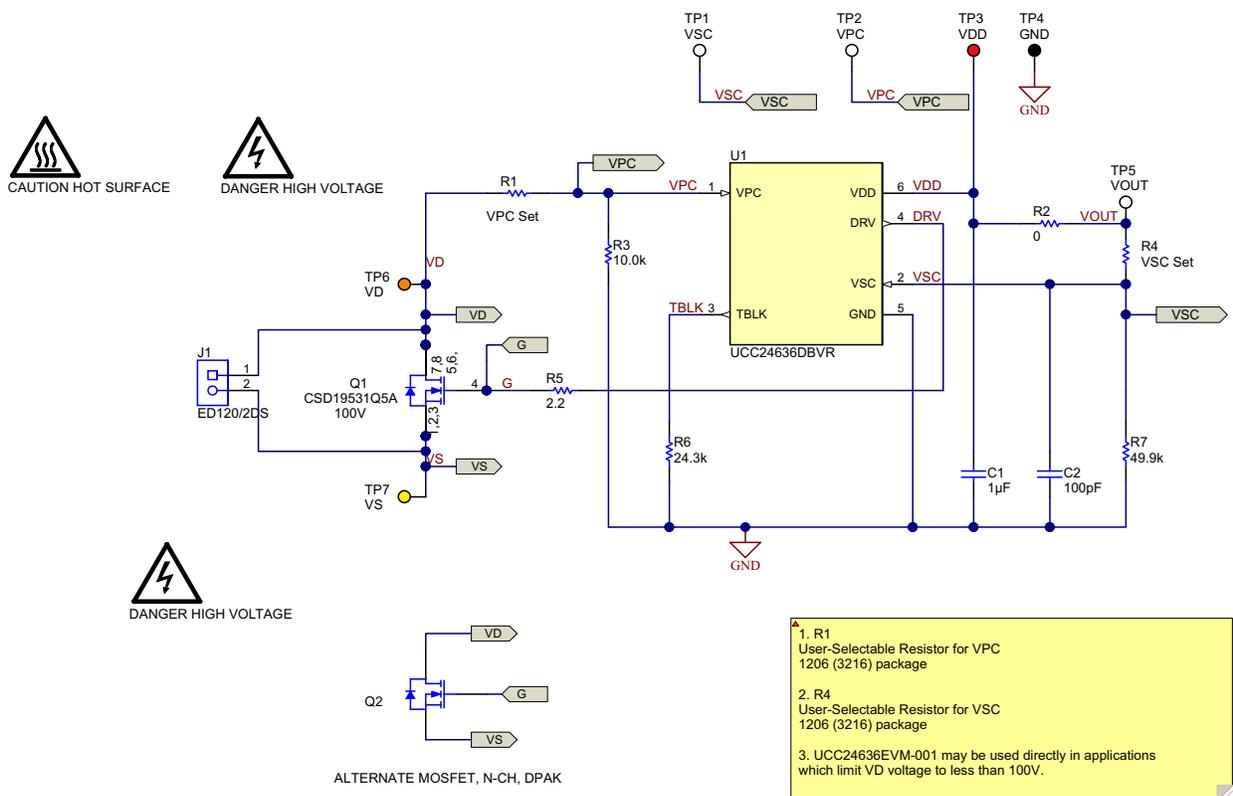


Figure 4. UCC24636EVM Schematic Diagram

5 Test Setup

Figure 5, Figure 6 and Figure 7 show the method to install the UCC24636EVM into an existing DCM flyback converter with a diode serving as the output rectifier. In this example, the converter is the [UCC28740EVM-525](#) rated for 10-W output at 5 V. The output rectifier on this board consists of two SBR10U45SP5 Schottky diodes connected in parallel for low loss. These diodes are in the *high-side* configuration, but the UCC24636EVM is easiest to implement in the *low-side* configuration. Fortunately, the flyback transformer uses flying leads on the secondary winding, which allows insertion of the SR into the low side.

Figure 5 illustrates the top-side view of the [UCC28740EVM-525](#) before modification. It is a straight-forward modification to disconnect the *low-side* lead from the converter board and insert the SR EVM in that path, and apply a short-circuit wire around the *high-side* diodes. Figure 6 shows the diodes on the bottom side shorted with wires. Figure 7 shows the UCC24636EVM attached on the top side in the negative leg of the transformer secondary winding. Figure 8 and Figure 9 show connections to a power source and load, and voltage and current probing with an oscilloscope. Similar modifications and probing arrangements can be done to other converters to compare diode versus SR, and to evaluate the converter's performance with the UCC24636EVM.

WARNING

High voltages that may cause injury can exist on this evaluation module (EVM). Please ensure all safety procedures are followed when working on this EVM. Never leave a powered EVM unattended.

5.1 Test Equipment

AC Voltage Source: The input source shall be an isolated variable AC source capable of supplying between 85 VAC and 265 VAC at no less than 20 W and connected as shown in [Figure 8](#) and [Figure 9](#).

Output Load: An isolated programmable electronic or resistive load capable of sinking beyond the converter output current rating shall be used. For current-limit testing of the converter, an electronic load should be set to constant resistance mode.

Recommended Wire Gauge: A minimum of 18 AWG (1-mm diameter) wire is recommended for high-current connections. The wire lengths between the AC source and the EVM and between the EVM and the load should not be excessive. Lengths of less than 24 inches (61 cm) long are suggested.

Multimeters: A DC voltmeter should be placed directly across the converter output terminals. A DC current meter should be placed in series with the converter output after the voltmeter for accurate output voltage measurements.

Oscilloscope: A high-bandwidth oscilloscope with high-bandwidth probes is recommended.

Fan: Forced-air cooling is not required for low current loads, but for SR current $> 5 A_{RMS}$ additional cooling should be considered.

Power Analyzer: For accurate efficiency calculations and stand-by power measurements, a high quality power analyzer should be used; one capable of measuring very low currents. The analyzer's current measurement should be inserted in the Neutral or low-voltage path from AC source to the converter. Measure input power for average efficiency with the analyzer's voltage inputs across the converter input terminals. Use the readings from the voltage and current meters on the output to calculate the output power. To measure stand-by input power, connect the analyzer's voltage inputs at the AC source output terminals, and disconnect all other probes and meters from the converter to avoid affecting the measurement.

Figure 7 shows the SR EVM installed on the top side of the converter EVM with suitable jumper wires at four locations. Smaller-gauge wires are used to connect VDD and GND (TP3 and TP4) to +VOUT and -VOUT, respectively, since the bias current to the EVM is low. Thicker wire connects VS and VD at the terminal block to the converter output ground and low side of the secondary winding, respectively, because the peak current in this path can be quite high. An additional loop of wire can be added to the VD path to accommodate a current probe if desired, but the length should be kept as short as possible to minimize additional leakage inductance. Ensure that the VD wiring connection does not contact the board or nearby components.

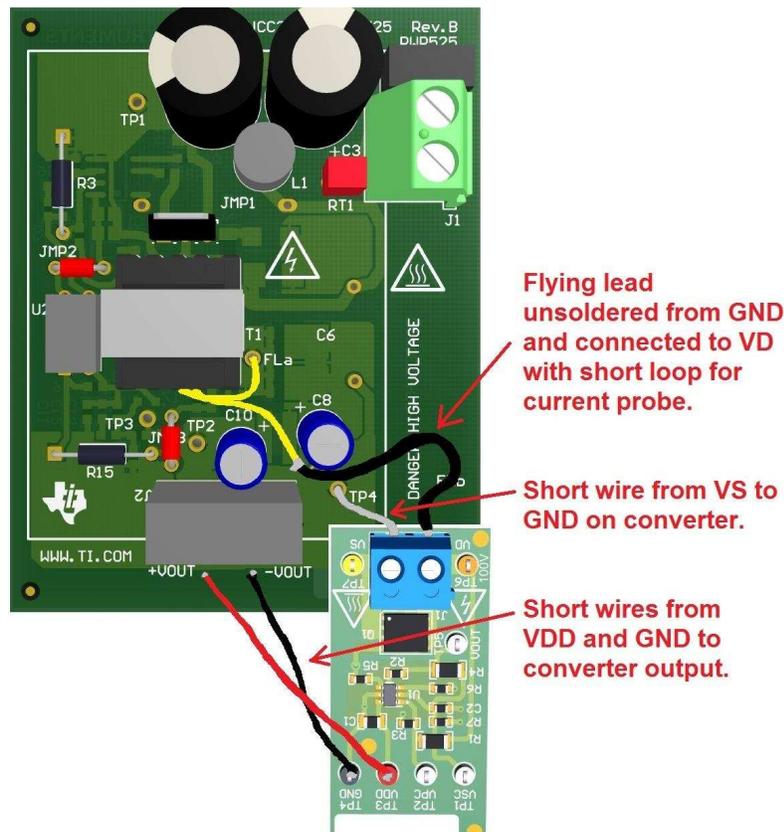


Figure 7. [UCC28740EVM-525](#), Modified with UCC24636EVM Attached

Test points TP1 and TP2 (VSC and VPC) are never connected to any external network, but may serve as observation points for the VSC and VPC signals at the [UCC24636](#) controller. Be careful to avoid injecting noise into these nodes when probing them. Probe capacitance on the VPC pin may increase the SR turn-on delay slightly.

Test point TP5 is used as the input for VOUT from the converter if VDD is sourced from a separate bias source rather than VOUT of the converter. To use this option, the zero-ohm resistor, R2, connecting TP3 to TP5 on the SR EVM must be removed.

Before the SR EVM is installed, [Figure 8](#) illustrates a low-noise method to probe the output diodes on the [UCC28740EVM-525](#) board to obtain forward voltage and current waveforms. Since this converter uses *high-side* diodes, the diode anode has a widely varying wave-shape, while the cathode is the output voltage. The oscilloscope probe ground ring should contact a test pin attached to the cathode node, and the probe tip should contact a test pin on the anode. Since this converter uses an isolation transformer, the oscilloscope ground effectively ties the output positive node to earth-ground.

WARNING
Do not connect other probe grounds to any other node.

A current probe is clamped around a short loop of wire inserted between the transformer negative flying lead and the lead's termination pad. The current probe polarity is oriented to show positive current during the DCM flyback demagnetization interval.

The diode voltage waveform should be displayed inverted in order to directly compare with the SR-MOSFET drain-to-source voltage obtained after the SR EVM is installed.

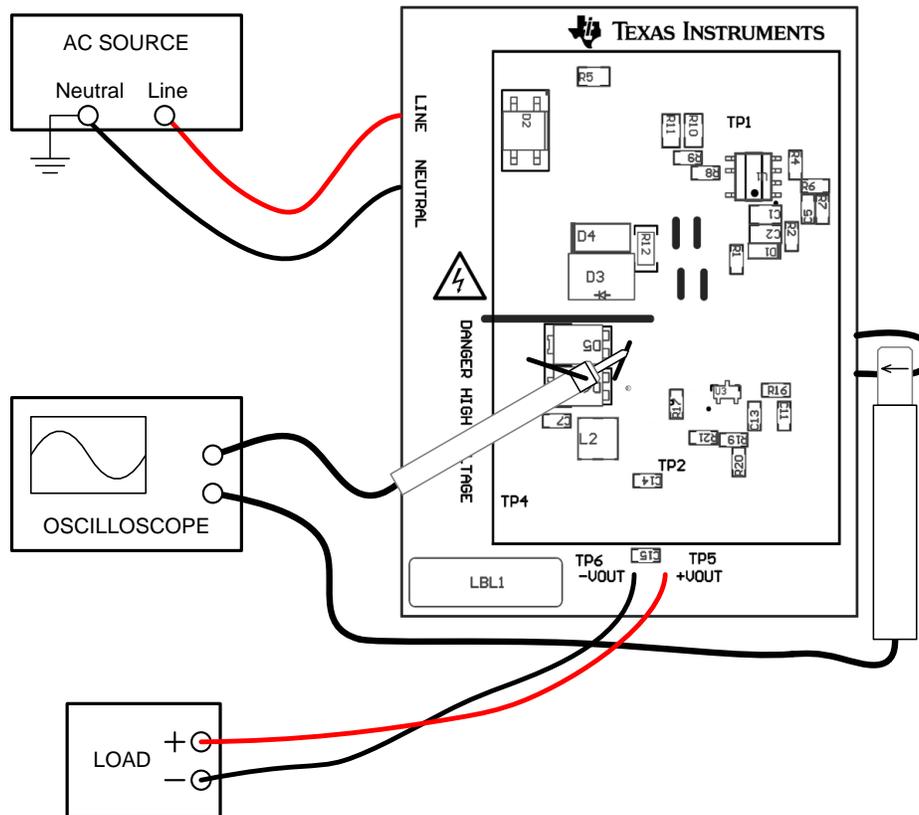


Figure 8. Method to Measure Diode Voltage and Current on the [UCC28740EVM-525](#)

After the SR EVM is installed, [Figure 9](#) illustrates a low-noise method to probe the drain-to-source voltage, VDS, on the UCC24636EVM board to obtain forward voltage waveforms. Since this converter has been modified to *low-side* rectification, the drain node has a widely varying waveshape, while the source is the output ground return. The oscilloscope probe ground ring should contact a test pin attached to the VS node, and the probe tip should contact a test pin on the VD node. Since this converter uses an isolation transformer, the oscilloscope ground now effectively ties the output negative node to earth-ground.

A current probe is clamped around a short loop of wire inserted between the transformer negative flying lead and the SR EVM's VD input. The current probe polarity is oriented to show positive current during the DCM flyback demagnetization interval.

The SR VDS waveform should be displayed non-inverted in order to directly compare with the inverted anode-to-cathode diode voltage obtained before the SR EVM is installed.

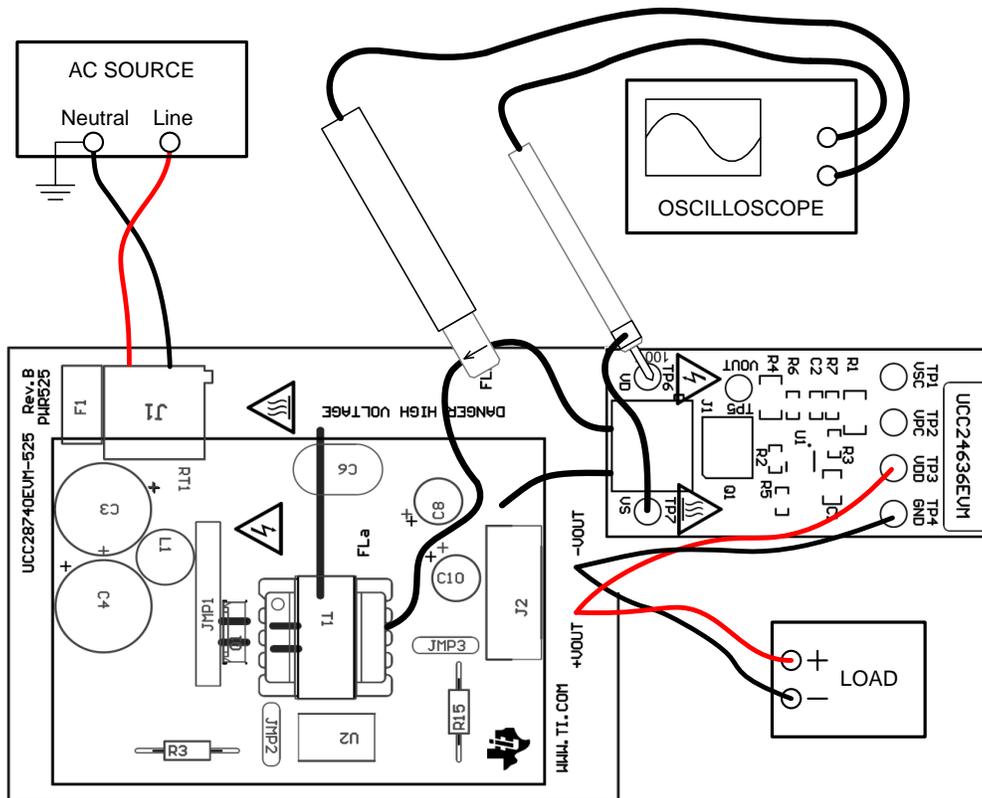


Figure 9. Method to Measure SR-MOSFET V_{DS} and Drain Current on [UCC28740EVM-525](#)

5.3 List of Test Points

Table 2. UCC24636EVM Test Point Functional Description

| TEST POINT | NAME | DESCRIPTION |
|------------|------|--------------------------------------------------------|
| TP1 | VSC | Monitor point for VSC signal, U1 pin 2 |
| TP2 | VPC | Monitor point for VPC signal, U1 pin 1 |
| TP3 | VDD | SR controller bias supply, U1 pin 6 |
| TP4 | GND | SR controller ground, U1 pin 5 |
| TP5 | VOUT | Connection for the converter output voltage |
| TP6 | VD | Monitor point for drain of Q1 (also of Q2, if used) |
| TP7 | VS | Monitor point for source of Q1 (also of Q2, if used) |
| J1-1 | VD | Power connection to drain of Q1 (also of Q2, if used) |
| J1-2 | VS | Power connection to source of Q1 (also of Q2, if used) |

5.4 Applying Power to the Converter EVM

1. Set up the converter EVM as shown in . If testing for efficiency or stand-by power, set up the power analyzer per the manufacturer's recommendations.
2. If testing with an electronic load, set it to constant resistance mode.
3. Attach voltmeters, current meters, and oscilloscope probes as necessary to acquire the measurements desired. For safe operation, do not handle the EVMs after power is applied.
4. Set the AC source voltage to between $85 V_{AC}$ and $265 V_{AC}$.
5. Vary the line and load as desired to evaluate SR operation over the full range of converter operation.
6. Refer to the [UCC28740EVM-525](#) User's Guide for the power-up and test procedures for evaluation of the converter's performance on functional characteristics other than efficiency and stand-by input power consumption, such as start-up time, transient response, and fault protection, for example.

5.5 Equipment Shutdown

1. To quickly discharge the output capacitors, apply a load greater than 0.1 A on the converter EVM.
2. Turn off the AC source and wait for the primary bulk capacitance to discharge to a safe level before handling the EVM.

6 Waveform Comparisons and Typical Efficiency Curves

The primary purpose of a synchronous rectifier is to reduce losses compared to that of a diode rectifier and improve the efficiency of a converter. Various environmental and government agencies world-wide establish minimum efficiency requirements, with either voluntary or mandatory compliance requirements. Two notable agency standards are the European Union 2016 Tier-2 Code of Conduct and the United States Department of Energy 2016 Level-6 targets for minimum average efficiency. Although the requirements of these two standards are very similar, the Code of Conduct (CoC) is slightly more stringent and is used for the efficiency and stand-by power targets.

[Figure 10](#) through [Figure 13](#) present the typical current and voltage waveforms associated with the output rectifier diodes on an unmodified [UCC28740EVM-525](#) board, all measured as shown in [Figure 9](#). These waveforms correspond to high and low load conditions with low and high input voltages. [Figure 14](#) through [Figure 21](#) present detailed comparisons between the original diode waveforms and those of the SR when the [UCC24636EVM](#) is installed in place of the diode(s). It can be seen that the current waveforms do not change noticeably, but the voltage is reduced during the SR conduction time, which reduces losses and increases efficiency.

After the waveform comparison sections, efficiency and stand-by power loss measurements are compared in [Figure 22](#) through [Figure 24](#), to show the typical differences obtained when using an SR controlled by the [UCC24636](#).

Other switching waveforms and system performance characteristics of the flyback converter are covered by the [UCC28740EVM-525](#) User's Guide and are not repeated here.

6.1 Full-Load and Light-Load Waveforms of Converter with Output Diode at 85 V_{AC} and 265 V_{AC}

Figure 10 through Figure 13 show the switching waveforms associated with the output diodes on an unmodified converter [UCC28740EVM-525](#) when operating near the extremes of the rated line and load conditions. All four figures have waveforms scaled to the same settings and time sweep for easy comparison. As can be seen, the current through the diode(s) does not change significantly when the input voltage is varied. However, the voltage stress on the diode (and consequently, on an SR-MOSFET) increases significantly as the input line voltage is raised from 85 V_{AC} to 265 V_{AC}. The same design considerations to limit peak voltage stress and dampen ringing on diodes apply to SR-MOSFETs as well.

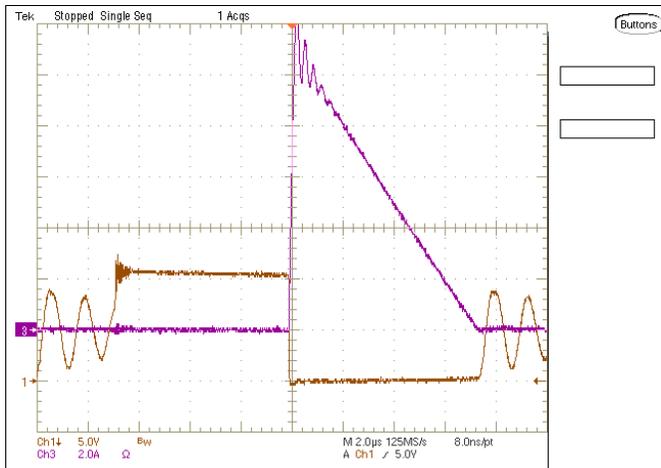


Figure 10. 100%-Load Diode Current and Voltage on [UCC28740EVM-525](#) at 85-V_{AC} Input

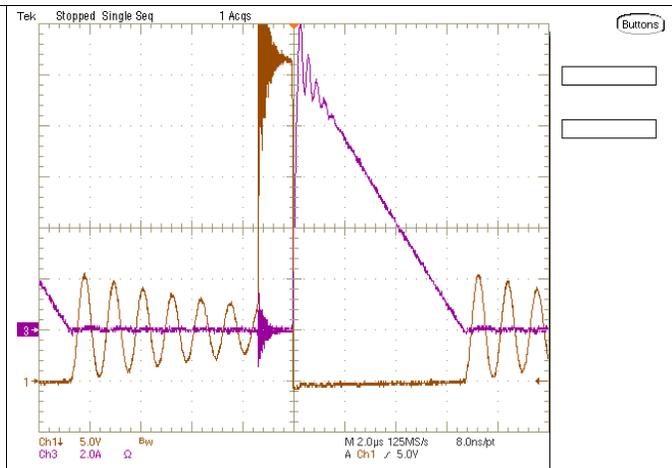


Figure 11. 100%-Load Diode Current and Voltage on [UCC28740EVM-525](#) at 265-V_{AC} Input

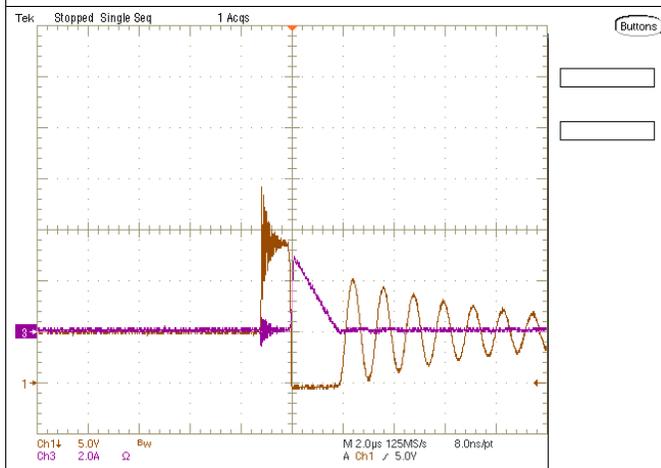


Figure 12. 1%-Load Diode Current and Voltage on [UCC28740EVM-525](#) at 85-V_{AC} Input

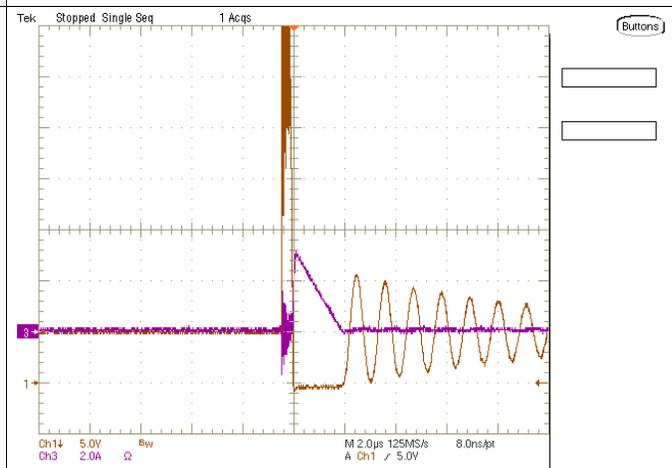


Figure 13. 1%-Load Diode Current and Voltage on [UCC28740EVM-525](#) at 265-V_{AC} Input

6.2 Detailed Comparison of Diode to SR Waveforms at 85-V_{AC} and 265-V_{AC} Inputs, 5.0-V 2.0-A Output

Figure 14 through Figure 17 use a faster time scale (1 μ s/div) and expanded voltage scale (1 V/div) to emphasize the difference in power loss of the output rectifier. The secondary winding current (scaled at 2 A/div) drops linearly to zero from a peak of about 10 A (neglecting the ringing), as is characteristic of a DCM flyback converter. The forward voltage drop of the parallel diodes in Figure 14 and Figure 16 averages about 0.4 V during the diode conduction time. By contrast, the drain-to-source voltage of the SR-MOSFET in Figure 15 and Figure 17 is less than 0.1 V over most of the same interval. Notable exceptions are at the peak of the current and near the zero-crossing of the current. Peak current flows momentarily (about 100 ns) through the body-diode of the SR-MOSFET before the UCC24636 detects the negative SR voltage and turns on the MOSFET. Residual current also flows through the body-diode when the MOSFET is turned off prior to the current reaching zero. The durations of body-diode conduction at the beginning and end of the SR conduction interval may be different in each application and depend on the impedances at the controller's VPC and VSC inputs.

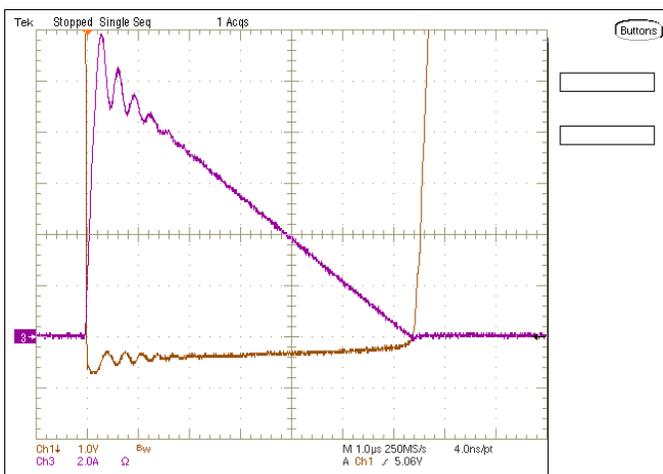


Figure 14. Diode Current and Voltage on [UCC28740EVM-525](#) at 85-V_{AC} Input

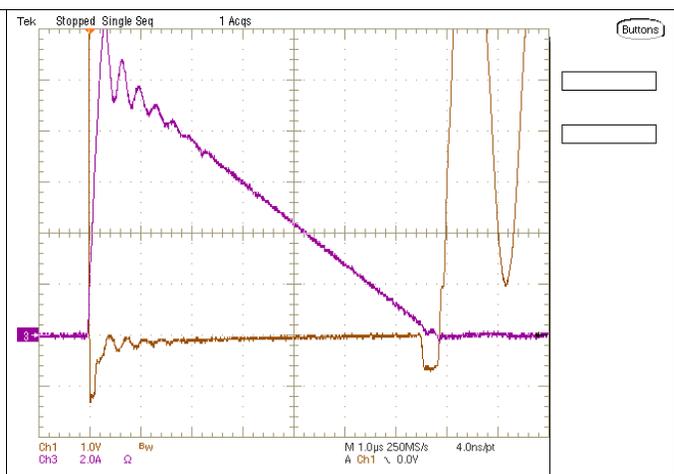


Figure 15. SR Current and Voltage on [UCC28740EVM-525](#) at 85-V_{AC} Input

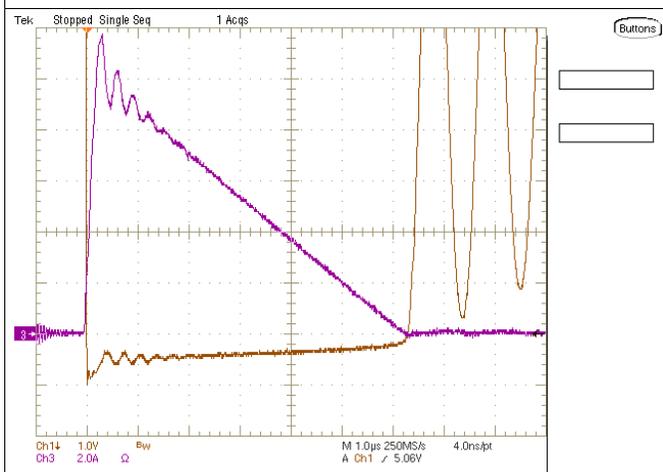


Figure 16. Diode Current and Voltage on [UCC28740EVM-525](#) at 265-V_{AC} Input

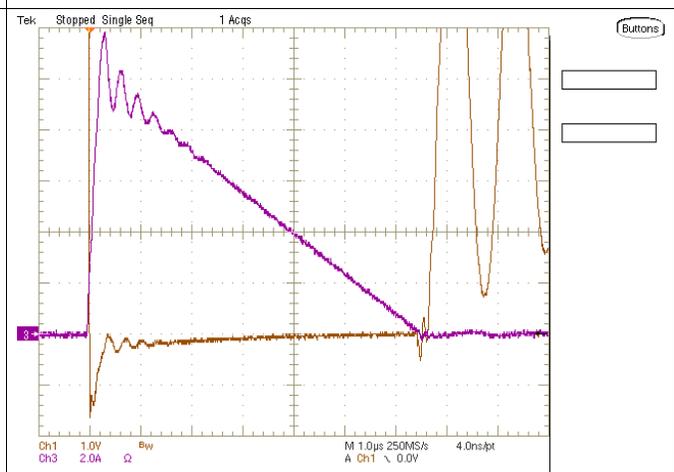


Figure 17. SR Current and Voltage on [UCC28740EVM-525](#) at 265-V_{AC} Input

6.3 Comparison of Diode to SR Waveforms at 85-V_{AC} and 265-V_{AC} Inputs, 5.0-V / 0.02-A Output

Figure 18 through Figure 21 illustrate the same waveform characteristics as those of Figure 14 through Figure 17, except at a very light load (20 mA) on the output. The time scale has been increased to 400 ns/div to show more of the waveforms across the oscilloscope display. The secondary winding current now peaks at about 3 A but still drops linearly to zero. The forward voltage drop of the parallel diodes in Figure 18 and Figure 20 averages about 0.3 V during the diode conduction time. By contrast, the drain-to-source voltage of the SR-MOSFET in Figure 19 and Figure 21 is too low to measure over most of the same interval. The SR conduction voltage may be estimated using the $R_{DS(on)}$ rating of the MOSFET. Again, exceptions are at the peak of the current and near the zero-crossing of the current, where the SR-MOSFET is not turned on. The durations of body-diode conduction at the beginning and end of the SR conduction interval may be different in each application and depend on the impedances at the controller's VPC and VSC inputs.

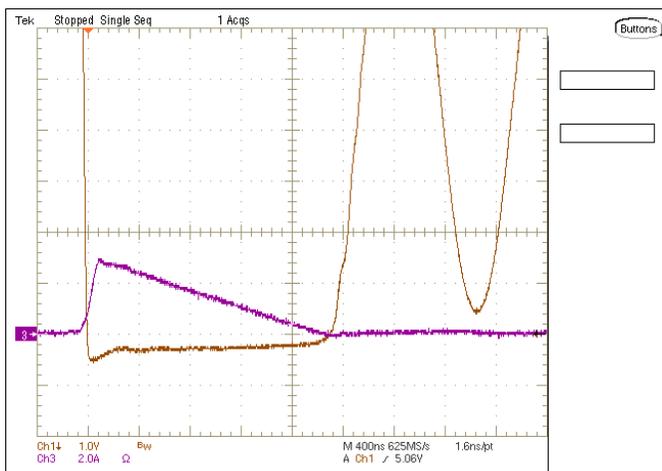


Figure 18. Diode Current and Voltage on [UCC28740EVM-525](#) at 85-V_{AC} Input

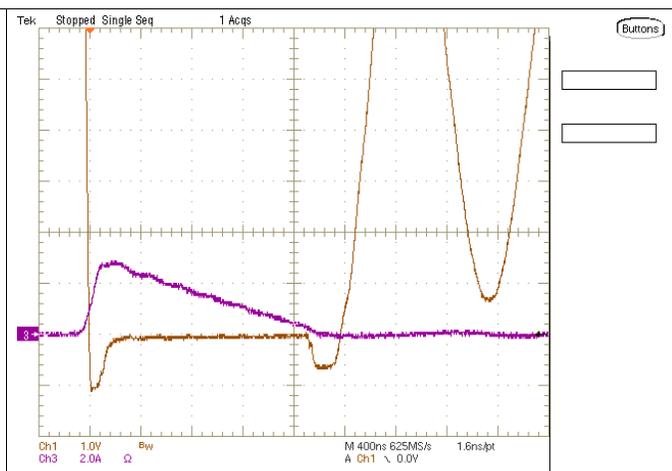


Figure 19. SR Current and Voltage on [UCC28740EVM-525](#) at 85-V_{AC} Input

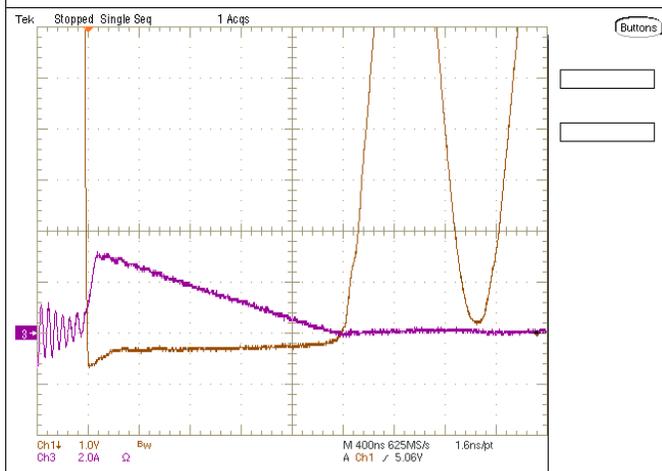


Figure 20. Diode Current and Voltage on [UCC28740EVM-525](#) at 265-V_{AC} Input

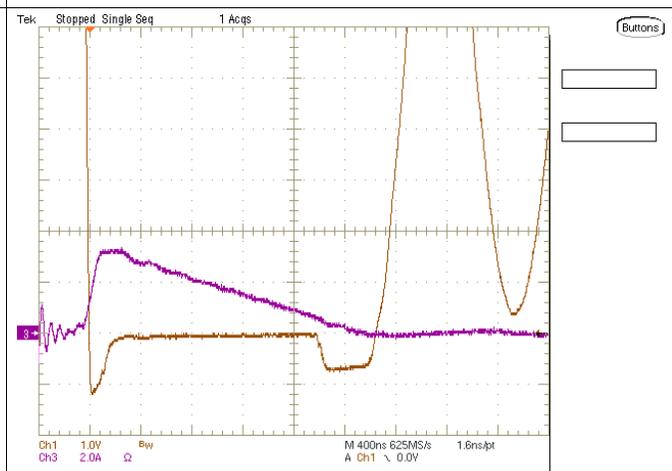


Figure 21. SR Current and Voltage on [UCC28740EVM-525](#) at 265-V_{AC} Input

6.4 Comparison of Average Efficiency with Diode vs. SR

The average efficiency at 230 V_{AC}, 50 Hz exceeds the 0.79 design goal established to meet the 2016 Code of Conduct average efficiency target for low voltage outputs at a 10-W rating. The average efficiency at 115 V_{AC}, 60 Hz exceeds the 0.787 design goal established to meet the 2016 DoE Level-6 average efficiency requirement for low voltage EPS outputs at a 10-W rating. Figure 22 shows the actual measured efficiency with respect to load current.

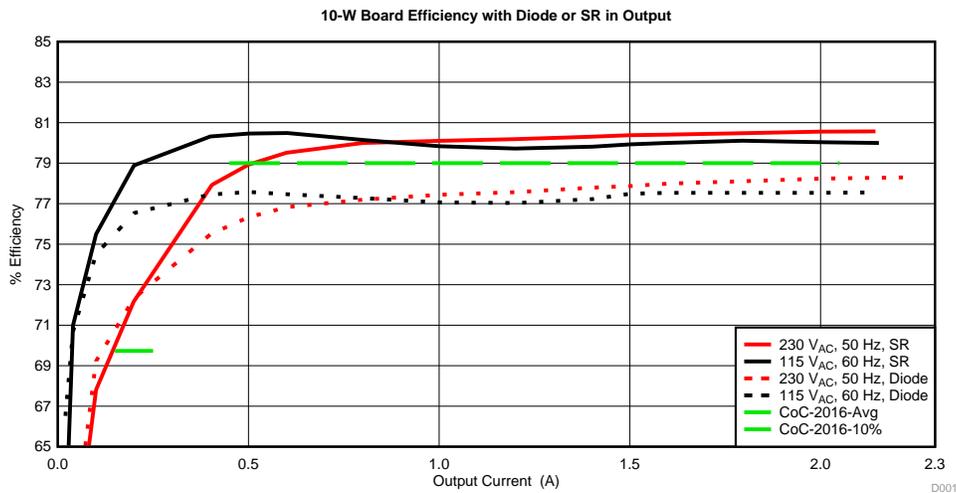


Figure 22. Comparison of [UCC28740EVM-525](#) Efficiency Using SR vs. Diodes

Figure 23 highlights the overall efficiency improvement of the SR over that of parallel diodes.

Notably, there appears to be considerable loss of efficiency with SR at loads less than 0.2 A (in this case, loads less than 10% of rated output). This is a mathematical result of the additional power needed to operate the SR circuit compared to the low power being delivered to the output. When load falls low enough to reduce the converter's average switching frequency to less than approximately 5 kHz, the [UCC24636](#) operation goes into a stand-by mode to minimize stand-by power and the SR-MOSFET rectifies by body-diode conduction.

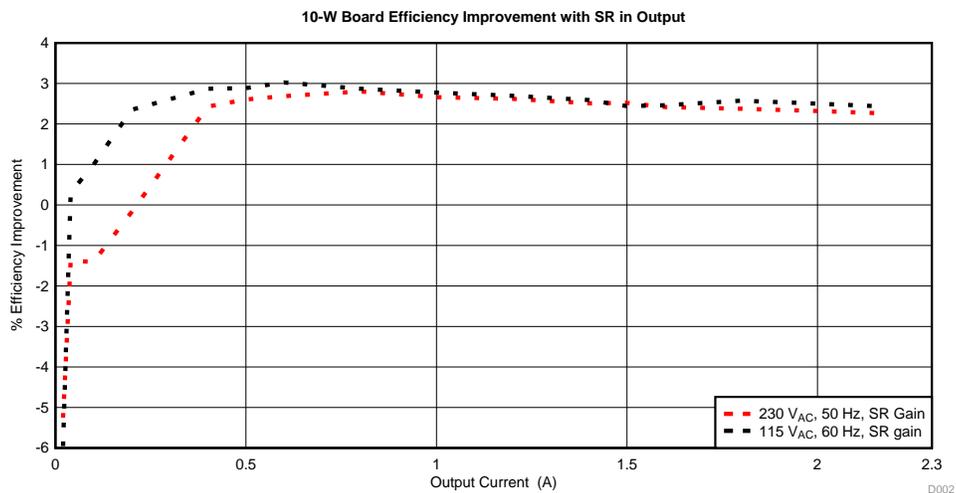


Figure 23. Improvement in Overall Efficiency with [UCC24636EVM](#) SR Installed

6.5 Comparison of No-Load Input Power Consumption with Diode vs. SR

Using the UCC24636EVM to implement SR increases the converter no-load input power consumption by less than 3 mW over the entire input line range.

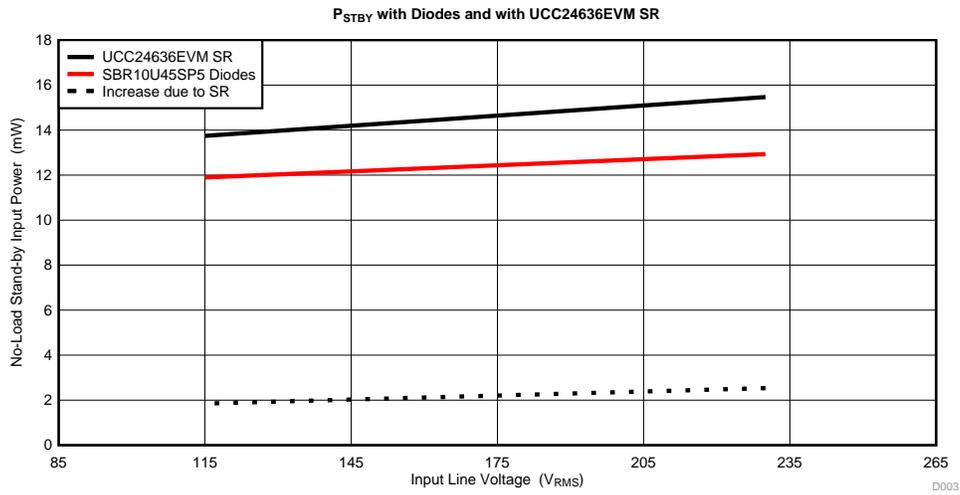


Figure 24. Comparison of No-Load Input Power Consumption

6.6 High-Side Diode Replacement with Bias Winding

Figure 25 shows the preferred method to implement a *high-side* SR application. A separate bias winding, N_B , provides power to VDD and reflects the output voltage to the VSC input divider network. Ideally, the turns-ratio of N_B to N_S would be 1:1 so that VDD tracks V_{OUT} , but this is not a strict requirement. If the output voltage is too low, such that N_B must have more turns to generate a higher VDD, the VSC divider network must compensate for the difference in voltage so that VSC tracks V_{OUT} as if the SR was in a *low-side* application.

The ground reference of the UCC24636EVM becomes a floating virtual ground, riding on the N_S secondary waveform. In this way, the pulsing voltage presented to the VPC input is recreated.

A standard-recovery diode (not fast or ultra-fast diode) used on the N_B winding helps to avoid peak-charging of VDD from leakage inductance effects.

Because the floating bias winding arrangement may be susceptible to noise injection into the VPC and VSC inputs, filter capacitors may be required to reject the noise. A relatively large value of capacitance may be applied to VSC, since VSC is proportional to V_{OUT} which is normally regulated. However, it should not be so large that it prevents VSC from closely tracking changes in V_{OUT} . Only a few picofarads of capacitance are appropriate to filter VPC. The SR-MOSFET is turned on when the voltage at VPC goes negative, and an excessive time constant on VPC will delay SR turn-on. Delayed turn-on results in higher losses and lower efficiency than expected.

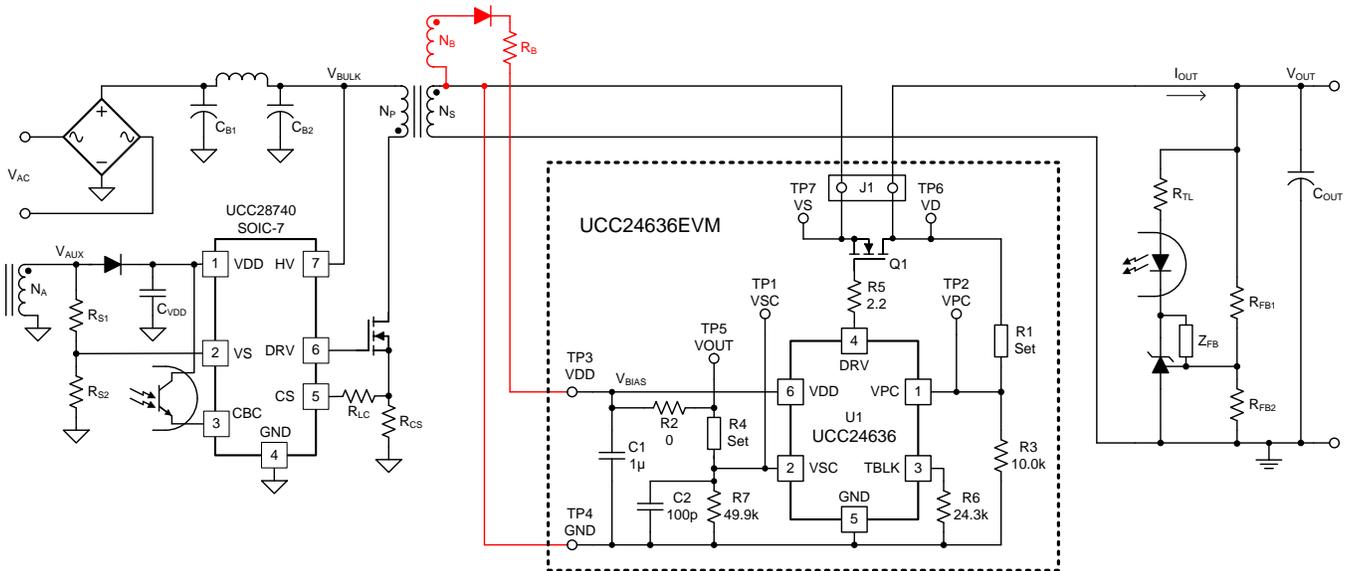


Figure 25. UCC24636EVM Used in the *High-Side* Rectifier Configuration

6.7 High-Side Diode Replacement without Bias Winding

Figure 26 shows an alternative method to implement a *high-side* SR application that does not require a separate bias winding. A major drawback to this method is that VSC does not track V_{OUT} . The UCC24636EVM operates on a floating virtual ground, again riding on the secondary winding voltage. Charge-pump action provides power to VDD, but this voltage varies with the primary-side bulk voltage. VDD does not track V_{OUT} and so the VSC input must be programmed from a fixed reference voltage corresponding to the highest value of V_{OUT} .

Because VSC cannot track V_{OUT} , there must be a compromise on SR timing to allow for V_{OUT} variations. The fixed reference voltage for VSC must accommodate the highest V_{OUT} . Consequently, the SR on-time becomes shorter when V_{OUT} becomes lower. The shorter on-time may result in higher losses and lower efficiency than expected.

In this implementation, just as in the previous case of Figure 25, the ground reference of the UCC24636EVM becomes a floating virtual ground, riding on the N_s secondary waveform. In this way, the pulsing voltage presented to the VPC input is recreated.

The drawbacks of this specific *high-side* SR configuration should be thoroughly considered before committing to its implementation, to ensure that the application is compatible with its limitations.

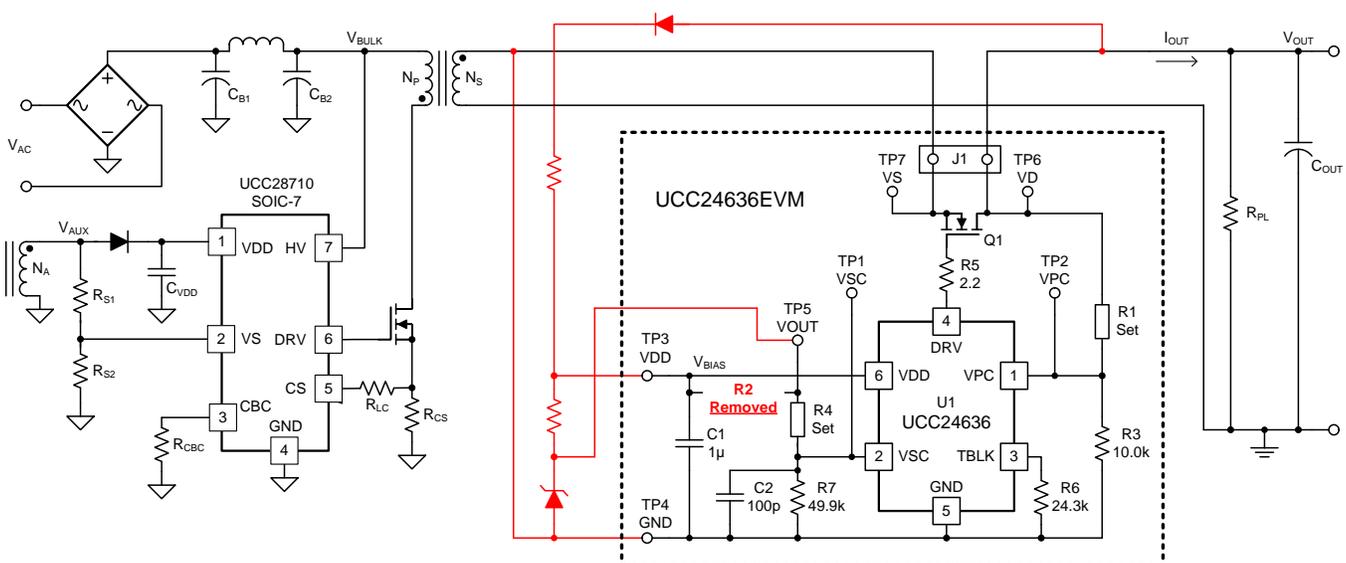


Figure 26. UCC24636EVM Used in the Alternate *High-Side* Rectifier Configuration

7 Assembly Drawing/Layout

Figure 27 and Figure 28 show the design of the UCC24636EVM printed circuit board. The final dimensions of the 2-layer circuit board measure 1.70 inches (43.2 mm) long by 0.82 inches (20.8 mm) wide.

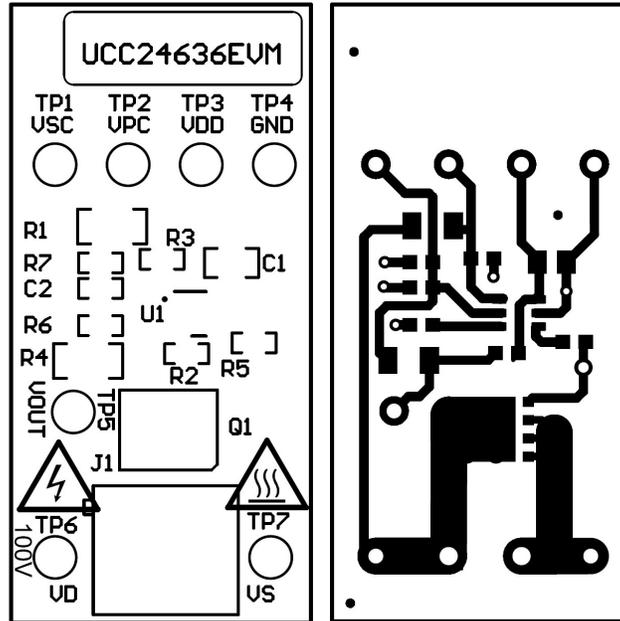


Figure 27. UCC24636EVM Assembly and Copper Drawings (Top View)

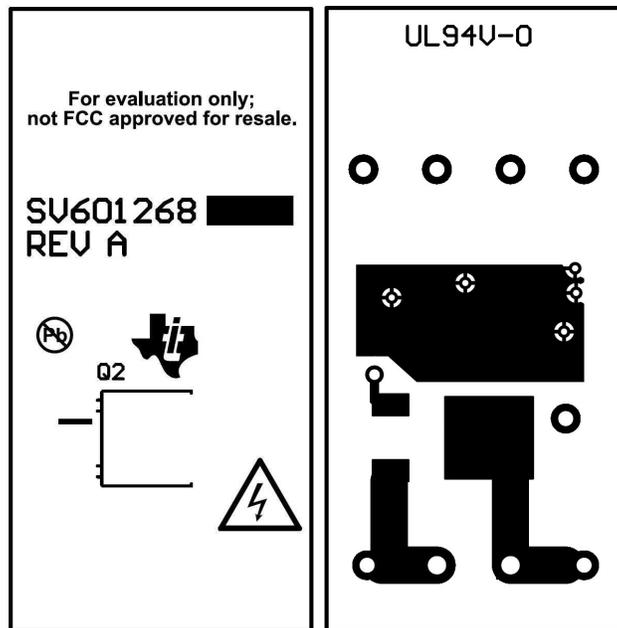


Figure 28. UCC24636EVM Assembly and Copper Drawings (Bottom View)

8 List of Materials

Table 3 EVM components list, corresponding to the schematic diagram of Figure 4.

Table 3. UCC24636EVM List of Materials

| QTY | DES | DESCRIPTION | PART NUMBER | MANUFACTURER |
|-----|------------------|-------------------------------------------------------------------|------------------|-------------------|
| 1 | PCB1 | Printed circuit board | SV601268 | Any |
| 1 | C1 | Capacitor, ceramic, 1 μ F, 50 V, \pm 10%, X7R, 0805 | 08055C105KAT2A | AVX |
| 1 | C2 | Capacitor, ceramic, 100 pF, 50 V, \pm 5%, C0G/NP0, 0603 | 06035A101JAT2A | AVX |
| 1 | Q1 | MOSFET, N-channel, 100 V, 16 A, SON 5 mm \times 6 mm | CSD19531Q5A | Texas Instruments |
| 1 | R2 | Resistor, 0 Ω , 5%, 0.1 W, 0603 | CRCW06030000Z0EA | Vishay-Dale |
| 1 | R3 | Resistor, 10.0 k Ω , 1%, 0.1 W, 0603 | CRCW060310K0FKEA | Vishay-Dale |
| 1 | R5 | Resistor, 2.2 Ω , 5%, 0.1 W, 0603 | CRCW06032R20JNEA | Vishay-Dale |
| 1 | R6 | Resistor, 24.3 k Ω , 1%, 0.1 W, 0603 | CRCW060324K3FKEA | Vishay-Dale |
| 1 | R7 | Resistor, 49.9 k Ω , 1%, 0.1 W, 0603 | CRCW060349K9FKEA | Vishay-Dale |
| 3 | TP1, TP2, TP5 | Test point, miniature, white, TH | 5002 | Keystone |
| 1 | TP3 | Test point, miniature, red, TH | 5000 | Keystone |
| 1 | TP4 | Test point, miniature, black, TH | 5001 | Keystone |
| 1 | TP6 | Test point, miniature, orange, TH | 5003 | Keystone |
| 1 | TP7 | Test point, miniature, yellow, TH | 5004 | Keystone |
| 1 | U1 | Synchronous Rectifier Controller with Low Power Standby, DBV0006A | UCC24636DBVR | Texas Instruments |

STANDARD TERMS AND CONDITIONS FOR EVALUATION MODULES

1. *Delivery:* TI delivers TI evaluation boards, kits, or modules, including any accompanying demonstration software, components, or documentation (collectively, an "EVM" or "EVMs") to the User ("User") in accordance with the terms and conditions set forth herein. Acceptance of the EVM is expressly subject to the following terms and conditions.
 - 1.1 EVMs are intended solely for product or software developers for use in a research and development setting to facilitate feasibility evaluation, experimentation, or scientific analysis of TI semiconductors products. EVMs have no direct function and are not finished products. EVMs shall not be directly or indirectly assembled as a part or subassembly in any finished product. For clarification, any software or software tools provided with the EVM ("Software") shall not be subject to the terms and conditions set forth herein but rather shall be subject to the applicable terms and conditions that accompany such Software
 - 1.2 EVMs are not intended for consumer or household use. EVMs may not be sold, sublicensed, leased, rented, loaned, assigned, or otherwise distributed for commercial purposes by Users, in whole or in part, or used in any finished product or production system.
2. *Limited Warranty and Related Remedies/Disclaimers:*
 - 2.1 These terms and conditions do not apply to Software. The warranty, if any, for Software is covered in the applicable Software License Agreement.
 - 2.2 TI warrants that the TI EVM will conform to TI's published specifications for ninety (90) days after the date TI delivers such EVM to User. Notwithstanding the foregoing, TI shall not be liable for any defects that are caused by neglect, misuse or mistreatment by an entity other than TI, including improper installation or testing, or for any EVMs that have been altered or modified in any way by an entity other than TI. Moreover, TI shall not be liable for any defects that result from User's design, specifications or instructions for such EVMs. Testing and other quality control techniques are used to the extent TI deems necessary or as mandated by government requirements. TI does not test all parameters of each EVM.
 - 2.3 If any EVM fails to conform to the warranty set forth above, TI's sole liability shall be at its option to repair or replace such EVM, or credit User's account for such EVM. TI's liability under this warranty shall be limited to EVMs that are returned during the warranty period to the address designated by TI and that are determined by TI not to conform to such warranty. If TI elects to repair or replace such EVM, TI shall have a reasonable time to repair such EVM or provide replacements. Repaired EVMs shall be warranted for the remainder of the original warranty period. Replaced EVMs shall be warranted for a new full ninety (90) day warranty period.
3. *Regulatory Notices:*
 - 3.1 *United States*
 - 3.1.1 *Notice applicable to EVMs not FCC-Approved:*

This kit is designed to allow product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and software developers to write software applications for use with the end product. This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter.
 - 3.1.2 *For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant:*

CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement for Class A EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Interference Statement for Class B EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

3.2 Canada

3.2.1 For EVMs issued with an Industry Canada Certificate of Conformance to RSS-210

Concerning EVMs Including Radio Transmitters:

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Concernant les EVMs avec appareils radio:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Concerning EVMs Including Detachable Antennas:

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur

3.3 Japan

3.3.1 *Notice for EVMs delivered in Japan:* Please see http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_01.page 日本国内に輸入される評価用キット、ボードについては、次のところをご覧ください。
http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_01.page

3.3.2 *Notice for Users of EVMs Considered "Radio Frequency Products" in Japan:* EVMs entering Japan may not be certified by TI as conforming to Technical Regulations of Radio Law of Japan.

If User uses EVMs in Japan, not certified to Technical Regulations of Radio Law of Japan, User is required by Radio Law of Japan to follow the instructions below with respect to EVMs:

1. Use EVMs in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
2. Use EVMs only after User obtains the license of Test Radio Station as provided in Radio Law of Japan with respect to EVMs, or
3. Use of EVMs only after User obtains the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to EVMs. Also, do not transfer EVMs, unless User gives the same notice above to the transferee. Please note that if User does not follow the instructions above, User will be subject to penalties of Radio Law of Japan.

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】 開発キットの中には技術基準適合証明を受けていないものがあります。技術適合証明を受けていないものご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
2. 実験局の免許を取得後ご使用いただく。
3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。日本テキサス・インスツルメンツ株式会社
東京都新宿区西新宿 6 丁目 2 4 番 1 号
西新宿三井ビル

3.3.3 *Notice for EVMs for Power Line Communication:* Please see http://www.tij.co.jp/llds/ti_ja/general/eStore/notice_02.page
電力線搬送波通信についての開発キットをお使いになる際の注意事項については、次のところをご覧ください。http://www.tij.co.jp/llds/ti_ja/general/eStore/notice_02.page

4 *EVM Use Restrictions and Warnings:*

4.1 EVMS ARE NOT FOR USE IN FUNCTIONAL SAFETY AND/OR SAFETY CRITICAL EVALUATIONS, INCLUDING BUT NOT LIMITED TO EVALUATIONS OF LIFE SUPPORT APPLICATIONS.

4.2 User must read and apply the user guide and other available documentation provided by TI regarding the EVM prior to handling or using the EVM, including without limitation any warning or restriction notices. The notices contain important safety information related to, for example, temperatures and voltages.

4.3 *Safety-Related Warnings and Restrictions:*

4.3.1 User shall operate the EVM within TI's recommended specifications and environmental considerations stated in the user guide, other available documentation provided by TI, and any other applicable requirements and employ reasonable and customary safeguards. Exceeding the specified performance ratings and specifications (including but not limited to input and output voltage, current, power, and environmental ranges) for the EVM may cause personal injury or death, or property damage. If there are questions concerning performance ratings and specifications, User should contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may also result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM user guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, even with the inputs and outputs kept within the specified allowable ranges, some circuit components may have elevated case temperatures. These components include but are not limited to linear regulators, switching transistors, pass transistors, current sense resistors, and heat sinks, which can be identified using the information in the associated documentation. When working with the EVM, please be aware that the EVM may become very warm.

4.3.2 EVMs are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems. User assumes all responsibility and liability for proper and safe handling and use of the EVM by User or its employees, affiliates, contractors or designees. User assumes all responsibility and liability to ensure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard. User assumes all responsibility and liability for any improper or unsafe handling or use of the EVM by User or its employees, affiliates, contractors or designees.

4.4 User assumes all responsibility and liability to determine whether the EVM is subject to any applicable international, federal, state, or local laws and regulations related to User's handling and use of the EVM and, if applicable, User assumes all responsibility and liability for compliance in all respects with such laws and regulations. User assumes all responsibility and liability for proper disposal and recycling of the EVM consistent with all applicable international, federal, state, and local requirements.

5. *Accuracy of Information:* To the extent TI provides information on the availability and function of EVMs, TI attempts to be as accurate as possible. However, TI does not warrant the accuracy of EVM descriptions, EVM availability or other information on its websites as accurate, complete, reliable, current, or error-free.

6. *Disclaimers:*
- 6.1 EXCEPT AS SET FORTH ABOVE, EVMS AND ANY WRITTEN DESIGN MATERIALS PROVIDED WITH THE EVM (AND THE DESIGN OF THE EVM ITSELF) ARE PROVIDED "AS IS" AND "WITH ALL FAULTS." TI DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING SUCH ITEMS, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADE SECRETS OR OTHER INTELLECTUAL PROPERTY RIGHTS.
- 6.2 EXCEPT FOR THE LIMITED RIGHT TO USE THE EVM SET FORTH HEREIN, NOTHING IN THESE TERMS AND CONDITIONS SHALL BE CONSTRUED AS GRANTING OR CONFERRING ANY RIGHTS BY LICENSE, PATENT, OR ANY OTHER INDUSTRIAL OR INTELLECTUAL PROPERTY RIGHT OF TI, ITS SUPPLIERS/LICENSORS OR ANY OTHER THIRD PARTY, TO USE THE EVM IN ANY FINISHED END-USER OR READY-TO-USE FINAL PRODUCT, OR FOR ANY INVENTION, DISCOVERY OR IMPROVEMENT MADE, CONCEIVED OR ACQUIRED PRIOR TO OR AFTER DELIVERY OF THE EVM.
7. *USER'S INDEMNITY OBLIGATIONS AND REPRESENTATIONS.* USER WILL DEFEND, INDEMNIFY AND HOLD TI, ITS LICENSORS AND THEIR REPRESENTATIVES HARMLESS FROM AND AGAINST ANY AND ALL CLAIMS, DAMAGES, LOSSES, EXPENSES, COSTS AND LIABILITIES (COLLECTIVELY, "CLAIMS") ARISING OUT OF OR IN CONNECTION WITH ANY HANDLING OR USE OF THE EVM THAT IS NOT IN ACCORDANCE WITH THESE TERMS AND CONDITIONS. THIS OBLIGATION SHALL APPLY WHETHER CLAIMS ARISE UNDER STATUTE, REGULATION, OR THE LAW OF TORT, CONTRACT OR ANY OTHER LEGAL THEORY, AND EVEN IF THE EVM FAILS TO PERFORM AS DESCRIBED OR EXPECTED.
8. *Limitations on Damages and Liability:*
- 8.1 *General Limitations.* IN NO EVENT SHALL TI BE LIABLE FOR ANY SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF THESE TERMS AND CONDITIONS OR THE USE OF THE EVMS PROVIDED HEREUNDER, REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCLUDED DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, COST OF REMOVAL OR REINSTALLATION, ANCILLARY COSTS TO THE PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, RETESTING, OUTSIDE COMPUTER TIME, LABOR COSTS, LOSS OF GOODWILL, LOSS OF PROFITS, LOSS OF SAVINGS, LOSS OF USE, LOSS OF DATA, OR BUSINESS INTERRUPTION. NO CLAIM, SUIT OR ACTION SHALL BE BROUGHT AGAINST TI MORE THAN ONE YEAR AFTER THE RELATED CAUSE OF ACTION HAS OCCURRED.
- 8.2 *Specific Limitations.* IN NO EVENT SHALL TI'S AGGREGATE LIABILITY FROM ANY WARRANTY OR OTHER OBLIGATION ARISING OUT OF OR IN CONNECTION WITH THESE TERMS AND CONDITIONS, OR ANY USE OF ANY TI EVM PROVIDED HEREUNDER, EXCEED THE TOTAL AMOUNT PAID TO TI FOR THE PARTICULAR UNITS SOLD UNDER THESE TERMS AND CONDITIONS WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED. THE EXISTENCE OF MORE THAN ONE CLAIM AGAINST THE PARTICULAR UNITS SOLD TO USER UNDER THESE TERMS AND CONDITIONS SHALL NOT ENLARGE OR EXTEND THIS LIMIT.
9. *Return Policy.* Except as otherwise provided, TI does not offer any refunds, returns, or exchanges. Furthermore, no return of EVM(s) will be accepted if the package has been opened and no return of the EVM(s) will be accepted if they are damaged or otherwise not in a resalable condition. If User feels it has been incorrectly charged for the EVM(s) it ordered or that delivery violates the applicable order, User should contact TI. All refunds will be made in full within thirty (30) working days from the return of the components(s), excluding any postage or packaging costs.
10. *Governing Law:* These terms and conditions shall be governed by and interpreted in accordance with the laws of the State of Texas, without reference to conflict-of-laws principles. User agrees that non-exclusive jurisdiction for any dispute arising out of or relating to these terms and conditions lies within courts located in the State of Texas and consents to venue in Dallas County, Texas. Notwithstanding the foregoing, any judgment may be enforced in any United States or foreign court, and TI may seek injunctive relief in any United States or foreign court.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2015, Texas Instruments Incorporated

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have **not** been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products

| | |
|------------------------------|--------------------------------------------------------------------------------------|
| Audio | www.ti.com/audio |
| Amplifiers | amplifier.ti.com |
| Data Converters | dataconverter.ti.com |
| DLP® Products | www.dlp.com |
| DSP | dsp.ti.com |
| Clocks and Timers | www.ti.com/clocks |
| Interface | interface.ti.com |
| Logic | logic.ti.com |
| Power Mgmt | power.ti.com |
| Microcontrollers | microcontroller.ti.com |
| RFID | www.ti-rfid.com |
| OMAP Applications Processors | www.ti.com/omap |
| Wireless Connectivity | www.ti.com/wirelessconnectivity |

Applications

| | |
|-------------------------------|------------------------------------------------------------------------------------------|
| Automotive and Transportation | www.ti.com/automotive |
| Communications and Telecom | www.ti.com/communications |
| Computers and Peripherals | www.ti.com/computers |
| Consumer Electronics | www.ti.com/consumer-apps |
| Energy and Lighting | www.ti.com/energy |
| Industrial | www.ti.com/industrial |
| Medical | www.ti.com/medical |
| Security | www.ti.com/security |
| Space, Avionics and Defense | www.ti.com/space-avionics-defense |
| Video and Imaging | www.ti.com/video |

TI E2E Community

e2e.ti.com