

# Application Brief

## Active Filter Design for Differential ADCs



Rachel Scheller


### Introduction

This application note aims to refine the process for converting a Multiple Feedback (MFB) filter for a traditional operational amplifier into a differential filter suitable for use with a fully differential amplifier (FDA). When using an FDA as an active filter, most online filter designers and tools simply do not include fully differential amplifiers in the analysis. There are multiple key benefits of utilizing a fully-differential amplifier to drive the inputs of these ADCs, including being able to convert single-ended signals into differential with DC coupling, adding gain and active filtration in one stage, independent output common mode control, improved second-order harmonic performance, and more.

For a more complete analysis of the various filter types (Butterworth, Bessel, and so on), transfer functions, supporting equations, and more, please consider evaluating the references listed at the end of this article.

### MFB Operational Amplifier Implementation


At the simplest, an MFB filter can be designed for a traditional operational amplifier, and then simply flipped or mirrored onto the negative terminal and duplicated on both sides of the feedback network. To generate an op amp MFB model for conversion, use [Texas Instrument's Filter Design Tool](#). Figure 1 demonstrates this principle with the core 5 basic components in the following.

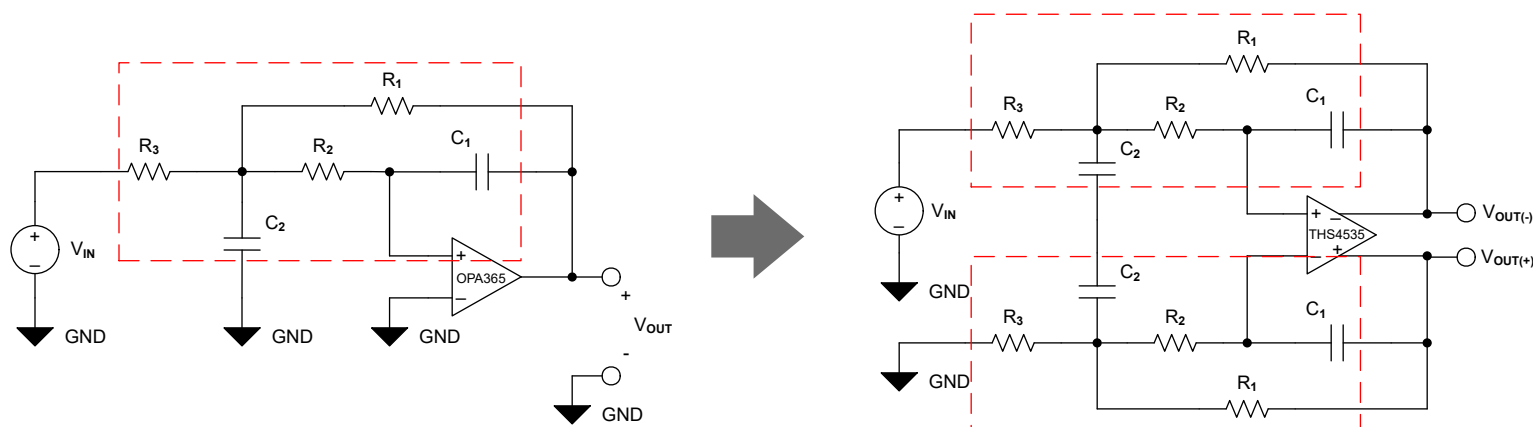

**Figure 1. Operational Amplifier to Differential Amplifier MFB Filter**

### Note

If the design being developed has a source impedance or requires a termination resistor, remember to add a resistor to the inverting input of the FDA to match the impedance of the non-inverting input. For more detailed information on this topic, please refer to the references at the end of this article.

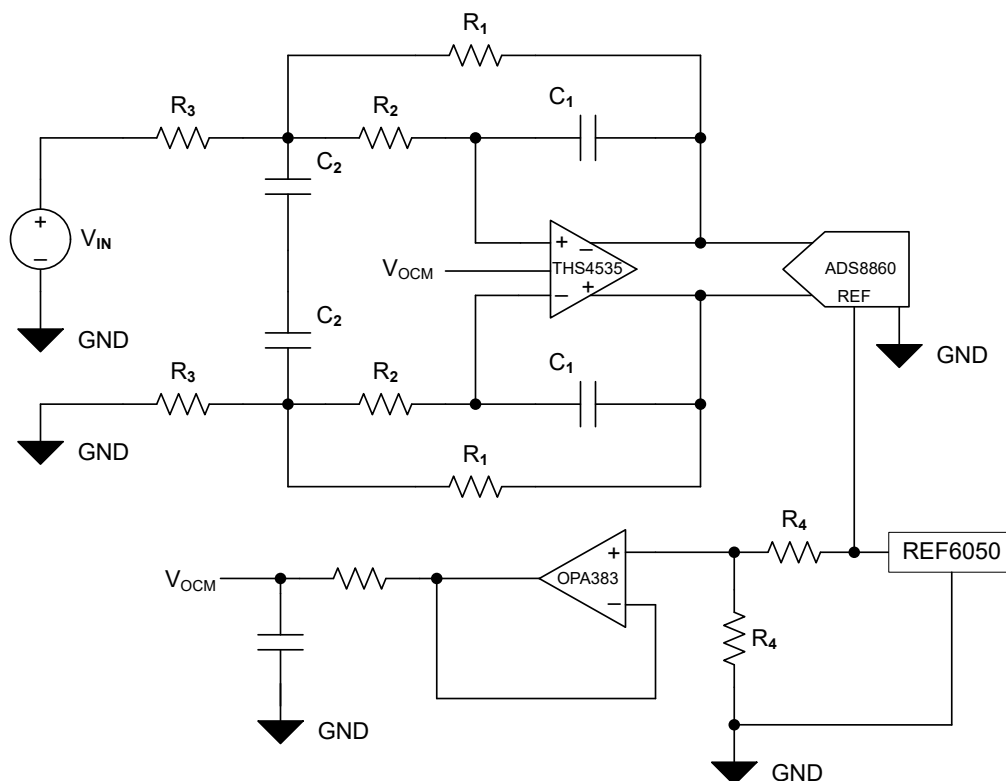

**Figure 2. Differential Amplifier MFB Filter Driving an ADC**

Both capacitors labeled C2 can be combined in series into one passive component using equation (1) and as shown in Figure 6.

$$C_{total} = \frac{1}{C_2} + \frac{1}{C_2} = \frac{1}{2}C_2 \quad (1)$$

## Simulation Implementation and Results

Table 1 outlines an example design requirement for one of the most common filter applications – an anti aliasing filter to drive a 1 MSPS SAR ADC. To generate the passive values, please use [Texas Instrument's Filter Design Tool](#) to generate an op amp filter that can be converted into an FDA filter.

**Table 1. Design Requirements**

| Parameter         | Target Value                                           |
|-------------------|--------------------------------------------------------|
| Filter Type       | 2 <sup>nd</sup> Order Low Pass Butterworth (Q = 0.707) |
| Cut Off Frequency | 500kHz                                                 |
| Target Gain       | 1V/V                                                   |
| FDA               | THS4535                                                |
| ADC Sampling Rate | 1MSPS                                                  |
| Target ADC        | ADS8860                                                |

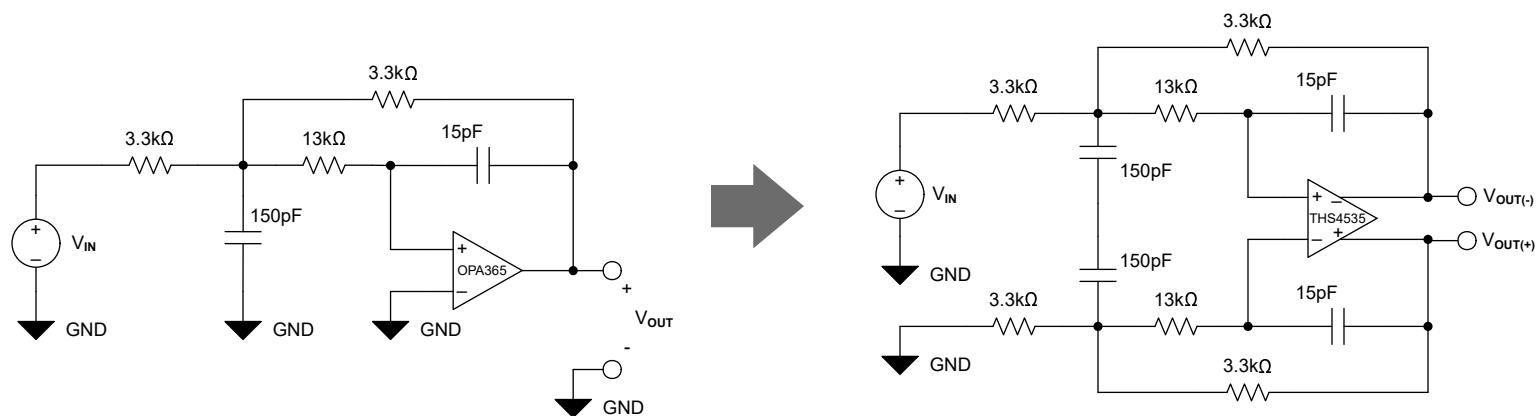


Figure 3. 500kHz, Gain = 1V/V, Low Pass Filter Schematic

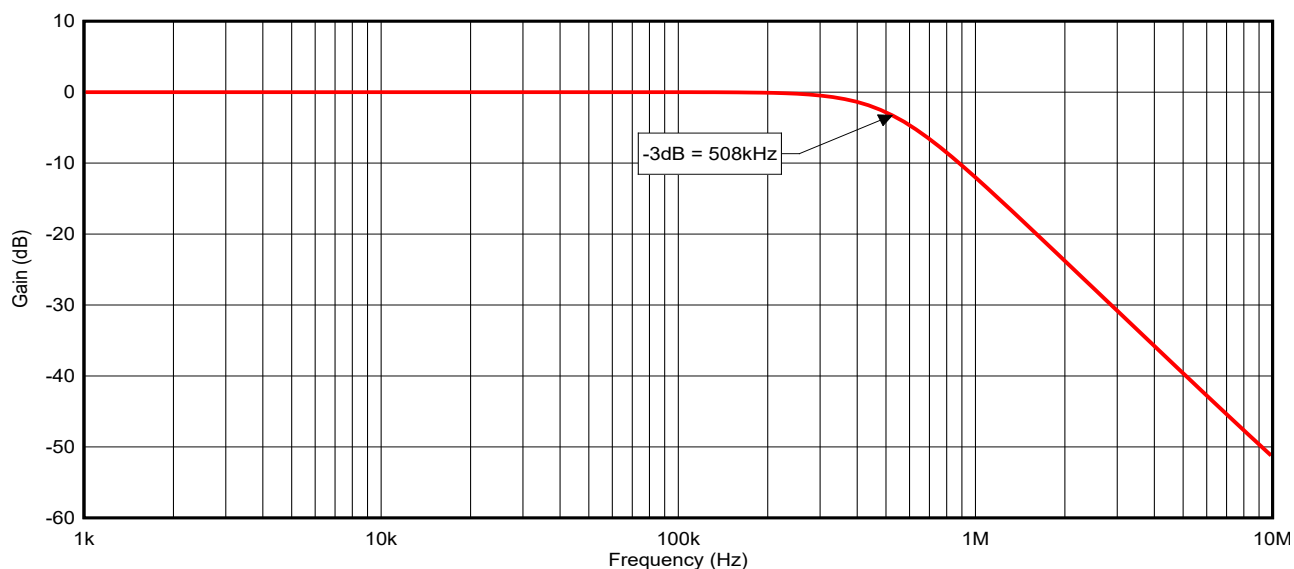


Figure 4. 500kHz, Gain = 1V/V, Low Pass Filter OPA365 Op Amp Frequency Response


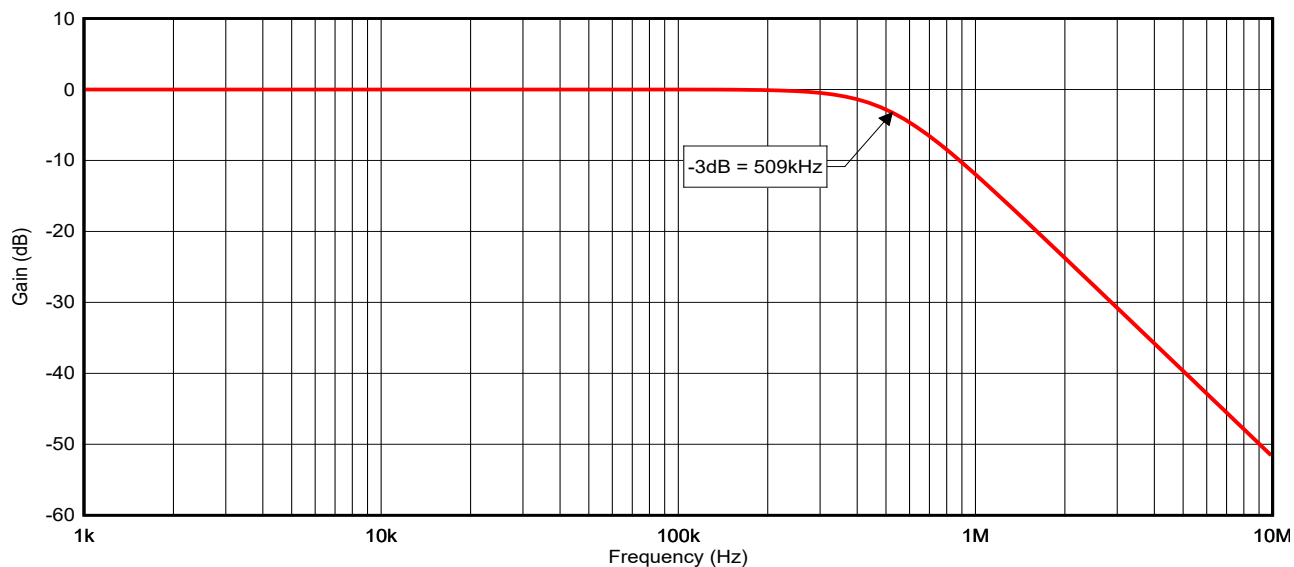


Figure 5. 500kHz, Gain = 1V/V, Low Pass Filter THS4535 FDA Frequency Response


Table 2 outlines an additional design example with a gain of 2V/V to demonstrate single to differential conversion, addition of gain, and active filtration all while utilizing only one active component.

**Table 2. Design Requirements**


| Parameter         | Target Value                                           |
|-------------------|--------------------------------------------------------|
| Filter Type       | 2 <sup>nd</sup> Order Low Pass Butterworth (Q = 0.707) |
| Cut Off Frequency | 500kHz                                                 |
| Target Gain       | 2V/V                                                   |
| FDA               | THS4535                                                |
| ADC Sampling Rate | 1 MSPS                                                 |
| Target ADC        | ADS8860                                                |

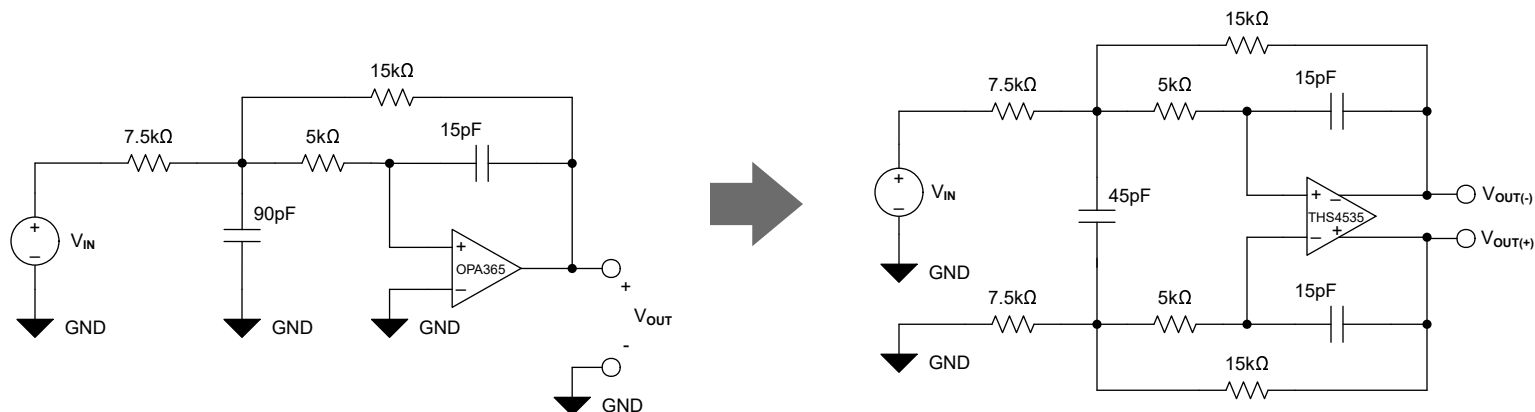

**Figure 6. 500kHz, Gain = 2V/V, Low Pass Filter Schematic**

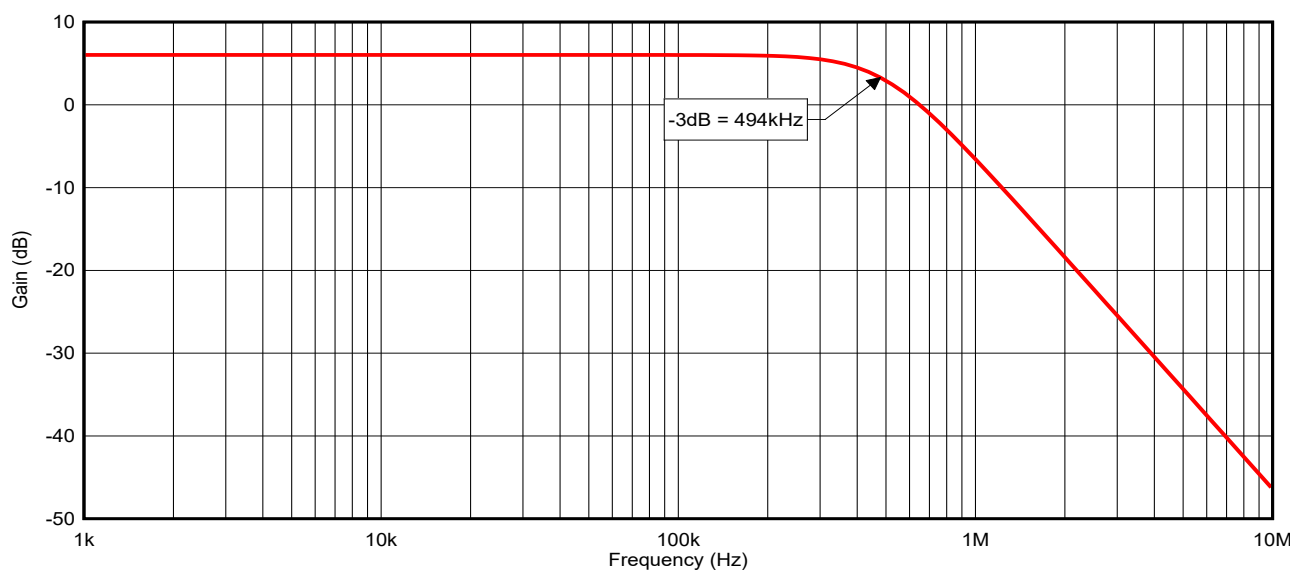

**Figure 7. 500kHz, Gain = 2V/V, Low Pass Filter OPA365 Op Amp Frequency Response**

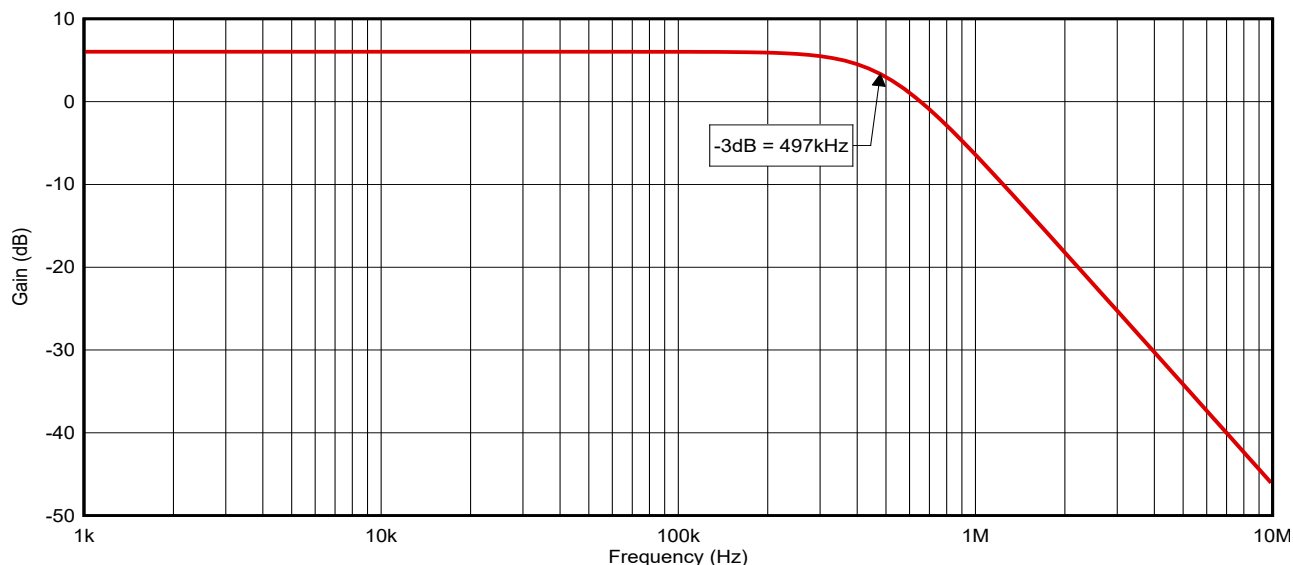

**Figure 8. 500kHz, Gain = 2V/V, Low Pass Filter THS4535 FDA Frequency Response**

To further improve the filter matching and CMRR performance of your system, consider utilizing TI's precision matched resistors, [RES11A](#).

### Sallen-Key Implementation

Sallen-Key filters are not typically used with fully differential amplifiers, and therefore not considered in this document due to the dependency on a feedback path to both the inverting and noninverting terminal of a traditional op amp. In this configuration, the impedances on each terminal are mismatched – if this were to be replicated onto an FDA, the impedance mismatch would cause high distortion and other circuit abnormalities. Therefore, this is generally recommended to utilize an MFB filter topology as described previously for fully differential amplifiers.

### References

1. Texas Instruments, [Texas Instrument's Filter Design Tool](#)
2. Texas Instruments, [Using the infinite-gain, MFB filter topology in fully differential active filters](#), analog applications journal.
3. Texas Instruments, [Design a front-end to drive a differential ADC](#), video
4. Texas Instruments, [Active Low-Pass Filter Design](#), application note.
5. Texas Instruments, [AN-1393 Using High Speed Differential Amplifiers to Drive Analog-to-Digital Converters](#), application note.
6. Texas Instruments, [Single-Ended Input to Differential Output Circuit Using a Fully-Differential Amplifier](#), analog engineer's circuit.
7. Texas Instruments, [THS4551 Low-Noise, Precision, 150-MHz, Fully Differential Amplifier](#), data sheet.

### Trademarks

All trademarks are the property of their respective owners.

## IMPORTANT NOTICE AND DISCLAIMER

TI PROVIDES TECHNICAL AND RELIABILITY DATA (INCLUDING DATA SHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF THIRD PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for skilled developers designing with TI products. You are solely responsible for (1) selecting the appropriate TI products for your application, (2) designing, validating and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, regulatory or other requirements.

These resources are subject to change without notice. TI grants you permission to use these resources only for development of an application that uses the TI products described in the resource. Other reproduction and display of these resources is prohibited. No license is granted to any other TI intellectual property right or to any third party intellectual property right. TI disclaims responsibility for, and you will fully indemnify TI and its representatives against, any claims, damages, costs, losses, and liabilities arising out of your use of these resources.

TI's products are provided subject to [TI's Terms of Sale](#) or other applicable terms available either on [ti.com](https://www.ti.com) or provided in conjunction with such TI products. TI's provision of these resources does not expand or otherwise alter TI's applicable warranties or warranty disclaimers for TI products.

TI objects to and rejects any additional or different terms you may have proposed.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265  
Copyright © 2025, Texas Instruments Incorporated