

TI 参考设计: TIDA-01406

用于 PLC 和通信模块的节能及隔离式 CANopen 接口



说明

CAN 和 CANopen 是适用于工厂自动化和控制等许多工业应用的传统现场总线协议。只要高电压有可能损坏终端设备,就需要隔离器件。在具有大量自动化节点的现代智能工厂中,如果每台设备消耗的能量减少,则总功耗将会降低,因而这些工厂也将受益其中。TIDA-01406 是用于 PLC 和通信模块的节能及隔离式 CANopen 接口的 TI 参考设计。它基于 BeagleBone Black Cape, 因而可以利用 BeagleBone Black 开发板轻松对其进行测试。

资源

TIDA-01406	设计文件夹
ISO1050	产品文件夹
SN6501	产品文件夹
TPD2E007	产品文件夹
BeagleBone Black 开发板	工具文件夹

特性


- 采用 ISO1050 和 SN6501 的 CAN 收发器参考设计
- 设计外形小巧
- ISO1050 隔离:
 - 使用 DUB 封装实现 2.5kV 隔离
- BeagleBone Black Cape 外形
- 用于 BeagleBone Black 和通用处理器板的扩展接口
- CAN 总线地址和 CAN 总线速度旋转开关
- CAN 状态 LED

应用


- [通信模块](#)
- [PLC](#)



咨询我们的 E2E 专家

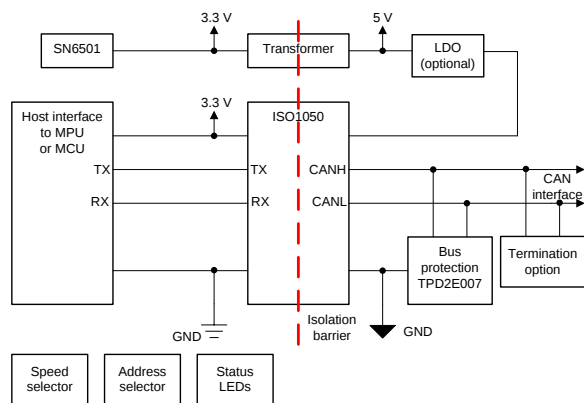

Copyright © 2017, Texas Instruments Incorporated

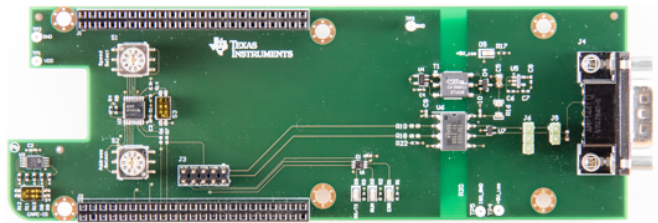

该 TI 参考设计末尾的重要声明表述了授权使用、知识产权问题和其他重要的免责声明和信息。


1 System Description

A Controller Area Network (CAN) bus is an interface for automotive and vehicle applications developed in 1986 by Bosch GmbH. Due to its low cost, the CAN bus has been adopted to be used in factory and process automation to control the production lines. Newly developed products still support the CAN interface to support legacy and factory deployed remote input/output devices, motor drives, sensors, and actuators.

CANopen is a communication protocol and device profile over CAN bus. CANopen is released by the organization CAN in Automation (CiA) and the CANopen protocol is specified in CiA 301.

Each CAN node consists of the following functional blocks:

- **Processor unit:** This is a microcontroller or microprocessor. The processor unit runs the CAN stack, CANopen protocol stack, and application software layer above the CANopen protocol stack. The CAN stack has an application programmers interface, which interfaces to the CANopen protocol stack and to customer applications.
- **CAN controller:** This is a peripheral block inside the microcontroller or microprocessor. The CAN controller is responsible for transmitting and receiving CAN messages.
- **CAN transceiver:** This is an external device, separate from the microcontroller or microprocessor, that converts the data stream from CAN bus levels to CAN controller levels. The transceiver has the isolation barrier added to protect the CAN controller from interference and destructive voltages on the CAN bus.

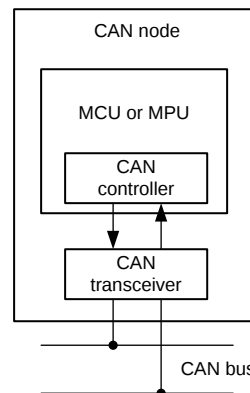

Copyright © 2017, Texas Instruments Incorporated

图 1. CAN Node

This TI Design integrates the isolated CAN transceiver on a BeagleBone Black cape form factor. This enables customers to evaluate and validate TI's ISO1050 CAN transceiver using an existing software infrastructure available through the BeagleBone open source community (CAN tools, CANopen Stack). In addition to the cape form factor, the TIDA-01406 design supports a generic host interface pin header to allow customers to connect the cape form factor board to any microprocessor or microcontroller development board. This TI Design provides additional hardware support for two rotary input switches to select CAN bus speed and CAN device identity (ID). In addition it supports three CAN status LEDs.


1.1 Key System Specifications

表 1. Key System Specifications

PARAMETER	SPECIFICATIONS
Isolated CAN transceiver	See the ISO1050 datasheet[1]
Dominant-time-out circuit	See the ISO1050 datasheet
BeagleBone Black cape form factor	Supports BeagleBone Black device tree overlay (DTO) and device driver for CAN controller, I ² C bus, and GPIO interface.
Energy efficient transformer driver	See the SN6501 datasheet[2]
ESD and surge protection	See the TPD2E007 datasheet[3]

2 System Overview

2.1 Block Diagram

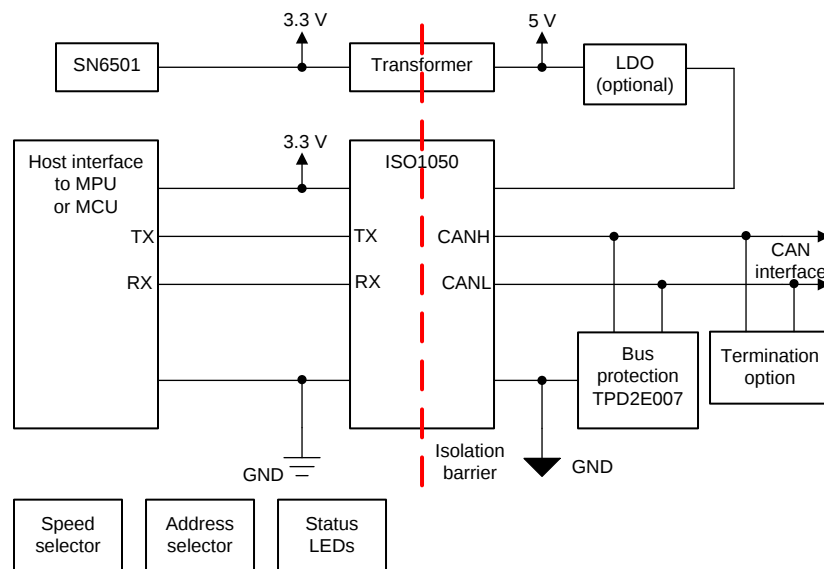

Copyright © 2017, Texas Instruments Incorporated

图 2. CANopen Block Diagram

2.2 Design Considerations

2.2.1 ISO1050 and SN6501

The ISO1050 device is available in two different packages: DW and DUB. The CANopen cape uses the DUB package with a lower package pin count and up to 2500- V_{RMS} of isolation. The isolated voltage supply is generated by the SN6501 transformer driver. The default PCB assembly uses the isolated 5 V after the diodes to power the ISO1050. However, it is possible through an assembly option to use an LDO for filtering the supply voltage for the ISO1050 device.

The CANopen cape has the option to insert a termination resistor of 120 Ω through a wire jumper into the CAN bus. CAN termination is needed at the first and last CAN devices in the CAN bus line topology. The CANopen cape also supports CAN bus protection devices such as the TPD2E007. The CANopen cape supports a 3-pin connector to access the CAN_H, CAN_L, and isolated GND signals.

2.2.2 Rotary Switch Interface

The CANopen cape supports two dedicated rotary switches to set the CAN bus speed and the CAN device address. The rotary switches are read out through an 8-bit port expander, which is accessed through the I²C1 interface. Each rotary switch has 10 positions and those are translated into 4 bits of output data. The output data of the rotary switches are combined into a single 8-bit data word, which is read by the I²C port expander TPS9534.

The 8-bit output data is translated as follows:

- Bit 0 to 3: CAN speed value selected with position switch
- Bit 4 to 7: CAN address value selected with position switch

Note that the rotary switch output data are controlled by the user application to set CAN bus speed and CAN device address. The CANopen stack does not process this information.

2.2.3 Status LED Interface

The CANopen cape supports three CAN status LEDs. Each LED is controlled by a dedicated processor GPIO. The CANopen cape supports the following LEDs:

- ERR: Indicates an CAN bus error
- RUN: Indicates the CAN bus is in operation
- RX/TX: Indicates the CAN bus is receiving or transmitting

Note that all three LEDs are controlled by the user application through GPIO access. The CANopen stack does not control the LEDs directly.

2.2.4 BeagleBone Black Cape Identity EEPROM

The Linux operating system on the BeagleBone Black uses an ID EEPROM to detect attached capes. Based on the detected cape ID, the Linux system loads the respective device tree overlay (DTO) for pin muxing and initialing the cape drivers. The cape detection is performed through the I²C2 interface.

2.2.5 BeagleBone Black Cape Expansion Connector Assignment

Connector J8 on the CANopen cape connects to connector P8 on the BeagleBone Black. Connector J9 on the CANopen cape connects to connector P9 on the BeagleBone Black. 表 2 specifies the pins and signals used by the CANopen cape:

表 2. CANopen Cape Interface to BeagleBone Black

CONNECTOR	PIN	MODE	DESCRIPTION
8	1, 2	GND	Ground
9	1, 2, 43, 44, 45, 46	GND	Ground
9	3, 4	VDD_3V3	3.3-V voltage supply from BBB
9	12	GPIO1[28] (Mode 7)	CAN LED 3: RX/TX
9	15	GPIO1[16] (Mode 7)	CAN LED 1: ERR
9	17	I2C1_SCL (Mode 2)	I ² C interface to position switch port expander
9	18	I2C1_SDA (Mode 2)	I ² C interface to position switch port expander
9	19	I2C2_SCL (Mode 3)	I ² C interface to cape ID EEPROM
9	20	I2C2_SDA (Mode 3)	I ² C interface to cape ID EEPROM
9	23	GPIO1[17] (Mode 7)	CAN LED 2: RUN
9	24	DCAN1_RX (Mode 2)	CAN1 receive
9	26	DCAN1_TX (Mode 2)	CAN1 transmit

2.3 Highlighted Products

2.3.1 ISO1050 Isolated CAN Transceiver

- Meets the requirements of ISO11898-2
- 5000-V_{RMS} isolation (ISO1050DW)
- 2500-V_{RMS} isolation (ISO1050DUB)
- Fail-safe outputs
- Low loop delay: 150 ns (typical), 210 ns (maximum)
- 50-kV/μs typical transient immunity
- Bus-fault protection of –27 to 40 V
- Driver (TXD) dominant timeout function
- I/O voltage range supports 3.3-V and 5-V microprocessors
- VDE approval per DIN V VDE V 0884-10 (VDE V0884-10): 2006-12 and DIN EN 61010-1
- UL 1577 approved
- CSA approved for IEC 60950-1, IEC 61010-1, IEC 60601-1 3rd Ed (Medical), and Component Acceptance Notice 5A
- TUV 5-kV_{RMS} reinforced insulation approval for EN/UL/CSA 60950-1 (ISO1050DW only)
- CQC reinforced insulation per GB4843.1-2011 (ISO1050DW only)

2.3.2 SN6501 Transformer Driver for Isolated Power Supplies

- Push-pull driver for small transformers
- Single 3.3-V or 5-V supply
- High primary-side current drive:
 - 5-V supply: 350 mA (max)
 - 3.3-V supply: 150 mA (max)
- Low ripple on rectified output permits small output capacitors
- Small 5-pin SOT-23 package

2.3.3 TPD2E007 2-Channel ESD Protection Array for AC-Coupled/Negative-Rail Data Interfaces

- Industrial interfaces (RS-232, RS-485, RS-422, LVDS, CAN)
- IEC 61000-4-2 Level 4 ESD protection:
 - ± 8 -kV IEC 61000-4-2 contact discharge
 - ± 15 -kV IEC 61000-4-2 air-gap discharge
- IEC 61000-4-5 surge protection:
 - 4.5-A peak pulse current (8/20- μ s pulse)
- IO capacitance 15 pF (max)
- Low 50-nA leakage current
- Space-saving PicoStar™ and SOT package

2.4 BeagleBone Black Development Board

BeagleBone Black is a low-cost, open source, community-supported development platform for ARM® Cortex®-A8 processor developers. Boot Linux in under 10-seconds and get started on the Sitara™ AM335x ARM Cortex-A8 processor development in less than 5 minutes with just a single USB cable. BeagleBone Black ships with the Debian GNU/Linux in onboard FLASH to start evaluation and development. Many other Linux distributions and operating systems are also supported on BeagleBone Black including:

- Debian
- Ubuntu
- Android™
- Fedora

BeagleBone Black's capabilities can be extended using plug-in boards called "capes" that can be plugged into BeagleBone Black's two 46-pin dual-row expansion headers.

3 Hardware, Software, Testing Requirements, and Test Results

3.1 Required Hardware and Software

3.1.1 Hardware

The following hardware items are required:

- BeagleBone Black
- TIDA-01406 Isolated CAN cape

3.1.2 Software

3.1.2.1 Update BeagleBone Black Linux Image

Be sure to update the Linux Kernel and file system to the latest software, especially if the BeagleBone Black board has not been used in a while. Follow the detailed instruction on how to download and flash the onboard eMMC on the BeagleBone Black [here](#).

3.1.2.2 Proxy Server Configuration

When connecting the BeagleBone Black board to a network that is behind a firewall, configure the proxy server that allows access to the Internet. Setting up a proxy server allows one to download all the tools that are needed to get the TIDA-001406 functional. This [proxy server setup](#) description is useful. Alternatively, contact a company network administrator for help with setting up the proxy server.

3.1.2.3 EEPROM Tool and EEPROM Cape Programming

The TIDA-01406 cape design needs a generated EEPROM binary file. Find the EEPROM binary file generation tool [here](#) with a detailed EEPROM tutorial [here](#).

1. Clone the BBCape_EEPROM repository and build the BBCape_EEPROM executable:

```
root@beaglebone:~# git clone https://github.com/picoflamingo/BBCape_EEPROM
root@beaglebone:~# cd BBCape_EEPROM
root@beaglebone:~# make
```

The program is menu driven and allows you to create the EEPROM data.

2. Follow the description from the EEPROM generation tool website to generate an EEPROM binary with the following parameters:

- Cape Name (32 bytes): isolated CAN interface
- Cape Version (4 bytes): 00A0
- Cape Manufacturer (16 bytes): TI
- Part Number (16 bytes): BB-CAN1
- Serial Number (12 bytes): TIDA-01406

3. Store the EEPROM binary in a file called cape.bin.

4. Use the cat command to write the file cape.bin into the EEPROM onboard the TIDA-01406 design.

```
cat cape.bin >
/sys/bus/i2c/devices/2-0057/eeprom
```

5. Reboot the BeagleBone Black board after programming the EEPROM. Use dmesg to see if Linux has detected the TIDA-01406 cape and search for the following line:

```
2.532120] bone_capemgr bone_capemgr: slot #3: dtbo
'BB-CAN1-00A0.dtbo' loaded; overlay id #0
```

3.1.2.4 Install SocketCAN Utilities

Clone the SocketCAN utilities repository, then build and install the SocketCAN utilities executables. The Can-utils website with further instructions can be found [here](#).

```
root@beaglebone:~# git clone https://github.com/linux-can/can-utils.git
root@beaglebone:~# cd can-utils
root@beaglebone:~# ./autogen.sh
root@beaglebone:~# ./configure
root@beaglebone:~# make
root@beaglebone:~# make install
```


3.1.2.5 Install CANopenSocket Stack

Clone the CANopenSocket stack by following the instructions on the [CANopen Socket website](#).

3.2 Testing and Results

3.2.1 Test Setup

The test setup consists of two BeagleBone Black with ISO CAN capes and a test PC with a serial console or terminal to connect to the Linux system on the BeagleBone Black boards.

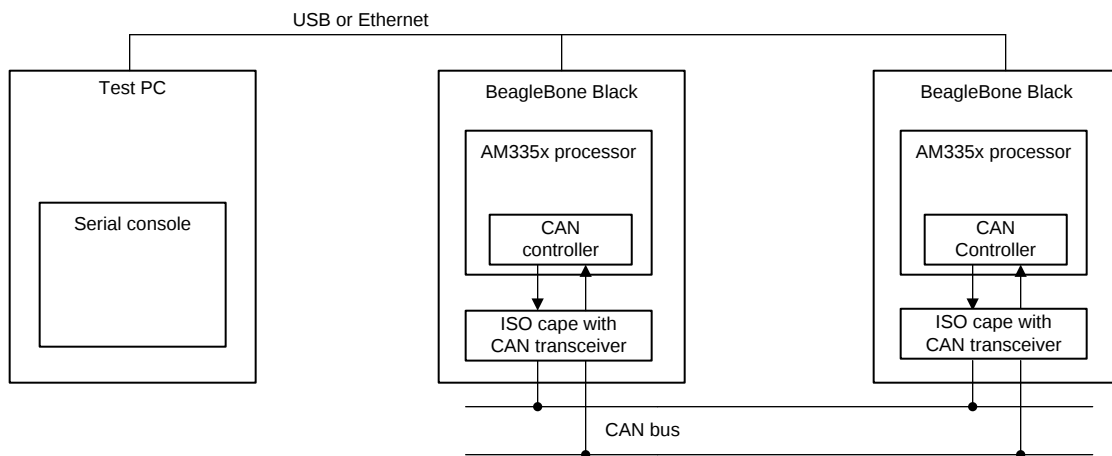

Copyright © 2017, Texas Instruments Incorporated

图 3. Test Setup

3.2.1.1 Cape EEPROM

Display the content of the TIDA-01406 cape EEPROM:

```
root@beaglebone:~# cat /sys/bus/i2c/devices/2-0057/eeprom | hexdump -C
00000000 aa 55 33 ee 41 31 69 73 6f 6c 61 74 65 64 20 43 |.U3.A1isolated C|
00000010 41 4e 20 69 6e 74 65 72 66 61 63 65 00 00 00 00 |AN interface....|
00000020 00 00 00 00 00 00 30 30 41 30 54 49 00 00 00 00 |.....00A0TI....|
00000030 00 00 00 00 00 00 00 00 00 00 42 42 2d 43 41 4e |.....BB-CAN|
00000040 31 00 00 00 00 00 00 00 00 00 30 30 54 49 44 41 |1.....00TIDA|
00000050 30 31 34 30 36 00 00 00 00 00 00 00 00 00 00 00 |01406.....|
00000060 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 |.....| *
000000f0 00 00 00 00 ff ff ff ff ff ff ff ff ff ff ff ff |.....| *
00000100 ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff |.....| *
00008000
```

3.2.1.2 CAN Interface

The SocketCAN utilities are used to test CAN protocol communication.

1. First, the CAN interface needs to get configured for both BBB#1 and BBB#2 boards. The CAN interface is configured with 125kbit/s with the following command:

```
root@beaglebone:~# ip link set can0 up type can bitrate 125000
```

2. Enable CAN protocol monitor on the second BBB#2.

```
BBB#2 --> root@beaglebone:~# candump can0
```

3. Now generate a CAN frame on the first BBB#1:

```
BBB#1 --> root@beaglebone:~# cangen can0 -D 11223344DEADBEEF -L 8 -g 1
```

The CAN monitor on second BBB#2 will display the received CAN frame:

```
BBB#2
can0 731 [8] 11 22 33 44 DE AD BE EF
can0 588 [8] 11 22 33 44 DE AD BE EF
can0 1A4 [8] 11 22 33 44 DE AD BE EF
can0 50D [8] 11 22 33 44 DE AD BE EF
can0 3E2 [8] 11 22 33 44 DE AD BE EF
can0 464 [8] 11 22 33 44 DE AD BE EF
can0 784 [8] 11 22 33 44 DE AD BE EF
can0 5C6 [8] 11 22 33 44 DE AD BE EF
```

To verify the CANOpenSocket stack functionality, follow the "Getting started with CANOpen Socket" instructions on the [CANOpenSocket website](#).

3.2.2 CAN Speed and Device ID Position Switch

Enable the I2C1 interface:

```
root@beaglebone:~# cd /sys/devices/platform/bone_capemg
root@beaglebone:/sys/devices/platform/bone_capemgr# echo BB-I2C1 > slots
```

Send configuration parameter to the port expander:

```
root@beaglebone:/sys/devices/platform/bone_capemgr# i2cset -y 1 0x20 0
```

Read out the port expander data:

```
root@beaglebone:/sys/devices/platform/bone_capemgr# i2cget -y 1 0x20
```

A value is return which represents the values of the two position switched:

- Example: 0x91
- CAN speed set to 1.
- CAN address set to 9

3.2.3 CAN Status LED

To control GPIO48 (ERR LED):

```
root@beaglebone:/sys/class/gpio# echo 48 > export
root@beaglebone:/sys/class/gpio# cd gpio48
root@beaglebone:/sys/class/gpio/gpio48# echo "out" > direction
root@beaglebone:/sys/class/gpio/gpio48# echo "1" > value
root@beaglebone:/sys/class/gpio/gpio48# echo 0 > value
root@beaglebone:/sys/class/gpio/gpio48# cd ..
```

To control GPIO49 (RX/TX LED):

```
root@beaglebone:/sys/class/gpio# echo 49 > export
root@beaglebone:/sys/class/gpio# cd gpio49
root@beaglebone:/sys/class/gpio/gpio49# echo "out" > direction
root@beaglebone:/sys/class/gpio/gpio49# echo "1" > value
root@beaglebone:/sys/class/gpio/gpio49# echo 0 > value
root@beaglebone:/sys/class/gpio/gpio49# cd ..
```

To control GPIO60 (RX/TX LED):

```
root@beaglebone:/sys/class/gpio# echo 60 > export
root@beaglebone:/sys/class/gpio# cd gpio60
root@beaglebone:/sys/class/gpio/gpio60# echo "out" > direction
root@beaglebone:/sys/class/gpio/gpio60# echo "1" > value
root@beaglebone:/sys/class/gpio/gpio60# echo 0 > value
root@beaglebone:/sys/class/gpio/gpio60# cd ..
```

3.2.4 Test Results

3.2.4.1 CAN Protocol Exchange

The following figures show the test results for CAN_H and CAN_L signals at different CAN speeds.

For 图 4:

- Full CAN frame
- CAN speed: 125 kHz
- Channel 1: CAN_H
- Channel 2: CAN_L

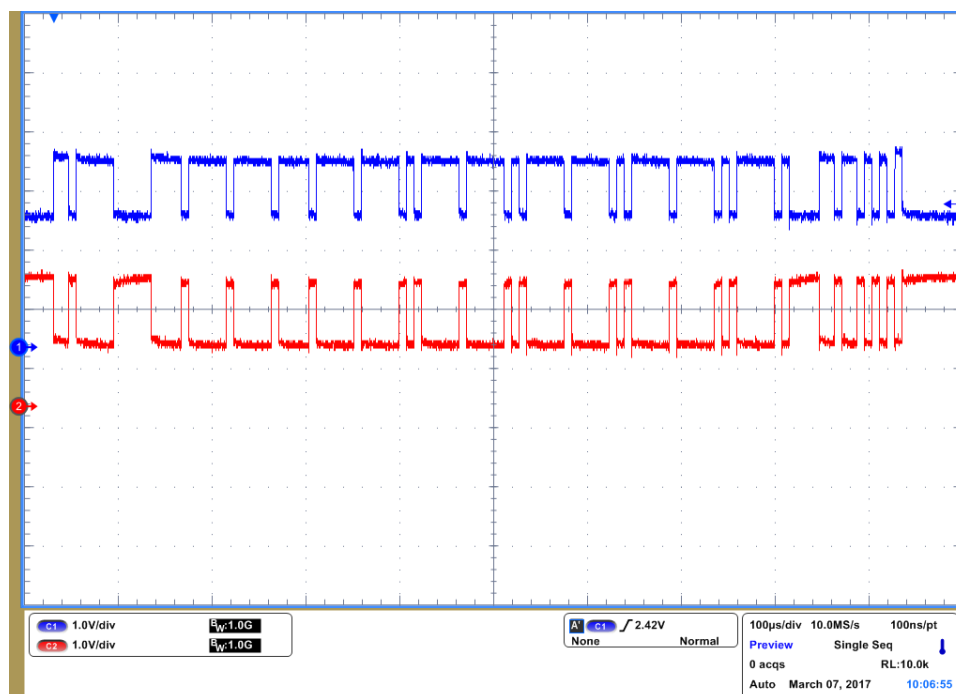


图 4. 125-kHz Frame

For 图 5:

- Zoom in CAN frame
- CAN speed: 125 kHz
- Channel 1: CAN_H
- Channel 2: CAN_L



图 5. 125-kHz Zoom

For 图 6:

- Full CAN frame
- CAN speed: 250 kHz
- Channel 1: CAN_H
- Channel 2: CAN_L

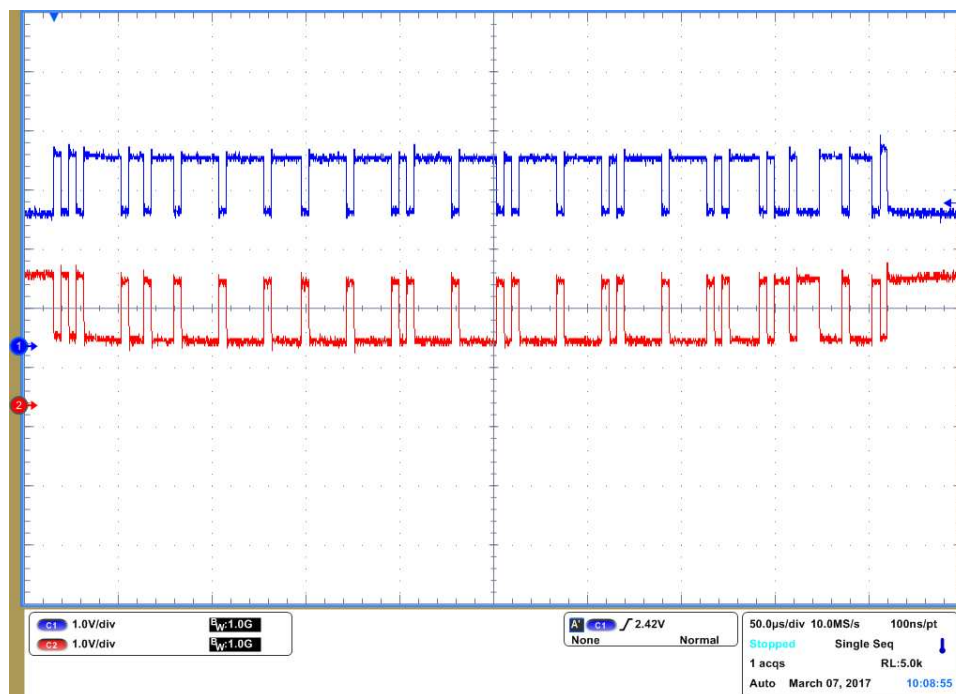


图 6. 250-kHz Frame

For 图 7:

- Zoom in CAN frame
- CAN speed: 250 kHz
- Channel 1: CAN_H
- Channel 2: CAN_L



图 7. 250-kHz Zoom

For 图 8:

- Full CAN frame
- CAN speed: 500 kHz
- Channel 1: CAN_H
- Channel 2: CAN_L

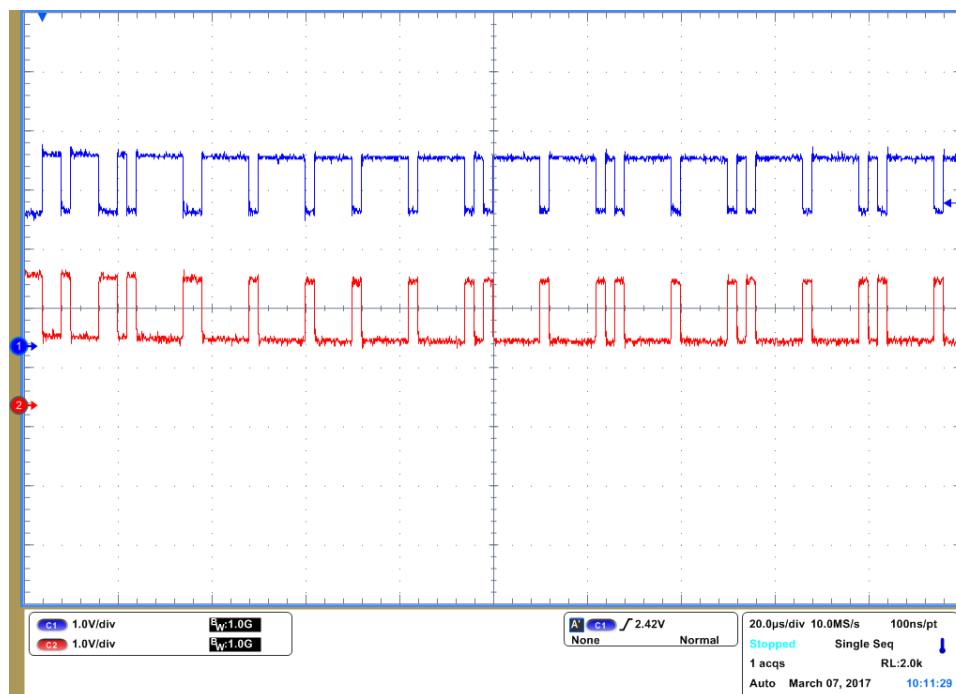


图 8. 500-kHz Frame

For 图 9:

- Zoom in CAN frame
- CAN speed: 500 kHz
- Channel 1: CAN_H
- Channel 2: CAN_L



图 9. 500-kHz Zoom

For 图 10:

- Full CAN frame
- CAN speed: 1 MHz
- Channel 1: CAN_H
- Channel 2: CAN_L

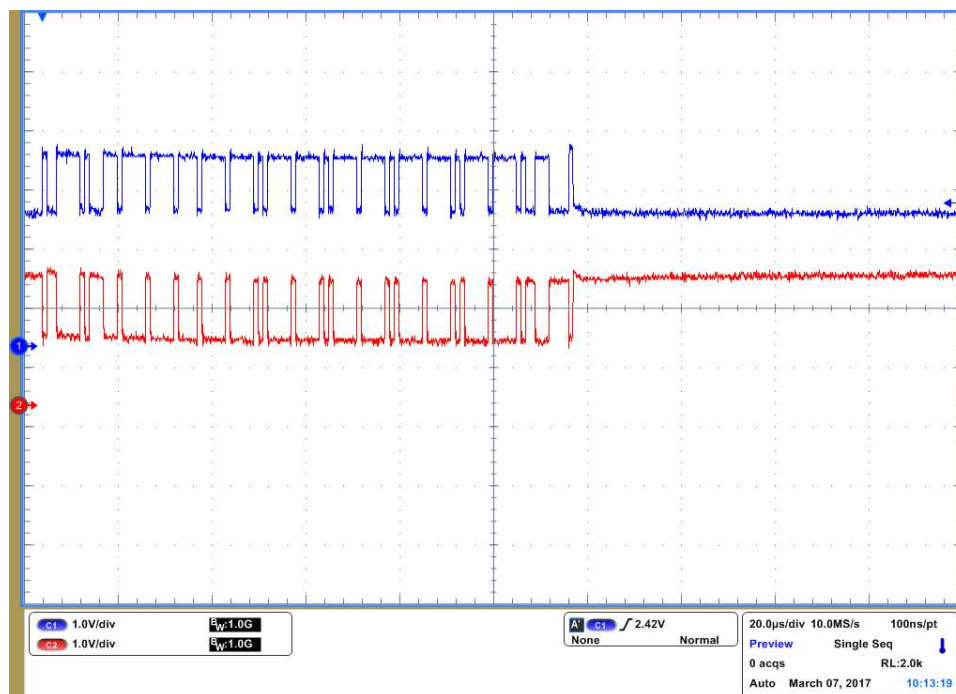


图 10. 1-MHz Frame

For 图 11:

- Zoom in CAN frame
- CAN speed: 1 MHz
- Channel 1: CAN_H
- Channel 2: CAN_L

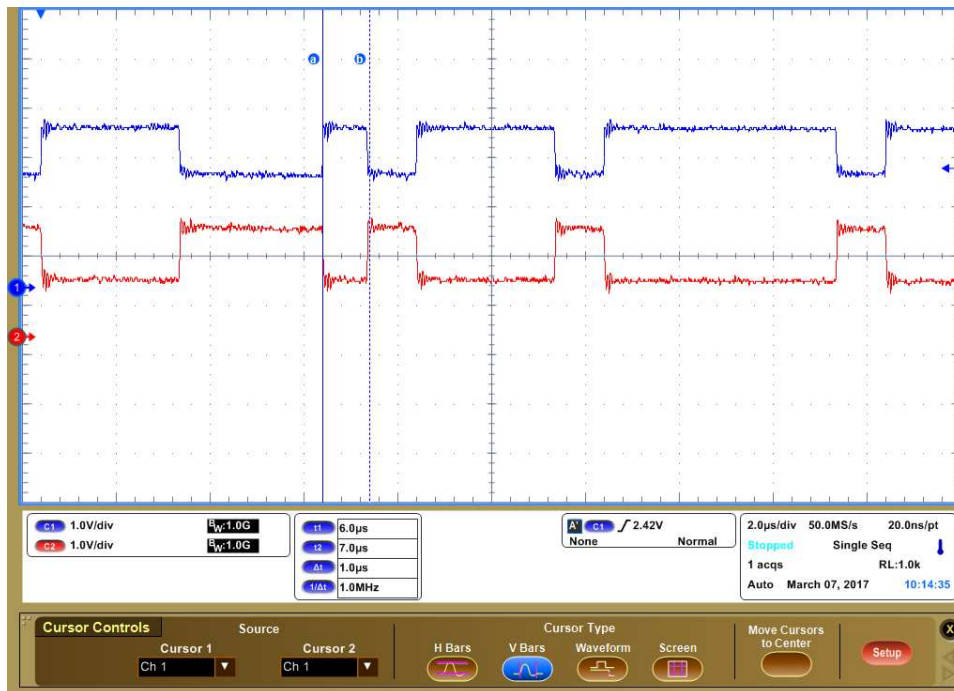


图 11. 1-MHz Zoom

3.2.4.2 Isolated Power

图 12 shows the isolated 5-V voltage supply during frame transmission:

- Channel 1: CAN_H
- Channel 2: CAN_L
- Channel 3: Isolated 5 V

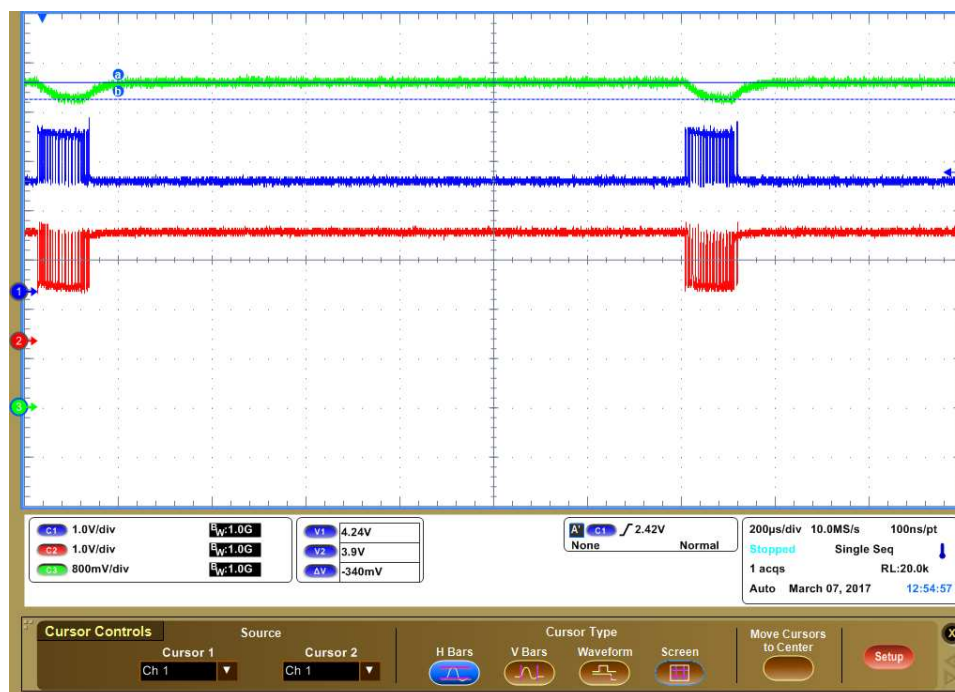


图 12. ISO Supply

3.2.4.3 Position Switch Readout

图 13 shows the test results for I²C interface:

- Channel 1: I2C1 SCL
- Channel 2: I2C1 SDA

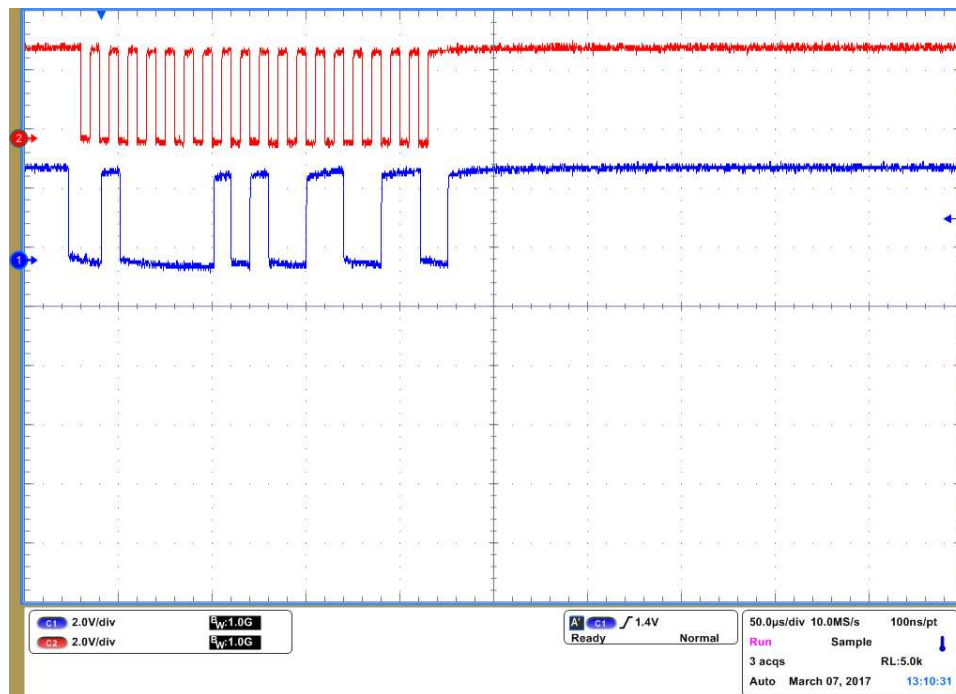


图 13. I²C Communication

4 Design Files

注: Version E2 of the Altium CAD project, Gerber files, and PCB plot have an updated PCB component footprint for the J1 connector (SUB-D9).

4.1 Schematics

To download the schematics, see the design files at [TIDA-01406](#).

4.2 Bill of Materials

To download the bill of materials (BOM), see the design files at [TIDA-01406](#).

4.3 PCB Layout Recommendations

4.3.1 Layout Prints

To download the layer plots, see the design files at [TIDA-01406](#).

4.4 Altium Project

To download the Altium project files, see the design files at [TIDA-01406](#).

4.5 Gerber Files

To download the Gerber files, see the design files at [TIDA-01406](#).

4.6 Assembly Drawings

To download the assembly drawings, see the design files at [TIDA-01406](#).

5 Software Files

To download the software files, see the design files at [TIDA-01406](#).

6 Related Documentation

1. Texas Instruments, [ISO1050 Isolated CAN Transceiver](#), ISO1050 Datasheet (SLLS983)
2. Texas Instruments, [SN6501 Transformer Driver for Isolated Power Supplies](#), SN6501 Datasheet (SLLSEA0)
3. Texas Instruments, [TPD2E007 2-Channel ESD Protection Array for AC-Coupled/Negative-Rail Data Interfaces](#), TPD2E007 Datasheet (SLVS796)

6.1 商标

PicoStar, Sitara are trademarks of Texas Instruments.
ARM, Cortex are registered trademarks of ARM Limited.
Android is a trademark of Google Inc..
All other trademarks are the property of their respective owners.

7 About the Author

THOMAS MAUER is a system engineer in the Factory Automation and Control Team at Texas Instruments Freising. He is responsible for developing reference design solutions for the industrial segment. Thomas brings his extensive experience in industrial communications like Industrial Ethernet and fieldbuses and industrial applications to this role. Thomas earned his degree in electrical engineering (Dipl. Ing. (FH)) at the University of Applied Sciences in Wiesbaden, Germany

修订历史

注：之前版本的页码可能与当前版本有所不同。

Changes from Original (March 2017) to A Revision	Page
• 已添加 note on Version E2 of the Altium CAD project, Gerber files, and PCB plot.....	22

有关 TI 设计信息和资源的重要通知

德州仪器 (TI) 公司提供的技术、应用或其他设计建议、服务或信息，包括但不限于与评估模块有关的参考设计和材料（总称“TI 资源”），旨在帮助设计人员开发整合了 TI 产品的应用；如果您（个人，或如果是代表贵公司，则为贵公司）以任何方式下载、访问或使用了任何特定的 TI 资源，即表示贵方同意仅为该等目标，按照本通知的条款进行使用。

TI 所提供的 TI 资源，并未扩大或以其他方式修改 TI 对 TI 产品的公开适用的质保及质保免责声明；也未导致 TI 承担任何额外的义务或责任。TI 有权对其 TI 资源进行纠正、增强、改进和其他修改。

您理解并同意，在设计应用时应自行实施独立的分析、评价和判断，且应全权负责并确保应用的安全性，以及您的应用（包括应用中使用的 TI 产品）应符合所有适用的法律法规及其他相关要求。您就您的应用声明，您具备制订和实施下列保障措施所需的一切必要专业知识，能够 (1) 预见故障的危险后果，(2) 监视故障及其后果，以及 (3) 降低可能导致危险的故障几率并采取适当措施。您同意，在使用或分发包含 TI 产品的任何应用前，您将彻底测试该等应用和该等应用所用 TI 产品的功能。除特定 TI 资源的公开文档中明确列出的测试外，TI 未进行任何其他测试。

您只有在为开发包含该等 TI 资源所列 TI 产品的应用时，才被授权使用、复制和修改任何相关单项 TI 资源。但并未依据禁止反言原则或其他法律授予您任何 TI 知识产权的任何其他明示或默示的许可，也未授予您 TI 或第三方的任何技术或知识产权的许可，该等产权包括但不限于任何专利权、版权、屏蔽作品权或与使用 TI 产品或服务的任何整合、机器制作、流程相关的其他知识产权。涉及或参考了第三方产品或服务的信息不构成使用此类产品或服务的许可或与其相关的保证或认可。使用 TI 资源可能需要您向第三方获得对该等第三方专利或其他知识产权的许可。

TI 资源系“按原样”提供。TI 兹免除对 TI 资源及其使用作出所有其他明确或默示的保证或陈述，包括但不限于对准确性或完整性、产权保证、无屡发故障保证，以及适销性、适合特定用途和不侵犯任何第三方知识产权的任何默认保证。

TI 不负责任何申索，包括但不限于因组合产品所致或与之有关的申索，也不为您辩护或赔偿，即使该等产品组合已列于 TI 资源或其他地方。对因 TI 资源或其使用引起或与之有关的任何实际的、直接的、特殊的、附带的、间接的、惩罚性的、偶发的、从属或惩戒性损害赔偿，不管 TI 是否获悉可能会产生上述损害赔偿，TI 概不负责。

您同意向 TI 及其代表全额赔偿因您不遵守本通知条款和条件而引起的任何损害、费用、损失和/或责任。

本通知适用于 TI 资源。另有其他条款适用于某些类型的材料、TI 产品和服务的使用和采购。这些条款包括但不限于适用于 TI 的半导体产品 (<http://www.ti.com/sc/docs/stdterms.htm>)、[评估模块](#)和样品 (<http://www.ti.com/sc/docs/sampters.htm>) 的标准条款。

邮寄地址：上海市浦东新区世纪大道 1568 号中建大厦 32 楼，邮政编码：200122
Copyright © 2017 德州仪器半导体技术（上海）有限公司