

TAS2555EVM

User's Guide



Literature Number: SLOU411
August 2015

1	Description	5
2	Specifications	5
3	Software	5
4	Mono Setup	6
5	Digital Audio Interfaces	7
	5.1 Digital Audio Interface Selection	8
6	PurePath Console 3 Software	9
7	Stereo	10
8	Schematics, PCB Layout, and Bill of Materials	12
	8.1 TAS2555EVM Schematics	12
	8.2 TAS2555EVM Printed-Circuit Board (PCB) Layouts	16
	8.3 TAS2555EVM Bill of Materials	20

List of Figures

1	TAS2555EVM	6
2	Setting Default Playback Device	7
3	USB Audio Selection	8
4	Direct (AP/PSIA) Audio Selection.....	9
5	Stereo Mode Using Two TAS2555EVMS	10
6	Stereo Adapter Board Setup.....	11
7	TAS2555EVM USB Block	12
8	TAS2555EVM Muxes and Translators	13
9	TAS2555EVM Schematic	14
10	TAS2555EVM Power Supply	15
11	Top Overlay	16
12	Top Solder Paste	16
13	Top Solder Mask	16
14	Top Layer	17
15	Copper Layer 2	17
16	Copper Layer 3	17
17	Copper Layer 4	18
18	Copper Layer 5	18
19	Bottom Layer.....	18
20	Bottom Solder Mask	19
21	Drill Drawing	19
22	Board Dimensions	19

List of Tables

1	Default Jumper Settings	6
2	TAS2555EVM Bill of Materials	20

TAS2555 Evaluation Module

This user's guide describes the characteristics, operation, and use of the TAS2555 Evaluation Module (EVM). A complete schematic diagram, printed-circuit board layouts, and bill of materials are included in this document.

1 Description

The TAS2555 device is an amplifier with integrated boost converter and programmable digital signal processor. It can operate in various modes supporting Class-D, Class-G, and Class-H. The on-chip voltage and current sense, together with TI's SmartAmp® algorithm, protect the speaker against overheating and excessive excursion.

The TAS2555EVM supports evaluation and development with the TAS2555 device through the following interfaces:

- USB interface
 - TAS2555 control through Purepath™ Console 3 (PPC3) GUI, USB-HID
 - USB-class audio device, compatible with Microsoft® Windows® 7+
- Digital audio AP and PSIA interface through 100-mil headers
- TI Learning Board 2 for speaker characterization
- SPI interface for TAS2555 control
- I²C interface for TAS2555 control

2 Specifications

Amplifier power supply (VBAT)	2.7 to 5.5 V
EVM power supply	5 V
IO power supply (IOVDD)	1.62 to 3.6 V
Output power	4 W
USB, USB class-audio	Micro-USB B

3 Software

The EVM requires Purepath Console 3 with the TAS2555EVM plug-in.

Purepath is a trademark of Texas Instruments.
SmartAmp is a registered trademark of Texas Instruments.
Microsoft, Windows are registered trademarks of Microsoft Corporation.

4 Mono Setup

1. Install Purepath Console 3 with the TAS2555EVM plug-in.
2. Connect a speaker to J8 on the EVM.
3. Attach a 5-V, 2-A power supply to connector J29 (inner = 5 V, outer = GND).
4. Connect the EVM to a Windows 7+ PC with a micro-USB cable (J23). It will enumerate as a USB class-audio device (sound card).

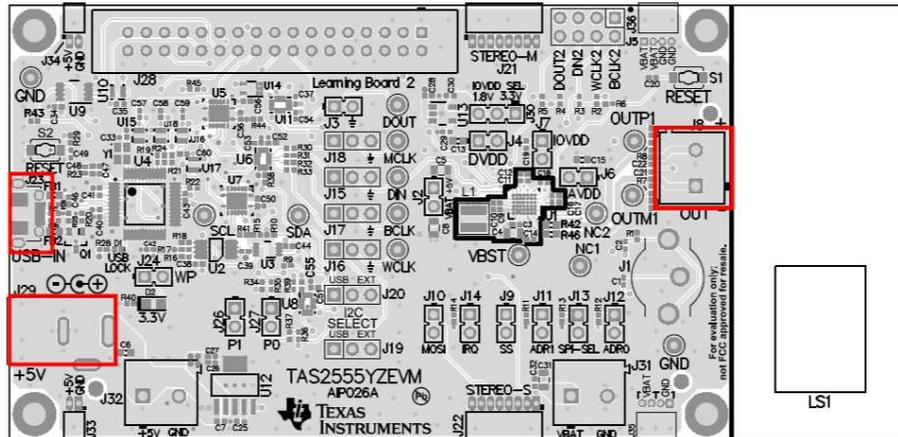


Figure 1. TAS2555EVM

Table 1. Default Jumper Settings

Jumper	Setting	Description
J3	removed	
J18	1-2	MCLK = on-board
J15	1-2	DIN = on-board
J17	1-2	BCLK = on-board
J16	1-2	WCLK = on-board
J20	1-2	SDA = USB
J19	1-2	SCL = USB
J27	inserted	P0 = 0, select USB for on-board digital audio
J26	inserted	P1 = 0, select USB for on-board digital audio
J25	removed	Enable on-board digital audio
J30	inserted	IOVDD = on-board 1.8 V
J4	inserted	DVDD current measurement header
J7	inserted	IOVDD current measurement header
J6	inserted	AVDD current measurement header
J10	removed	MOSI not used
J14	removed	IRQ not used
J9	removed	SS not used
J11	inserted	ADR1 = 0, select 0x98 for the TAS2555 I ² C address
J12	inserted	ADR0 = 0, select 0x98 for the TAS2555 I ² C address
J13	inserted	SPI-SEL = 0, select I ² C as the control interface
J24	inserted	WP = 1, write protect the EEPROM

5. Verify that the EVM is the default playback device by opening the sound dialog from the Windows Control Panel as shown in [Figure 2](#).

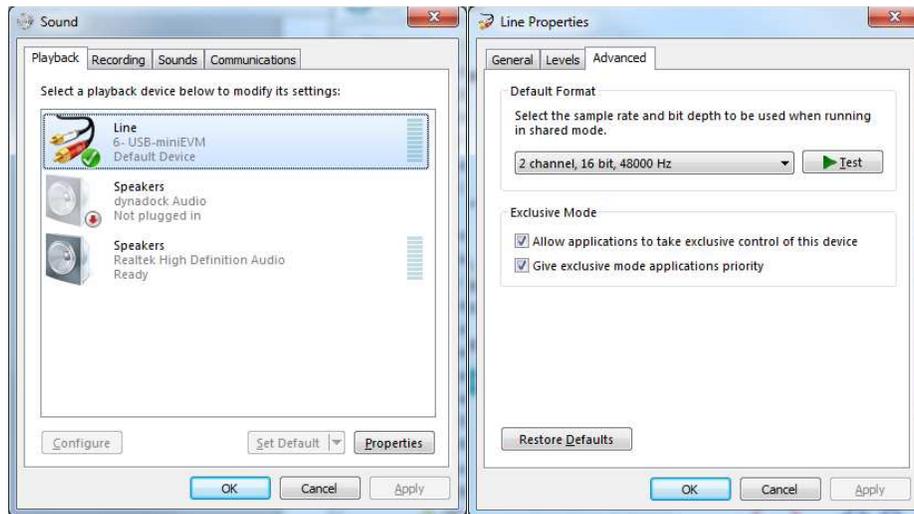


Figure 2. Setting Default Playback Device

6. Check if the sampling rate matches the Windows setting by opening Properties > Advanced. The EVM firmware enumerates as a USB-miniEVM that supports 48-kHz sampling rate by default. This setting must match the EVM at 2 channel, 16 bit, 48000 Hz (CD Quality).

5 Digital Audio Interfaces

The various digital audio interfaces on the TAS2555EVM can be selected through hardware settings and software settings. Several headers close to the TAS2555 device allow access to the following digital audio signals:

- J3: Data out (DOUT) from the TAS2555 (for example, current and voltage sense data)
- J15: Data in (DIN) to the TAS2555
- J16: Word clock or frame sync (WCLK)
- J17: Bit clock (BCLK)
- J18: Master clock (MCLK) — optional if TAS2555 PLL is not used

J3 has two pins:

- Digital data (for example, I and V sense data) from the TAS2555 device
- Ground

J15, J16, J17, and J18 have three pins:

- Digital audio signals from the EVM
- Digital audio signals to the TAS2555
- Ground

A jumper inserted in position 1-2 connects the TAS2555 to the digital audio signals from the board (for example, USB or Learning Board 2).

Replacing the jumper with a connector from an external source connects the TAS2555 to the external source (for example, AP or PSIA).

The selection between the two on-board digital audio sources (USB or Learning Board 2) is controlled by:

(a) Hardware: J26, J27

- J26 = inserted, J27 = inserted; selects USB
- J26 = inserted, J27 = removed; selects Learning Board 2

(b) Software: The PPC3 GUI controls the digital audio routing during speaker characterization. This has priority over the hardware settings from point a.

The secondary digital audio interface from the TAS2555 device is directly available through J5.

5.1 Digital Audio Interface Selection

5.1.1 USB

The TAS2555EVM contains a microcontroller (TAS1020B) that acts as a USB HID and USB-class audio interface. To select USB, insert both J26 and J27 and insert J15, J16, J17, and J18 in the 1-2 position. This is shown in [Figure 3](#).

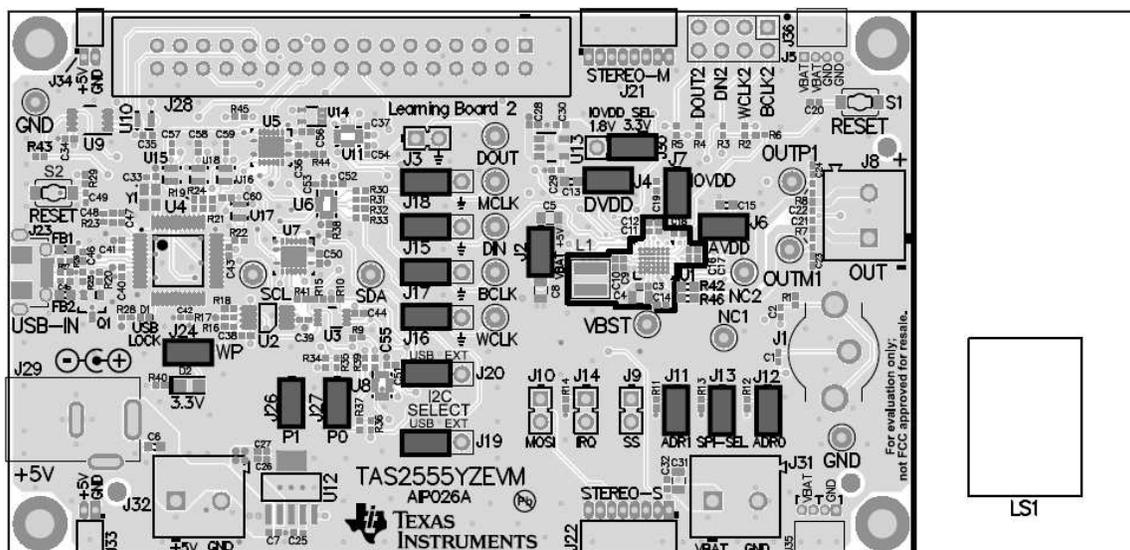


Figure 3. USB Audio Selection

5.1.2 Direct (AP/PSIA)

Remove the jumpers from J15, J16, J17, and J18 and connect the external digital audio source (for example, AP or PSIA) to pin 2 of each header. Pin 3 provides a convenient ground connection. This is shown in Figure 4.

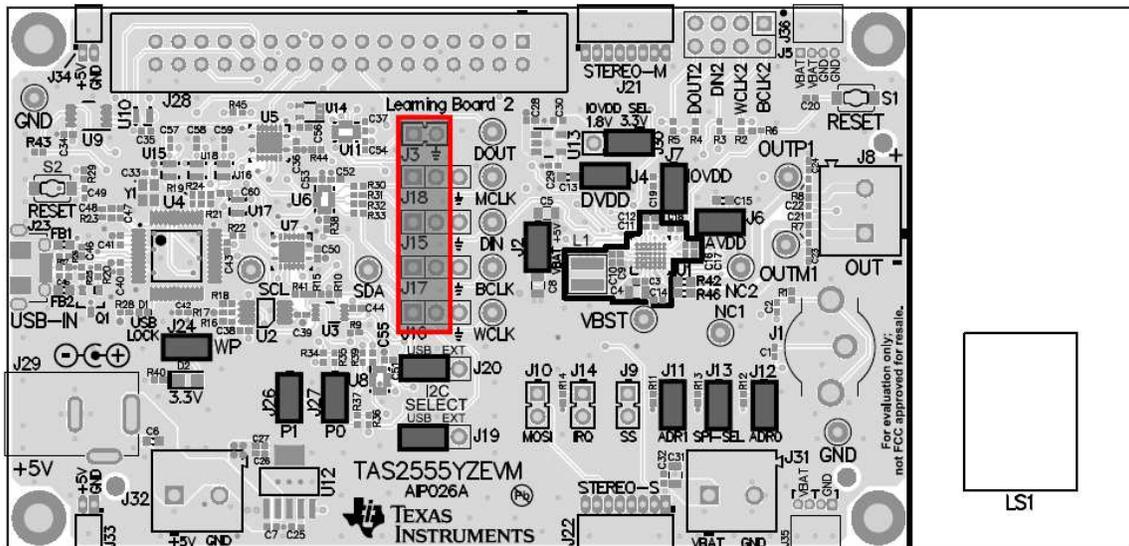


Figure 4. Direct (AP/PSIA) Audio Selection

6 PurePath Console 3 Software

The graphical user interface software, PurePath Console 3, controls the TAS2555EVM.

NOTE: The TAS2555 device needs to be configured using this software. It will not function without configuration.

Please refer to the TAS2555 SmartAmp Tuning Guide ([SLOU423](#)) for detailed information about this software and how to configure the TAS2555 device for SmartAmp Speaker Protection.

7 Stereo

The TAS2555EVM supports stereo mode (dual mono mode) through J21 and J22 and an optional stereo adapter board or stereo ribbon cable.

Connect two TAS2555EVMs together side by side as shown in [Figure 5](#).

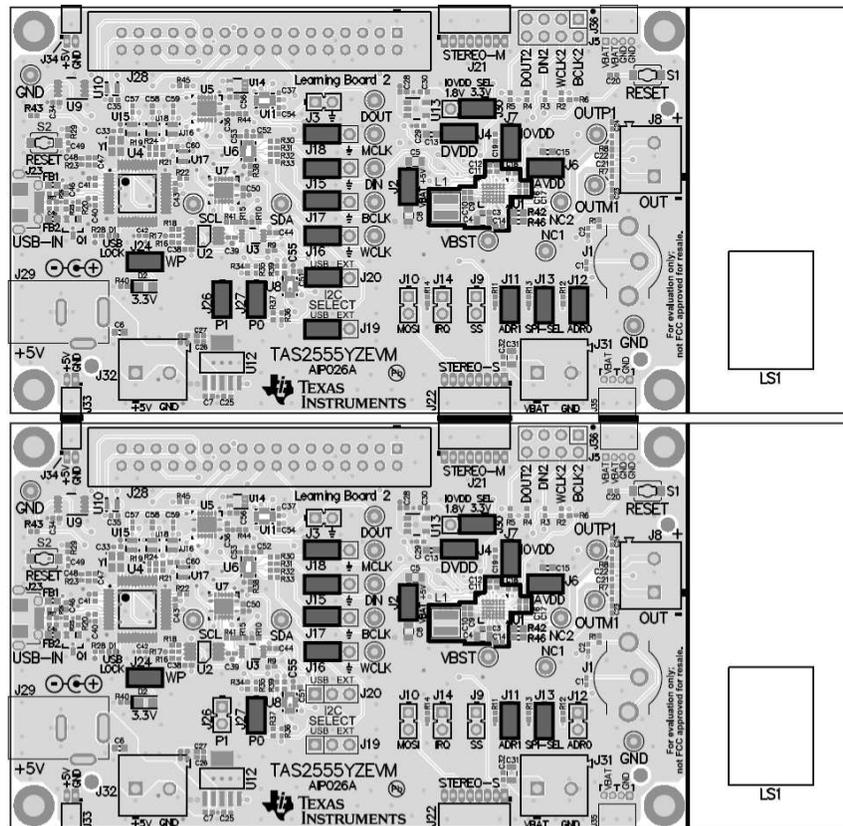


Figure 5. Stereo Mode Using Two TAS2555EVMs

The top board is the left channel board. The other board is the right channel board and must be configured to use the control interface from the left channel board. The TAS2555 on the left channel board uses device address 0x98 and the TAS2555 on the right channel board uses device address 0x9A. Remove the jumpers from J12 (ADR0), J19 (SCL), and J20 (SDA) on the right channel board.

For compatibility with PPC3, attach the stereo adapter board to both TAS2555EVMs and connect J23 from the top TAS2555 board to a PC running PPC3 with the TAS2555 plug-in.

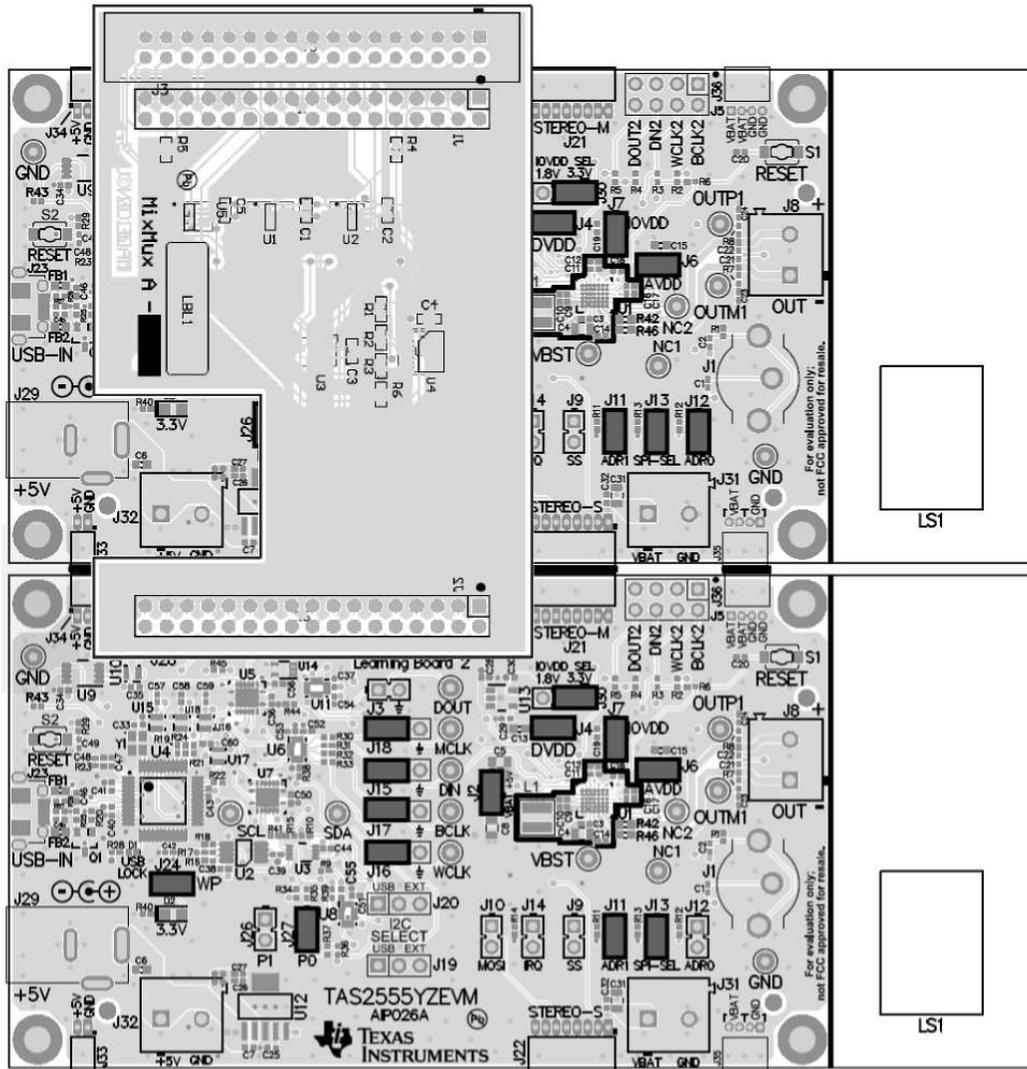


Figure 6. Stereo Adapter Board Setup

8 Schematics, PCB Layout, and Bill of Materials

8.1 TAS2555EVM Schematics

Figure 7 through Figure 10 show the schematics for the TAS2555EVM.

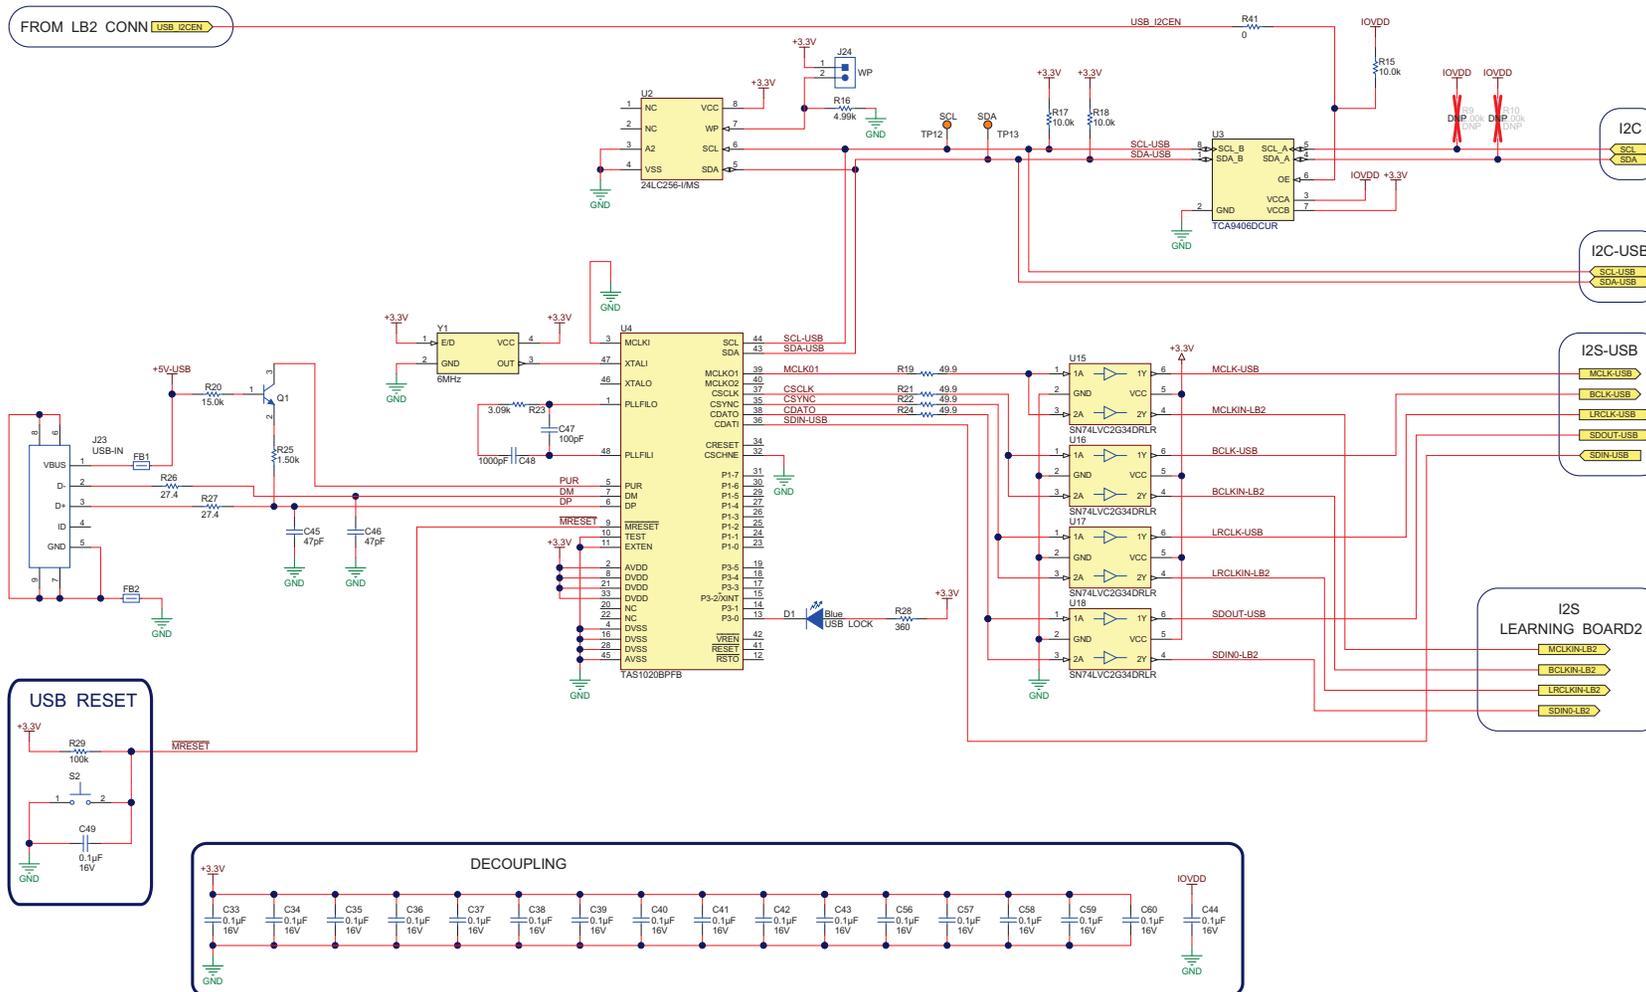


Figure 7. TAS2555EVM USB Block

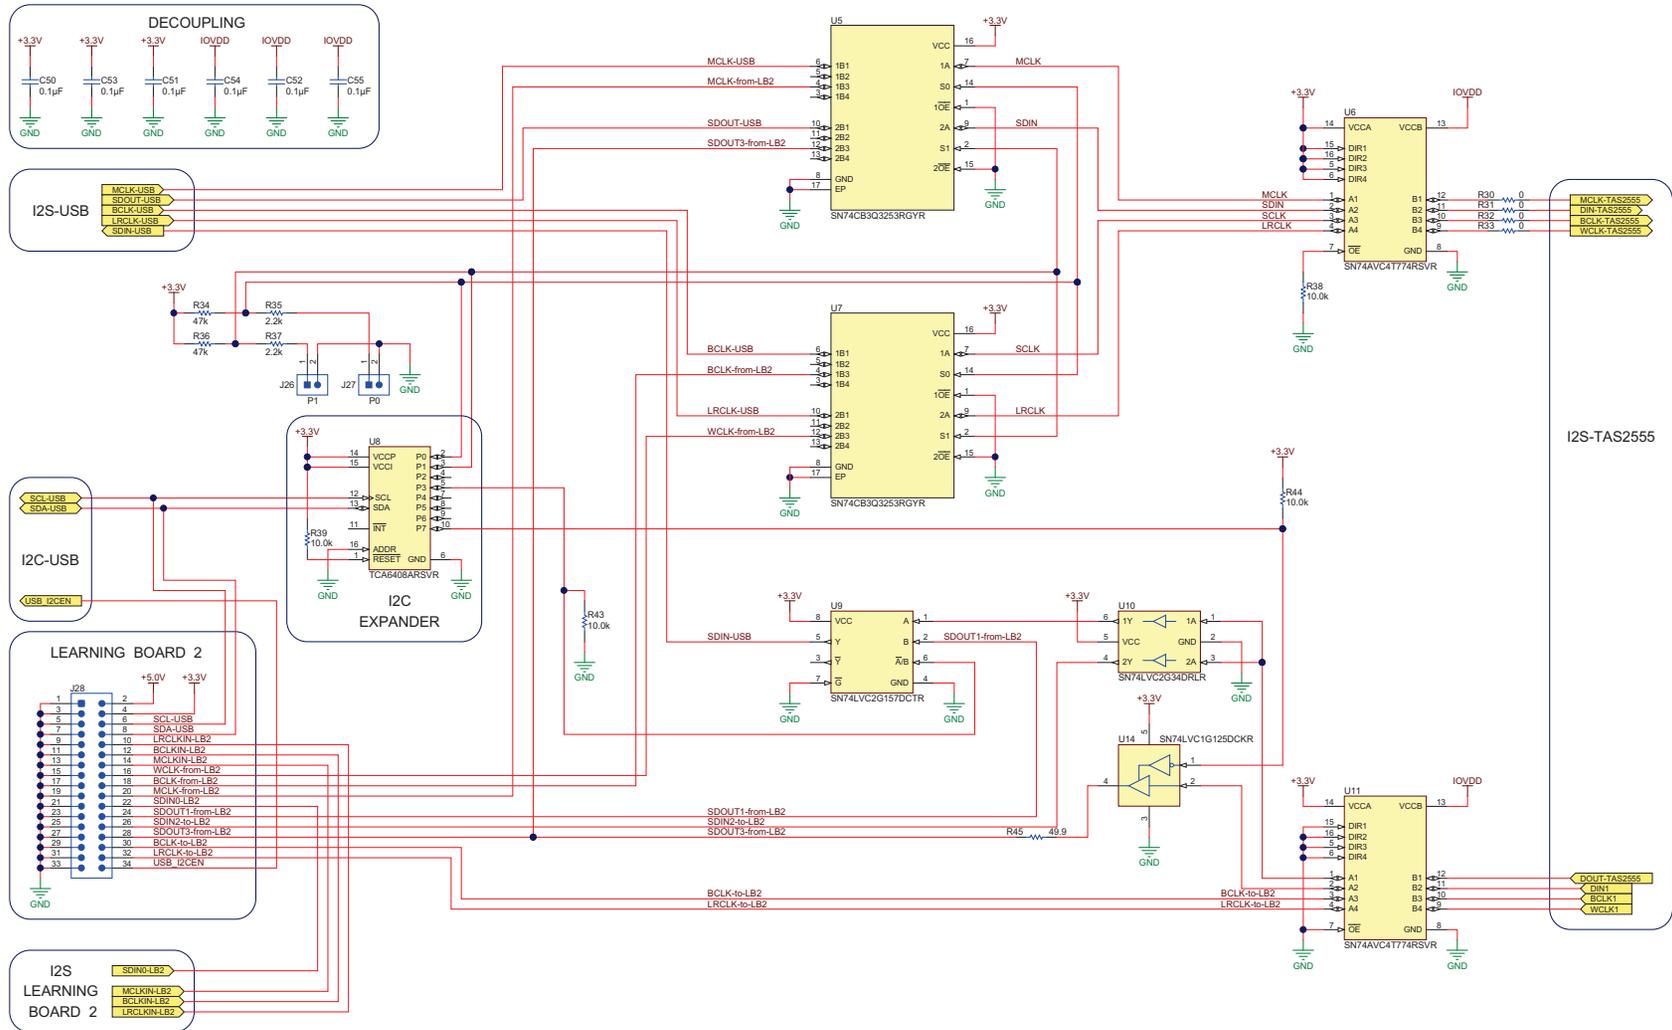


Figure 8. TAS2555EV Muxes and Translators

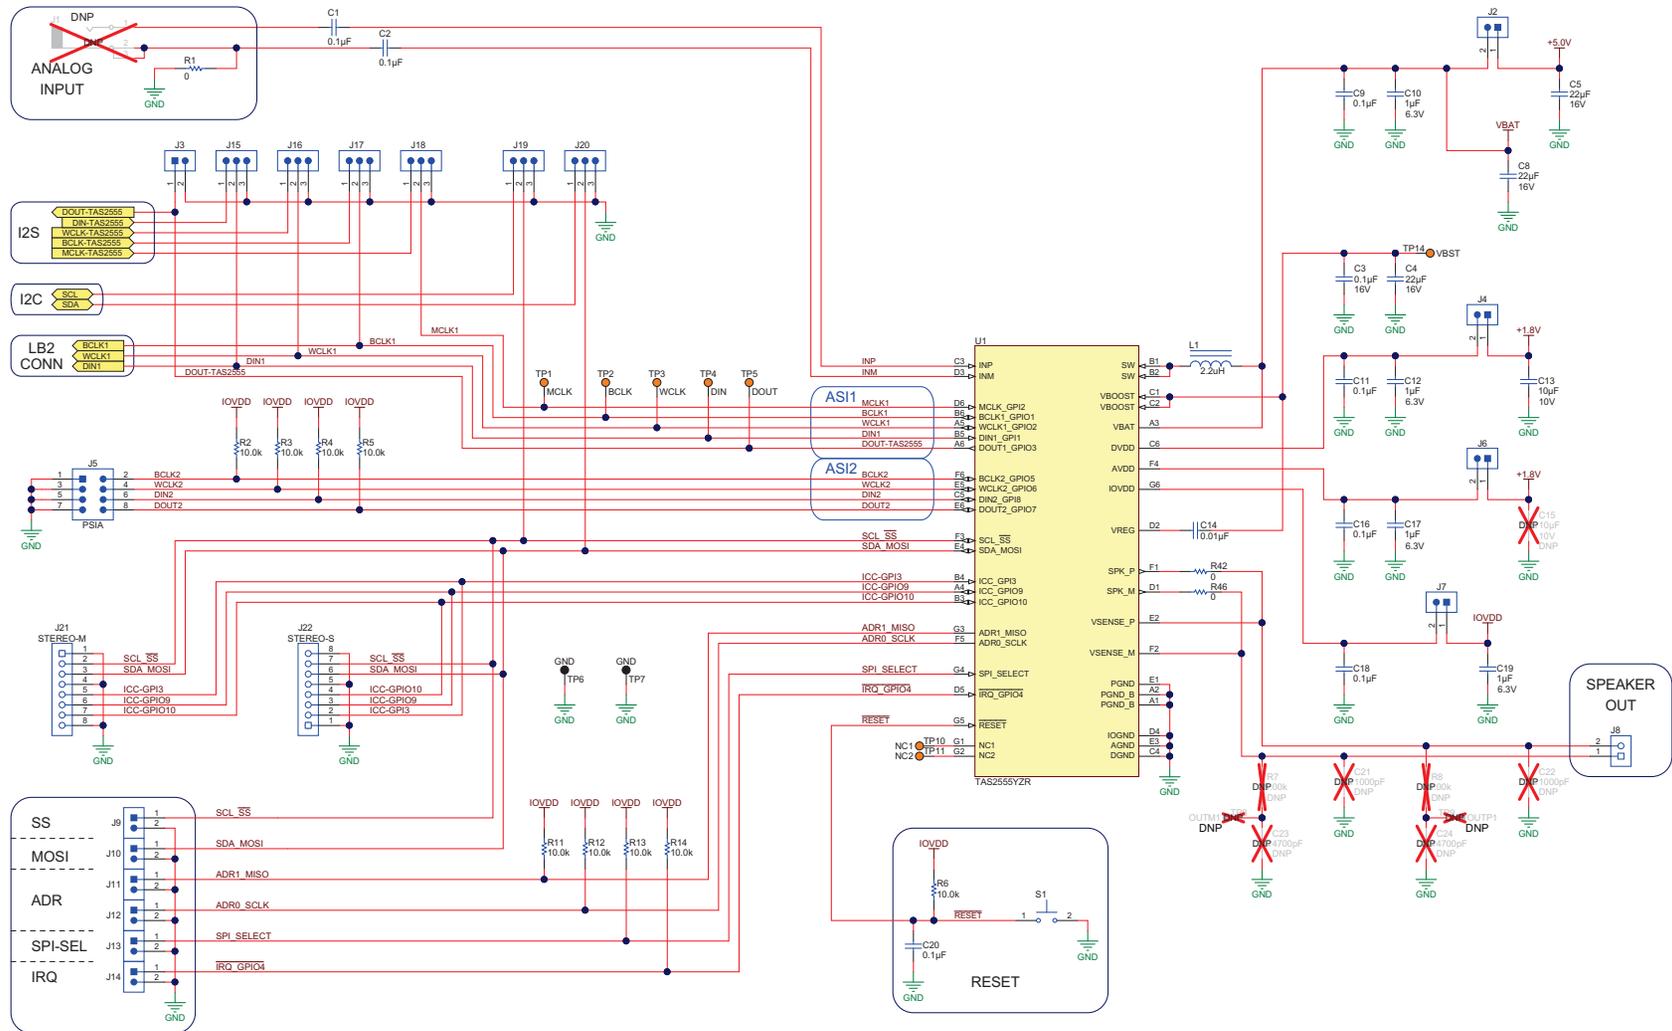


Figure 9. TAS2555EVM Schematic

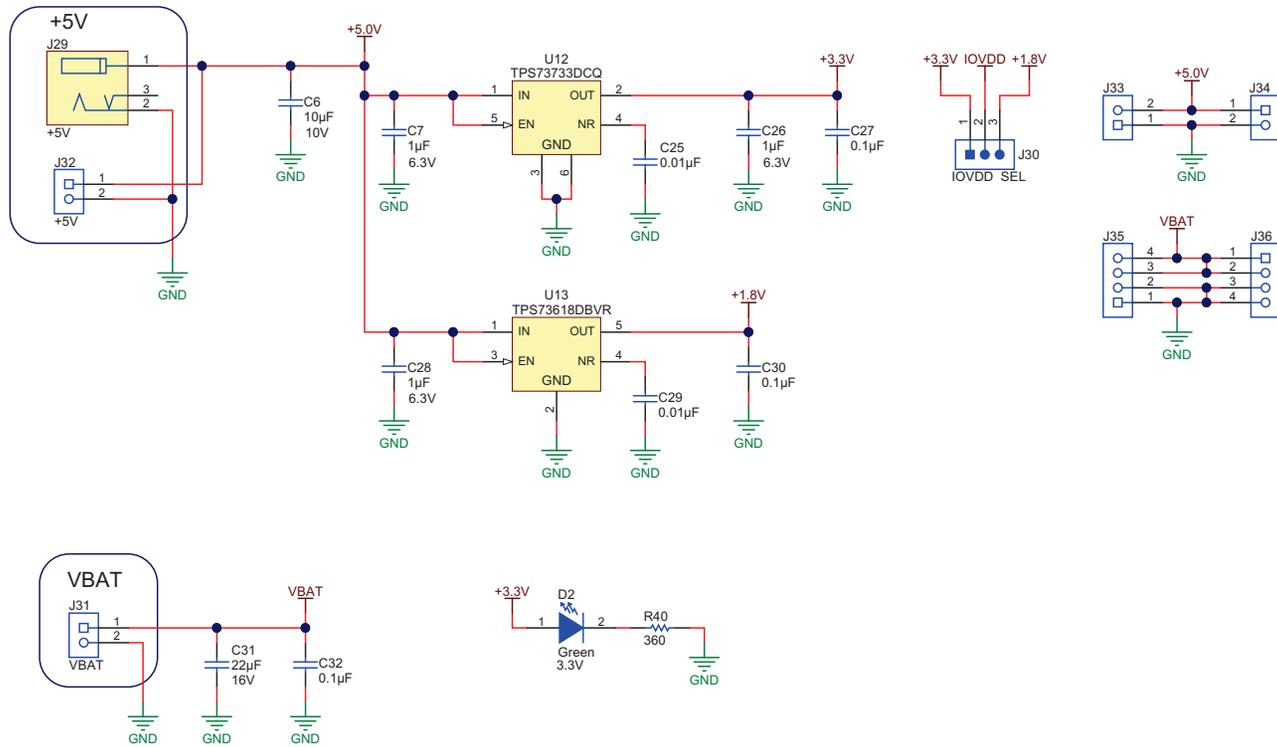


Figure 10. TAS2555EVM Power Supply

8.2 TAS2555EVM Printed-Circuit Board (PCB) Layouts

Figure 11 through Figure 22 illustrate the TAS2555EVM PCB layouts.

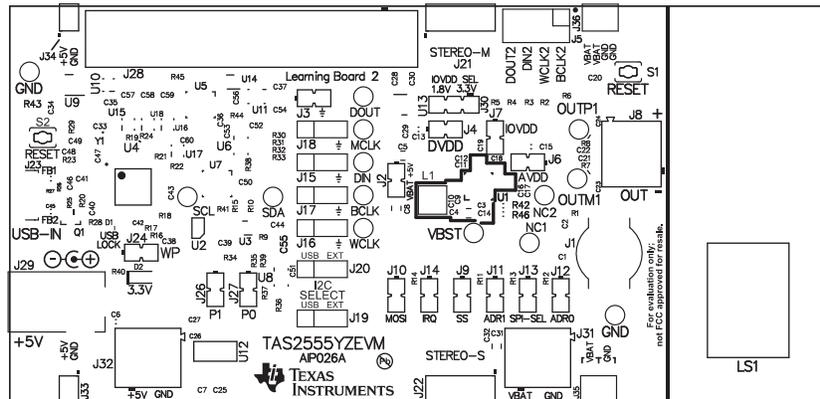


Figure 11. Top Overlay

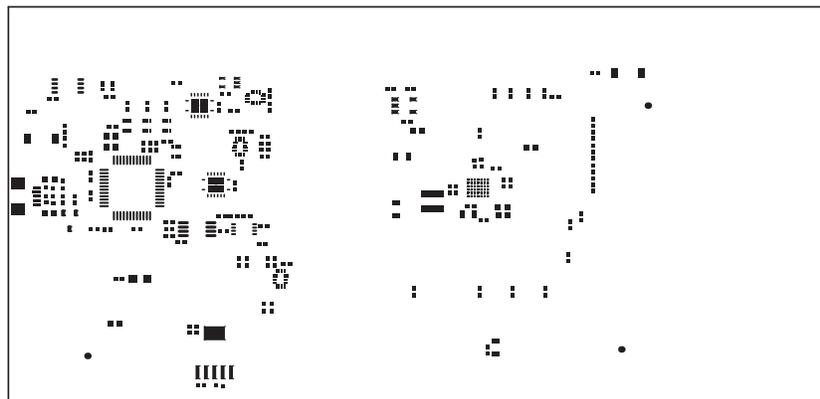


Figure 12. Top Solder Paste

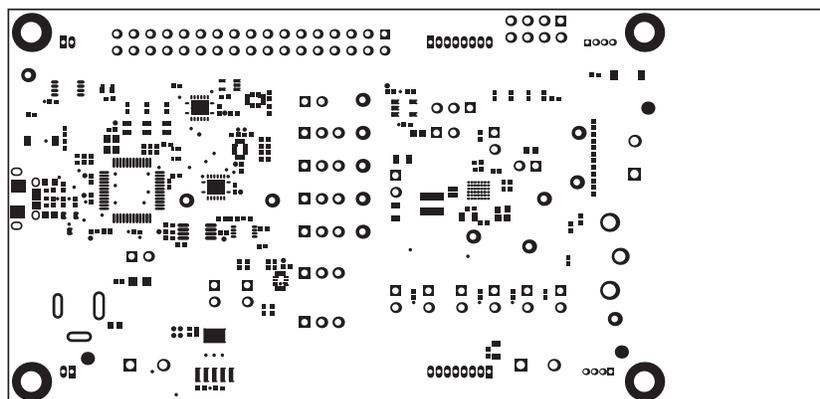


Figure 13. Top Solder Mask

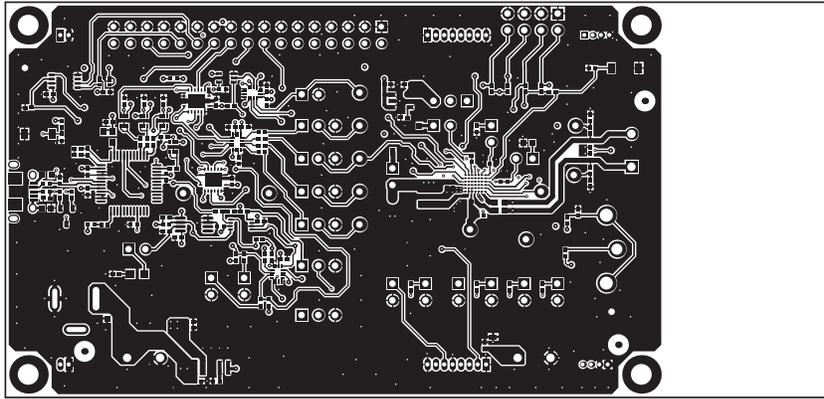


Figure 14. Top Layer

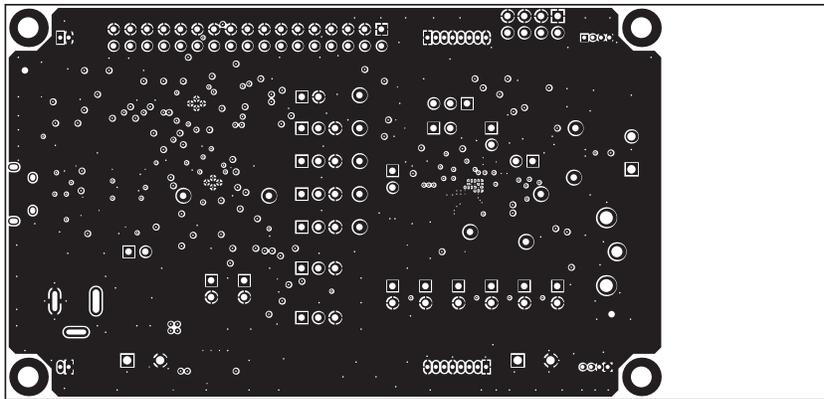


Figure 15. Copper Layer 2

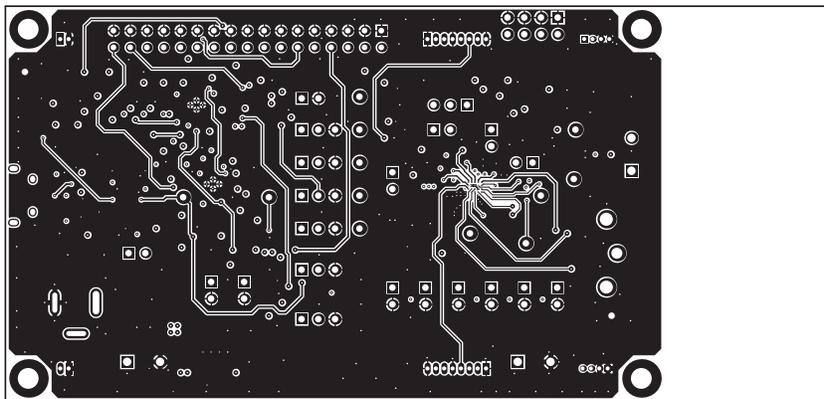


Figure 16. Copper Layer 3

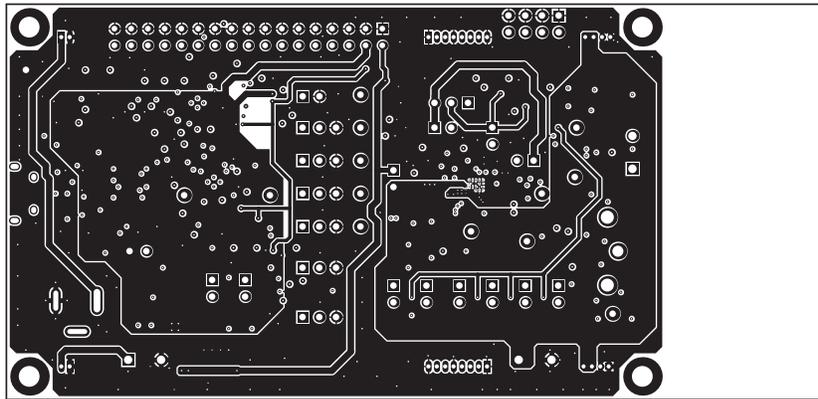


Figure 17. Copper Layer 4

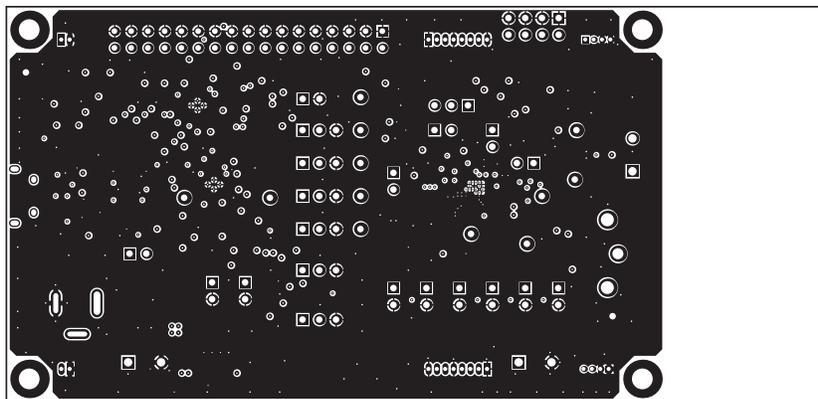


Figure 18. Copper Layer 5

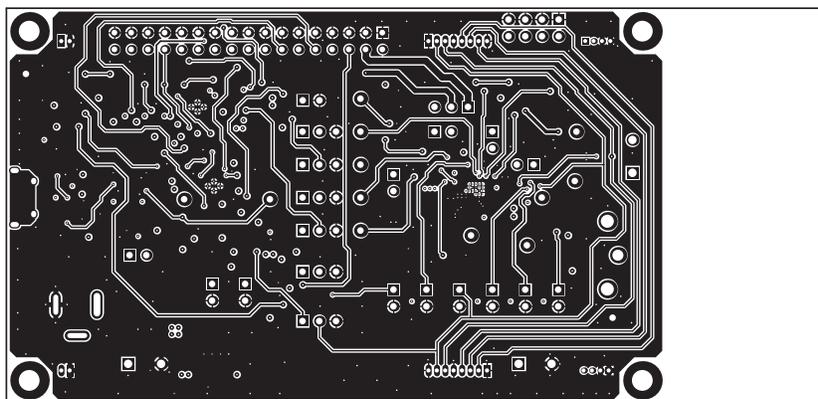


Figure 19. Bottom Layer

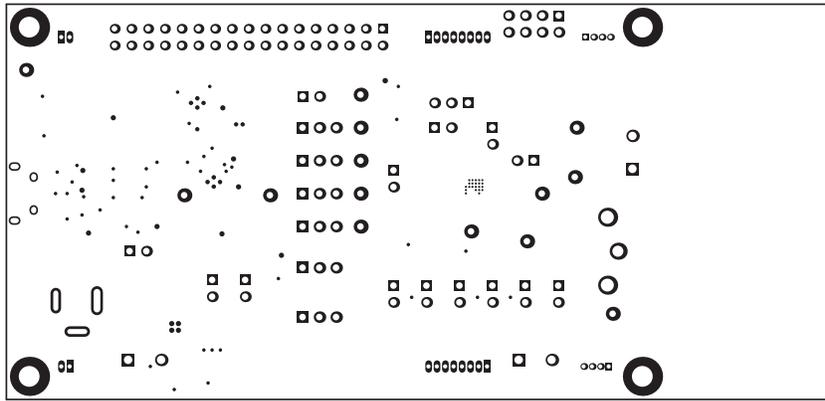


Figure 20. Bottom Solder Mask

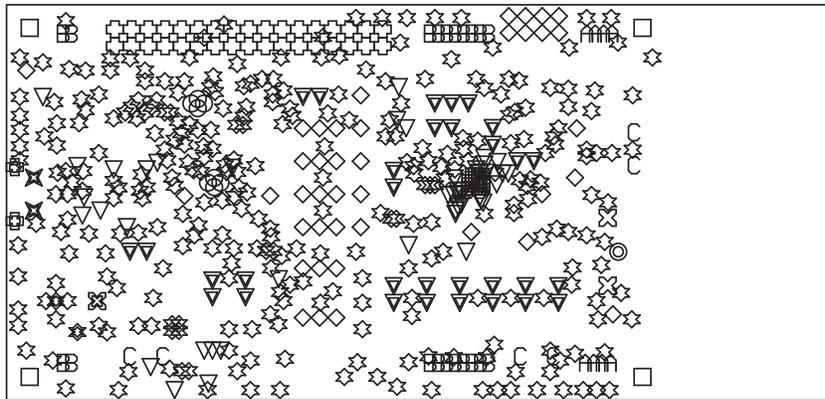


Figure 21. Drill Drawing



Figure 22. Board Dimensions

8.3 TAS2555EVM Bill of Materials

Table 2 lists the TAS2555EVM BOM.

Table 2. TAS2555EVM Bill of Materials⁽¹⁾

Designator	Qty	Value	Description	Package Reference	Part Number	Manufacturer	Alternate Part Number	Alternate Manufacturer
IPCB	1		Printed Circuit Board		AIP026	Any	-	-
C1, C2, C9, C11, C16, C18, C20, C27, C30, C32, C50, C51, C52, C53, C54, C55	16	0.1uF	CAP, CERM, 0.1uF, 10V, +/-10%, X7R, 0402	0402	GRM155R71A104KA01D	Murata		
C3	1	0.1uF	CAP, CERM, 0.1 uF, 16 V, +/- 10%, X7R, 0402	0402	GRM155R71C104KA88D	Murata		
C4, C5, C8, C31	4	22uF	CAP, CERM, 22 uF, 16 V, +/- 10%, X5R, 0805	0805	C2012X5R1C226K125AC	TDK		
C6, C13	2	10uF	CAP, CERM, 10uF, 10V, +/-20%, X5R, 0603	0603	C1608X5R1A106M	TDK		
C7, C10, C12, C17, C19, C26, C28	7	1uF	CAP, CERM, 1uF, 6.3V, +/-20%, X5R, 0402	0402	C1005X5R0J105M	TDK		
C14, C25, C29	3	0.01uF	CAP, CERM, 0.01uF, 6.3V, +/-10%, X7R, 0402	0402	GRM155R70J103KA01D	Murata		
C33, C34, C35, C36, C37, C38, C39, C40, C41, C42, C43, C44, C49, C56, C57, C58, C59, C60	18	0.1uF	CAP, CERM, 0.1uF, 16V, +/-10%, X7R, 0402	0402	GRM155R71C104KA88D	Murata		
C45, C46	2	47pF	CAP, CERM, 47pF, 25V, +/-5%, C0G/NP0, 0402	0402	GRM1555C1E470JA01D	Murata		
C47	1	100pF	CAP, CERM, 100pF, 50V, +/-5%, C0G/NP0, 0402	0402	GRM1555C1H101JA01D	Murata		
C48	1	1000pF	CAP, CERM, 1000pF, 50V, +/-5%, C0G/NP0, 0402	0402	GRM1555C1H102JA01D	Murata		
D1	1	Blue	LED, Blue, SMD	Blue LED	SMLP12BC7TT86	Rohm		
D2	1	Green	LED, Green, SMD	LED_0805	LTST-C171GKT	Lite-On		
FB1, FB2	2	220 ohm	2.2A Ferrite Bead, 220 ohm @ 100MHz, SMD	0603	MPZ1608S221A	TDK		
H1, H2, H3, H4	4		MACHINE SCREW PAN PHILLIPS 4-40	Machine Screw, 4-40, 1/4"	PMSSS 440 0025 PH	B&F Fastener Supply		
H5, H6, H7, H8	4		ROUND STANDOFF 4-40 ALUM 1/2"	ROUND STANDOFF 4-40 ALUM 1/2"	2027	Keystone		
J2, J3, J4, J6, J7, J9, J10, J11, J12, J13, J14, J24, J26, J27	14		Header, 2.54 mm, 2x1, Tin, TH	Header, 2.54 mm, 2x1, TH	TSW-102-07-T-S	Samtec		
J5	1		Header, 100mil, 4x2, Tin, TH	Header, 4x2, 100mil, Tin	PEC04DAAN	Sullins Connector Solutions		
J8, J31, J32	3		Terminal Block, 5 mm, 2x1, Tin, TH	Terminal Block, 5 mm, 2x1, TH	691 101 710 002	Würth Elektronik eiSos		
J15, J16, J17, J18, J19, J20	6	1x3	Header, 100mil, 3x1, Gold, TH	PBC03SAAN	PBC03SAAN	Sullins Connector Solutions		
J21, J22	2		Receptacle, 50 mil, 8x1, Gold, R/A, TH	Receptacle, 8x1, 50mil, R/A	851-43-008-20-001000	Mill-Max		
J23	1		Connector, Receptacle, Micro-USB Type AB, R/A, Bottom Mount SMT	Connector, USB Micro AB	DX4R205JJAR1800	JAE Electronics		
J28	1		Header (shrouded), 2.54 mm, 17x2, Gold, TH	Header (shrouded), 2.54 mm, 17x2, TH	N2534-6002-RB	3M		
J29	1		Power Jack, mini, 2.5mm OD, R/A, TH	Jack, 14.5x11x9mm	RAPC712X	Switchcraft		
J30	1		Header, 2.54 mm, 3x1, Tin, TH	Header, 2.54 mm, 3x1, TH	TSW-103-07-T-S	Samtec		

⁽¹⁾ Unless otherwise noted in the Alternate PartNumber and/or Alternate Manufacturer columns, all parts may be substituted with equivalents.

Table 2. TAS2555EVM Bill of Materials⁽¹⁾ (continued)

Designator	Qty	Value	Description	Package Reference	Part Number	Manufacturer	Alternate Part Number	Alternate Manufacturer
J33, J34	2		Receptacle, 50 mil, 2x1, Gold, R/A, TH	Receptacle, 2x1, 50mil, R/A	851-43-002-20-001000	Mill-Max		
J35, J36	2		SOCKET .050" GRID SIP 4 POS R/A, TH	R/A 4x1 receptacle	851-43-004-20-001000	Mill-Max		
L1	1	2.2uH	Inductor, Shielded, Composite, 2.2uH, 3.7A, 0.02 ohm, SMD	4x2x4mm	XFL4020-222MEB	Coilcraft		
LS1	1		TAS2555 EVM Speaker	Speaker, 20x26mm.	DMS1217P-J-01	AAC Technologies		
Q1	1	0.3V	Transistor, NPN, 40V, 0.15A, SOT-23	SOT-23	MMBT2222A	Fairchild Semiconductor		
R1, R30, R31, R32, R33	5	0	RES, 0 ohm, 5%, 0.063W, 0402	0402	CRCW04020000Z0ED	Vishay-Dale		
R2, R3, R4, R5, R6, R11, R12, R13, R14, R15, R38, R39, R43, R44	14	10.0k	RES, 10.0k ohm, 1%, 0.063W, 0402	0402	CRCW040210K0FKED	Vishay-Dale		
R16	1	4.99k	RES, 4.99k ohm, 1%, 0.063W, 0402	0402	CRCW04024K99FKED	Vishay-Dale		
R17, R18	2	10.0k	RES, 10.0 k, 1%, 0.063 W, 0402	0402	CRCW040210K0FKED	Vishay-Dale		
R19, R21, R22, R24, R45	5	49.9	RES, 49.9 ohm, 1%, 0.063W, 0402	0402	CRCW040249R9FKED	Vishay-Dale		
R20	1	15.0k	RES, 15.0k ohm, 1%, 0.063W, 0402	0402	CRCW040215K0FKED	Vishay-Dale		
R23	1	3.09k	RES, 3.09k ohm, 1%, 0.063W, 0402	0402	CRCW04023K09FKED	Vishay-Dale		
R25	1	1.50k	RES, 1.50k ohm, 1%, 0.063W, 0402	0402	CRCW04021K50FKED	Vishay-Dale		
R26, R27	2	27.4	RES, 27.4 ohm, 1%, 0.063W, 0402	0402	CRCW040227R4FKED	Vishay-Dale		
R28, R40	2	360	RES, 360 ohm, 5%, 0.063W, 0402	0402	CRCW0402360RJNED	Vishay-Dale		
R29	1	100k	RES, 100k ohm, 1%, 0.063W, 0402	0402	CRCW0402100KFKED	Vishay-Dale		
R34, R36	2	47k	RES, 47 k, 5%, 0.063 W, 0402	0402	CRCW040247K0JNED	Vishay-Dale		
R35, R37	2	2.2k	RES, 2.2 k, 5%, 0.063 W, 0402	0402	CRCW04022K20JNED	Vishay-Dale		
R41	1	0	RES, 0, 5%, 0.063 W, 0402	0402	CRCW04020000Z0ED	Vishay-Dale		
R42, R46	2	0	RES, 0, 5%, 0.1 W, 0603	0603	CRCW06030000Z0EA	Vishay-Dale		
S1, S2	2		Switch, Tactile, SPST-NO, 0.05A, 12V, SMT	Switch, 4.4x2x2.9 mm	TL1015AF160QG	E-Switch		
TP1, TP2, TP3, TP4, TP5, TP10, TP11, TP12, TP13, TP14	10	Orange	Test Point, Miniature, Orange, TH	Orange Miniature Testpoint	5003	Keystone		
TP6, TP7	2	Black	Test Point, Miniature, Black, TH	Black Miniature Testpoint	5001	Keystone		
U1	1		Dynamic Speaker, YZ0042-C01	YZ0042-C01	TAS2555YZR	Texas Instruments	TAS2555YZ	Texas Instruments
U2	1		EEPROM, 256KBIT, 400KHZ, MSOP8	MSOP-8	24LC256-I/MS	Microchip		
U3	1		TCA9406 Dual Bidirectional 1-MHz I2C-BUS and SMBus Voltage Level-Translator, 1.65 to 3.6 V, -40 to 85 degC, 8-pin US8 (DCU), Green (RoHS & no Sb/Br)	DCU0008A	TCA9406DCUR	Texas Instruments	Equivalent	Texas Instruments
U4	1	TAS1020BPF	IC, USB Streaming Controller	PQFP48	TAS1020BPF	TI		None
U5, U7	2		Dual 1-of-4 FET Multiplexer / Demultiplexer 2.5-V / 3.3-V Low-Voltage High-Bandwidth Bus Switch, RGY0016A	RGY0016A	SN74CB3Q3253RGYR	Texas Instruments		Texas Instruments
U6, U11	2		4-BIT DUAL-SUPPLY BUS TRANSCEIVER WITH CONFIGURABLE VOLTAGE TRANSLATION AND 3-STATE OUTPUTS, RSV0016A	RSV0016A	SN74AVC4T774RSVR	Texas Instruments		None
U8	1		Low-Voltage 8-Bit I2C and SMBus I/O Expander, 1.65 to 5.5 V, -40 to 85 degC, 16-pin UQFN (RSV), Green (RoHS & no Sb/Br)	RSV0016A	TCA6408ARSVR	Texas Instruments	Equivalent	None

Table 2. TAS2555EVM Bill of Materials⁽¹⁾ (continued)

Designator	Qty	Value	Description	Package Reference	Part Number	Manufacturer	Alternate Part Number	Alternate Manufacturer
U9	1		Single 2-Line to 1-Line Data Selector Multiplexer, DCT0008A	DCT0008A	SN74LVC2G157DCTR	Texas Instruments		None
U10, U15, U16, U17, U18	5		DUAL BUFFER GATE, DRL0006A	DRL0006A	SN74LVC2G34DRLR	Texas Instruments		None
U12	1		Single Output LDO, 1 A, Fixed 3.3 V Output, 2.2 to 5.5 V Input, with Reverse Current Protection, 6-pin SOT-223 (DCQ), -40 to 125 degC, Green (RoHS & no Sb/Br)	DCQ0006A	TPS73733DCQ	Texas Instruments	Equivalent	None
U13	1		Single Output Low Noise LDO, 400 mA, Fixed 1.8 V Output, 1.7 to 5.5 V Input, with Reverse Current Protection, 5-pin SOT-23 (DBV), -40 to 85 degC, Green (RoHS & no Sb/Br)	DBV0005A	TPS73618DBVR	Texas Instruments	Equivalent	None
U14	1		Single Bus Buffer Gate With 3-State Output, DCK0005A	DCK0005A	SN74LVC1G125DCKR	Texas Instruments	SN74LVC1G125DCKT	Texas Instruments
Y1	1		Oscillator, 6MHz, 3.3V, SMD	2.5x1x2.5mm	625L3I006M00000	CTS Electrocomponents		
C15	0	10uF	CAP, CERM, 10uF, 10V, +/-20%, X5R, 0603	0603	C1608X5R1A106M	TDK		
C21, C22	0	1000pF	CAP, CERM, 1000pF, 50V, +/-5%, C0G/NP0, 0402	0402	GRM1555C1H102JA01D	Murata		
C23, C24	0	4700pF	CAP, CERM, 4700 pF, 50 V, +/- 10%, X7R, 0402	0402	GRM155R71H472KA01D	Murata		
FID1, FID2, FID3	0		Fiducial mark. There is nothing to buy or mount.	Fiducial	N/A	N/A		
J1	0		RCA Jack, Vertical, White, TH	RCA JACK, WHITE	RCJ-023	CUI Inc.		
R7, R8	0	1.00k	RES, 1.00 k, 1%, 0.063 W, 0402	0402	CRCW04021K00FKED	Vishay-Dale		
R9, R10	0	2.00k	RES, 2.00 k, 1%, 0.063 W, 0402	0402	CRCW04022K00FKED	Vishay-Dale		
TP8, TP9	0	Orange	Test Point, Miniature, Orange, TH	Orange Miniature Testpoint	5003	Keystone		

STANDARD TERMS AND CONDITIONS FOR EVALUATION MODULES

1. *Delivery:* TI delivers TI evaluation boards, kits, or modules, including any accompanying demonstration software, components, or documentation (collectively, an "EVM" or "EVMs") to the User ("User") in accordance with the terms and conditions set forth herein. Acceptance of the EVM is expressly subject to the following terms and conditions.
 - 1.1 EVMs are intended solely for product or software developers for use in a research and development setting to facilitate feasibility evaluation, experimentation, or scientific analysis of TI semiconductors products. EVMs have no direct function and are not finished products. EVMs shall not be directly or indirectly assembled as a part or subassembly in any finished product. For clarification, any software or software tools provided with the EVM ("Software") shall not be subject to the terms and conditions set forth herein but rather shall be subject to the applicable terms and conditions that accompany such Software
 - 1.2 EVMs are not intended for consumer or household use. EVMs may not be sold, sublicensed, leased, rented, loaned, assigned, or otherwise distributed for commercial purposes by Users, in whole or in part, or used in any finished product or production system.
2. *Limited Warranty and Related Remedies/Disclaimers:*
 - 2.1 These terms and conditions do not apply to Software. The warranty, if any, for Software is covered in the applicable Software License Agreement.
 - 2.2 TI warrants that the TI EVM will conform to TI's published specifications for ninety (90) days after the date TI delivers such EVM to User. Notwithstanding the foregoing, TI shall not be liable for any defects that are caused by neglect, misuse or mistreatment by an entity other than TI, including improper installation or testing, or for any EVMs that have been altered or modified in any way by an entity other than TI. Moreover, TI shall not be liable for any defects that result from User's design, specifications or instructions for such EVMs. Testing and other quality control techniques are used to the extent TI deems necessary or as mandated by government requirements. TI does not test all parameters of each EVM.
 - 2.3 If any EVM fails to conform to the warranty set forth above, TI's sole liability shall be at its option to repair or replace such EVM, or credit User's account for such EVM. TI's liability under this warranty shall be limited to EVMs that are returned during the warranty period to the address designated by TI and that are determined by TI not to conform to such warranty. If TI elects to repair or replace such EVM, TI shall have a reasonable time to repair such EVM or provide replacements. Repaired EVMs shall be warranted for the remainder of the original warranty period. Replaced EVMs shall be warranted for a new full ninety (90) day warranty period.
3. *Regulatory Notices:*
 - 3.1 *United States*
 - 3.1.1 *Notice applicable to EVMs not FCC-Approved:*

This kit is designed to allow product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and software developers to write software applications for use with the end product. This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter.
 - 3.1.2 *For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant:*

CAUTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement for Class A EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Interference Statement for Class B EVM devices

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

3.2 Canada

3.2.1 For EVMs issued with an Industry Canada Certificate of Conformance to RSS-210

Concerning EVMs Including Radio Transmitters:

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Concernant les EVMs avec appareils radio:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Concerning EVMs Including Detachable Antennas:

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

3.3 Japan

3.3.1 *Notice for EVMs delivered in Japan:* Please see http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_01.page 日本国内に輸入される評価用キット、ボードについては、次のところをご覧ください。
http://www.tij.co.jp/lstds/ti_ja/general/eStore/notice_01.page

3.3.2 *Notice for Users of EVMs Considered "Radio Frequency Products" in Japan:* EVMs entering Japan are NOT certified by TI as conforming to Technical Regulations of Radio Law of Japan.

If User uses EVMs in Japan, User is required by Radio Law of Japan to follow the instructions below with respect to EVMs:

1. Use EVMs in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
2. Use EVMs only after User obtains the license of Test Radio Station as provided in Radio Law of Japan with respect to EVMs, or
3. Use of EVMs only after User obtains the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to EVMs. Also, do not transfer EVMs, unless User gives the same notice above to the transferee. Please note that if User does not follow the instructions above, User will be subject to penalties of Radio Law of Japan.

【無線電波を送信する製品の開発キットをお使いになる際の注意事項】

本開発キットは技術基準適合証明を受けておりません。

本製品のご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
2. 実験局の免許を取得後ご使用いただく。
3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。

日本テキサス・インスツルメンツ株式会社

東京都新宿区西新宿 6 丁目 2 4 番 1 号

西新宿三井ビル

3.3.3 *Notice for EVMs for Power Line Communication:* Please see http://www.tij.co.jp/llds/ti_ja/general/eStore/notice_02.page

電力線搬送波通信についての開発キットをお使いになる際の注意事項については、次のところをご覧ください。http://www.tij.co.jp/llds/ti_ja/general/eStore/notice_02.page

4 *EVM Use Restrictions and Warnings:*

4.1 EVMS ARE NOT FOR USE IN FUNCTIONAL SAFETY AND/OR SAFETY CRITICAL EVALUATIONS, INCLUDING BUT NOT LIMITED TO EVALUATIONS OF LIFE SUPPORT APPLICATIONS.

4.2 User must read and apply the user guide and other available documentation provided by TI regarding the EVM prior to handling or using the EVM, including without limitation any warning or restriction notices. The notices contain important safety information related to, for example, temperatures and voltages.

4.3 *Safety-Related Warnings and Restrictions:*

4.3.1 User shall operate the EVM within TI's recommended specifications and environmental considerations stated in the user guide, other available documentation provided by TI, and any other applicable requirements and employ reasonable and customary safeguards. Exceeding the specified performance ratings and specifications (including but not limited to input and output voltage, current, power, and environmental ranges) for the EVM may cause personal injury or death, or property damage. If there are questions concerning performance ratings and specifications, User should contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may also result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM user guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, even with the inputs and outputs kept within the specified allowable ranges, some circuit components may have elevated case temperatures. These components include but are not limited to linear regulators, switching transistors, pass transistors, current sense resistors, and heat sinks, which can be identified using the information in the associated documentation. When working with the EVM, please be aware that the EVM may become very warm.

4.3.2 EVMs are intended solely for use by technically qualified, professional electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems, and subsystems. User assumes all responsibility and liability for proper and safe handling and use of the EVM by User or its employees, affiliates, contractors or designees. User assumes all responsibility and liability to ensure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard. User assumes all responsibility and liability for any improper or unsafe handling or use of the EVM by User or its employees, affiliates, contractors or designees.

4.4 User assumes all responsibility and liability to determine whether the EVM is subject to any applicable international, federal, state, or local laws and regulations related to User's handling and use of the EVM and, if applicable, User assumes all responsibility and liability for compliance in all respects with such laws and regulations. User assumes all responsibility and liability for proper disposal and recycling of the EVM consistent with all applicable international, federal, state, and local requirements.

5. *Accuracy of Information:* To the extent TI provides information on the availability and function of EVMs, TI attempts to be as accurate as possible. However, TI does not warrant the accuracy of EVM descriptions, EVM availability or other information on its websites as accurate, complete, reliable, current, or error-free.

6. *Disclaimers:*
- 6.1 EXCEPT AS SET FORTH ABOVE, EVMS AND ANY WRITTEN DESIGN MATERIALS PROVIDED WITH THE EVM (AND THE DESIGN OF THE EVM ITSELF) ARE PROVIDED "AS IS" AND "WITH ALL FAULTS." TI DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, REGARDING SUCH ITEMS, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADE SECRETS OR OTHER INTELLECTUAL PROPERTY RIGHTS.
- 6.2 EXCEPT FOR THE LIMITED RIGHT TO USE THE EVM SET FORTH HEREIN, NOTHING IN THESE TERMS AND CONDITIONS SHALL BE CONSTRUED AS GRANTING OR CONFERRING ANY RIGHTS BY LICENSE, PATENT, OR ANY OTHER INDUSTRIAL OR INTELLECTUAL PROPERTY RIGHT OF TI, ITS SUPPLIERS/LICENSORS OR ANY OTHER THIRD PARTY, TO USE THE EVM IN ANY FINISHED END-USER OR READY-TO-USE FINAL PRODUCT, OR FOR ANY INVENTION, DISCOVERY OR IMPROVEMENT MADE, CONCEIVED OR ACQUIRED PRIOR TO OR AFTER DELIVERY OF THE EVM.
7. *USER'S INDEMNITY OBLIGATIONS AND REPRESENTATIONS.* USER WILL DEFEND, INDEMNIFY AND HOLD TI, ITS LICENSORS AND THEIR REPRESENTATIVES HARMLESS FROM AND AGAINST ANY AND ALL CLAIMS, DAMAGES, LOSSES, EXPENSES, COSTS AND LIABILITIES (COLLECTIVELY, "CLAIMS") ARISING OUT OF OR IN CONNECTION WITH ANY HANDLING OR USE OF THE EVM THAT IS NOT IN ACCORDANCE WITH THESE TERMS AND CONDITIONS. THIS OBLIGATION SHALL APPLY WHETHER CLAIMS ARISE UNDER STATUTE, REGULATION, OR THE LAW OF TORT, CONTRACT OR ANY OTHER LEGAL THEORY, AND EVEN IF THE EVM FAILS TO PERFORM AS DESCRIBED OR EXPECTED.
8. *Limitations on Damages and Liability:*
- 8.1 *General Limitations.* IN NO EVENT SHALL TI BE LIABLE FOR ANY SPECIAL, COLLATERAL, INDIRECT, PUNITIVE, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES IN CONNECTION WITH OR ARISING OUT OF THESE TERMS AND CONDITIONS OR THE USE OF THE EVMS PROVIDED HEREUNDER, REGARDLESS OF WHETHER TI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCLUDED DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, COST OF REMOVAL OR REINSTALLATION, ANCILLARY COSTS TO THE PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, RETESTING, OUTSIDE COMPUTER TIME, LABOR COSTS, LOSS OF GOODWILL, LOSS OF PROFITS, LOSS OF SAVINGS, LOSS OF USE, LOSS OF DATA, OR BUSINESS INTERRUPTION. NO CLAIM, SUIT OR ACTION SHALL BE BROUGHT AGAINST TI MORE THAN ONE YEAR AFTER THE RELATED CAUSE OF ACTION HAS OCCURRED.
- 8.2 *Specific Limitations.* IN NO EVENT SHALL TI'S AGGREGATE LIABILITY FROM ANY WARRANTY OR OTHER OBLIGATION ARISING OUT OF OR IN CONNECTION WITH THESE TERMS AND CONDITIONS, OR ANY USE OF ANY TI EVM PROVIDED HEREUNDER, EXCEED THE TOTAL AMOUNT PAID TO TI FOR THE PARTICULAR UNITS SOLD UNDER THESE TERMS AND CONDITIONS WITH RESPECT TO WHICH LOSSES OR DAMAGES ARE CLAIMED. THE EXISTENCE OF MORE THAN ONE CLAIM AGAINST THE PARTICULAR UNITS SOLD TO USER UNDER THESE TERMS AND CONDITIONS SHALL NOT ENLARGE OR EXTEND THIS LIMIT.
9. *Return Policy.* Except as otherwise provided, TI does not offer any refunds, returns, or exchanges. Furthermore, no return of EVM(s) will be accepted if the package has been opened and no return of the EVM(s) will be accepted if they are damaged or otherwise not in a resalable condition. If User feels it has been incorrectly charged for the EVM(s) it ordered or that delivery violates the applicable order, User should contact TI. All refunds will be made in full within thirty (30) working days from the return of the components(s), excluding any postage or packaging costs.
10. *Governing Law:* These terms and conditions shall be governed by and interpreted in accordance with the laws of the State of Texas, without reference to conflict-of-laws principles. User agrees that non-exclusive jurisdiction for any dispute arising out of or relating to these terms and conditions lies within courts located in the State of Texas and consents to venue in Dallas County, Texas. Notwithstanding the foregoing, any judgment may be enforced in any United States or foreign court, and TI may seek injunctive relief in any United States or foreign court.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2015, Texas Instruments Incorporated

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have **not** been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products

Audio	www.ti.com/audio
Amplifiers	amplifier.ti.com
Data Converters	dataconverter.ti.com
DLP® Products	www.dlp.com
DSP	dsp.ti.com
Clocks and Timers	www.ti.com/clocks
Interface	interface.ti.com
Logic	logic.ti.com
Power Mgmt	power.ti.com
Microcontrollers	microcontroller.ti.com
RFID	www.ti-rfid.com
OMAP Applications Processors	www.ti.com/omap
Wireless Connectivity	www.ti.com/wirelessconnectivity

Applications

Automotive and Transportation	www.ti.com/automotive
Communications and Telecom	www.ti.com/communications
Computers and Peripherals	www.ti.com/computers
Consumer Electronics	www.ti.com/consumer-apps
Energy and Lighting	www.ti.com/energy
Industrial	www.ti.com/industrial
Medical	www.ti.com/medical
Security	www.ti.com/security
Space, Avionics and Defense	www.ti.com/space-avionics-defense
Video and Imaging	www.ti.com/video

TI E2E Community

e2e.ti.com